

FARAD[®] BARS

made in Italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy

www.faradworld.com

+39 0172 58575

BS 019

FIAT PANDA 2003-2012

5



I istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung

GB Fitting instructions

E Instrucciones de montaje


NL Inbouwhandleiding

SWE Montageanvisnin

KIT BS


Nr 2

A



Nr 2

P



Nr 2

B



Nr 1

C



Nr 1

D



+

KIT ALU

Nr 2

L





Nr 2

M








=

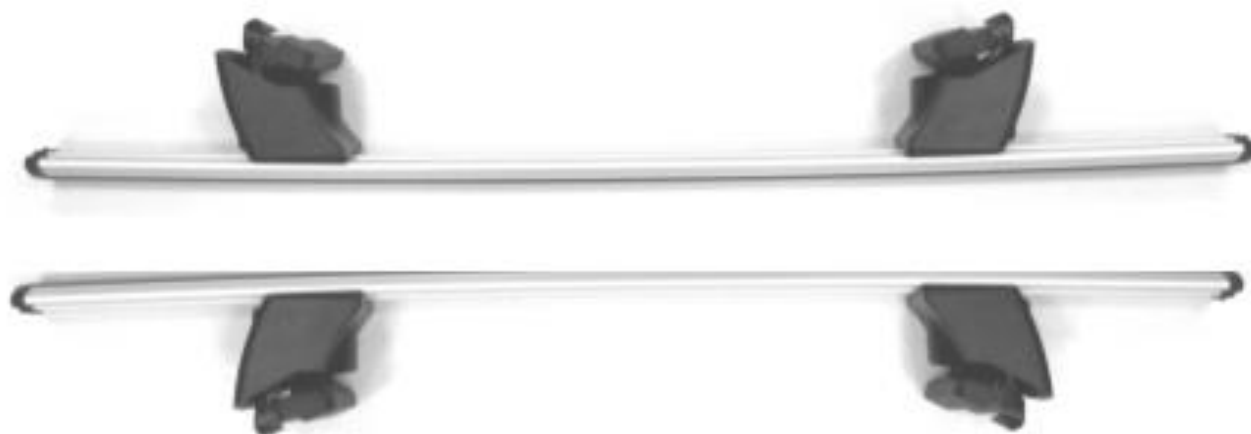

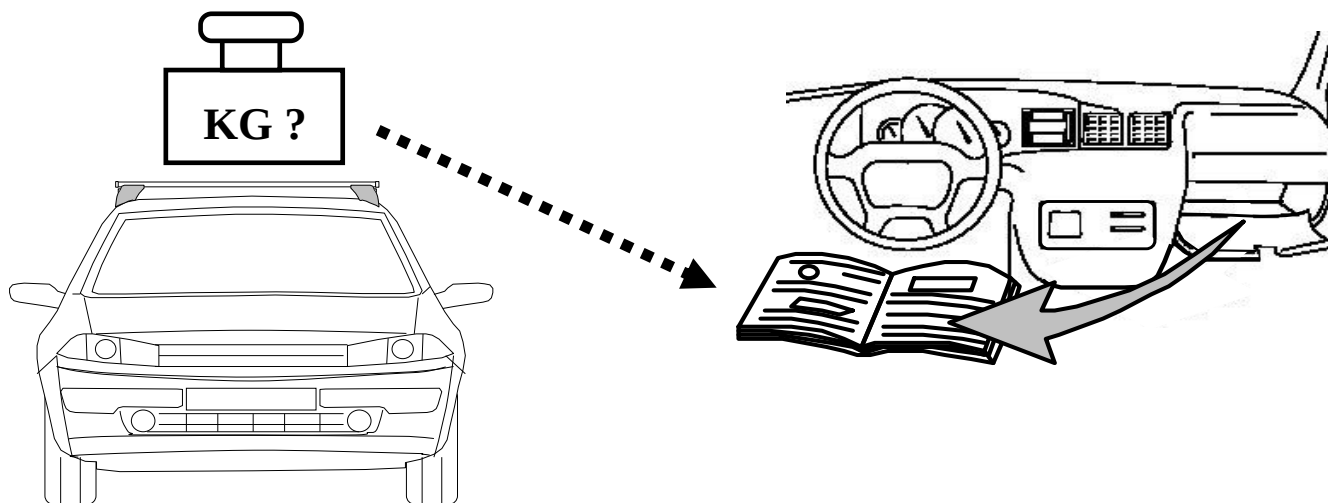

- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |

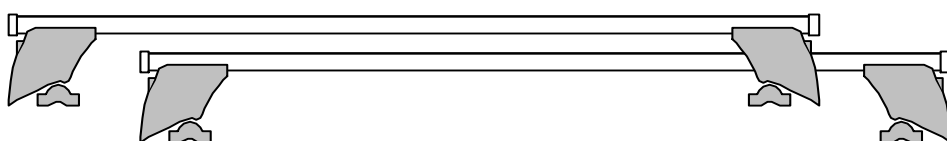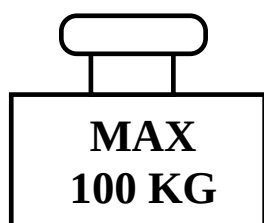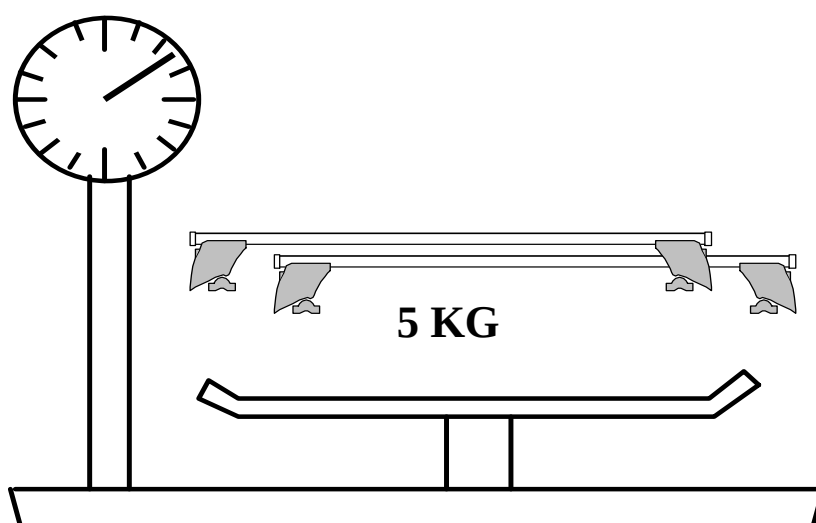

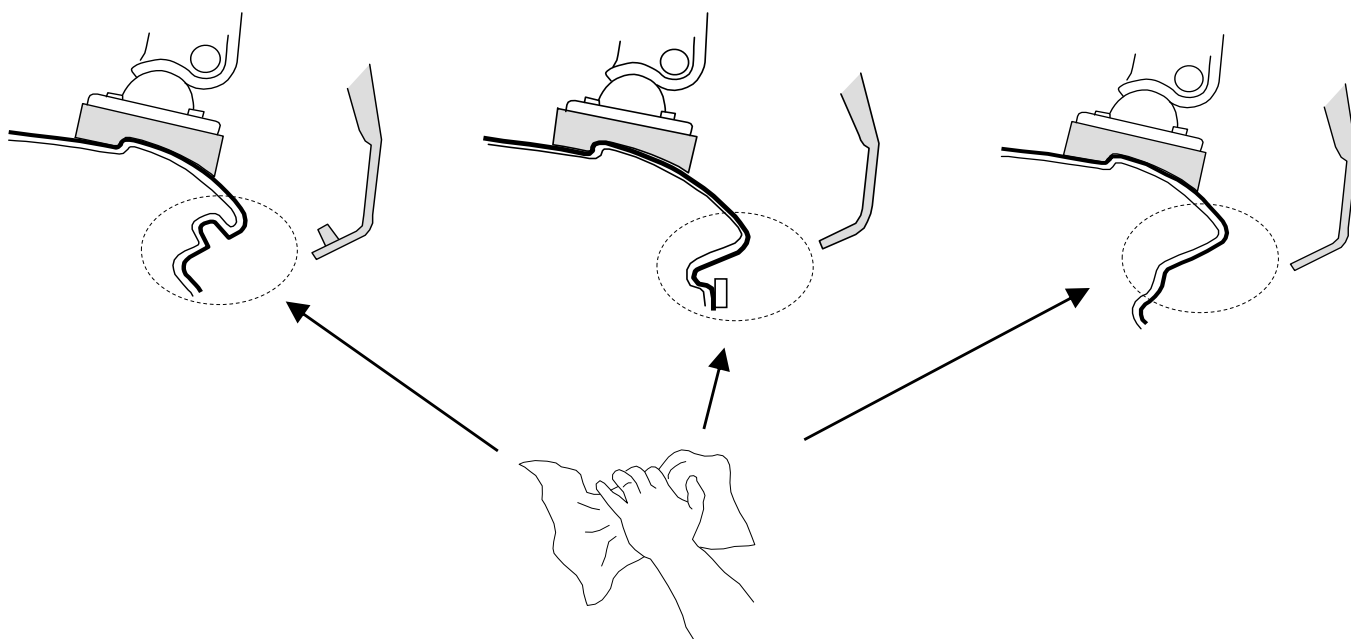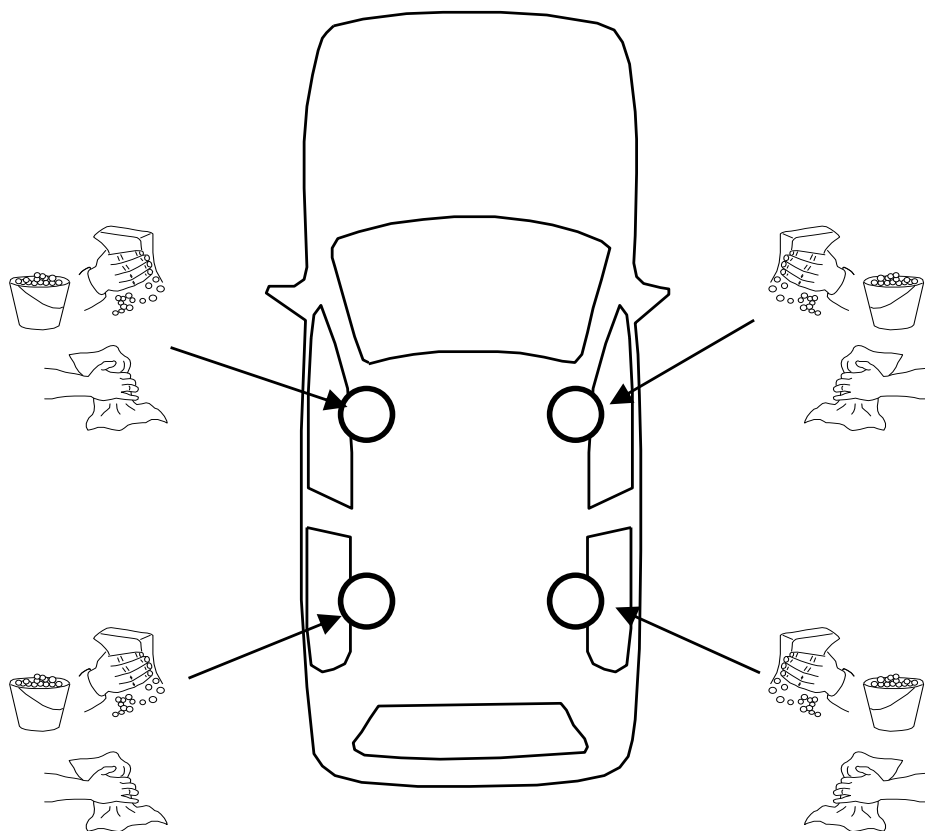

I **Montaggio Barra Anteriore**

PL **Montaż Bagażnika Bazowego Tylnego**

D **Montage Vorderes Dachträgers**


SWE **Montering Av Främre Lasthållaren**




F **Fixation Barre Avant**


GB **Fitting Front Roof Bar**

NL **Montage Voorste Dakdrager**

E **Fijación Barra Frontal**


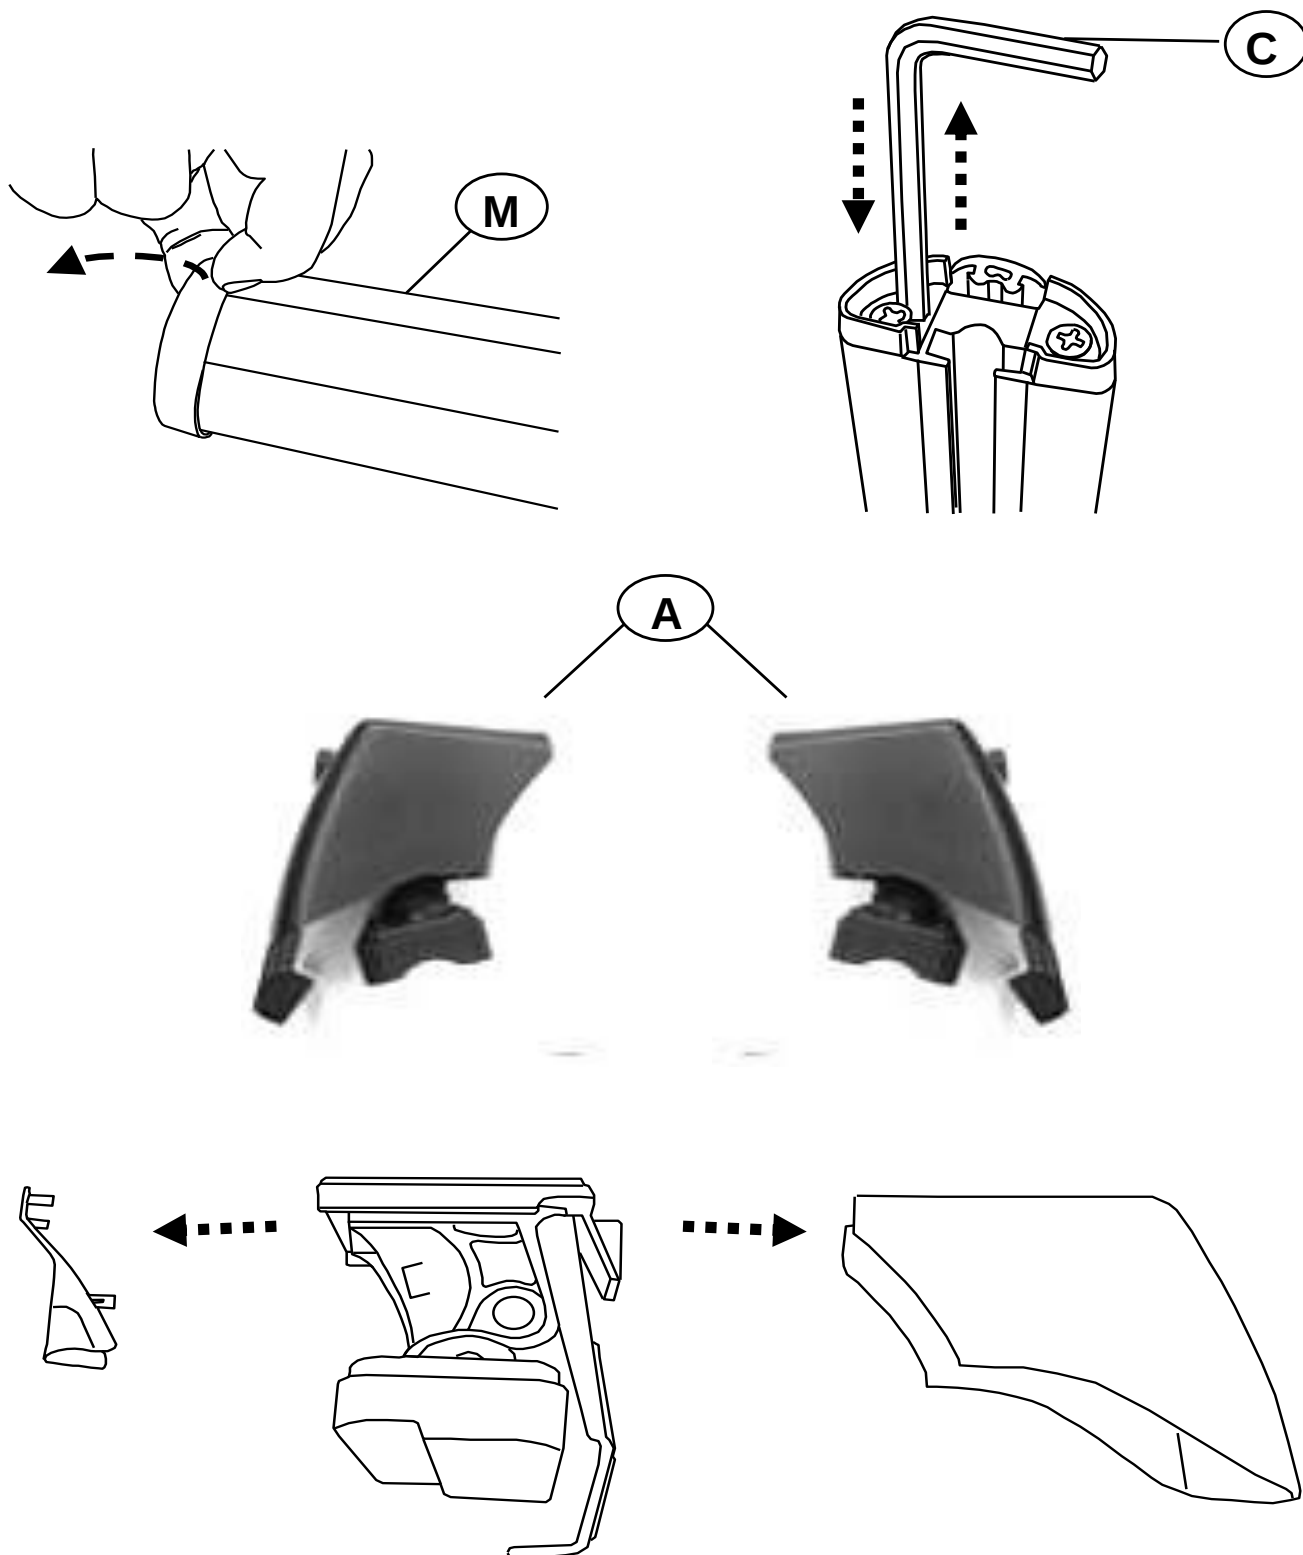


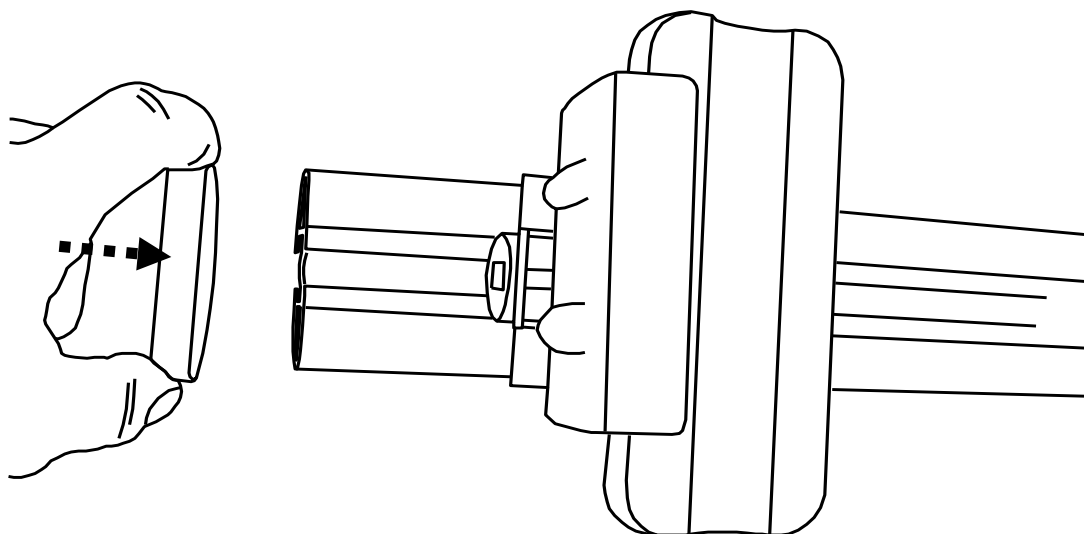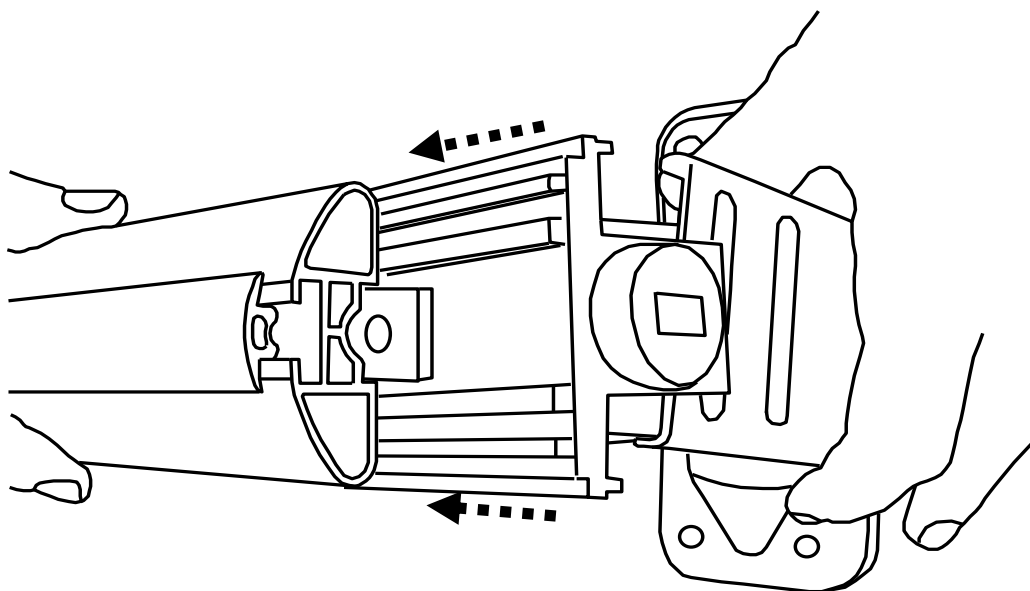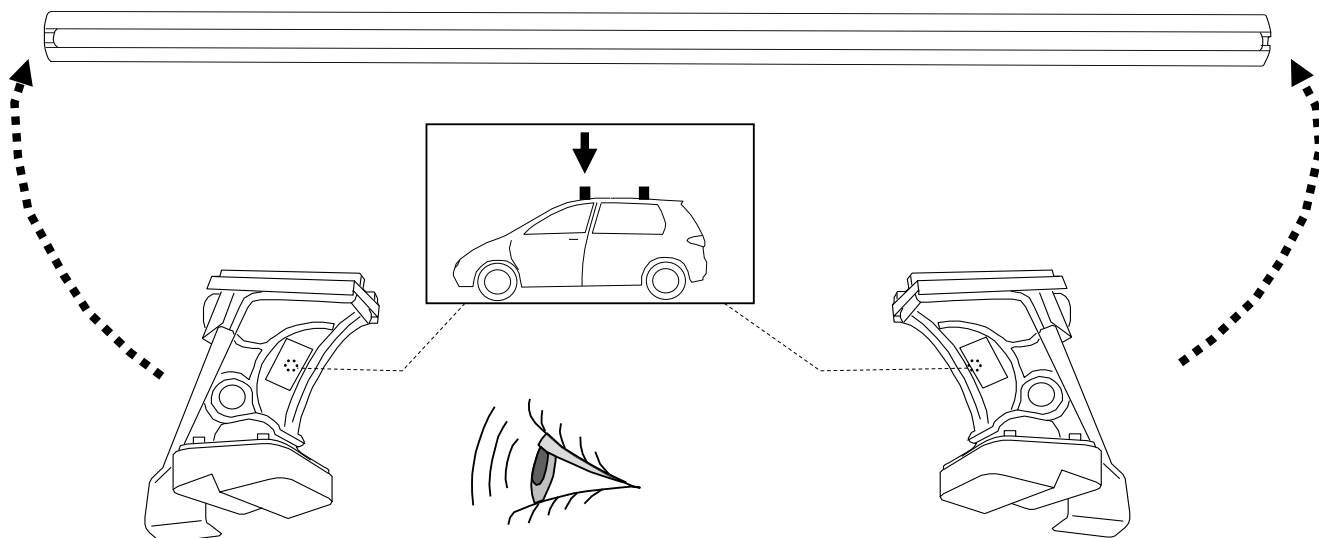



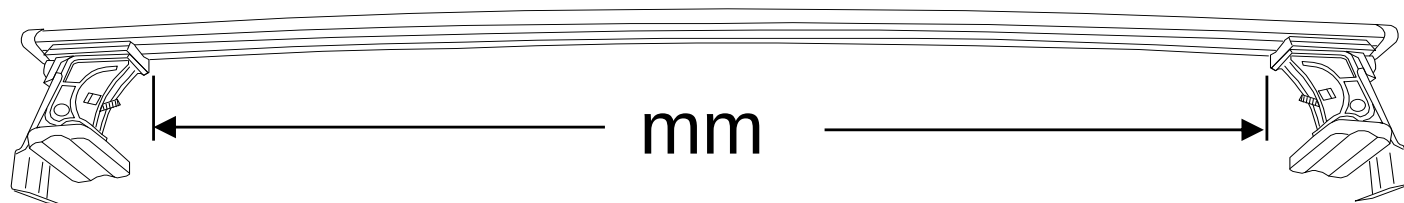


esempio - example


R= 8

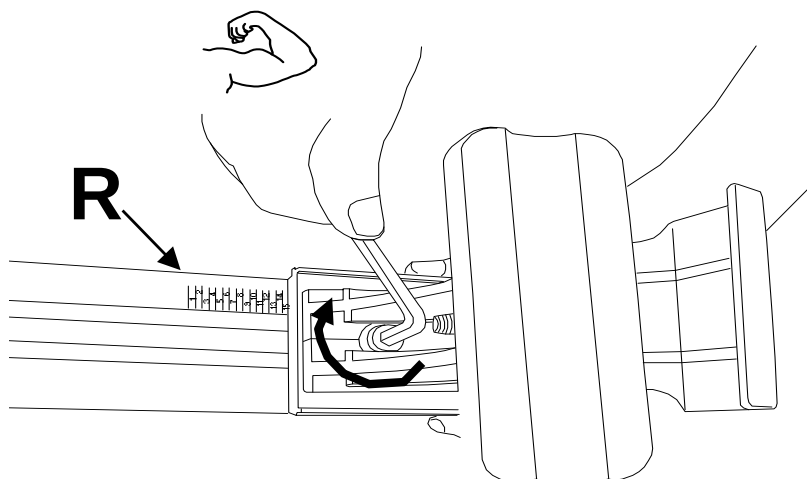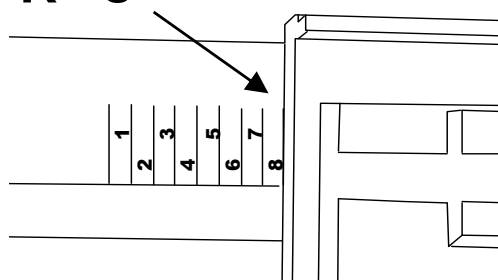



				R	mm
FIAT	PANDA	5	2003-2012	R= 975	43

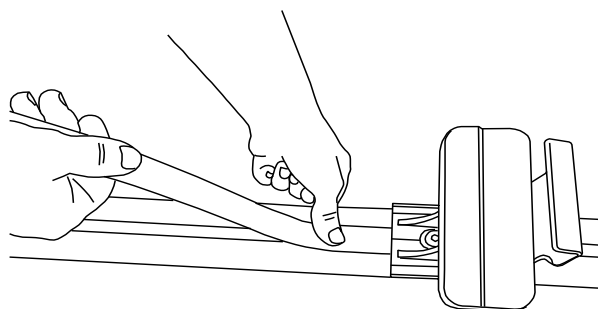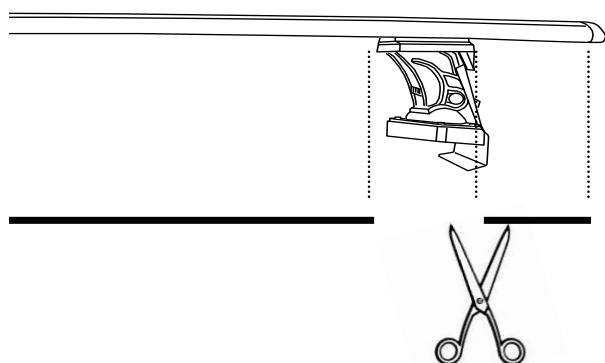



REV 000	10/05/2011	8 / 20
----------------	-------------------	---------------

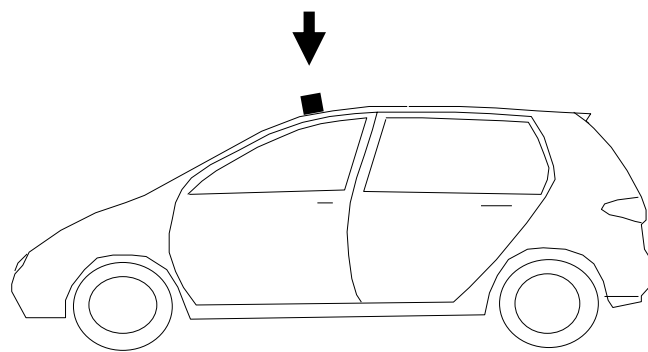


D

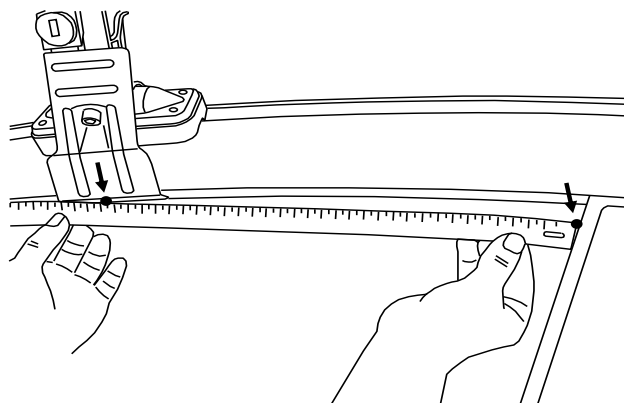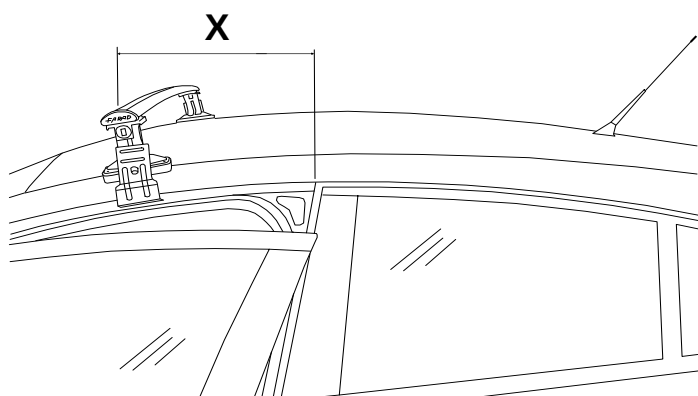


				X
FIAT	PANDA	5	2003-2012	X= 220

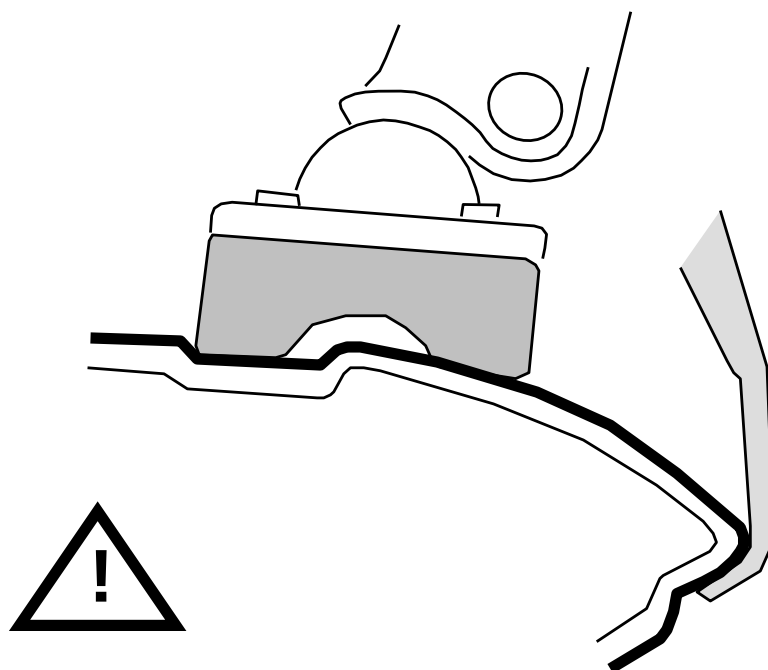


REV 000	10/05/2011	9 / 20
----------------	-------------------	---------------


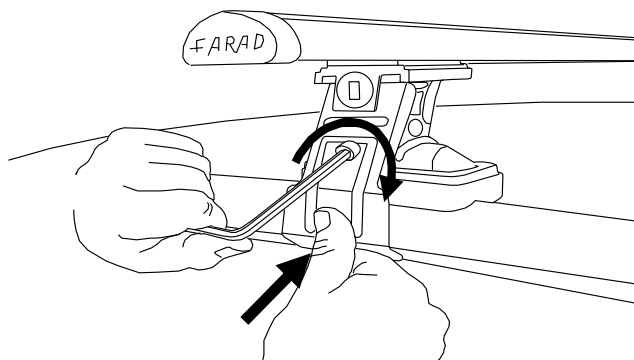


C

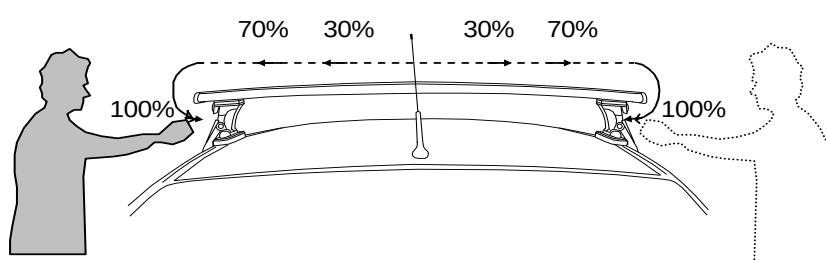



I	Alternare il fissaggio delle viti	F	Serrer alternativement chaque côté
PL	Śruby dokręcaj naprzemiennie	D	Die Schrauben abwechselnd anziehen
GB	Tighten alternately	E	Apretar alternativamente
NL	Afwisselend aan de linker- en de rechterkant aandraaien	SWE	Dra åt växelvis

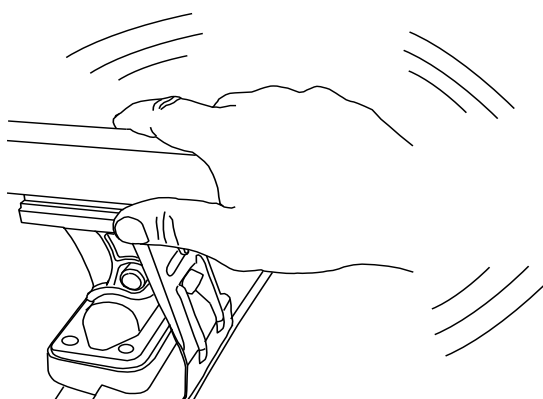

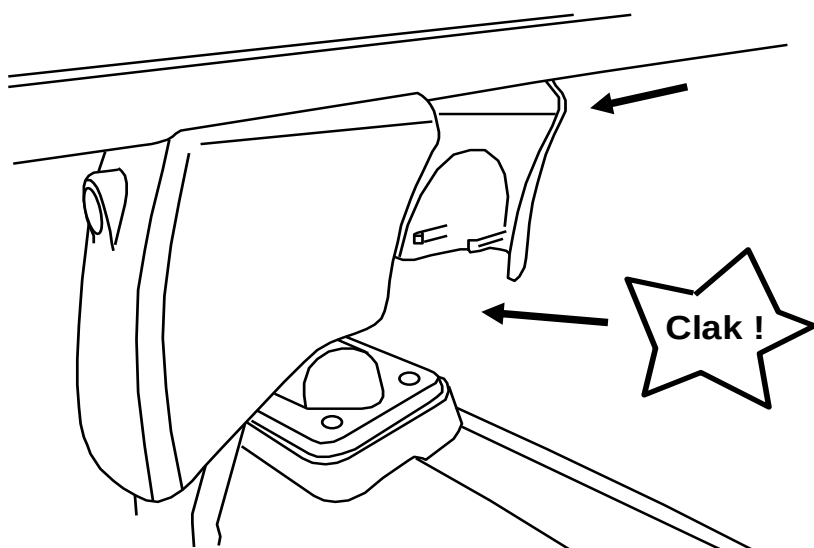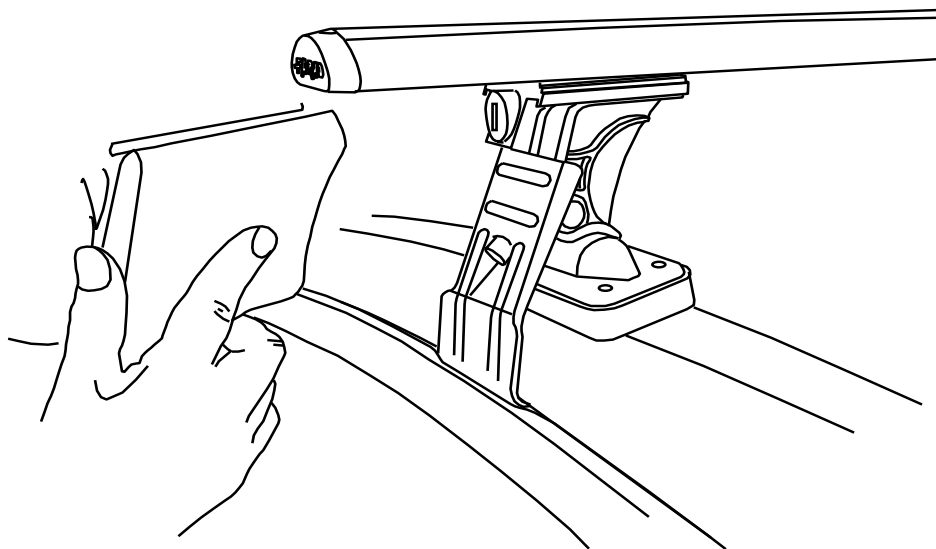

B

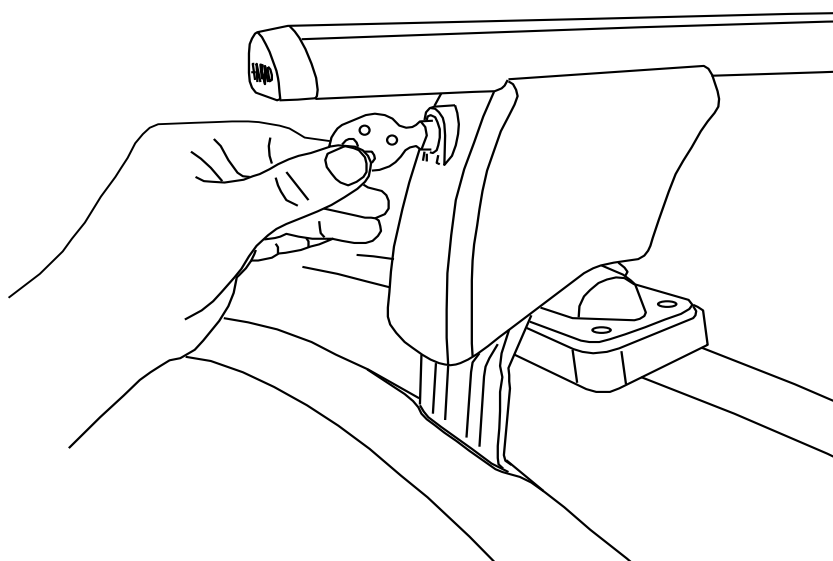

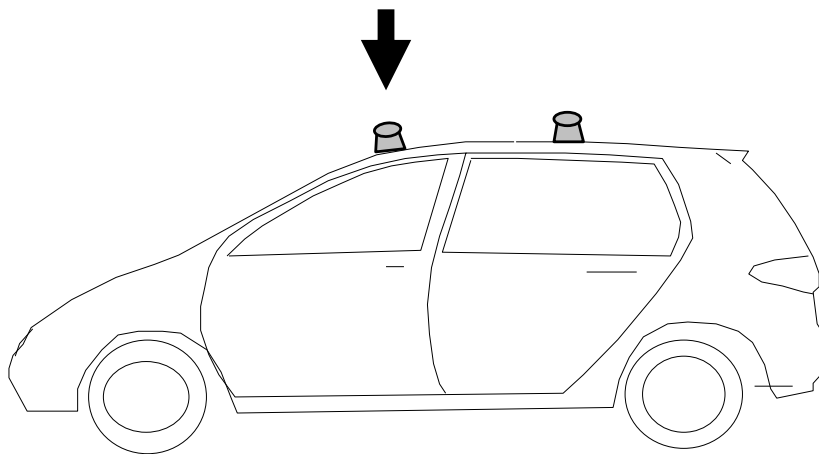

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I **Montaggio barra posteriore**

PL **Montaż Bagażnika Bazowego Przedniego**

SWE **Montering Främre Lasthållaren**


NL **Montage Achterste Dakdrager**




F **Fixation Barre Arriere**



GB **Fitting Rear Roof Bar**

E **Fijación Barra Trasera**

D **Montage Heckdachträgers**

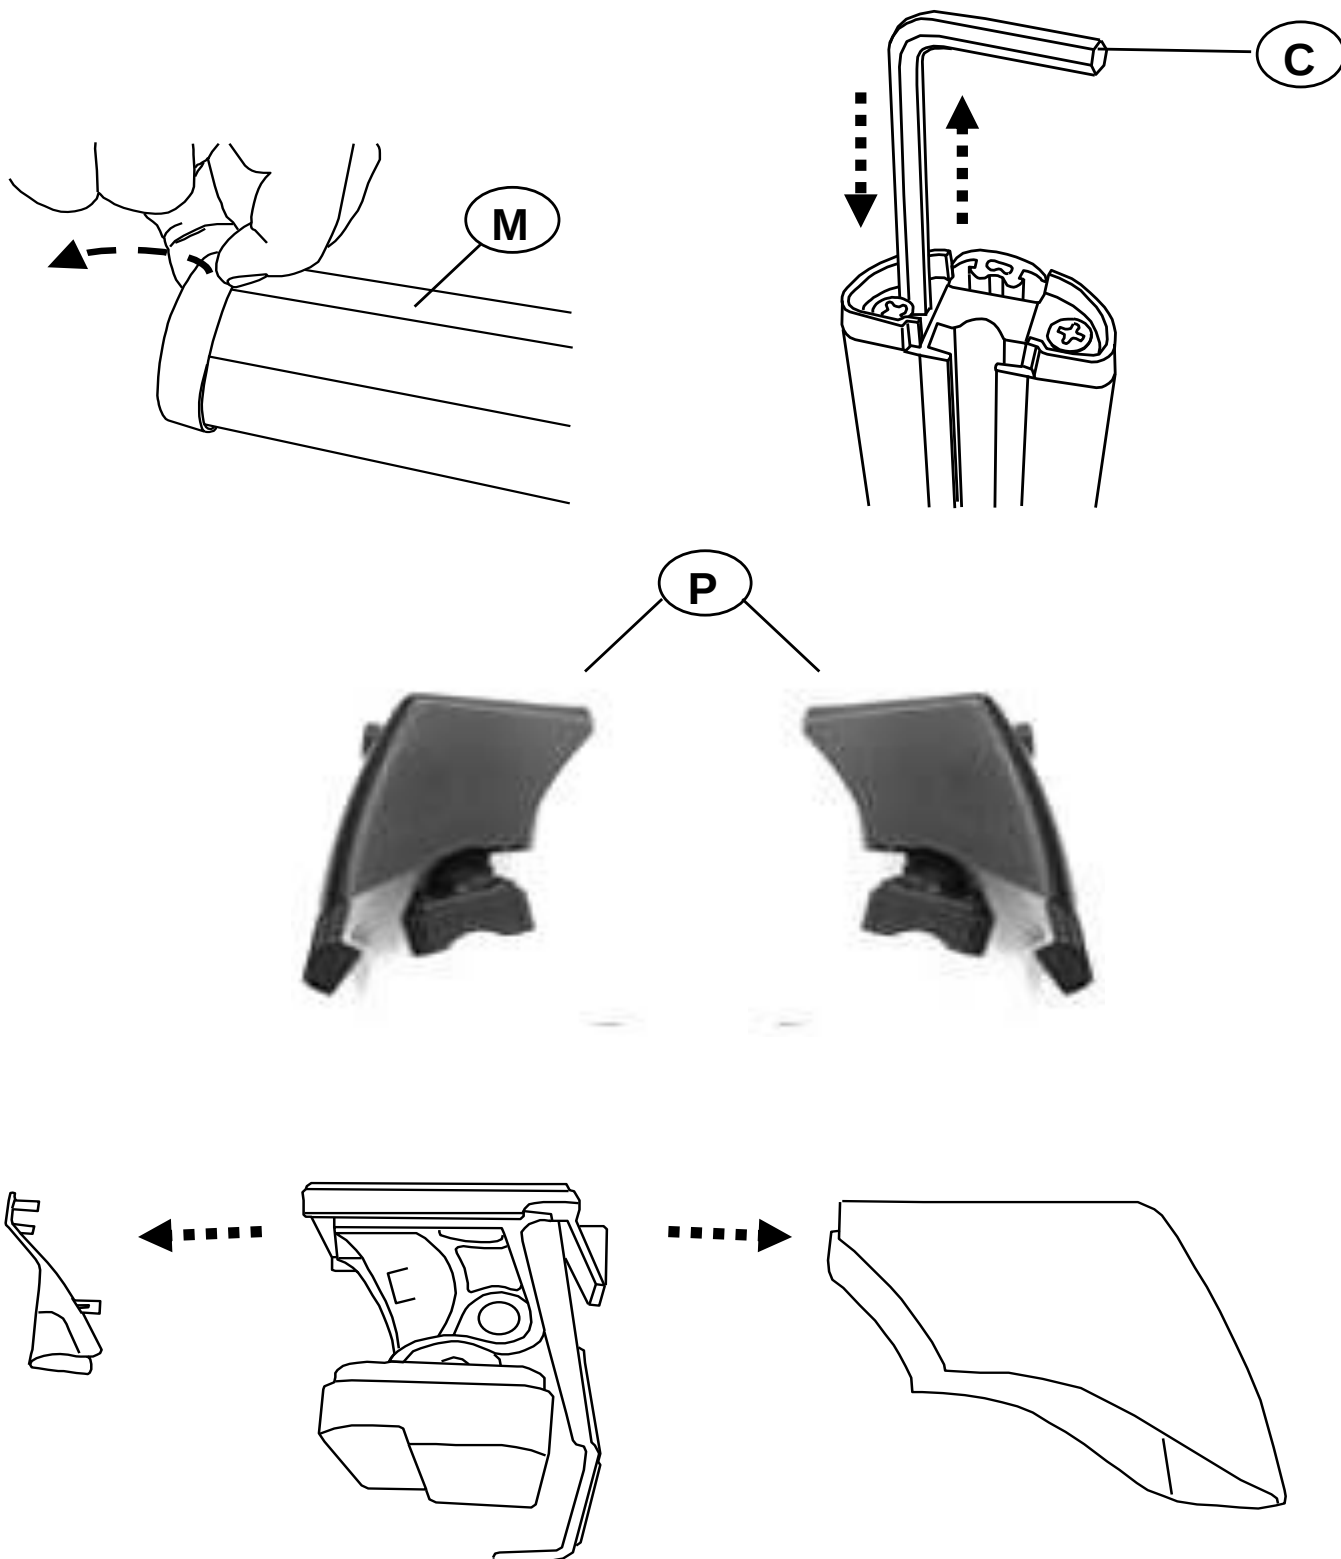


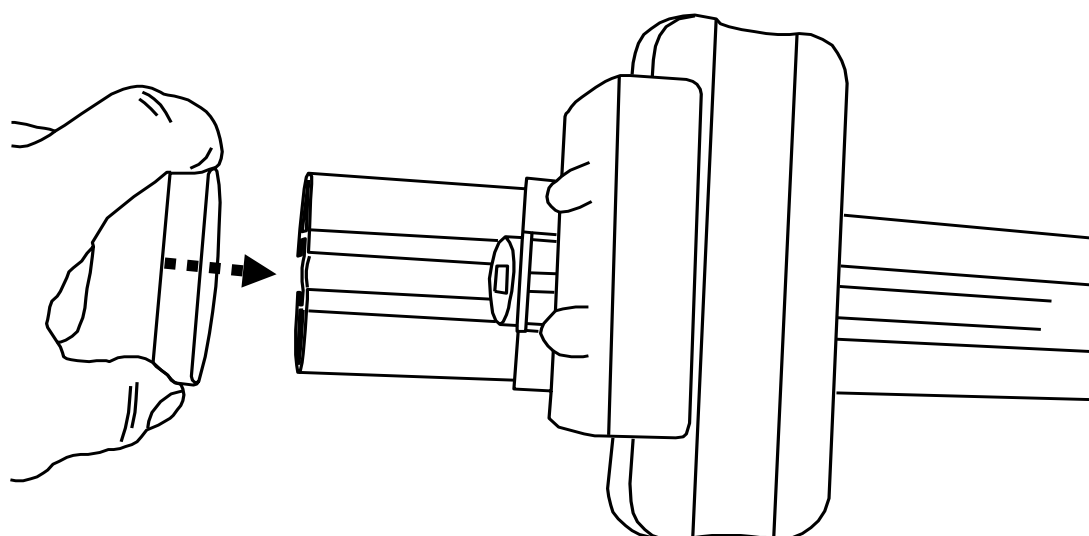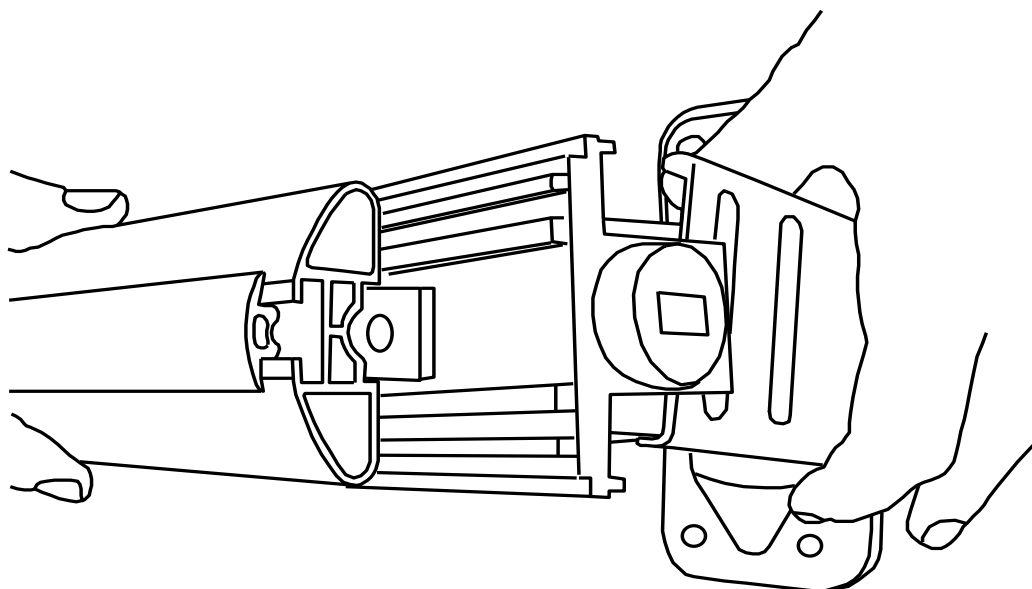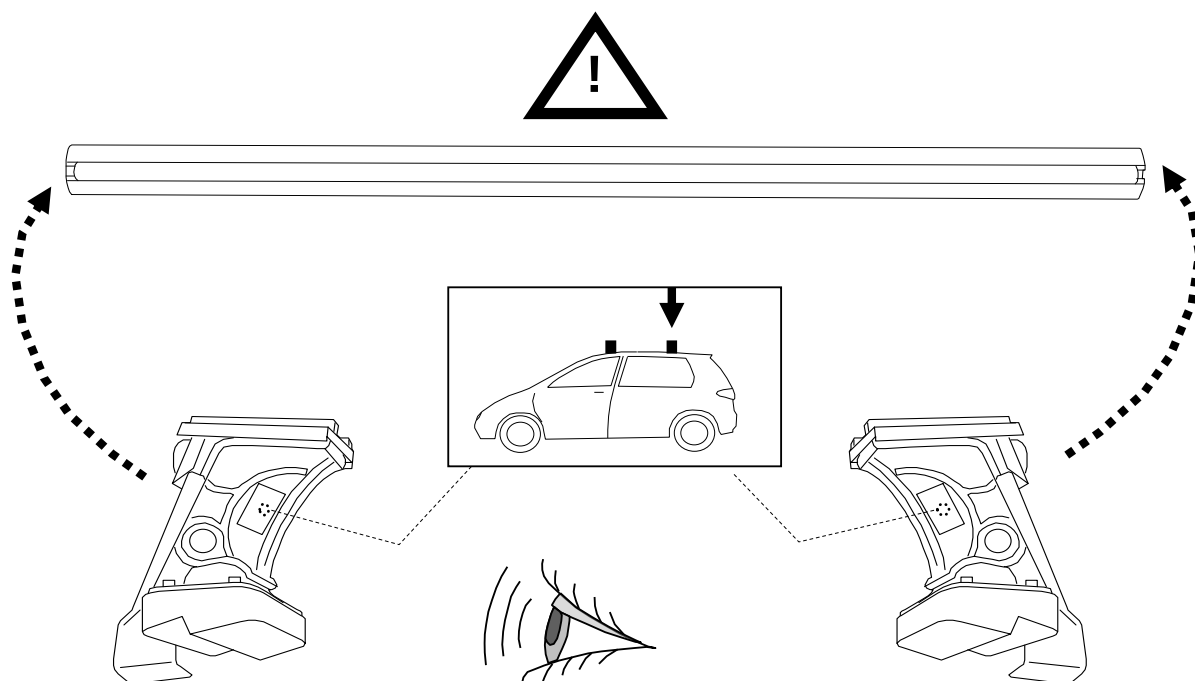


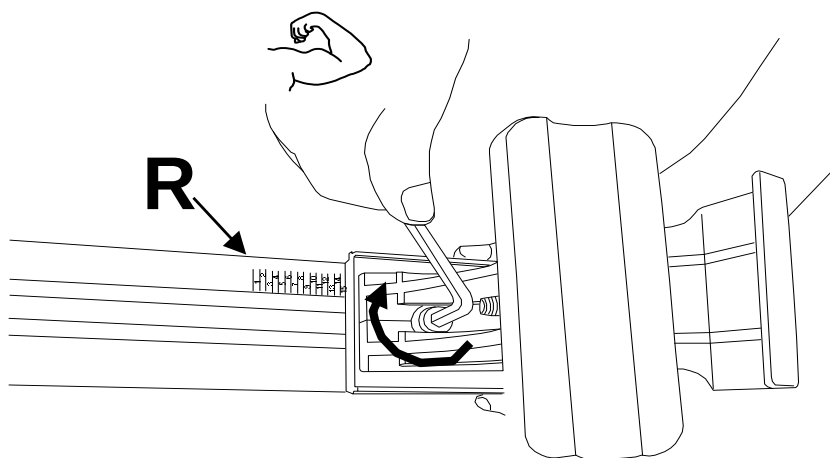
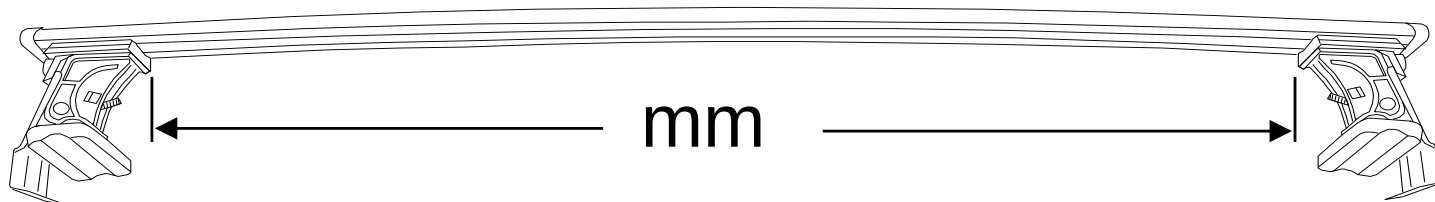


esempio - example


R= 8

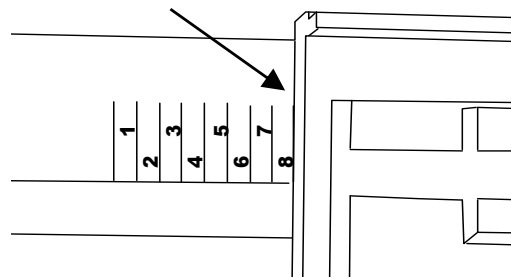



				R	mm
FIAT	PANDA	5	2003-2012	R= 38	950

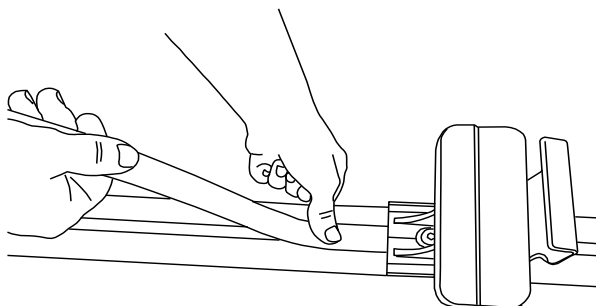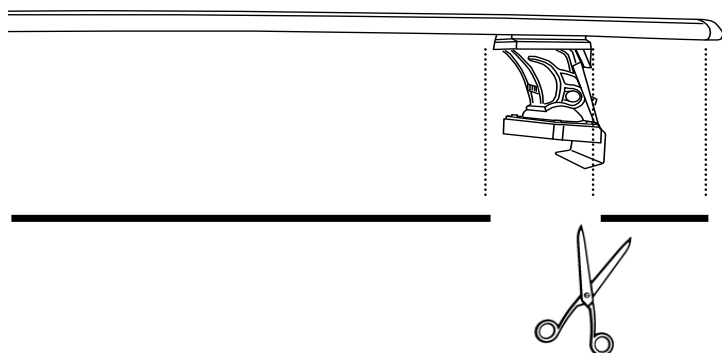



REV 000	10/05/2011	15 / 20
----------------	-------------------	----------------

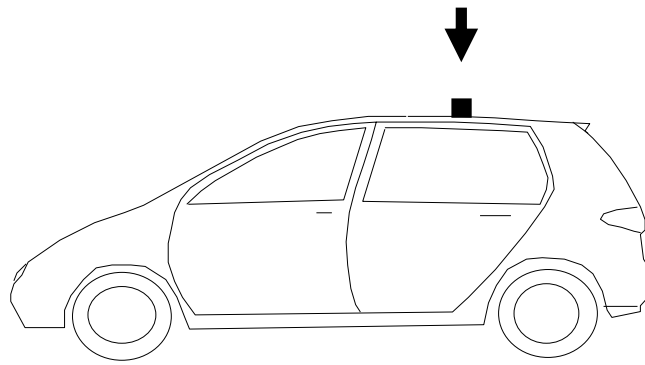

D

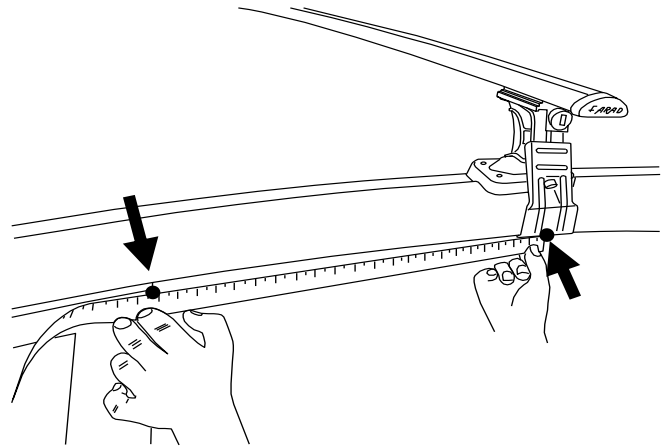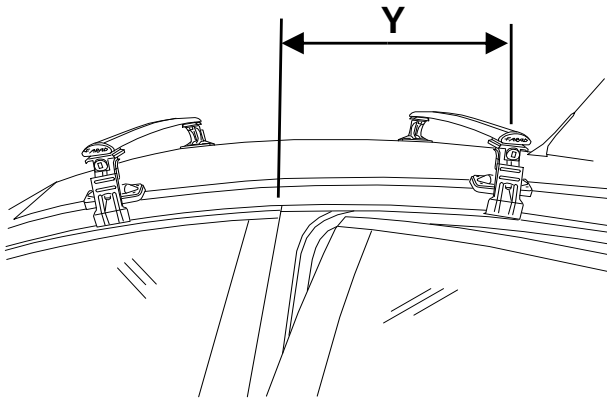


			Y
FIAT	PANDA	5	2003-2012
		Y= 400	

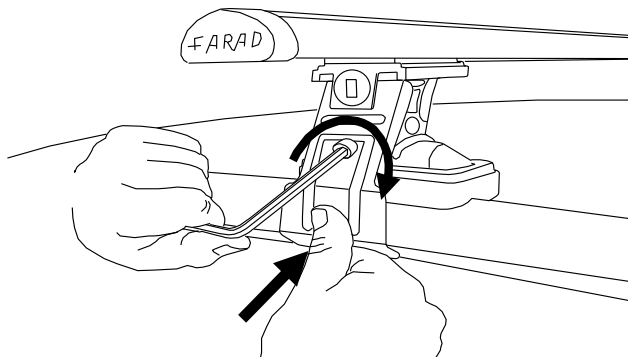




C





REV 000	10/05/2011	16 / 20
----------------	-------------------	----------------

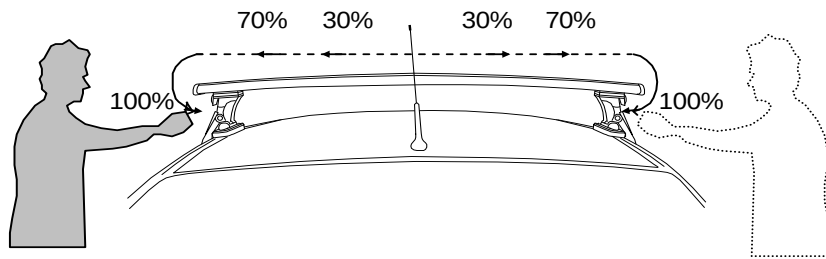



- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

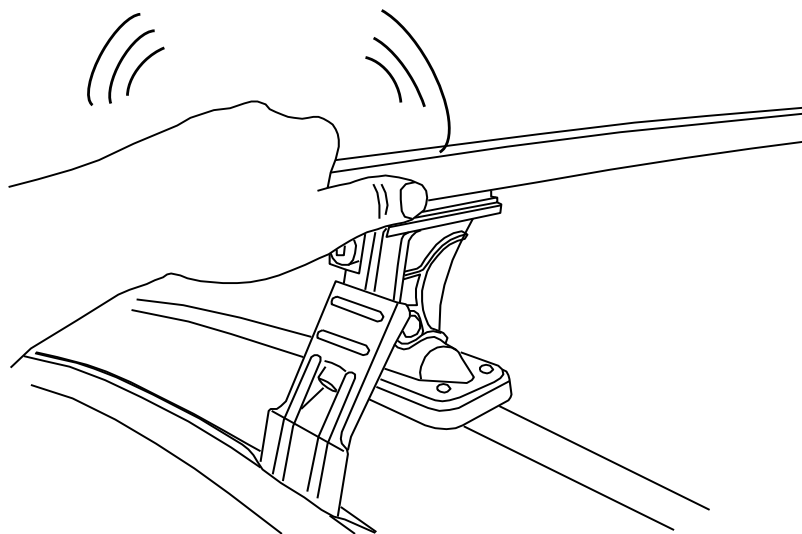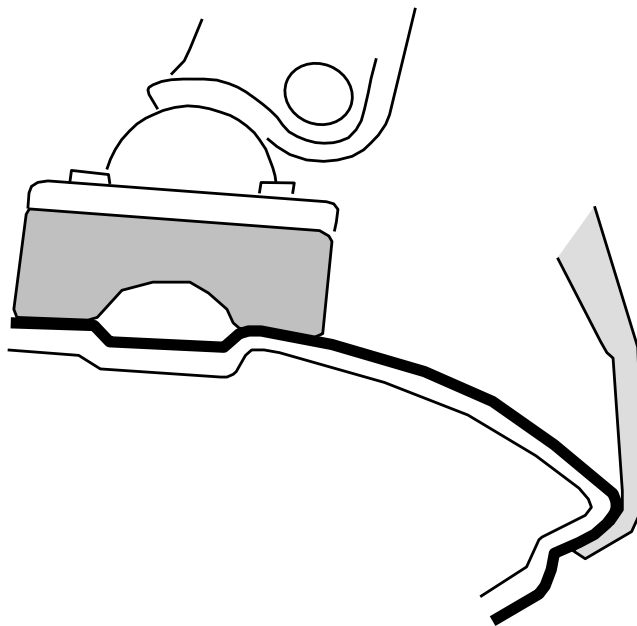

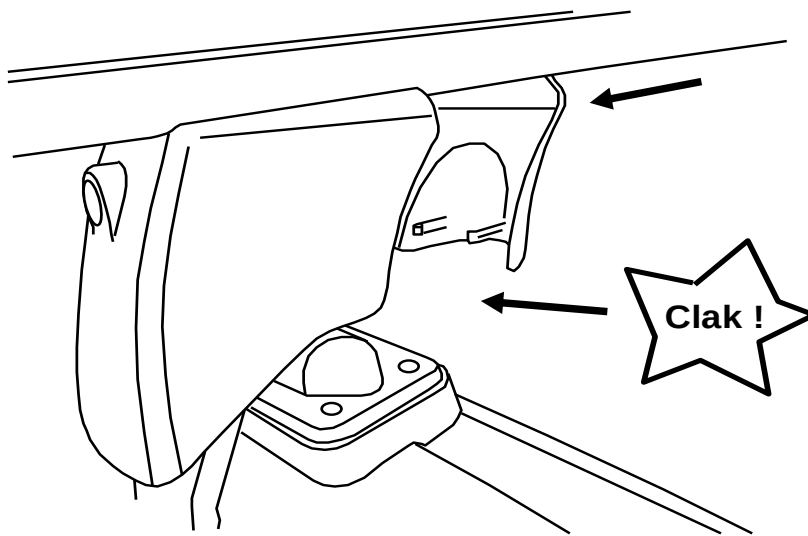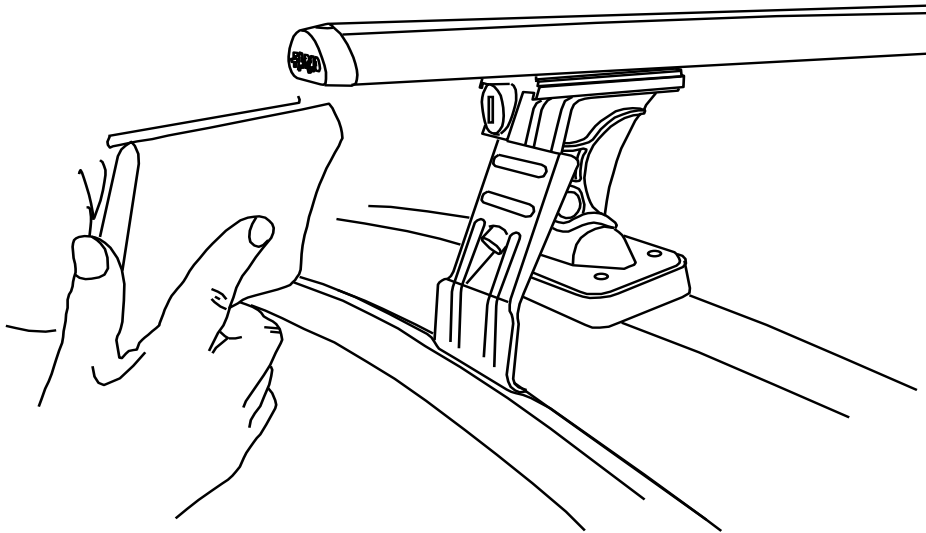

B

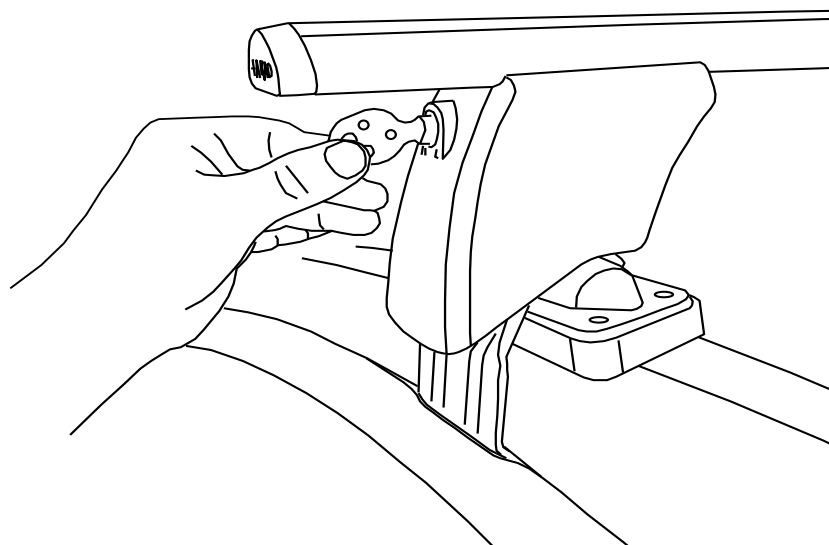

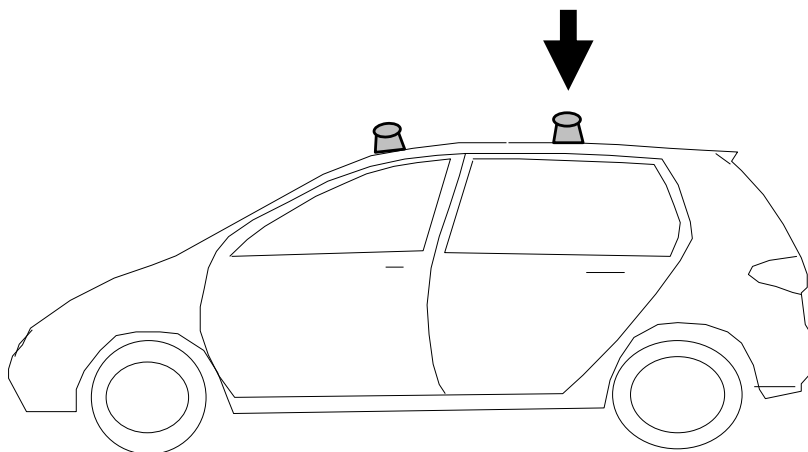


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

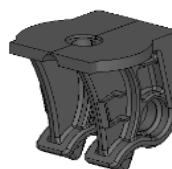

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

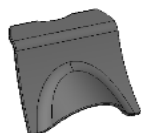


INVOLUCRO POST.
90341 / 9

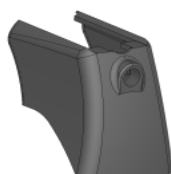

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

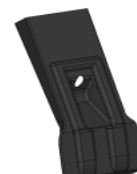

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



**GUARNIZIONE
NUMERICA**
91141 / 14

FARAD®
made in Italy

www.faradworld.com

