

FARAD[®] BARS

made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy

www.faradworld.com

+39 0172 58575

BS 144 - 1

MINI CLUBMAN 2016>
JEEP RENEGADE 2014 >

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcje wbudowania

D Einbauanleitung

GB Fitting instructions


E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

Nr 2
A

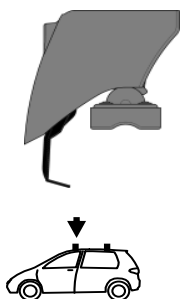

Nr 2
P

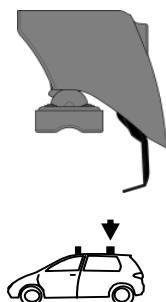

Nr 2
B




Nr 1
C



Nr 1
D



Nr 1
E



+

KIT ALU


Nr 2
L














Nr 2
M





=


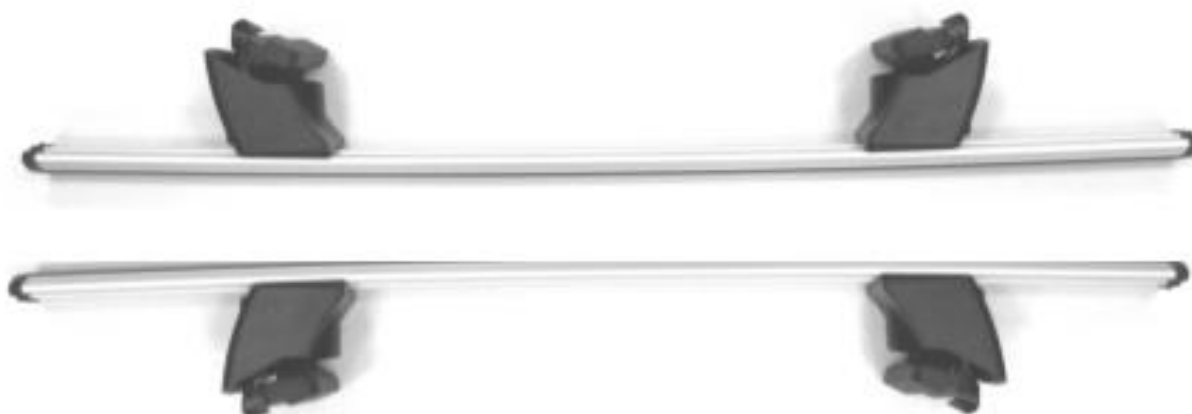


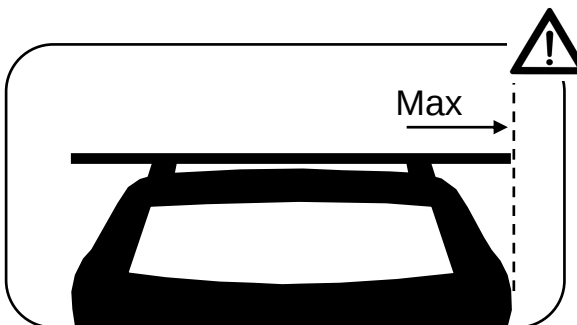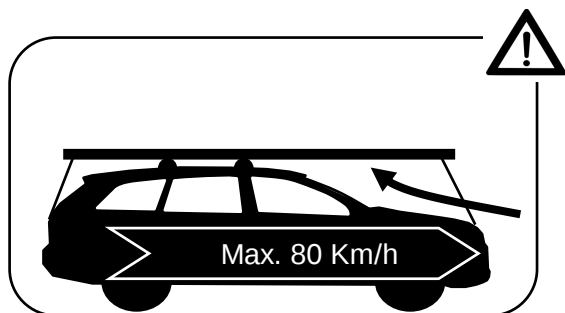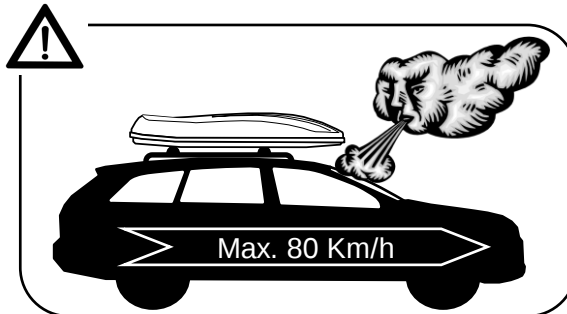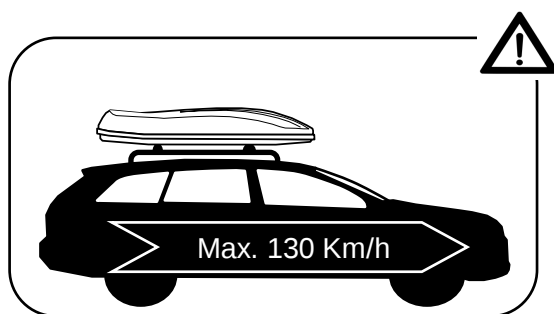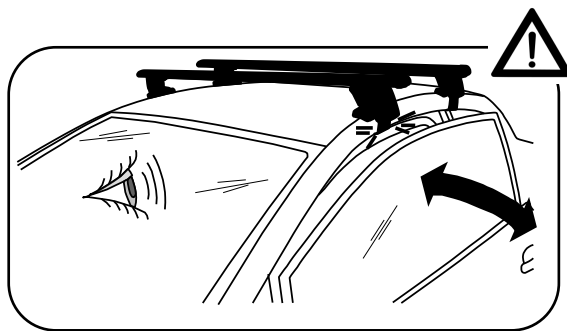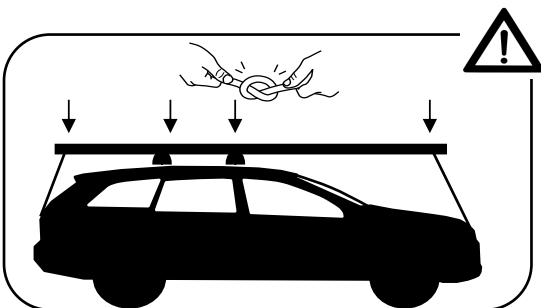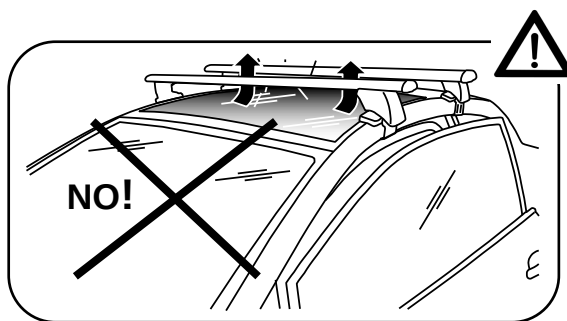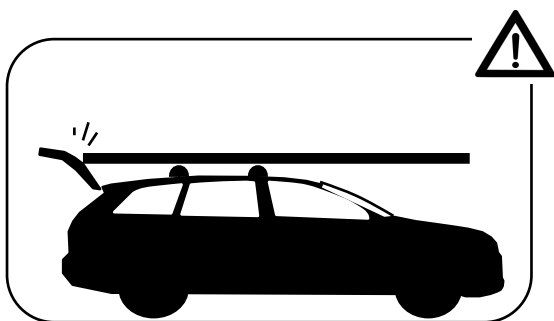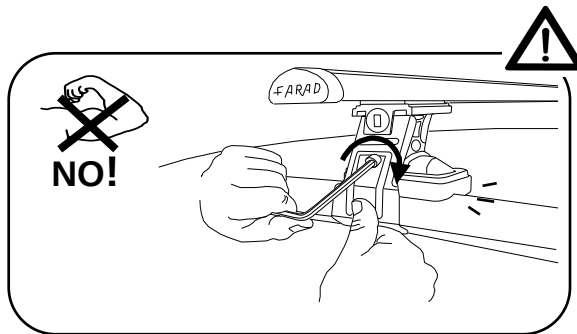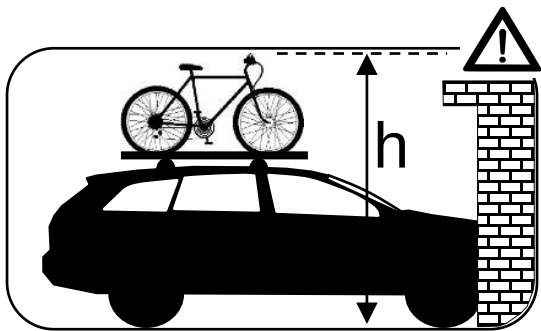

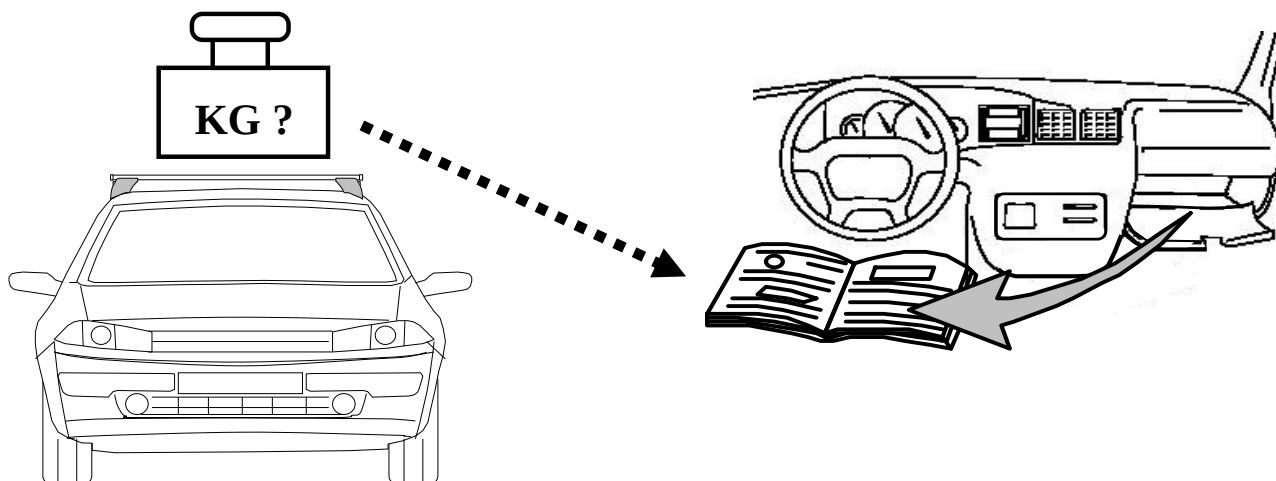

- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |

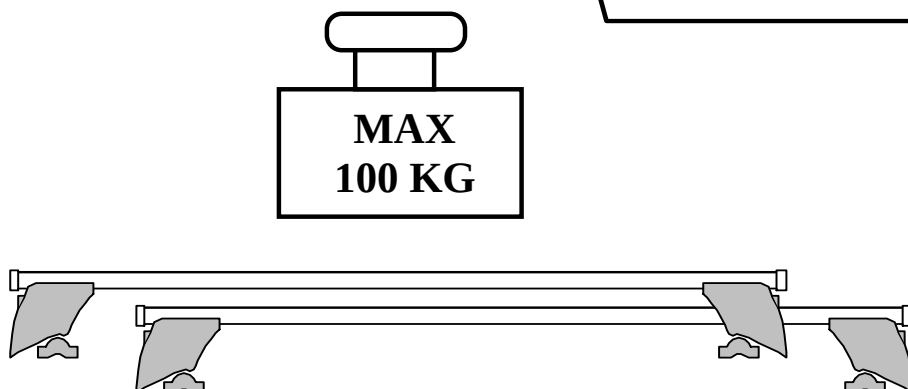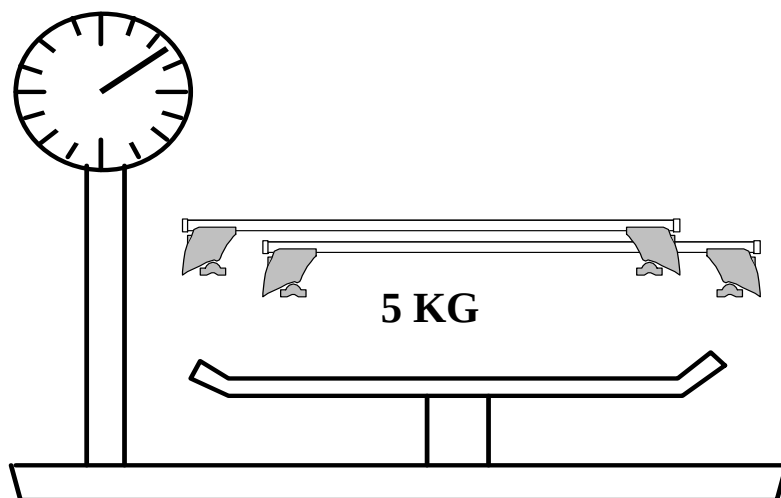

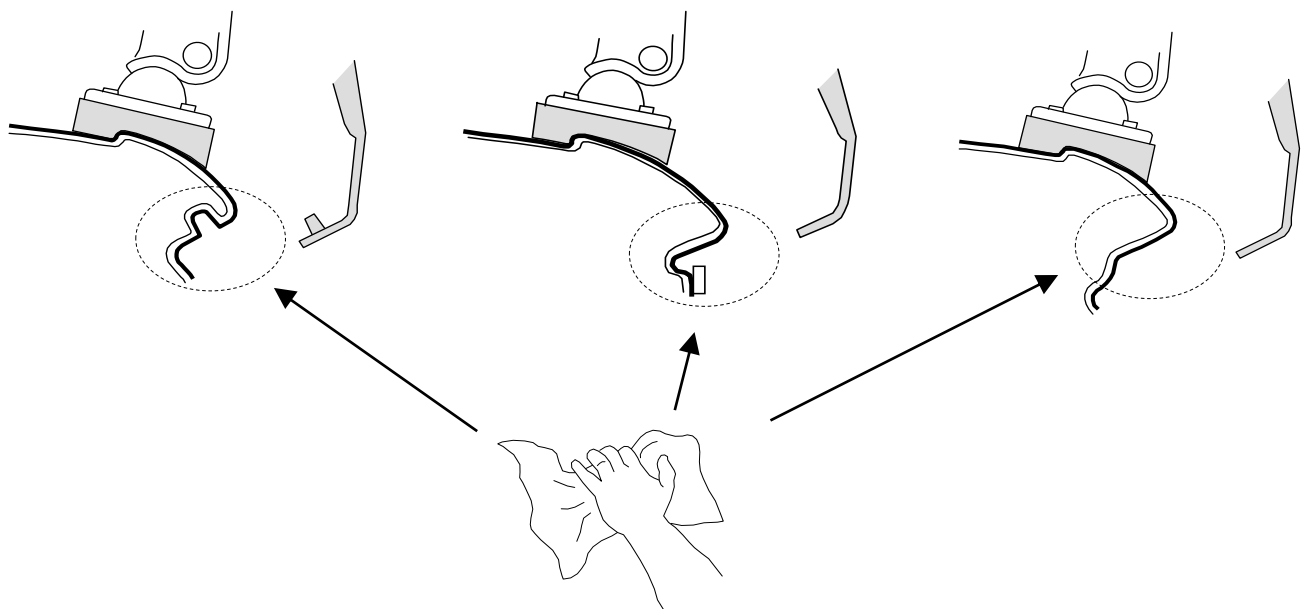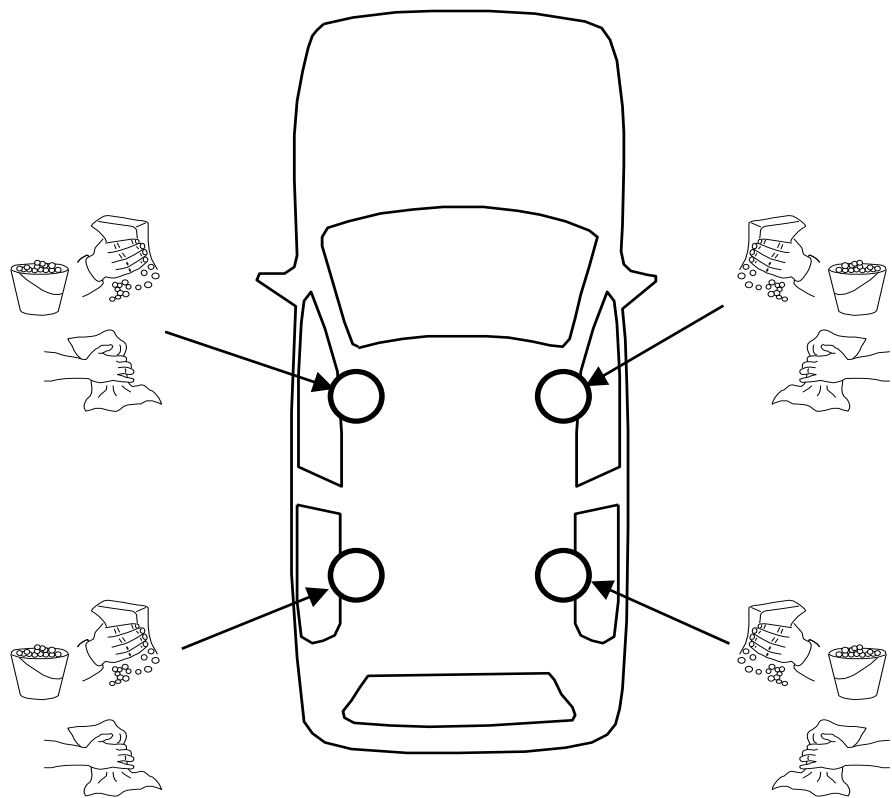

I **Montaggio Barra Anteriore**

F **Fixation Barre Avant**

PL **Montaż Bagażnika Bazowego Tylnego**


GB **Fitting Front Roof Bar**



D **Montage Vorderes Dachträgers**


NL **Montage Voorste Dakdrager**


SWE **Montering Av Främre Lasthållaren**


E **Fijación Barra Frontal**

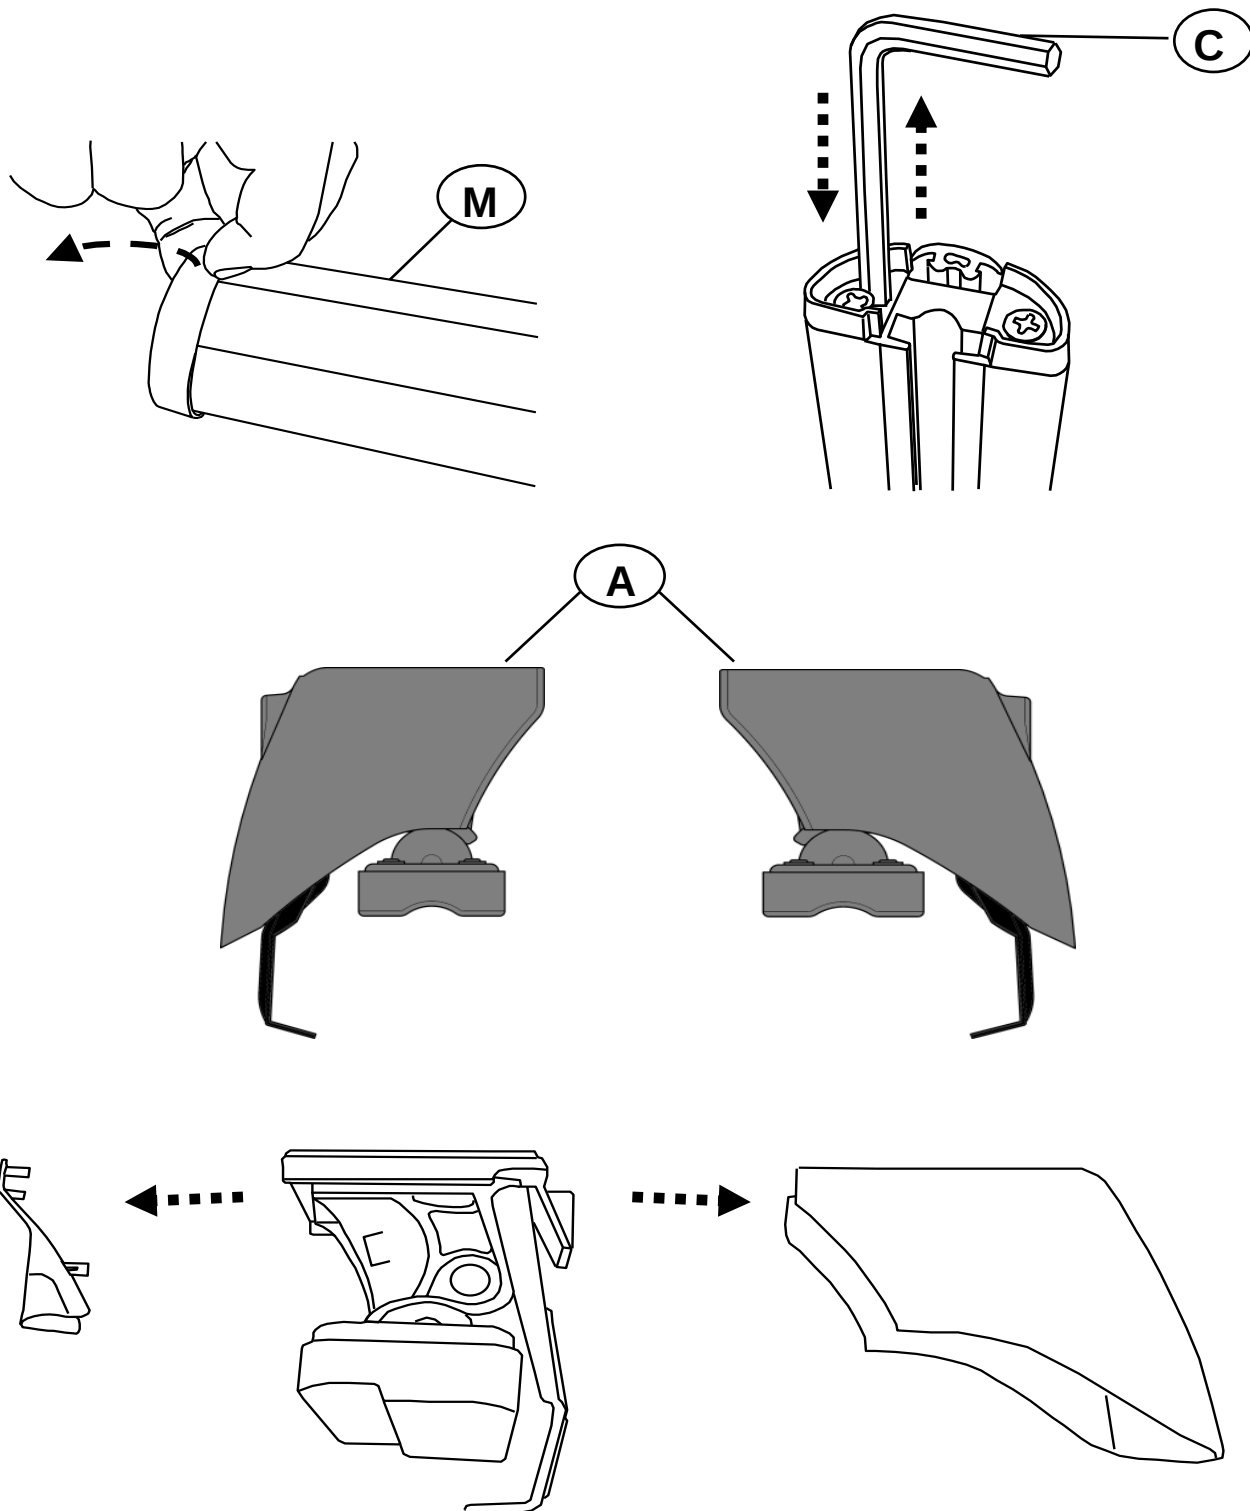


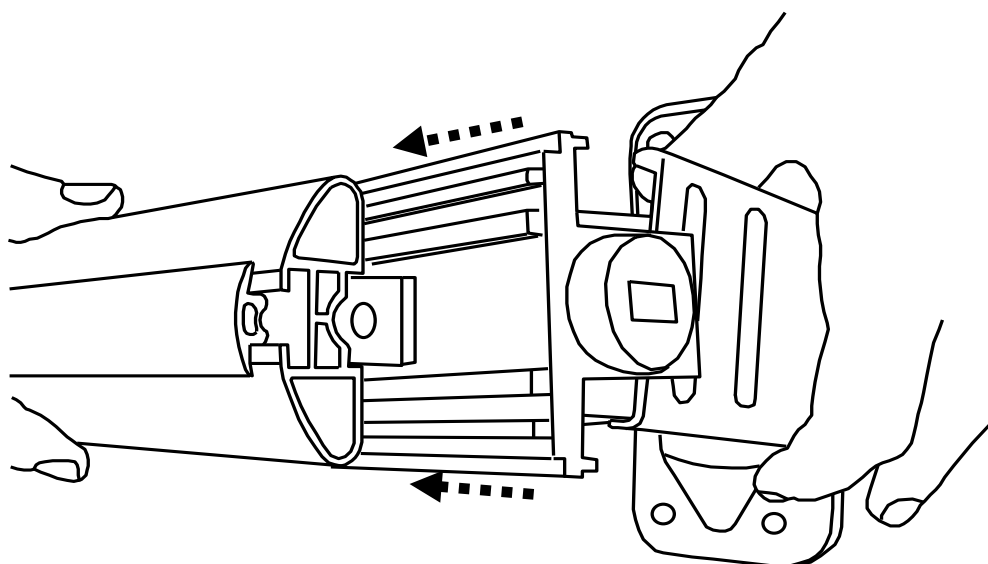
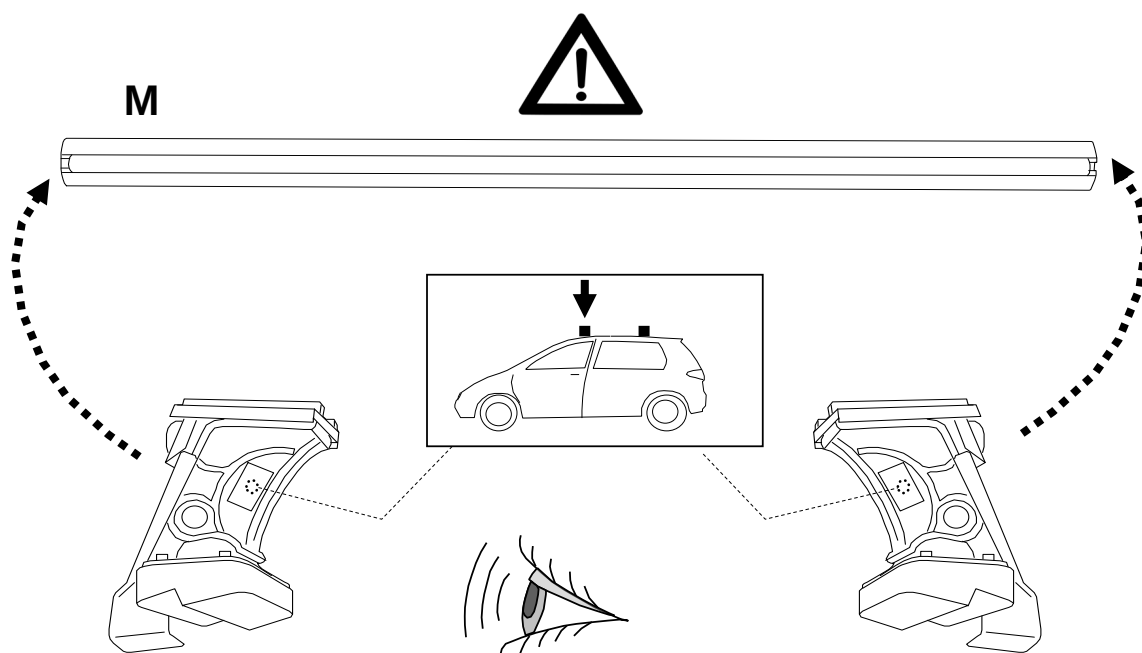


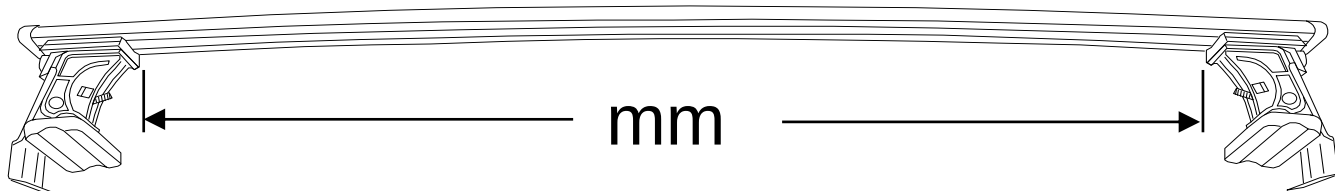





				R	mm
MINI	CLUBMAN	5	2016 >	R= 47	1000
JEEP	RENEGADE	5	2014 >	R= 27	1100

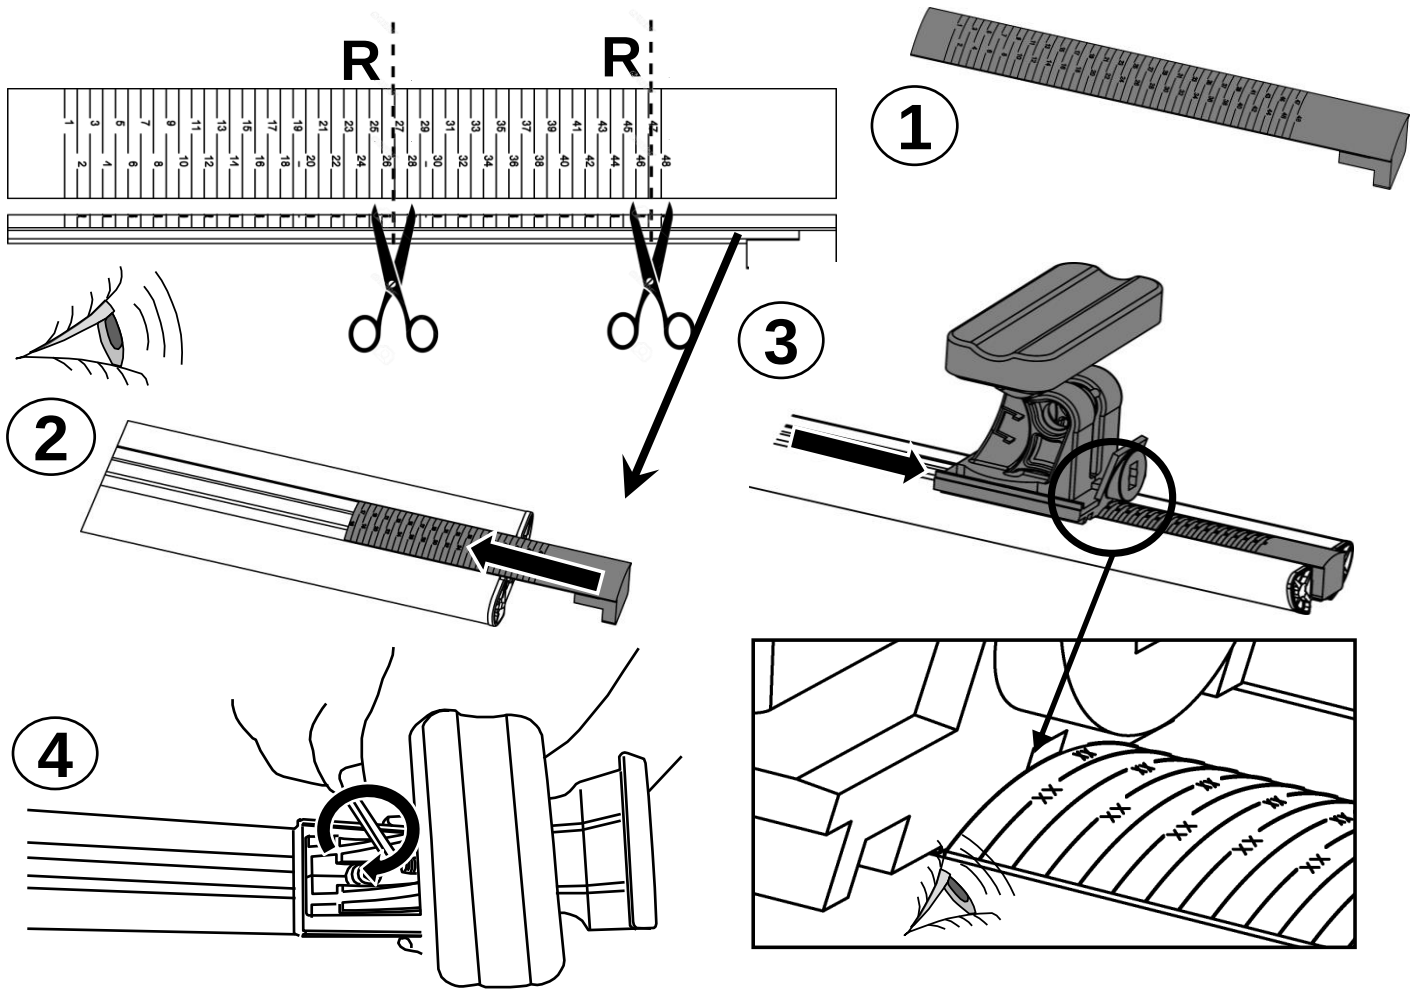

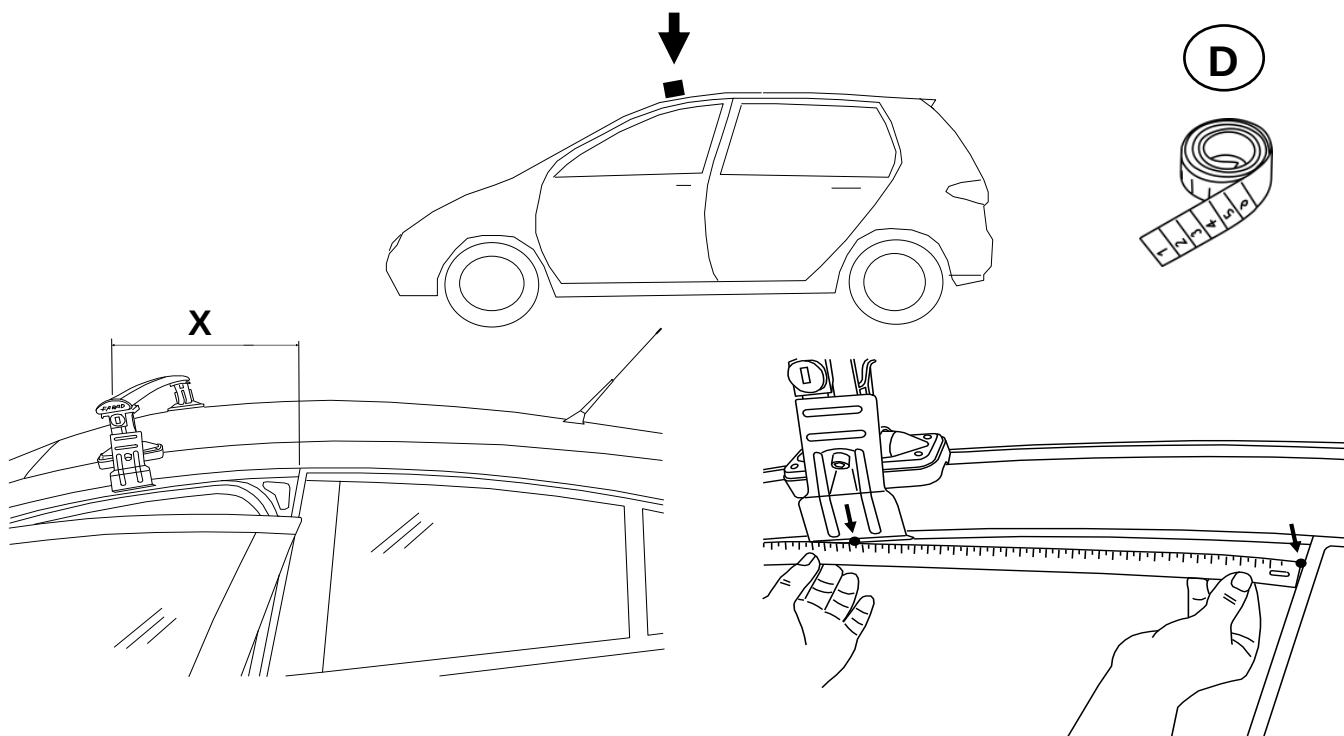


				X
MINI	CLUBMAN	5	2016 >	X= 280
JEEP	RENEGADE	5	2014 >	X= 250



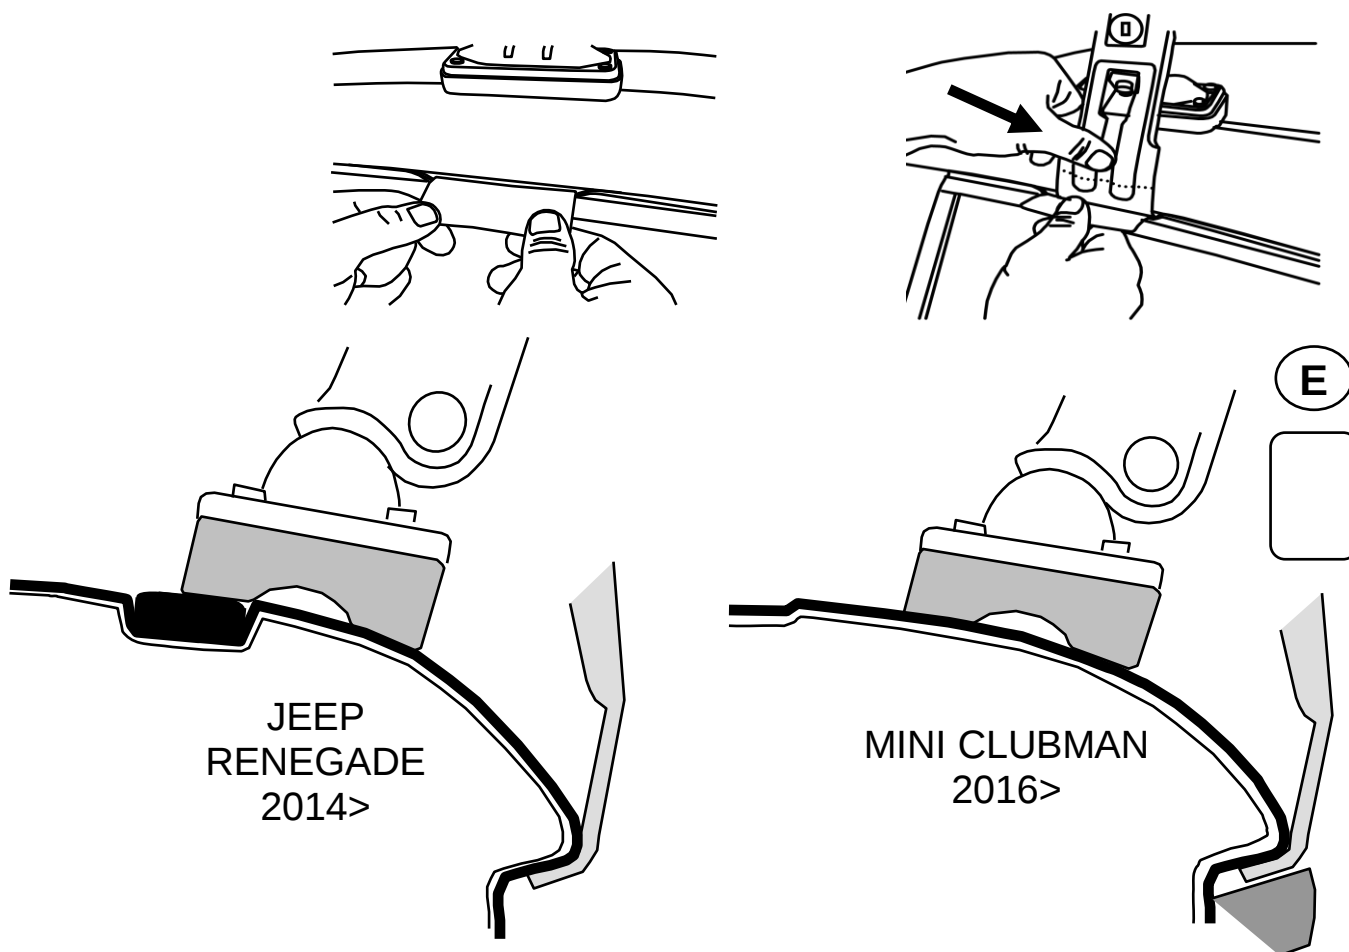


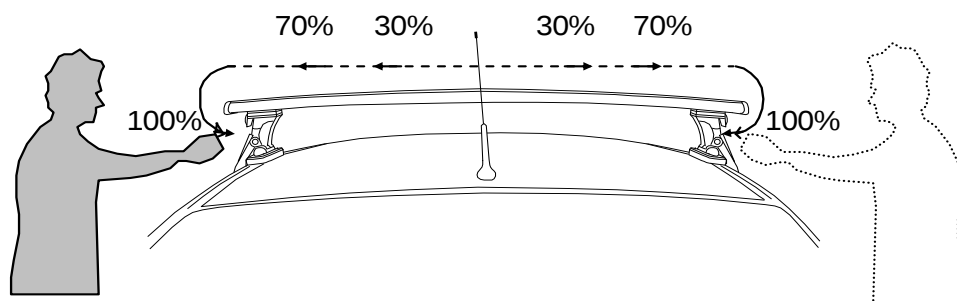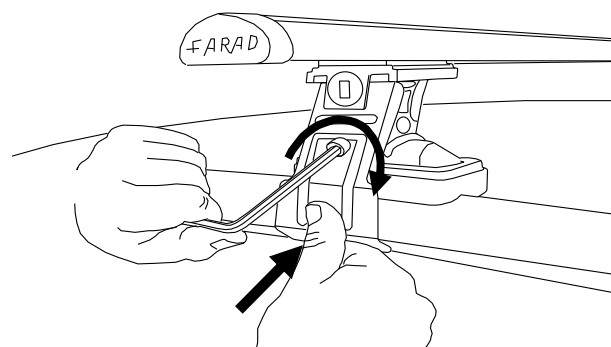


I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

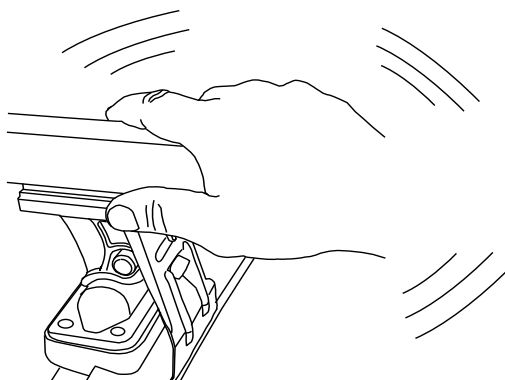

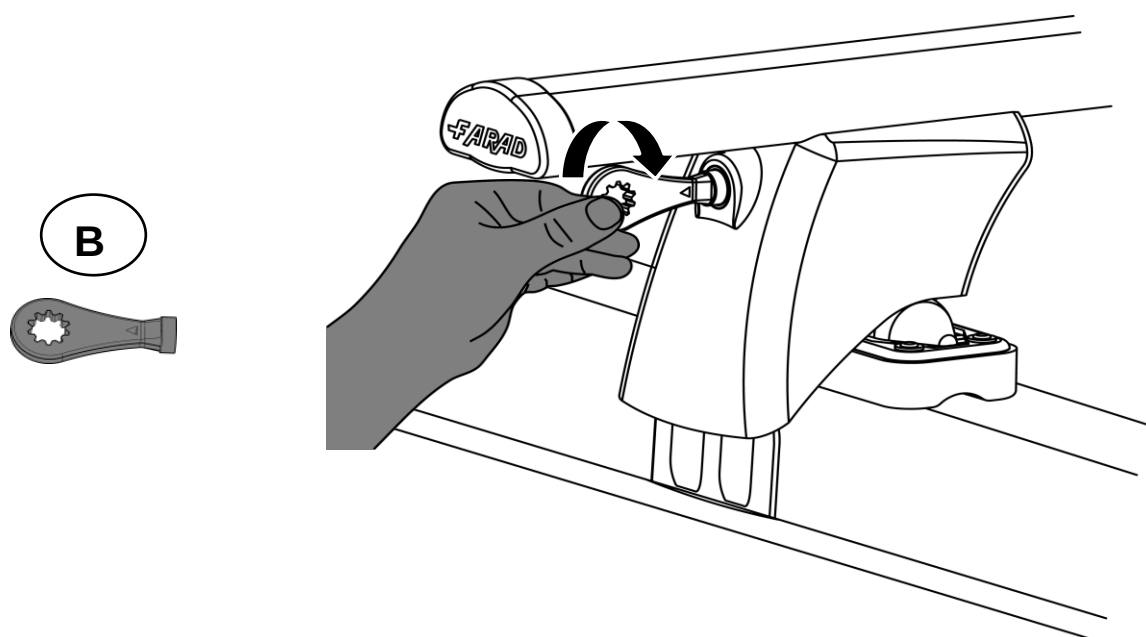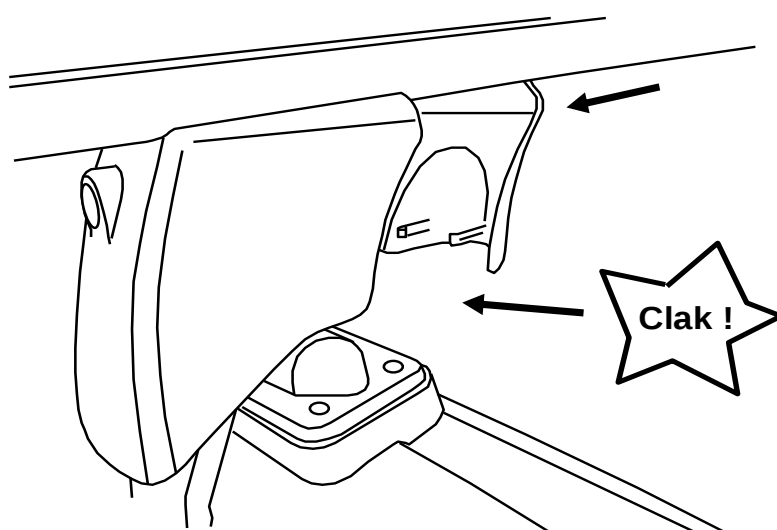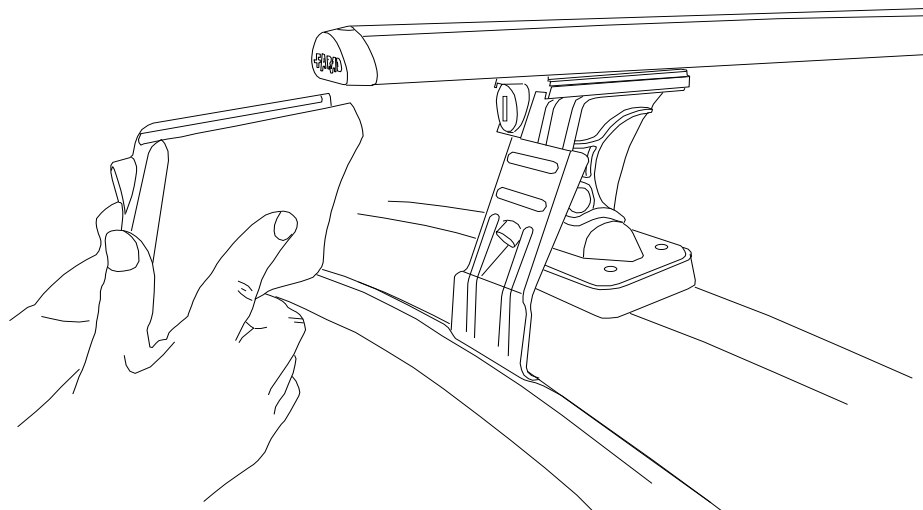

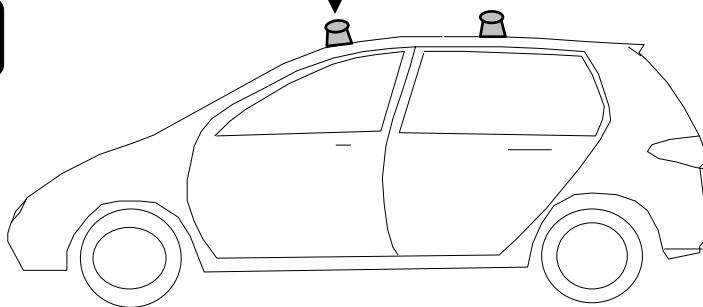

MINI CLUBMAN 2016>



JEEP RENEGADE 2014>



- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
PL OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
GB CHECK THE SCREW FASTENING PERIODICALLY
D REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
SWE REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
F VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT



I **Montaggio barra posteriore**

PL **Montaż Bagażnika Bazowego Przedniego**

SWE **Montering Främre Lasthållaren**


NL **Montage Achterste Dakdrager**



F **Fixation Barre Arriere**


GB **Fitting Rear Roof Bar**


E **Fijación Barra Trasera**


D **Montage Heckdachträgers**

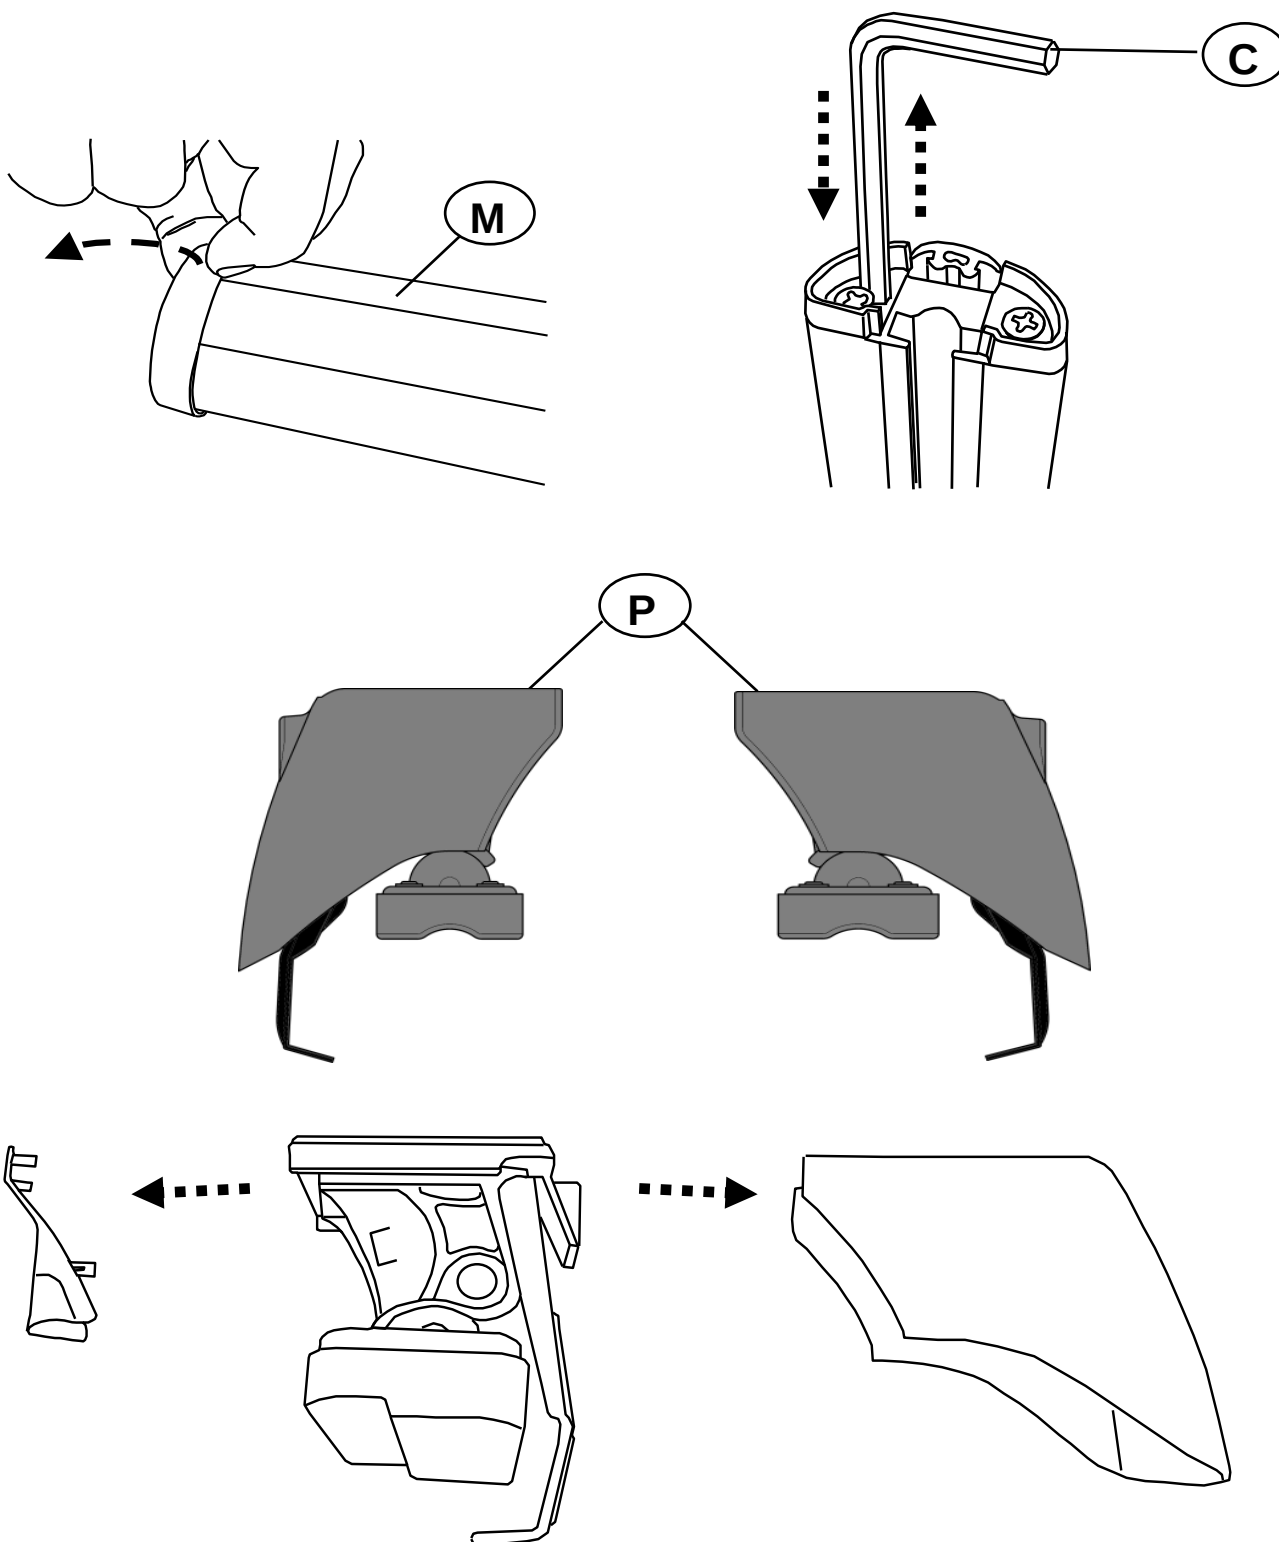


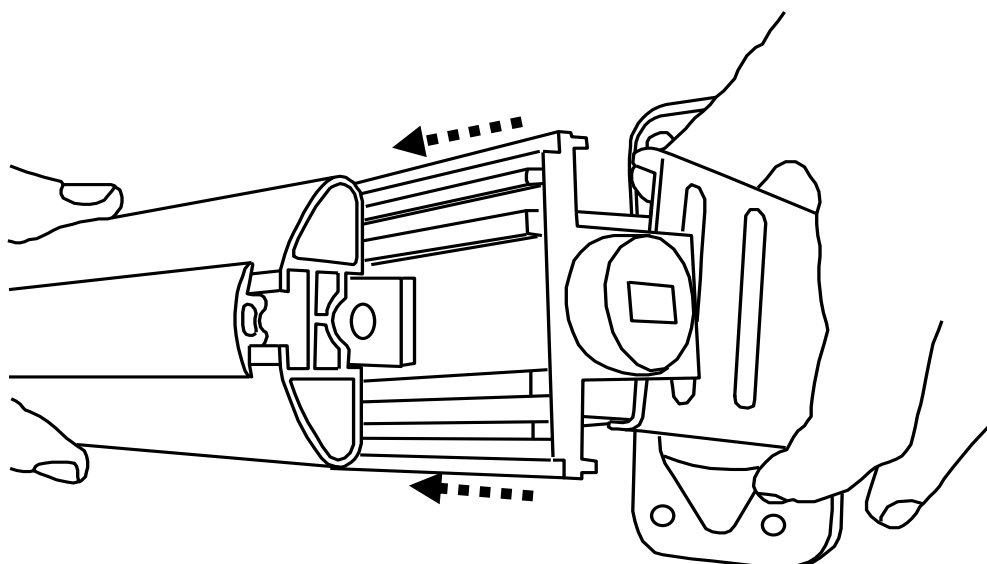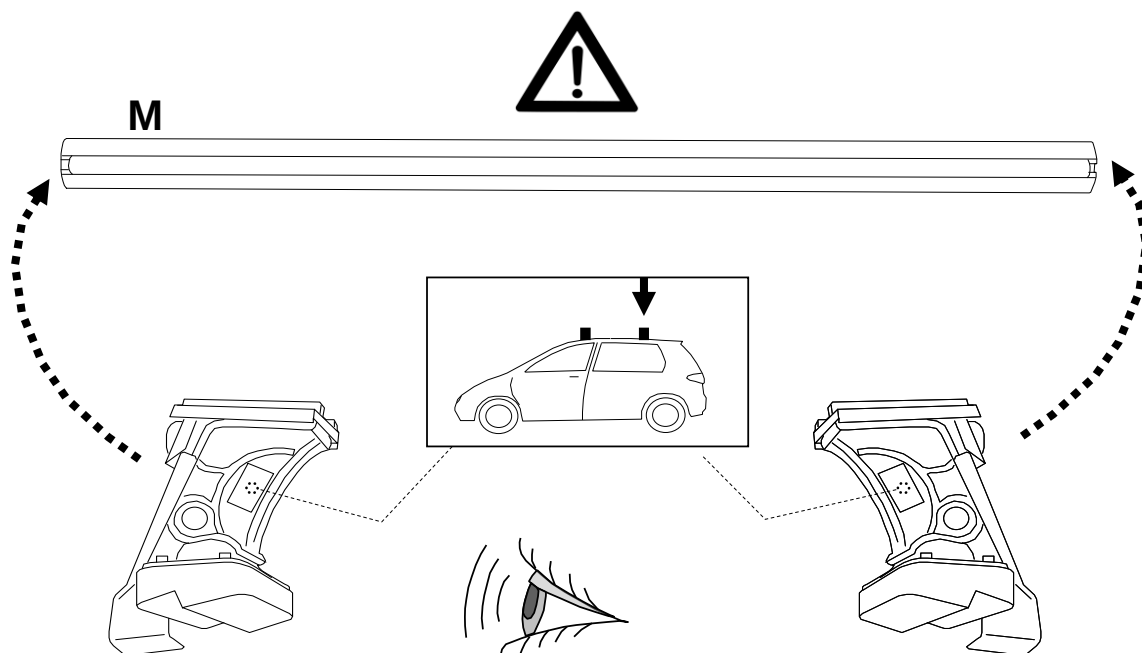





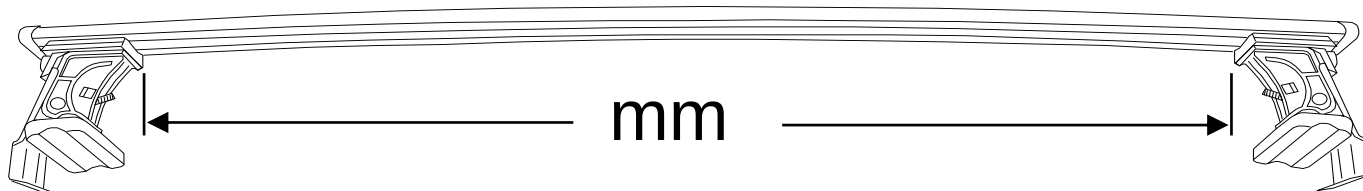





				R	mm
MINI	CLUBMAN	5	2016 >	R= 47	1000
JEEP	RENEGADE	5	2014 >	R= 30	1115

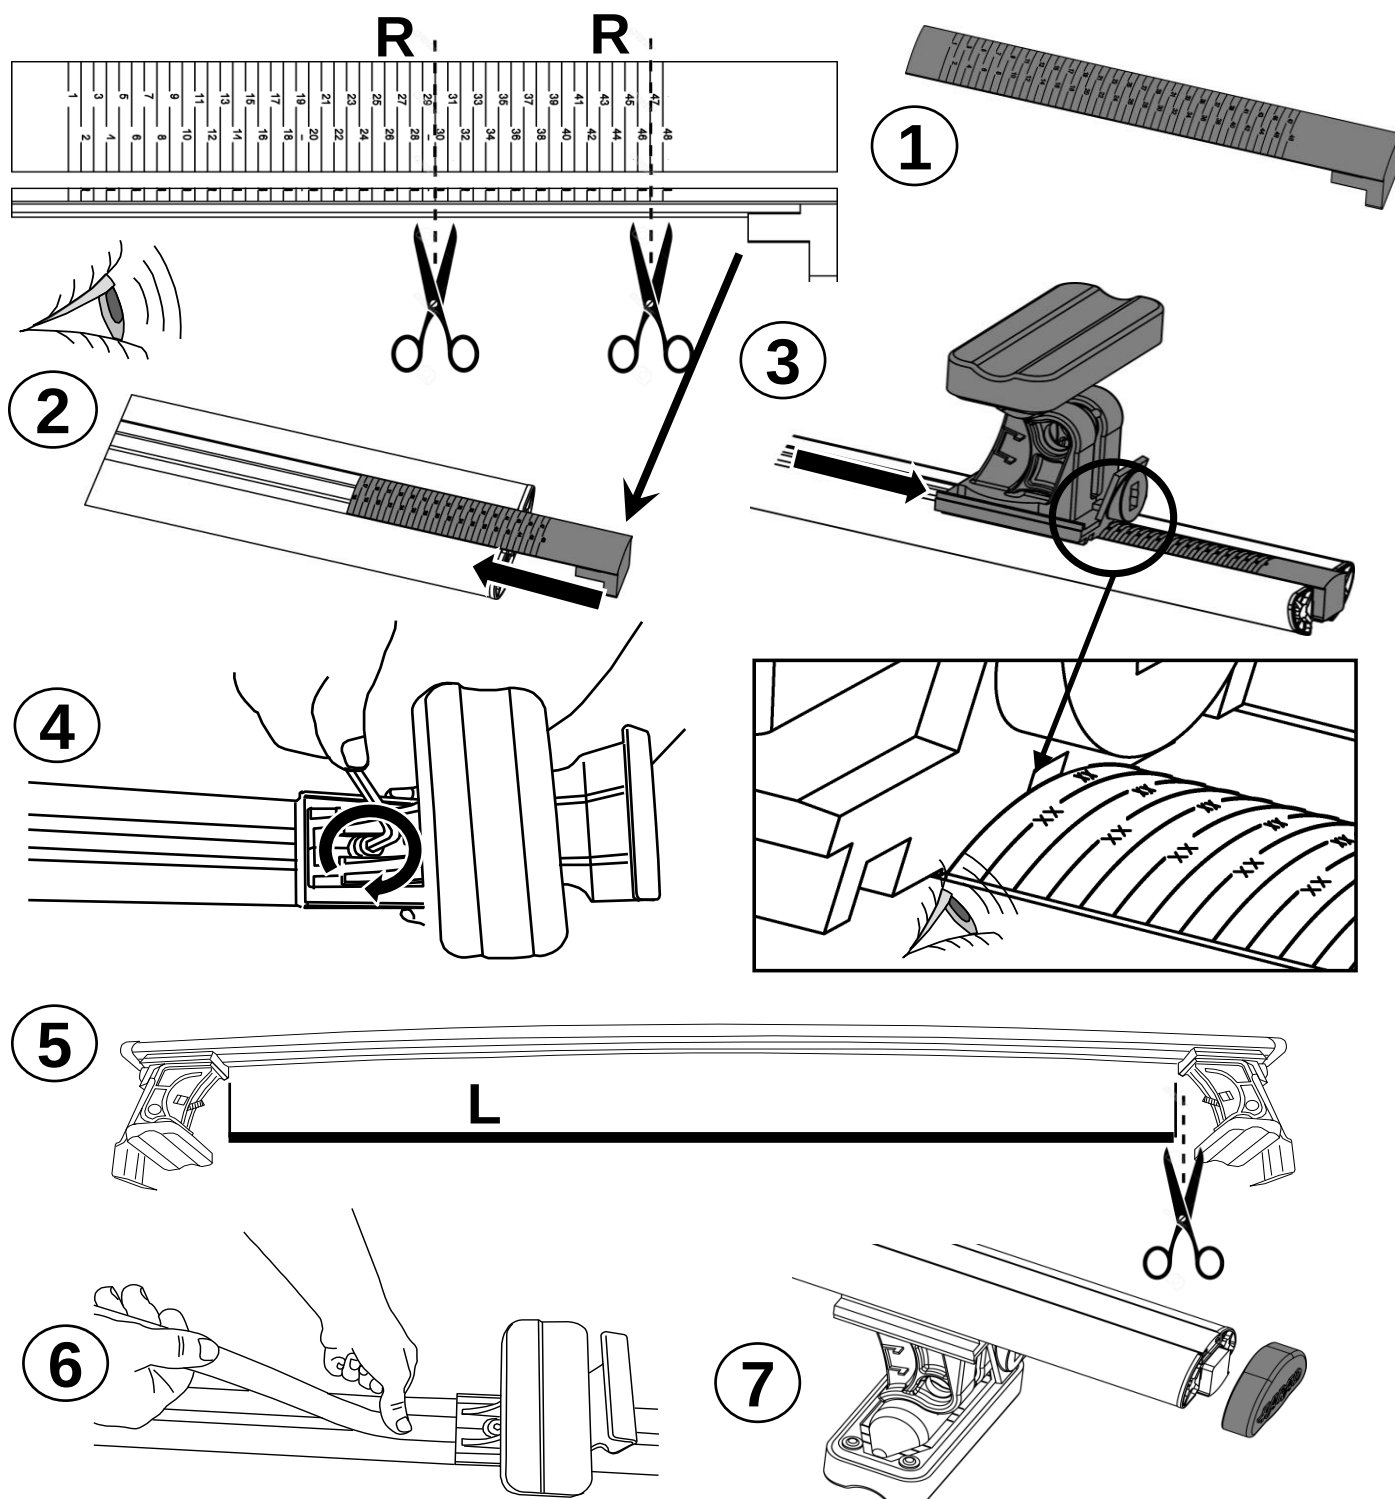

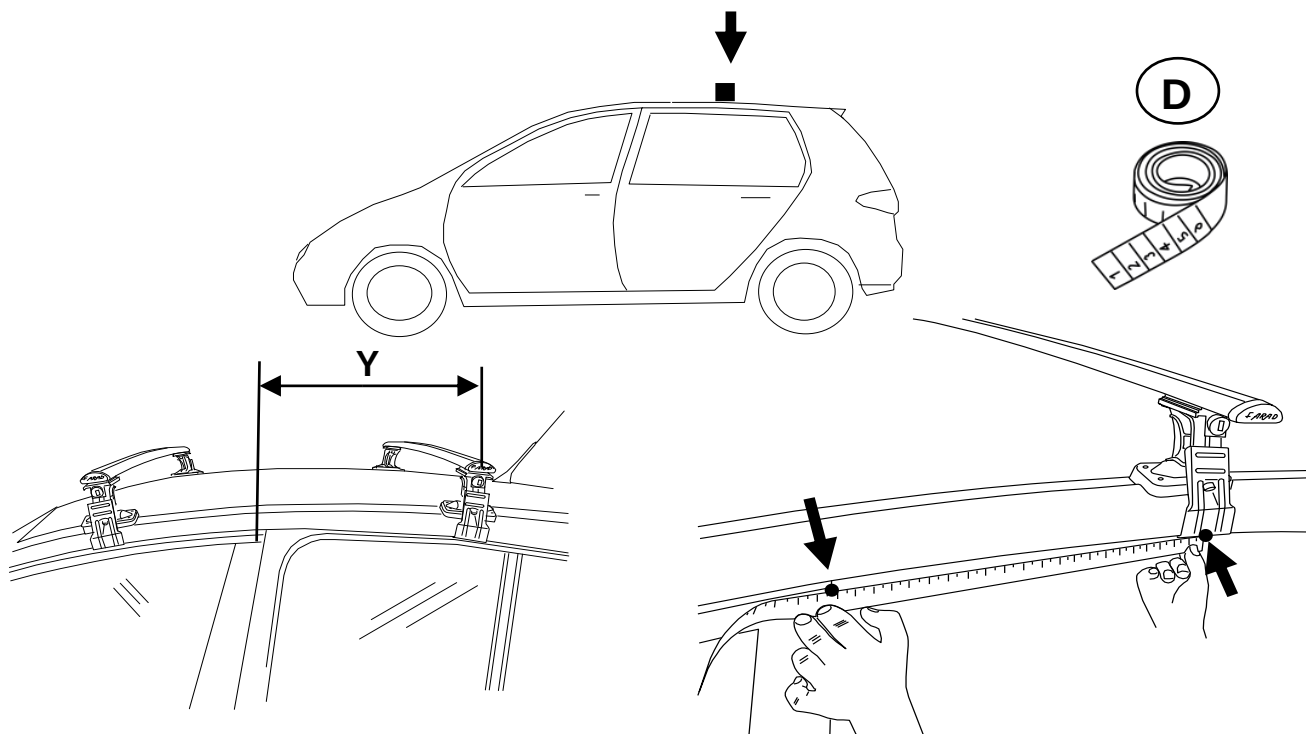





				Y
MINI	CLUBMAN	5	2016 >	Y= 500
JEEP	RENEGADE	5	2014 >	Y= 450

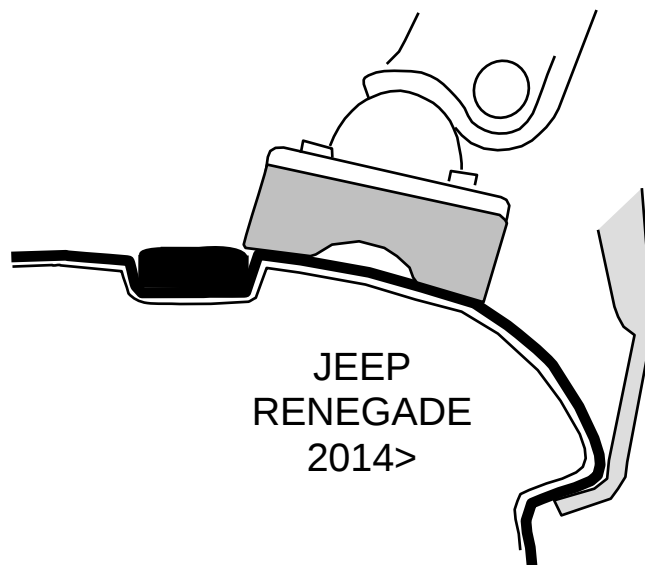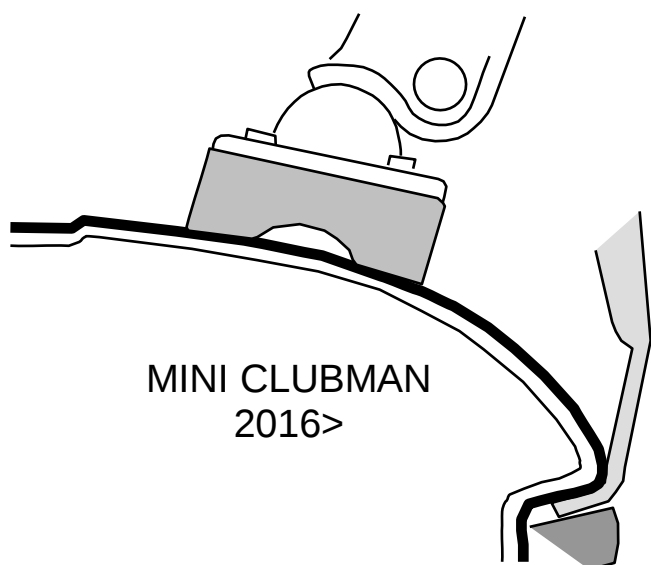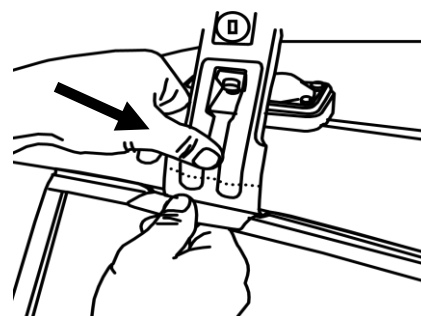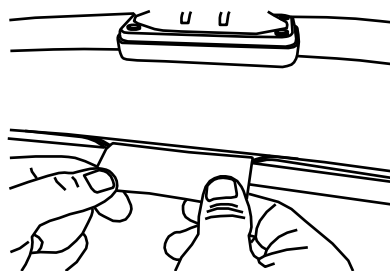


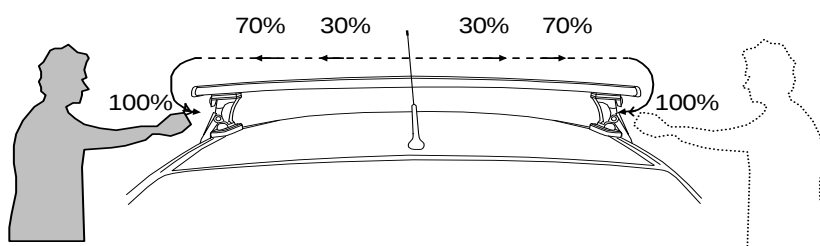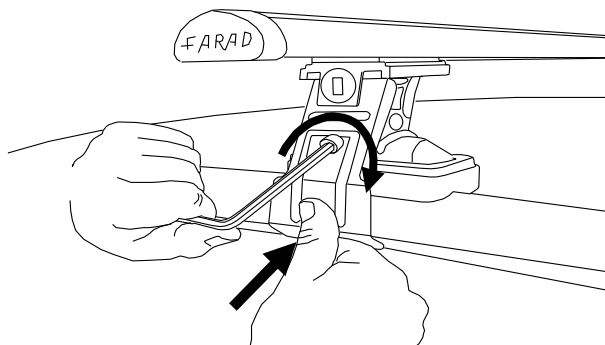

I	Alternare il fissaggio delle viti	F	Serrer alternativement chaque côté
PL	Śruby dokręcaj naprzemiennie	D	Die Schrauben abwechselnd anziehen
GB	Tighten alternately	E	Apretar alternativamente
NL	Afwisselend aan de linker- en de rechterkant aandraaien	SWE	Dra åt växelvis

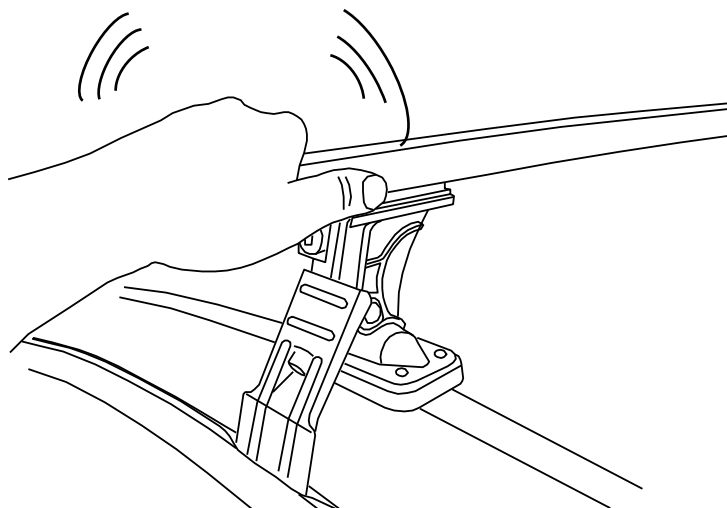

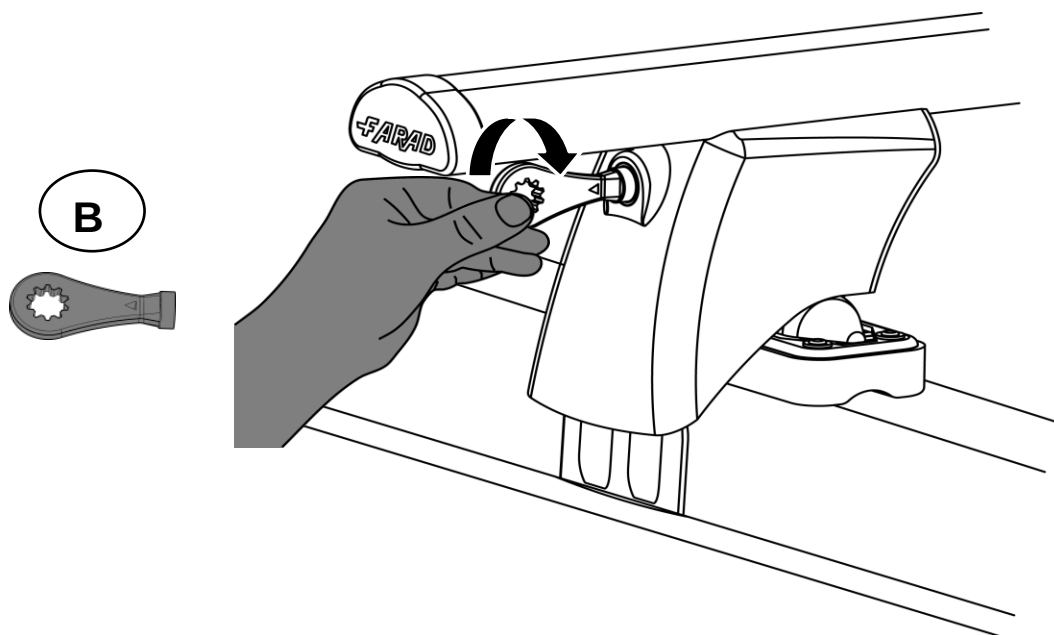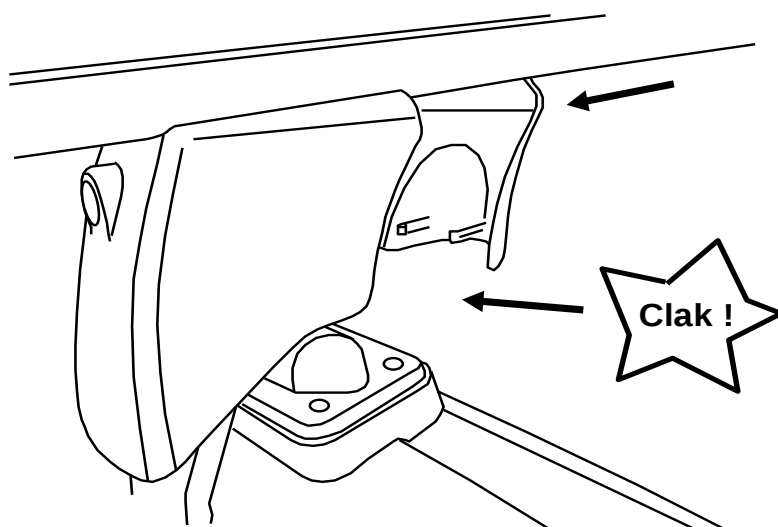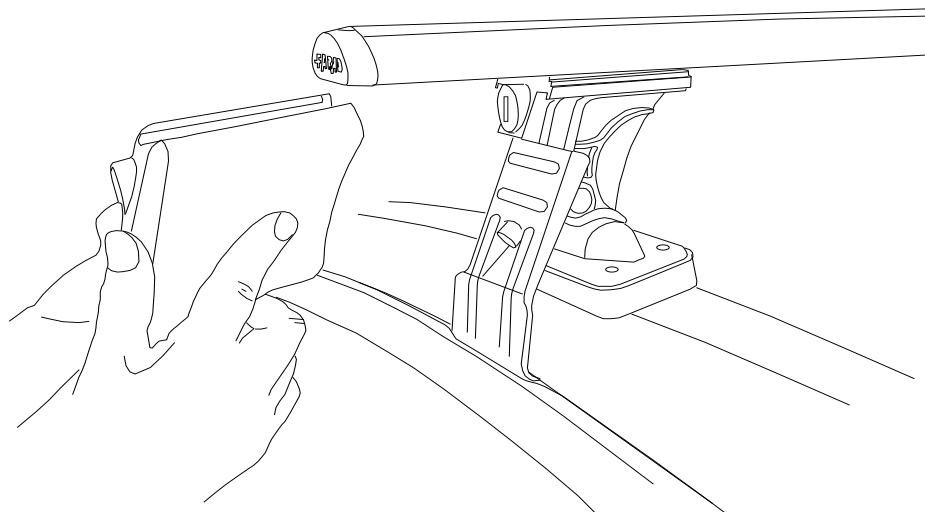

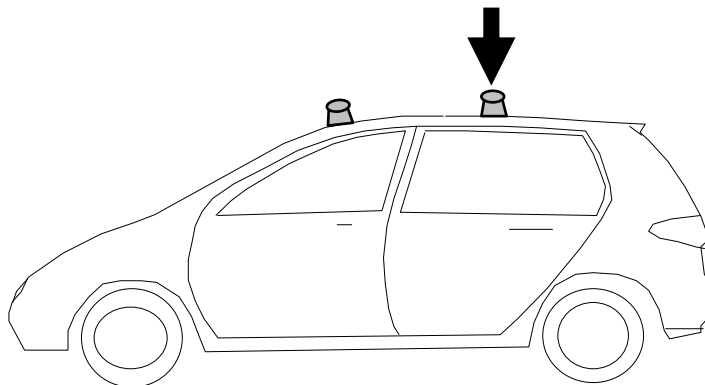

MINI CLUBMAN 2016>



JEEP RENEGADE 2014>




- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT




RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

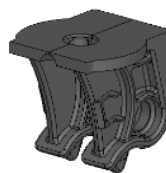

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3



SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13




SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

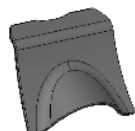


INVOLUCRO POST.
90341 / 9

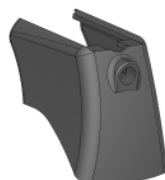

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

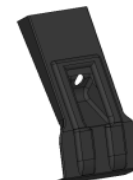

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in Italy

www.faradworld.com

