

FARAD[®]BARS

made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy

www.faradworld.com



+39 0172 58575

BS 102

C4 PICASSO 2006-2013
C4 GRAN PICASSO 2006-2013

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcje wbudowania

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

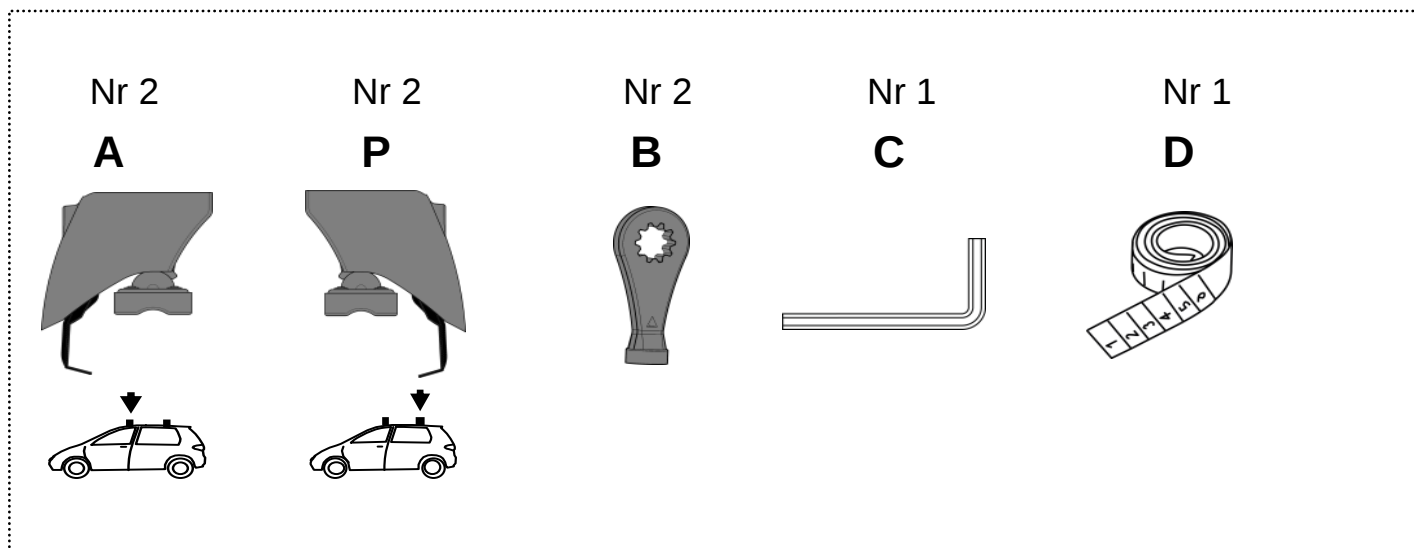












+


KIT ALU

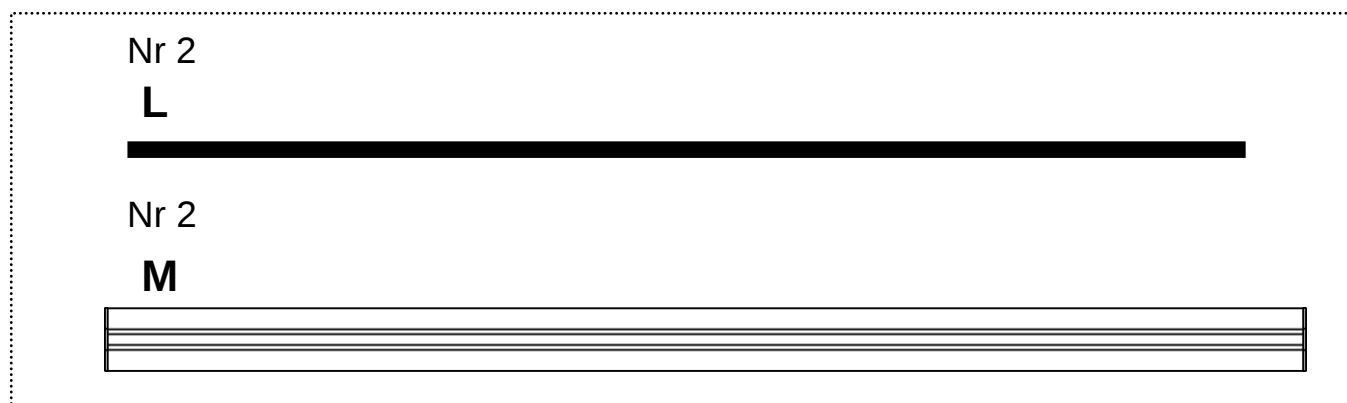



=


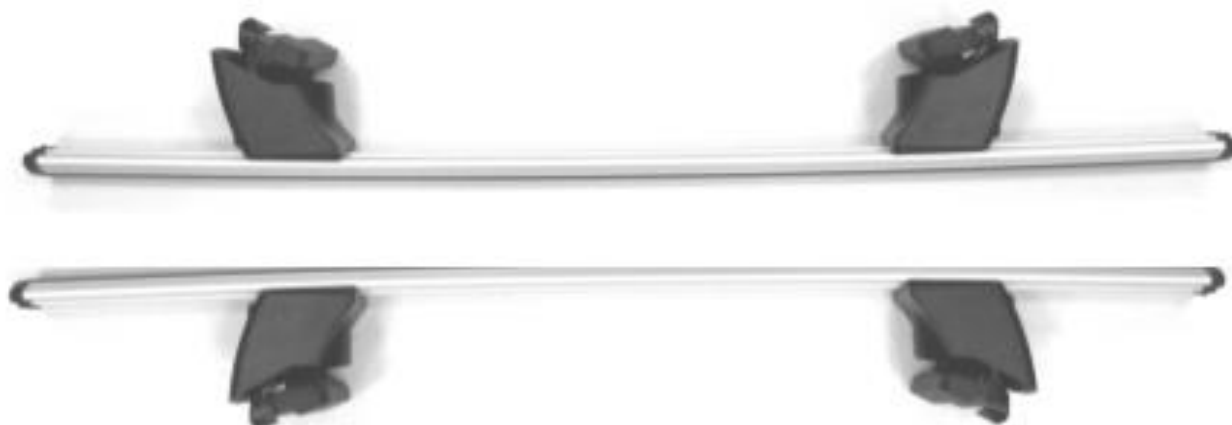


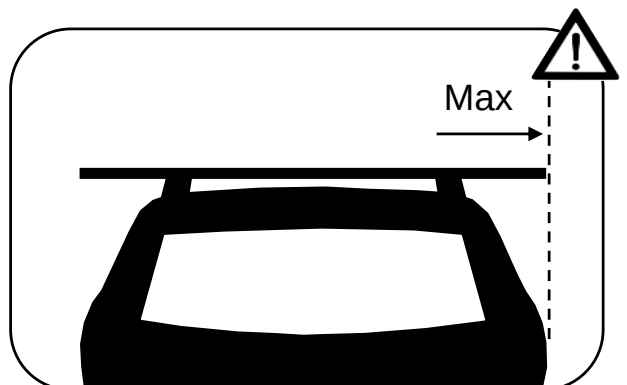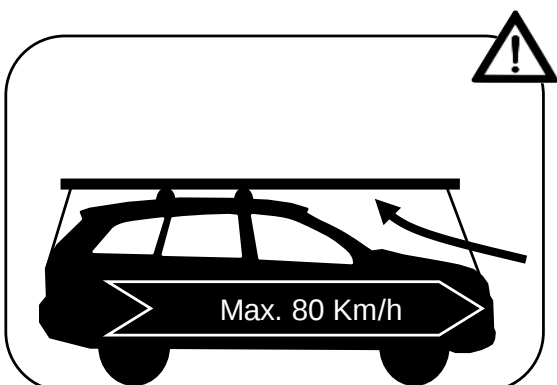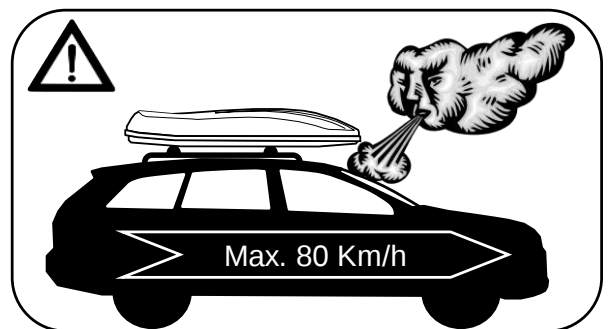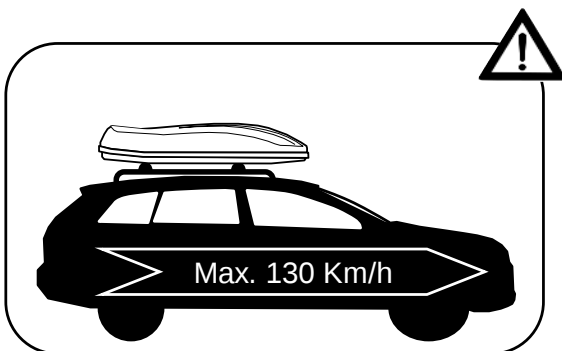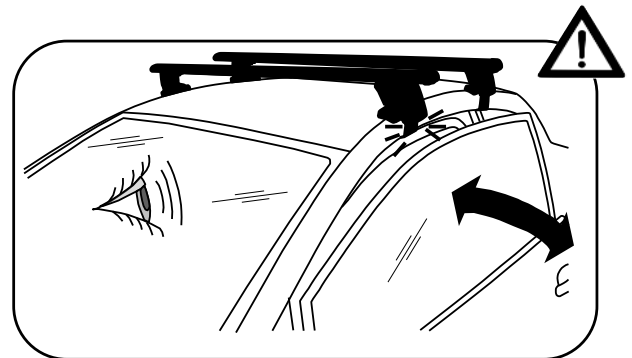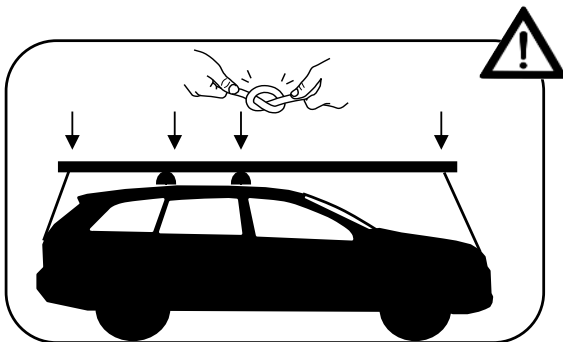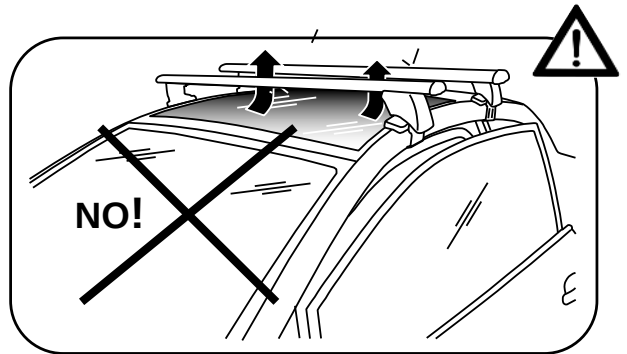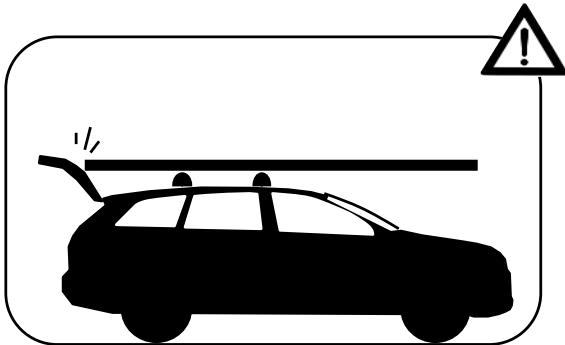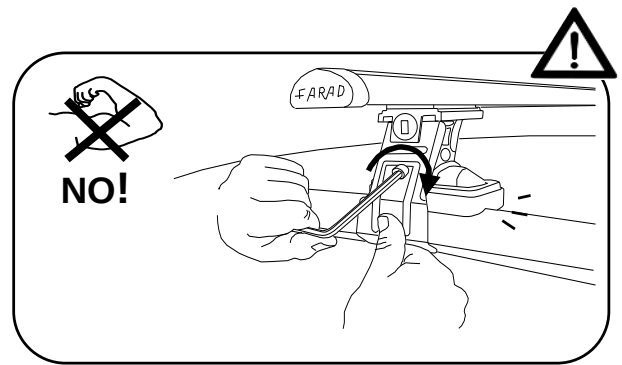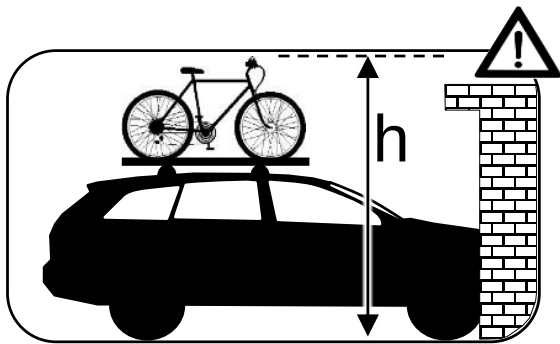

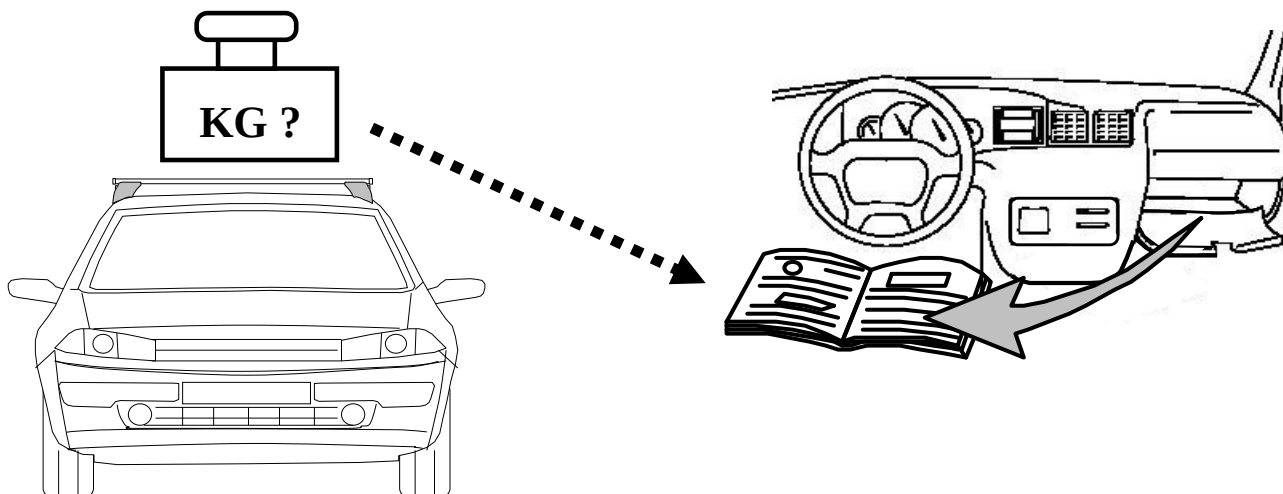


- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |

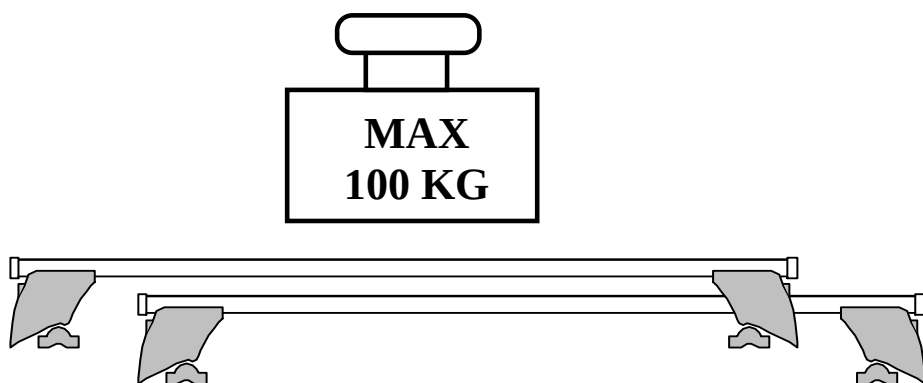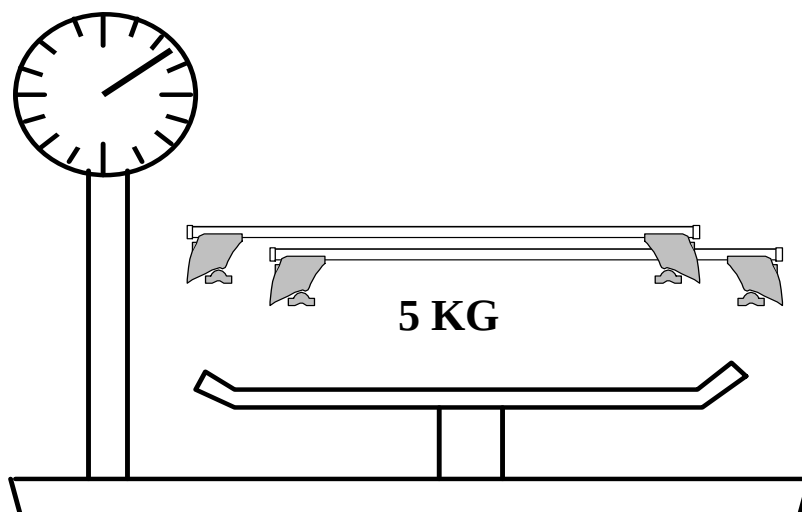

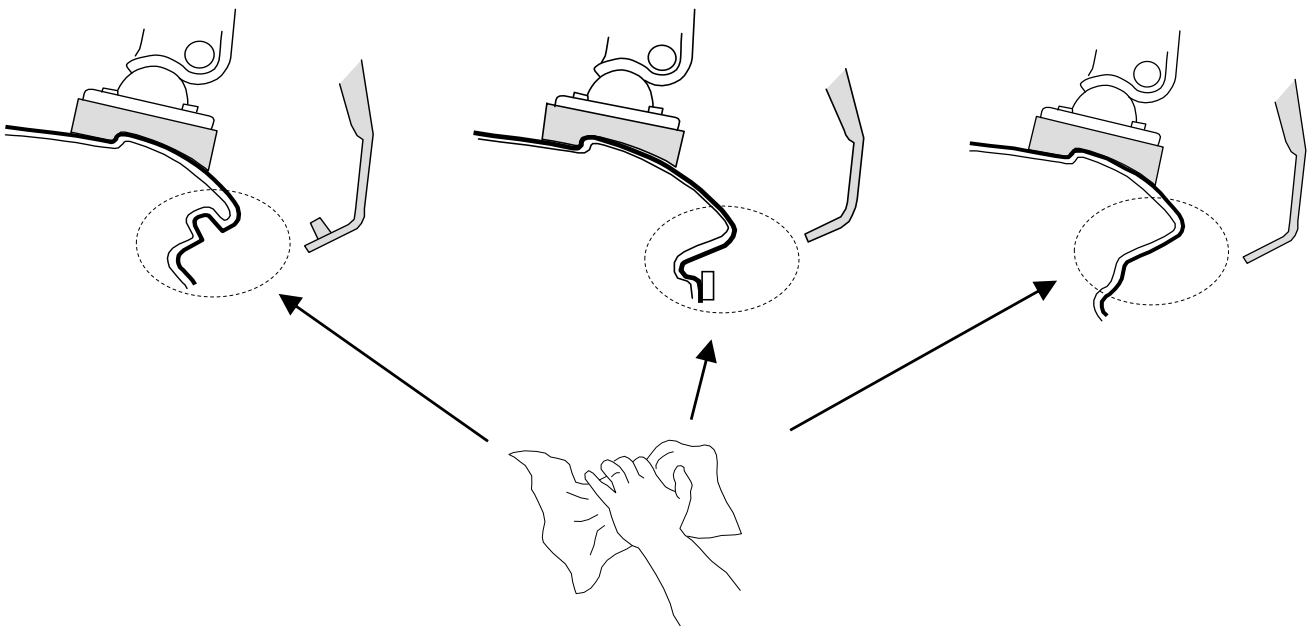
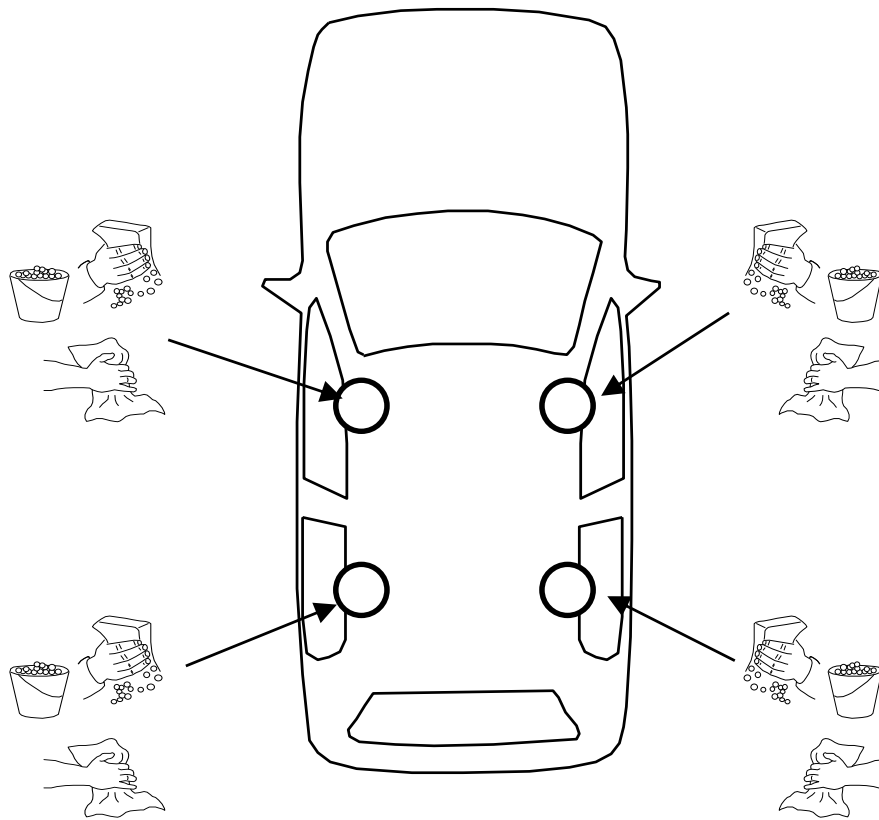



I	Montaggio Barra Anteriore	F	Fixation Barre Avant
PL	Montaż Bagażnika Bazowego Tylnego	GB	Fitting Front Roof Bar
D	Montage Vorderes Dachträgers	NL	Montage Voorste Dakdrager
SWE	Montering Av Främre Lasthållaren	E	Fijación Barra Frontal


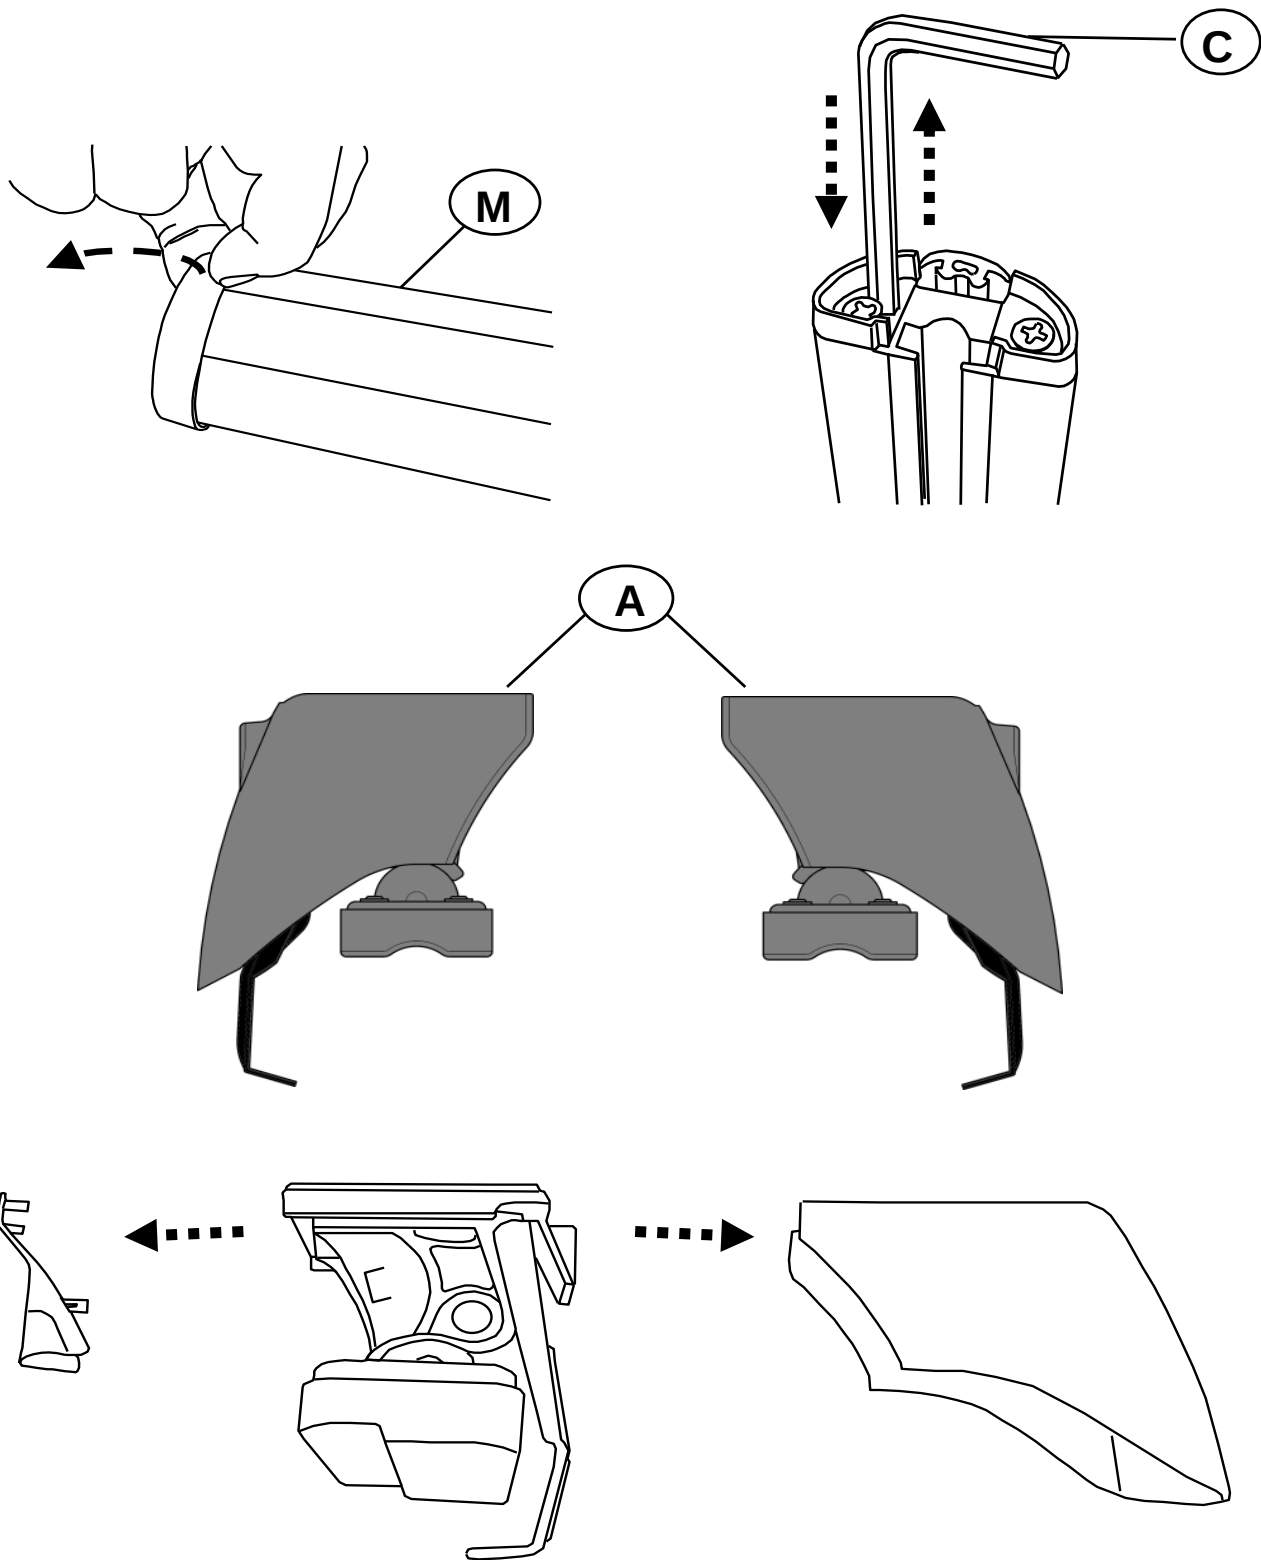








M

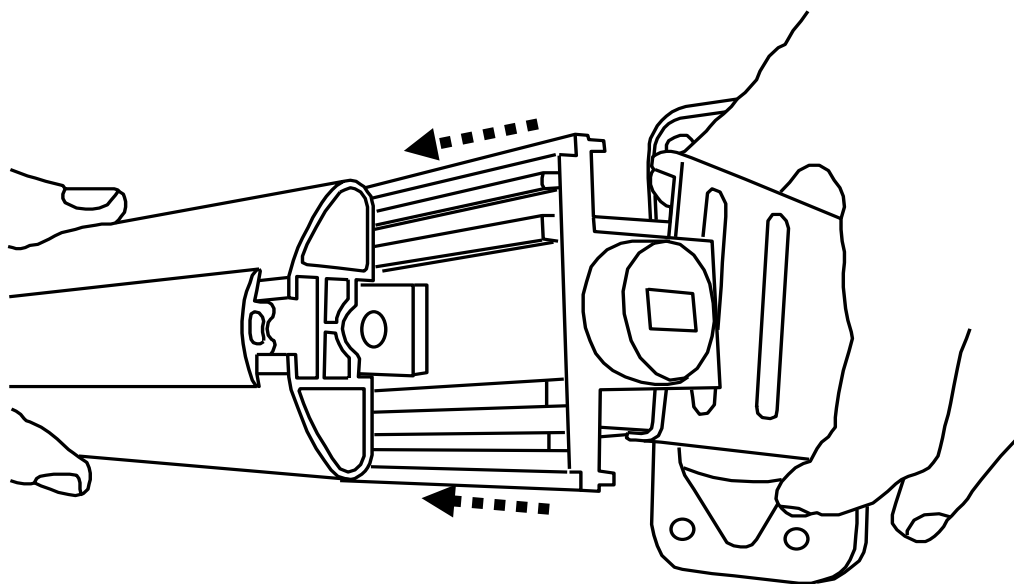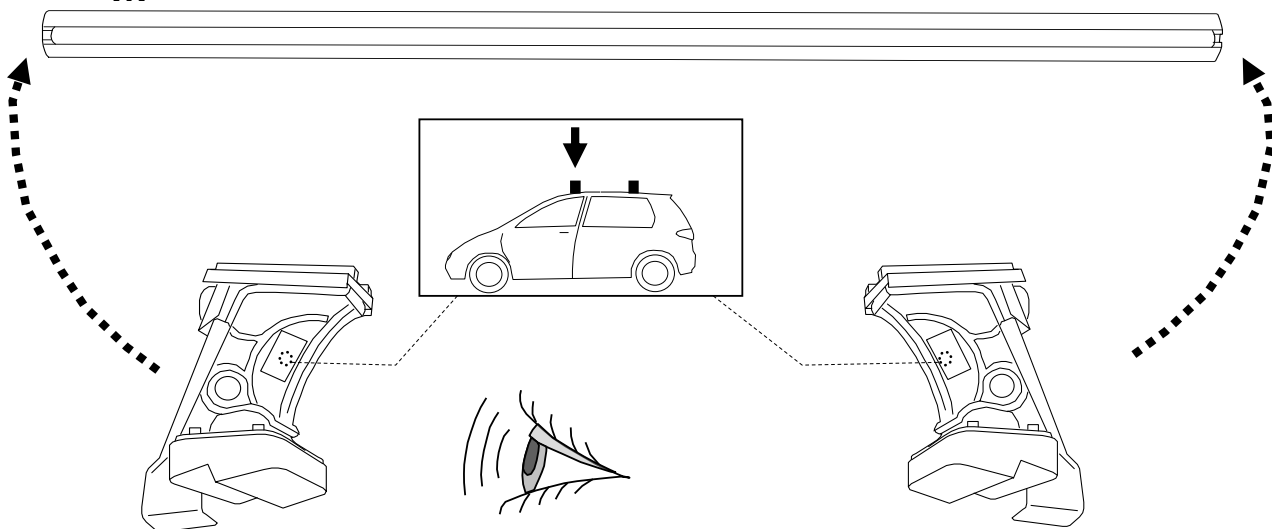


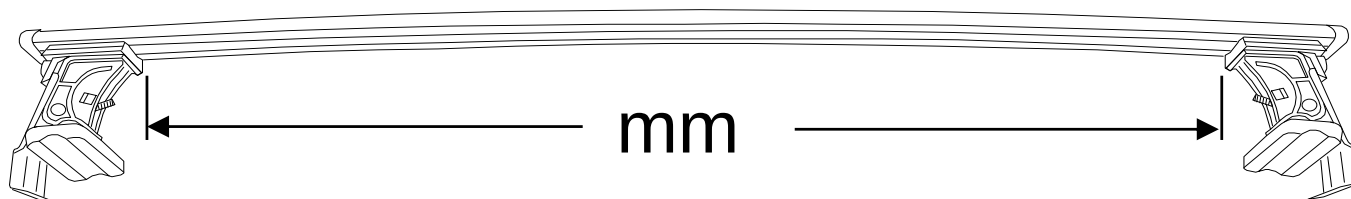



			R	mm
CITROEN	C4 PICASSO	5	2006-2013	R= 44
CITROEN	C4 GRAN PICASSO	5	2006-2013	R= 44
				1085

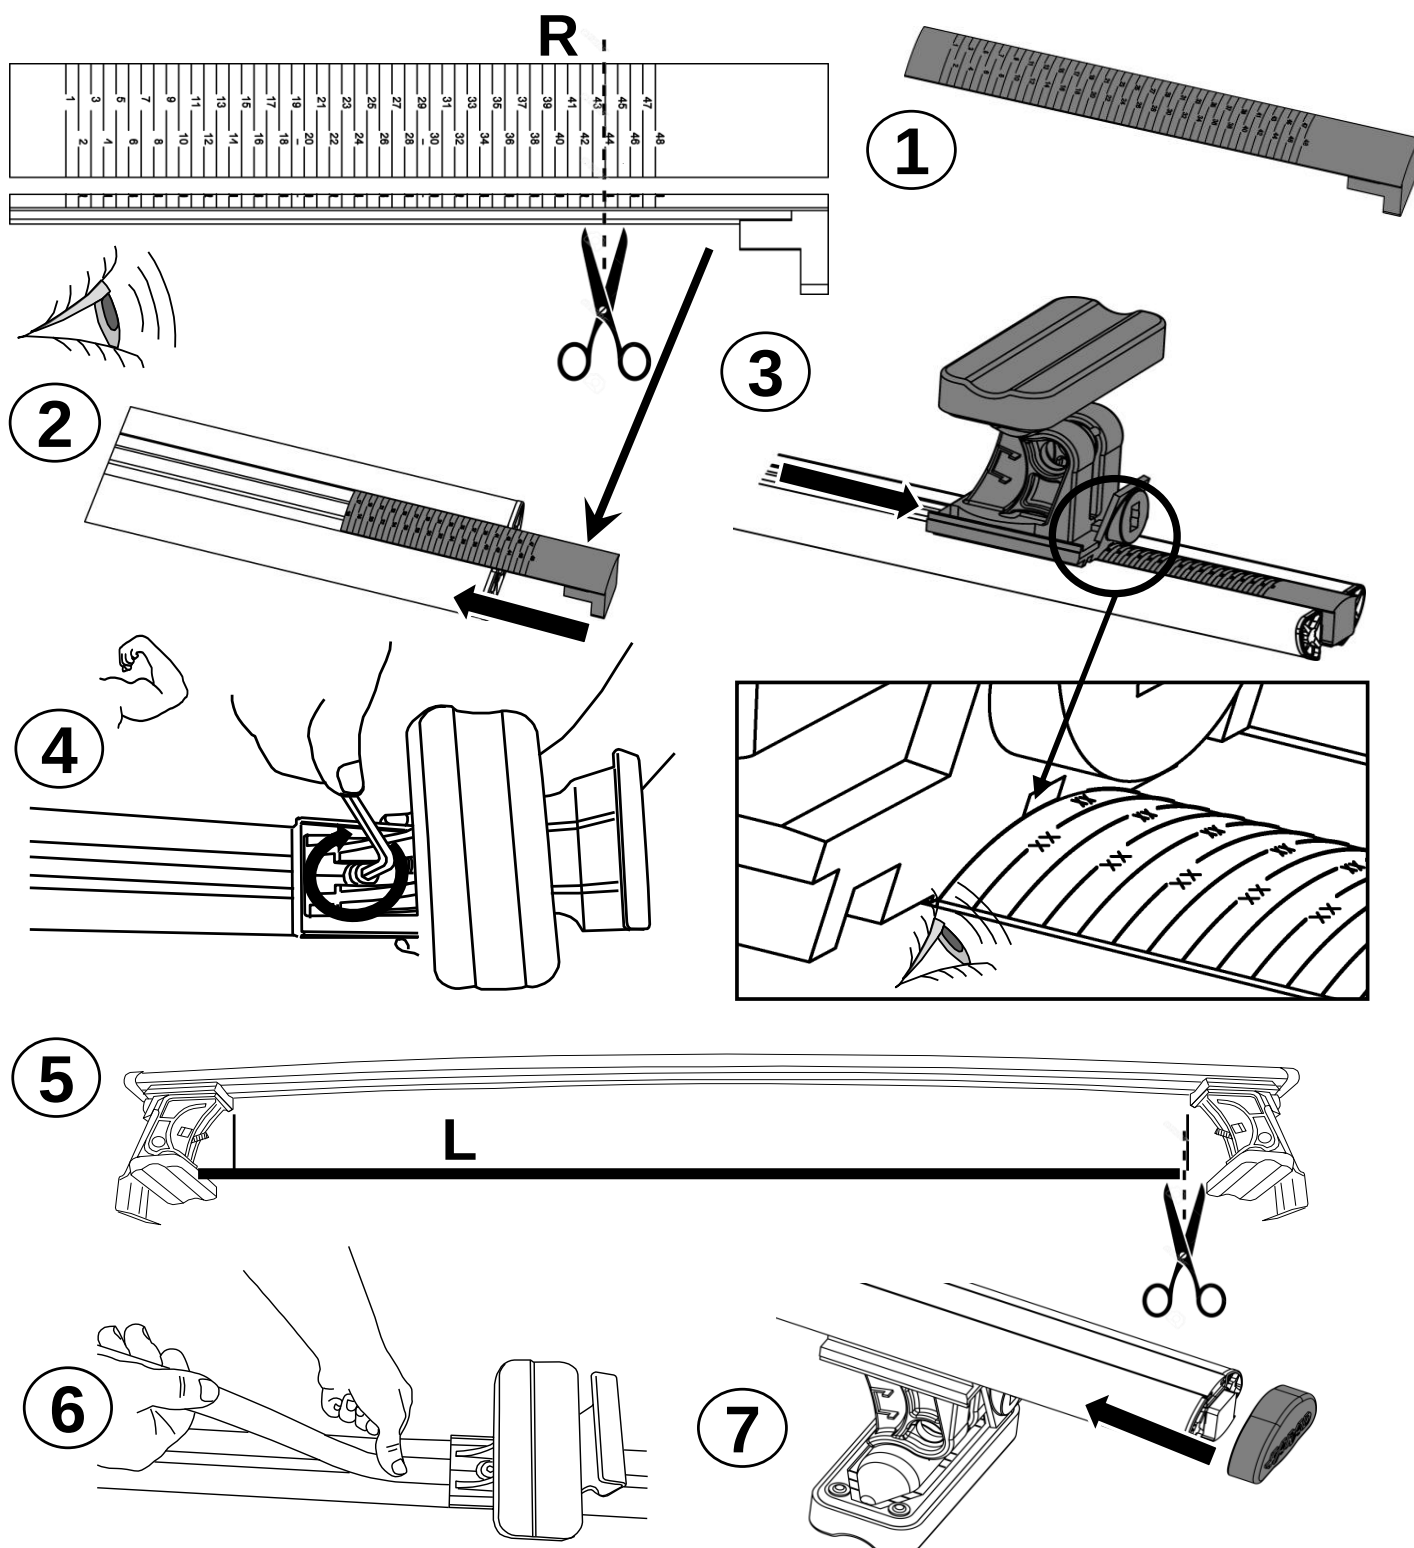

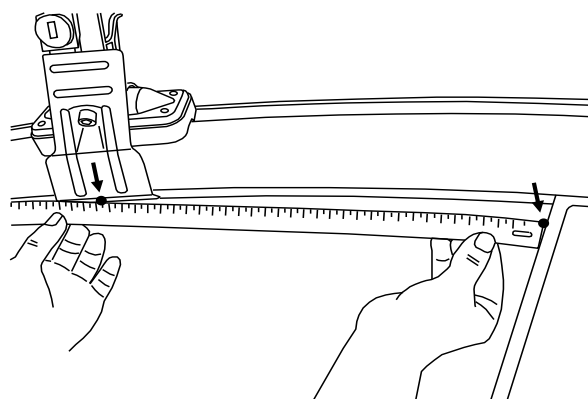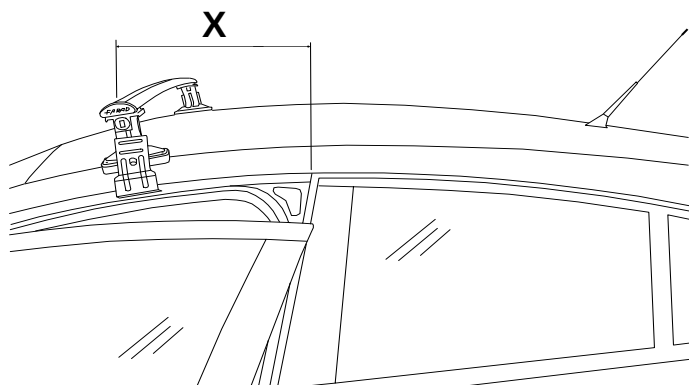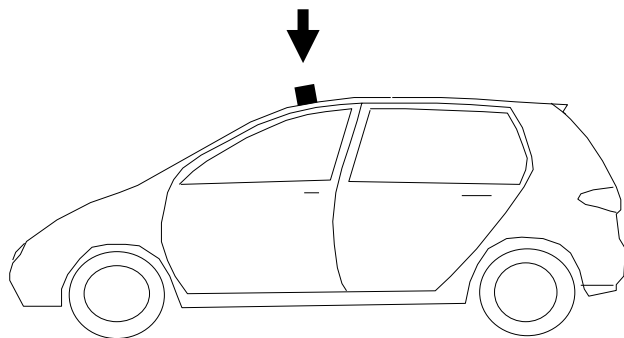





				X
CITROEN	C4 PICASSO	5	2006-2013	X= 240
CITROEN	C4 GRAN PICASSO	5	2006-2013	X= 240

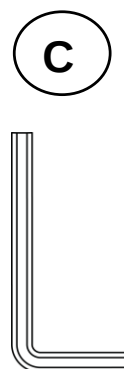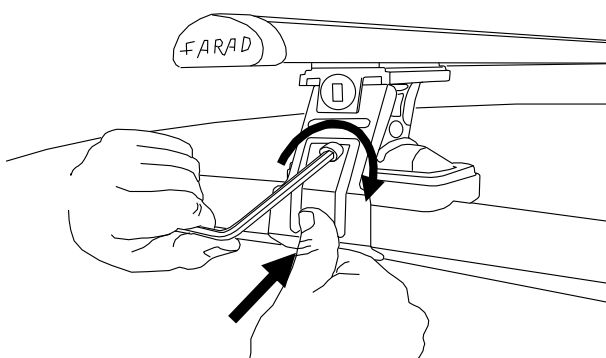


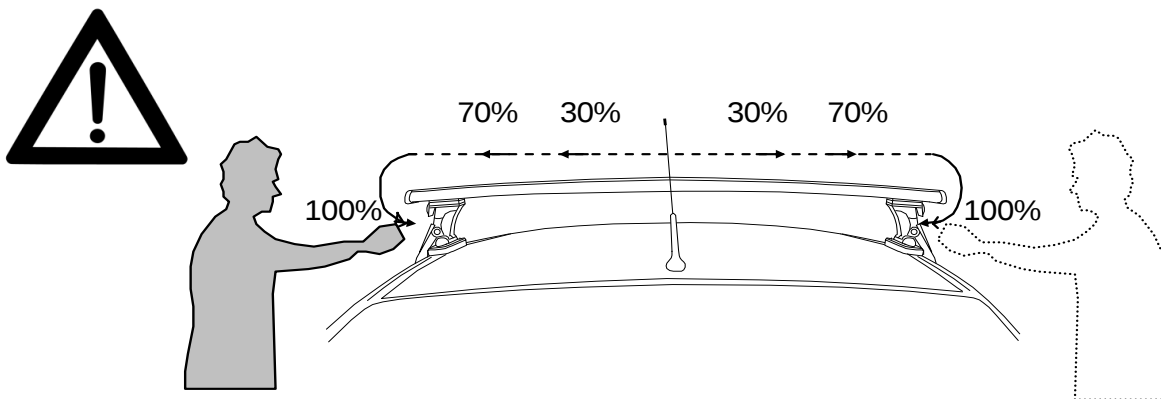

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

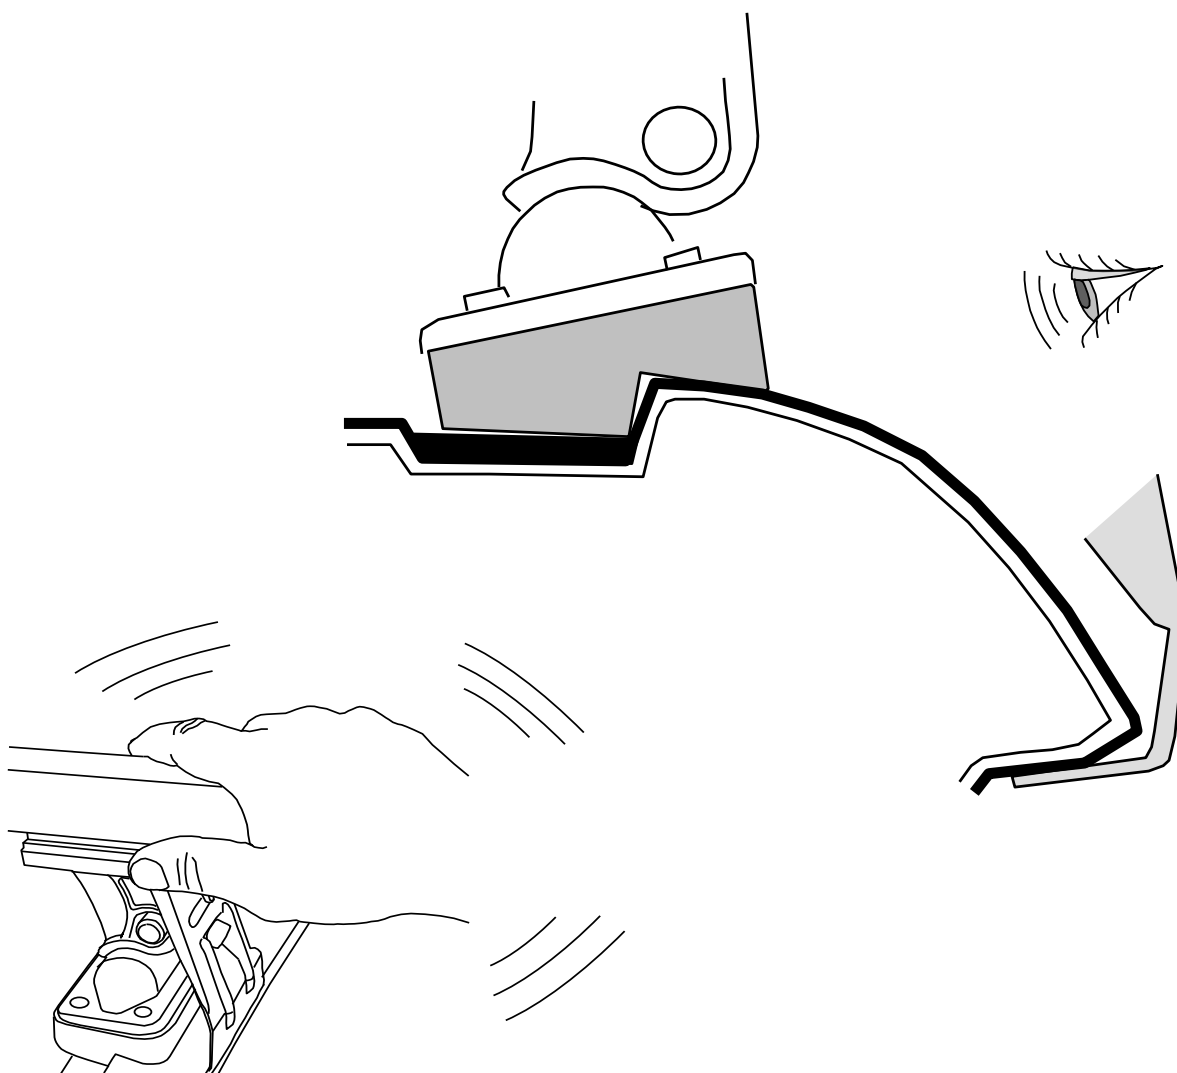

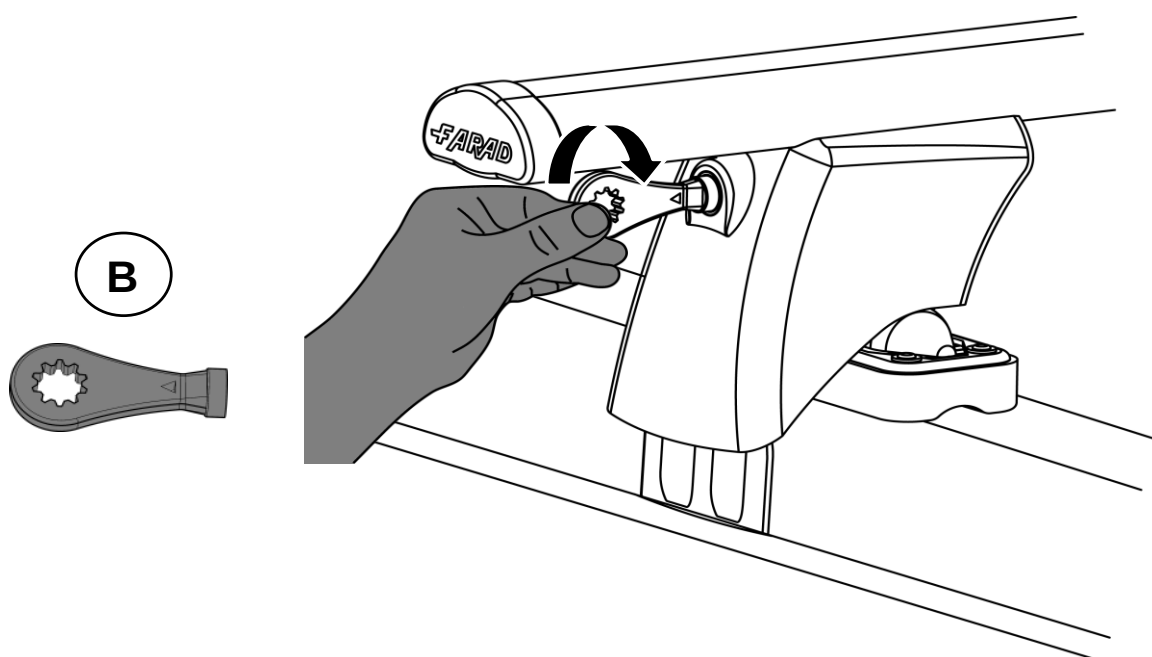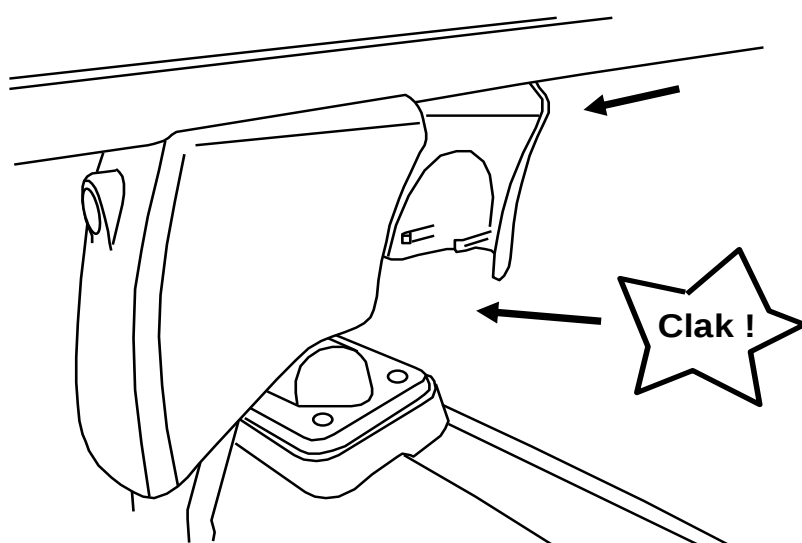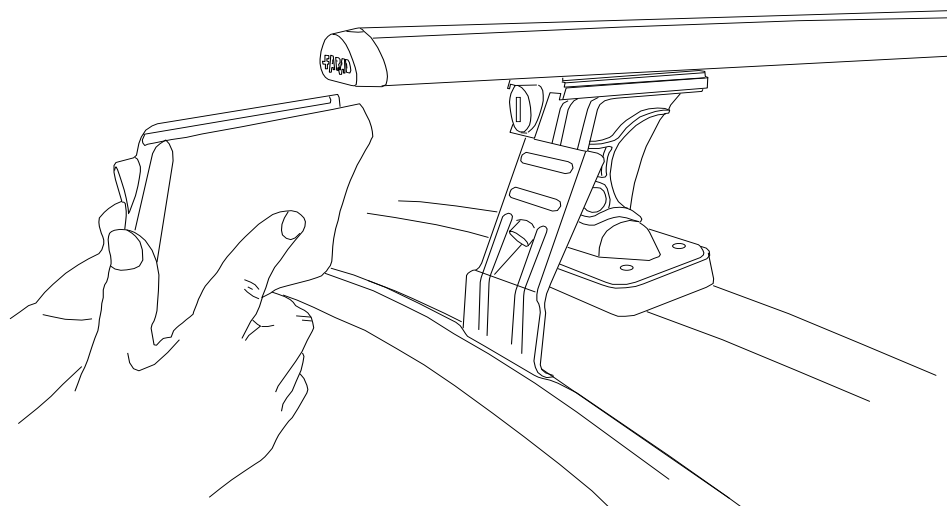

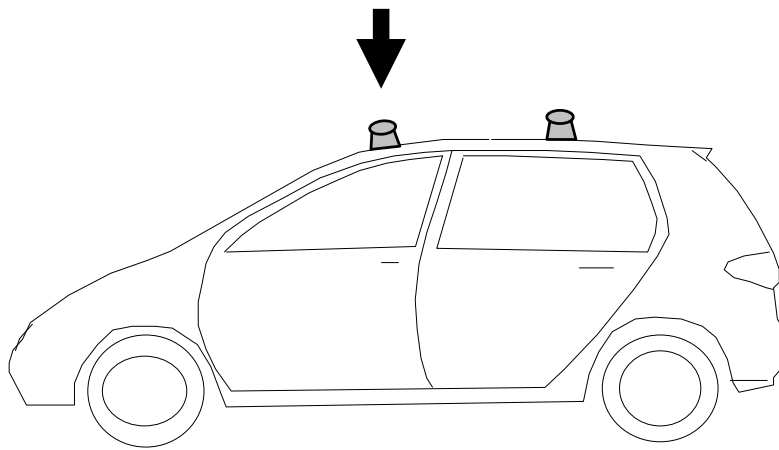

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
PL OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
GB CHECK THE SCREW FASTENING PERIODICALLY
D REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
SWE REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
F VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Monterings Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar


E Fijación Barra Trasera


D Montage Heckdachträgers



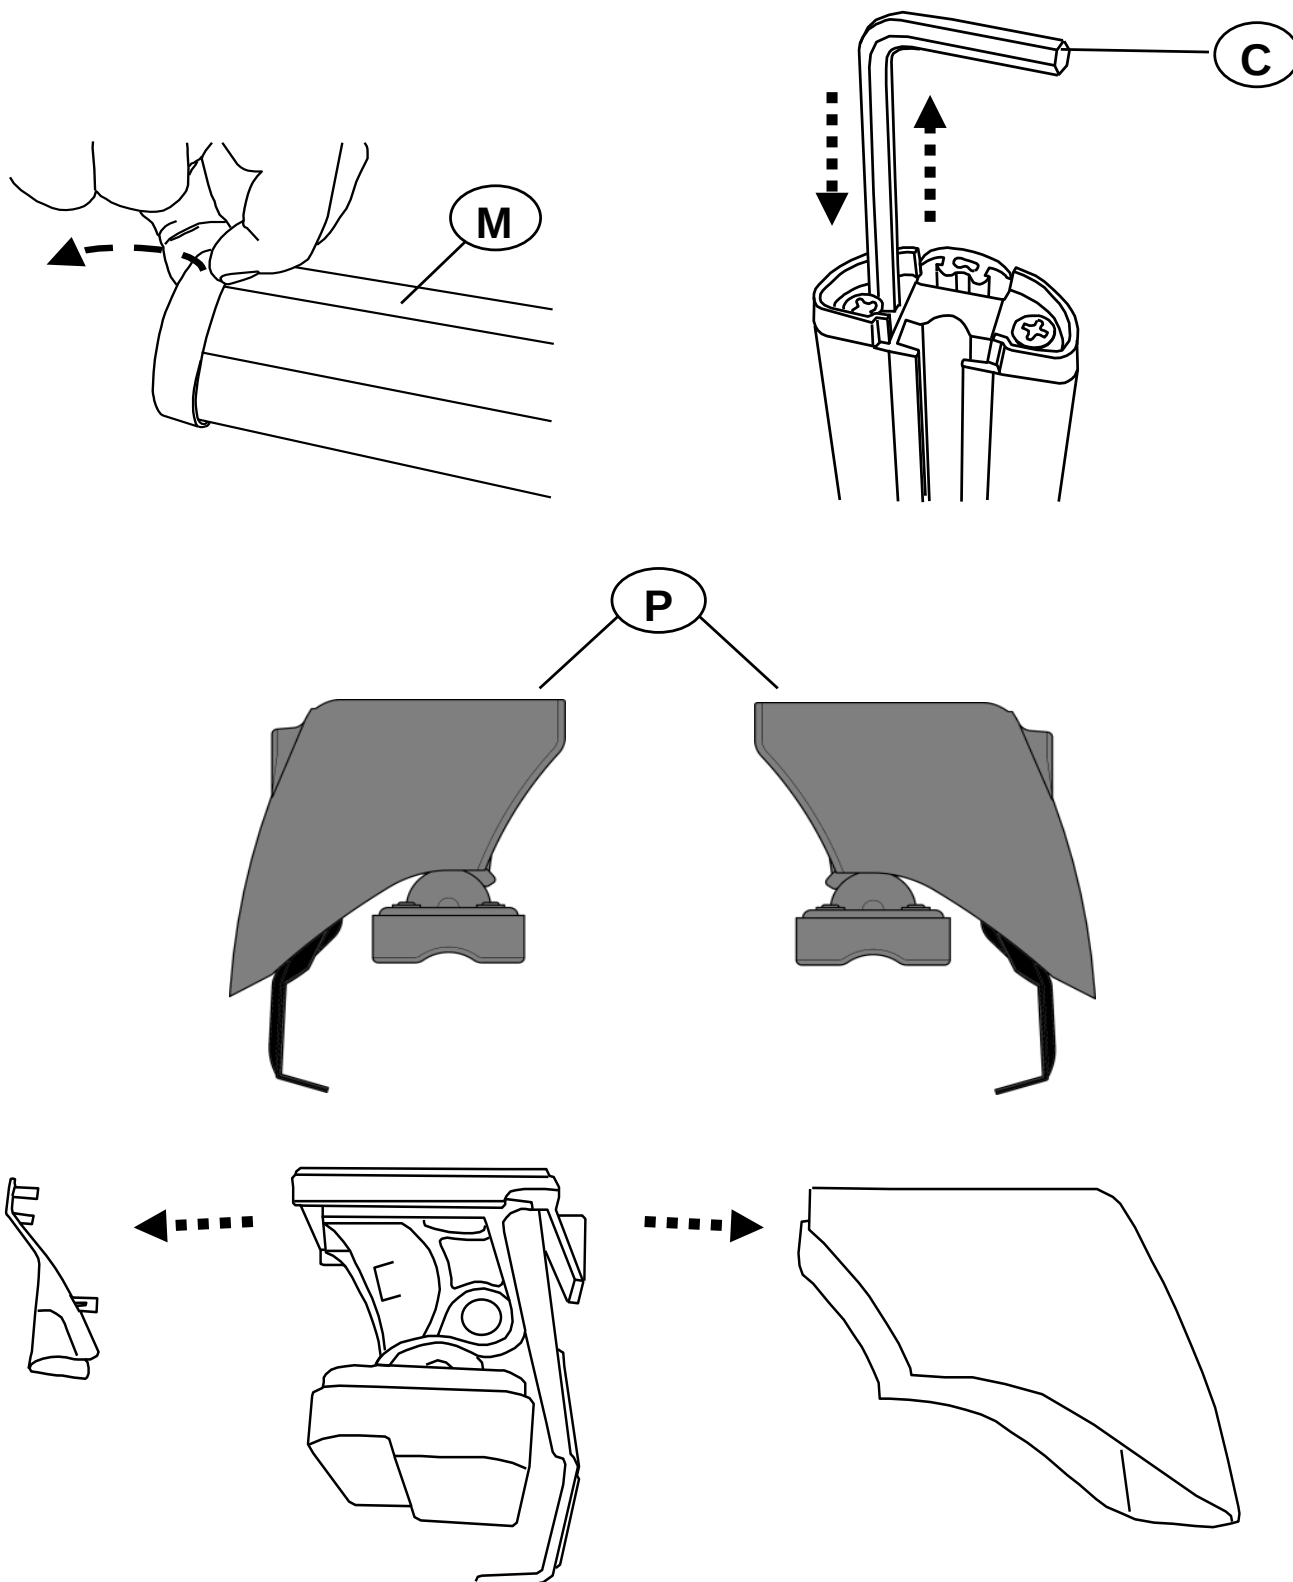


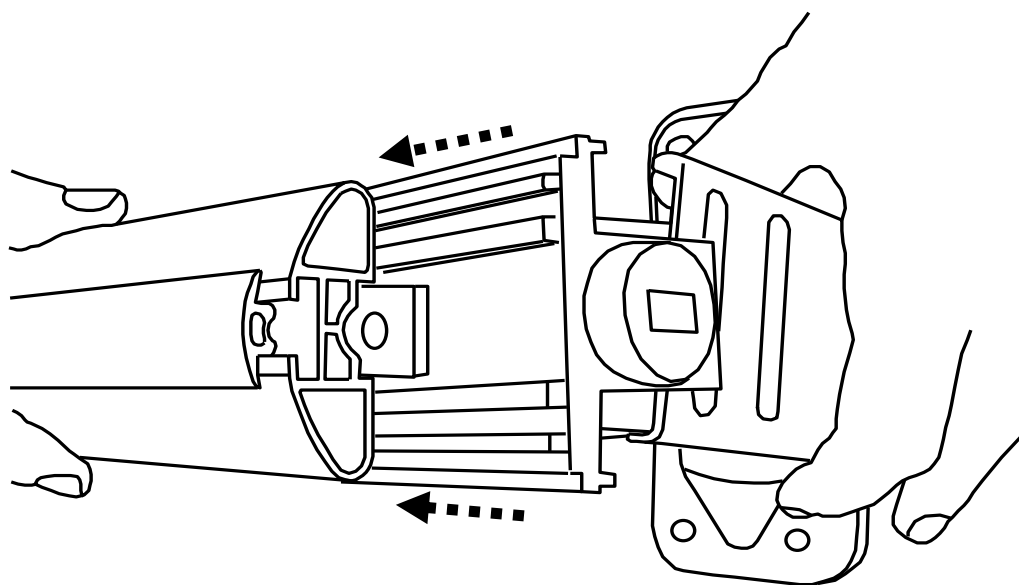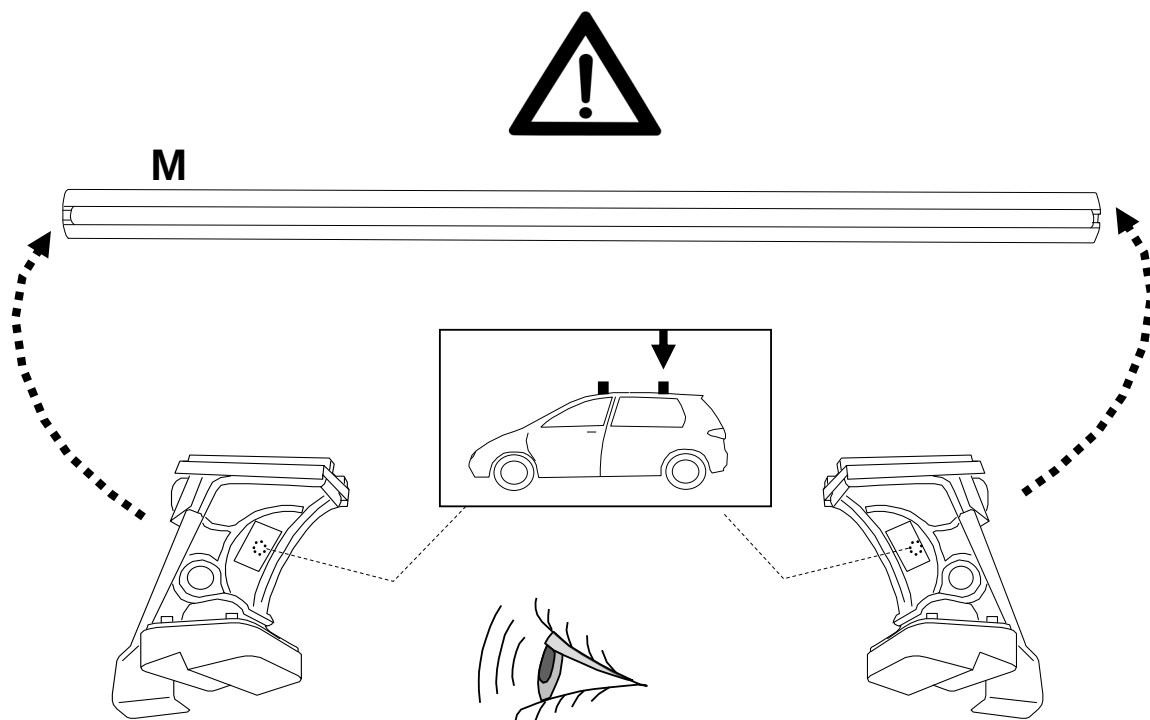

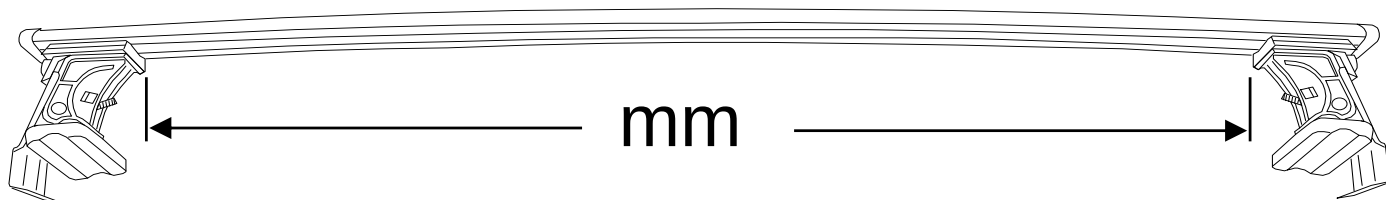



				R	mm
CITROEN	C4 PICASSO	5	2006-2013	R= 37	1050
CITROEN	C4 GRAN PICASSO	5	2006-2013	R= 37	1050

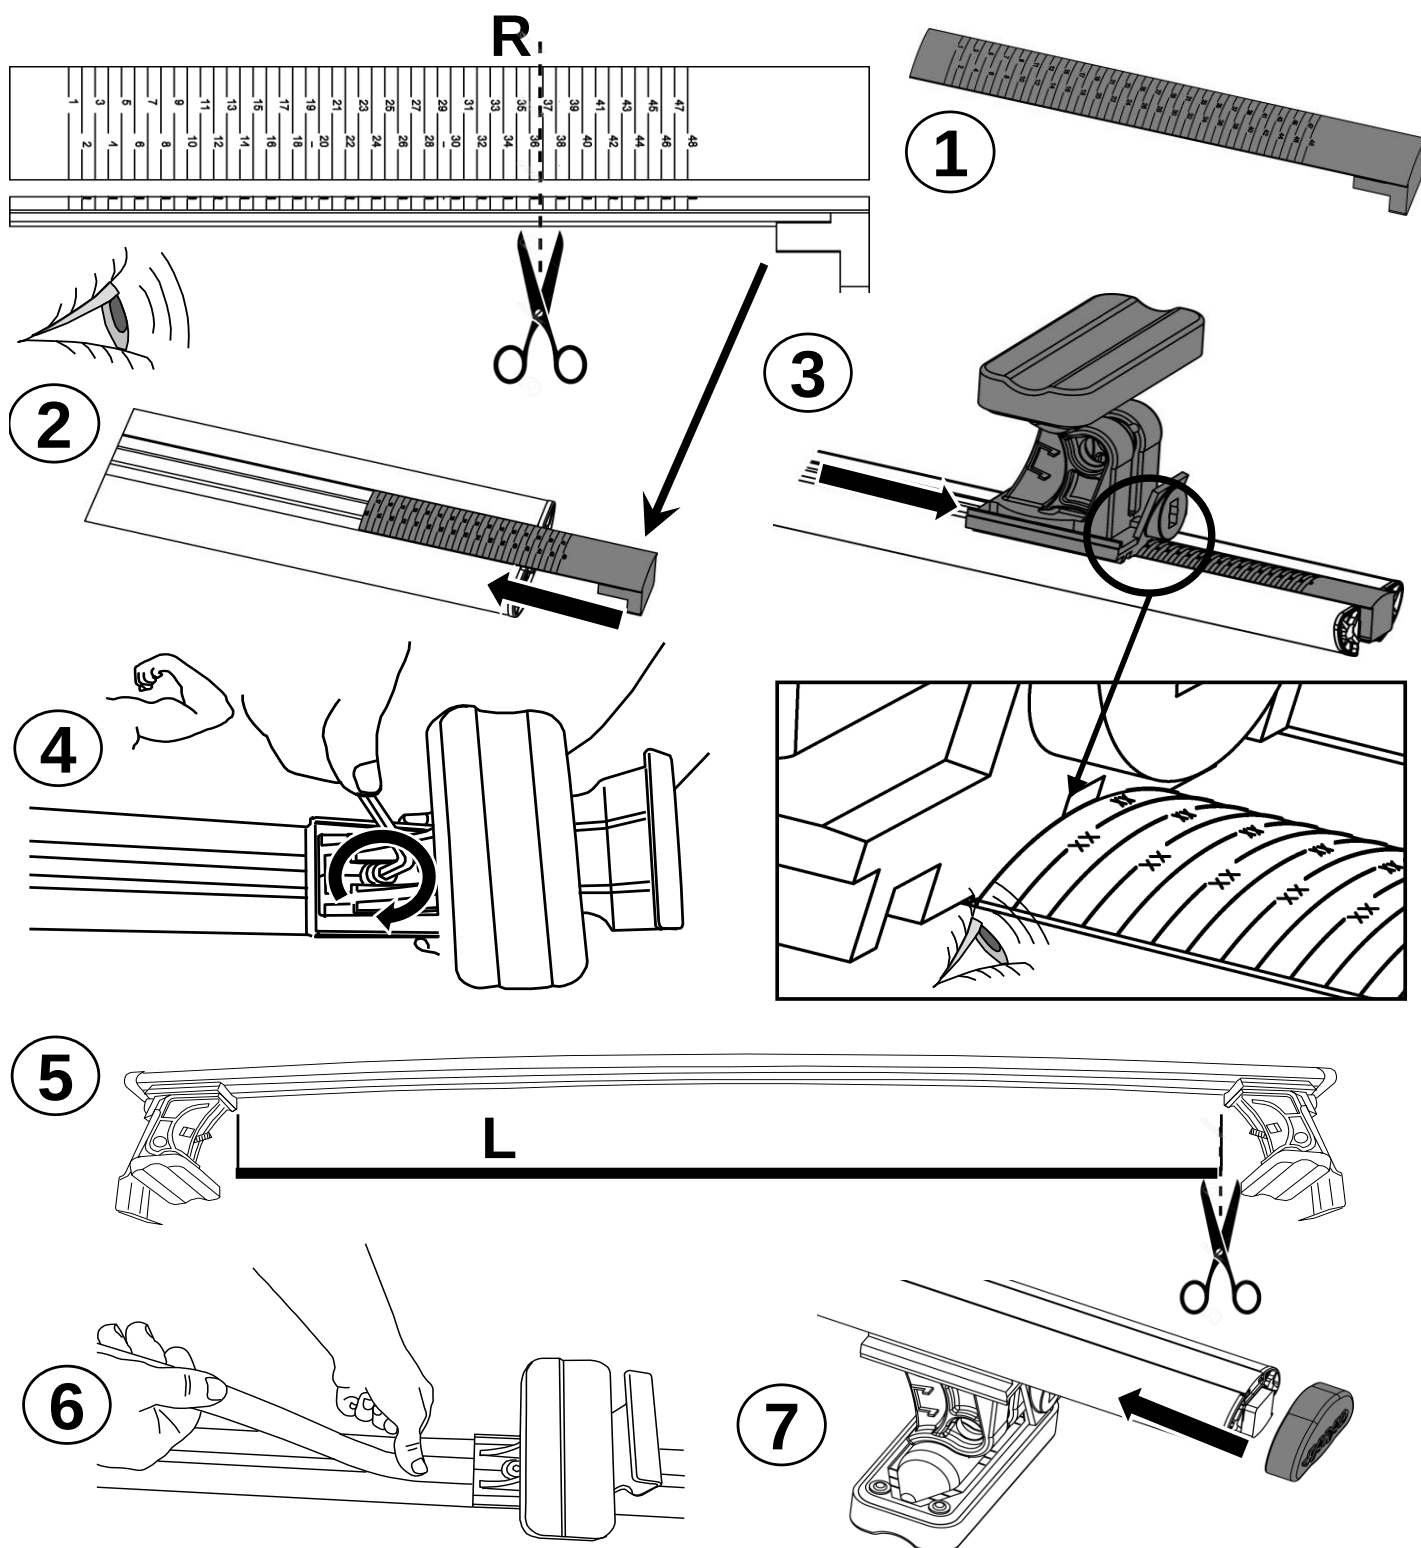

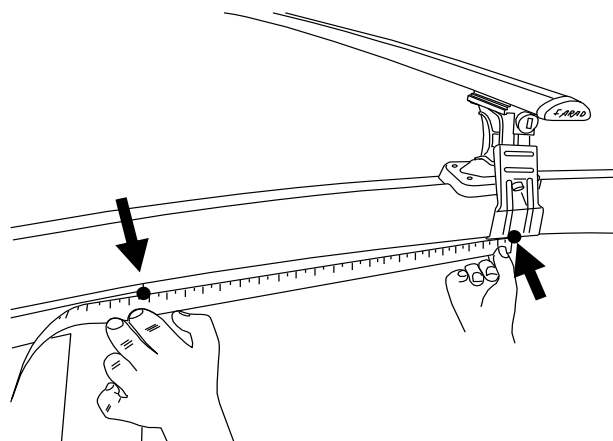
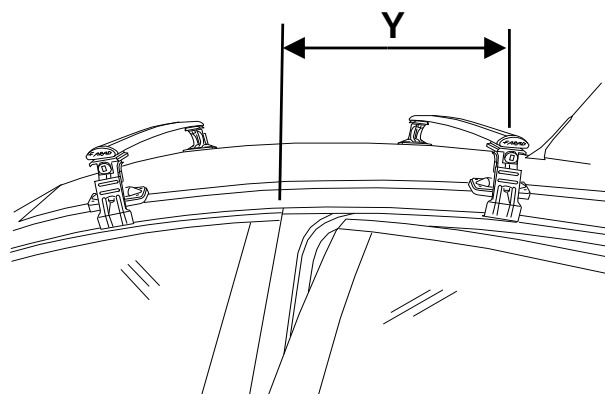
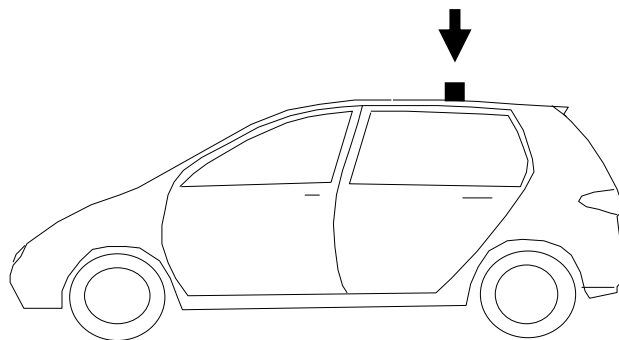





				Y
CITROEN	C4 PICASSO	5	2006-2013	Y= 400
CITROEN	C4 GRAN PICASSO	5	2006-2013	Y= 400

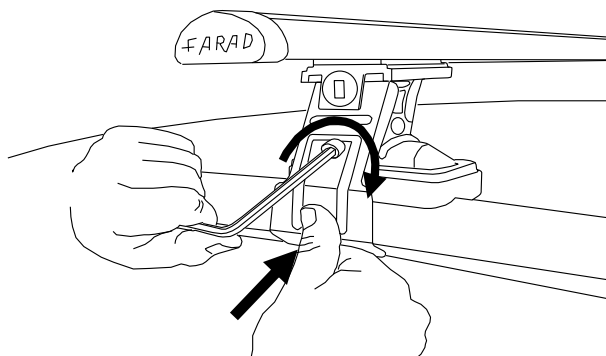


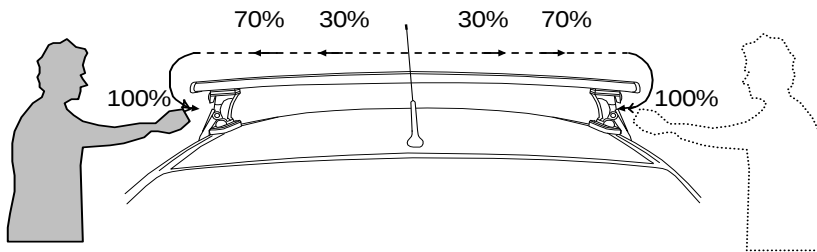

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

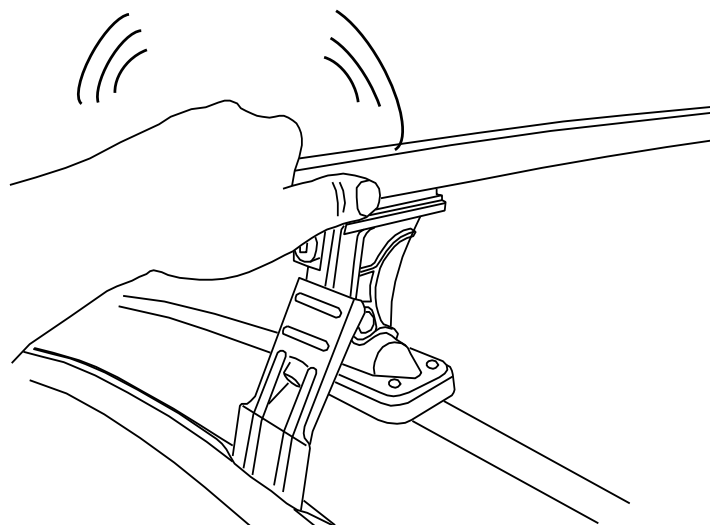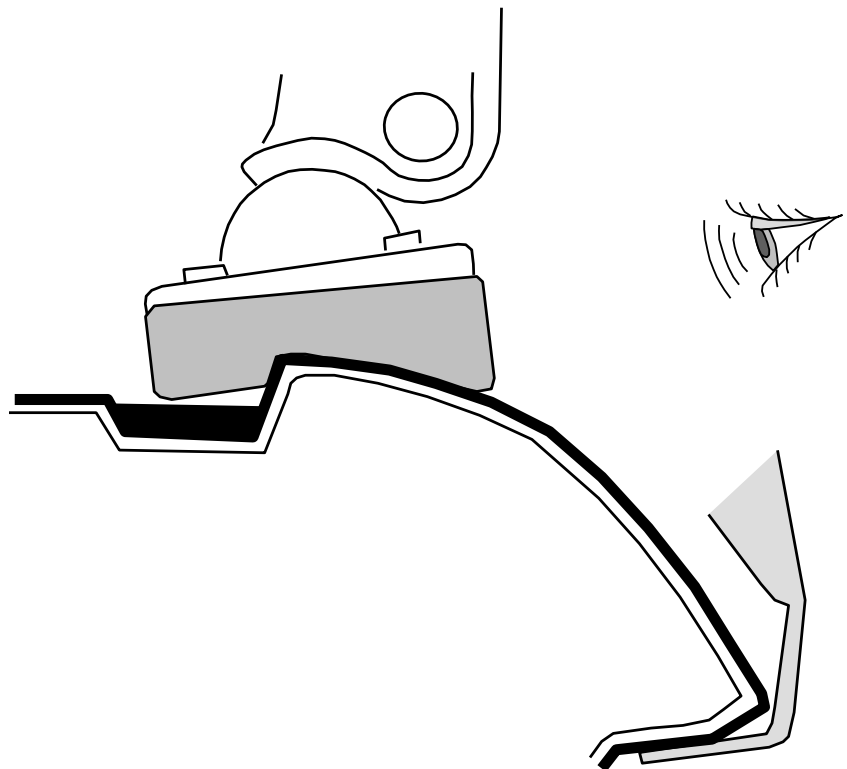

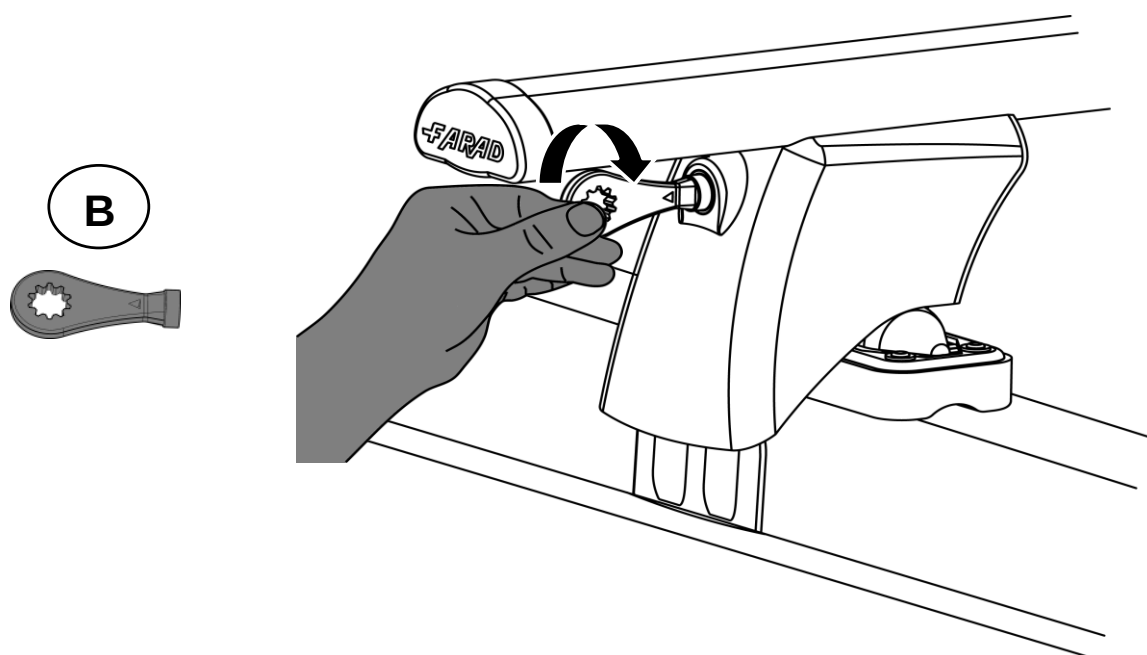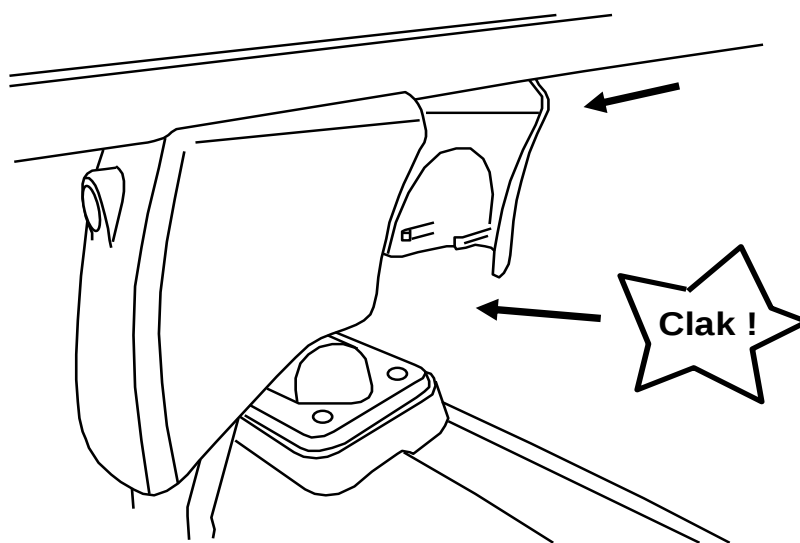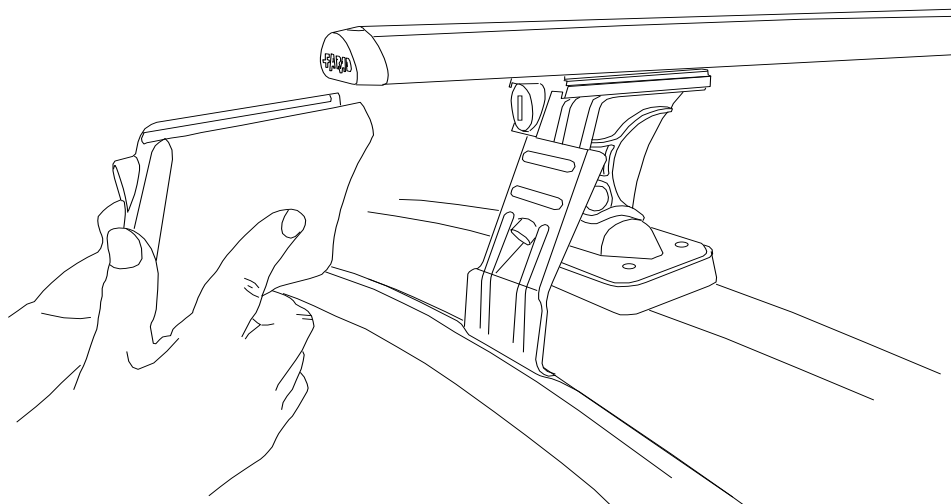

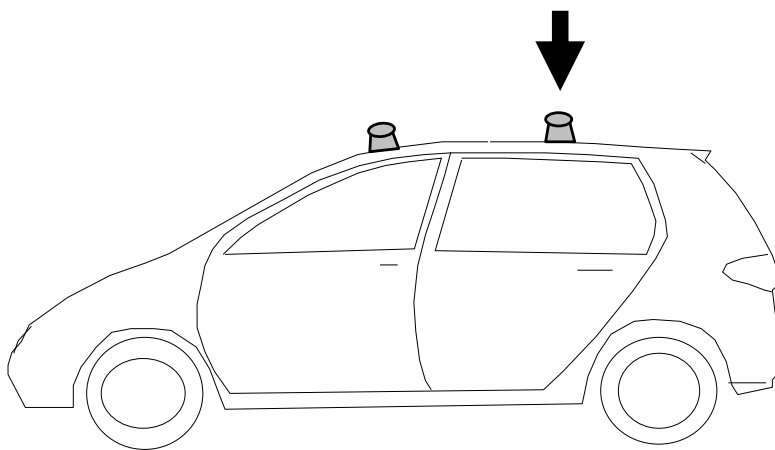


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
PL OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
GB CHECK THE SCREW FASTENING PERIODICALLY
D REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
SWE REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
F VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

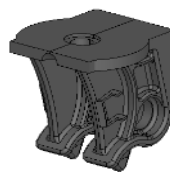

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

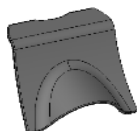

INVOLUCRO POST.
90341 / 9

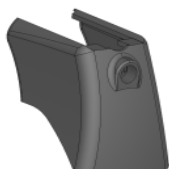


INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7



PALETTA
90341 / 4

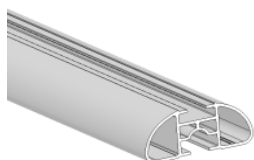


BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in Italy

www.faradworld.com

