

FARAD[®] BARS

made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy

www.faradworld.com

☎️ +39 0172 58575

BS 039 - 1

MERCEDES CLASSE A W 168 2001-2004
EVO CROSS 4 PICK UP 2022>

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcje wbudowania

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

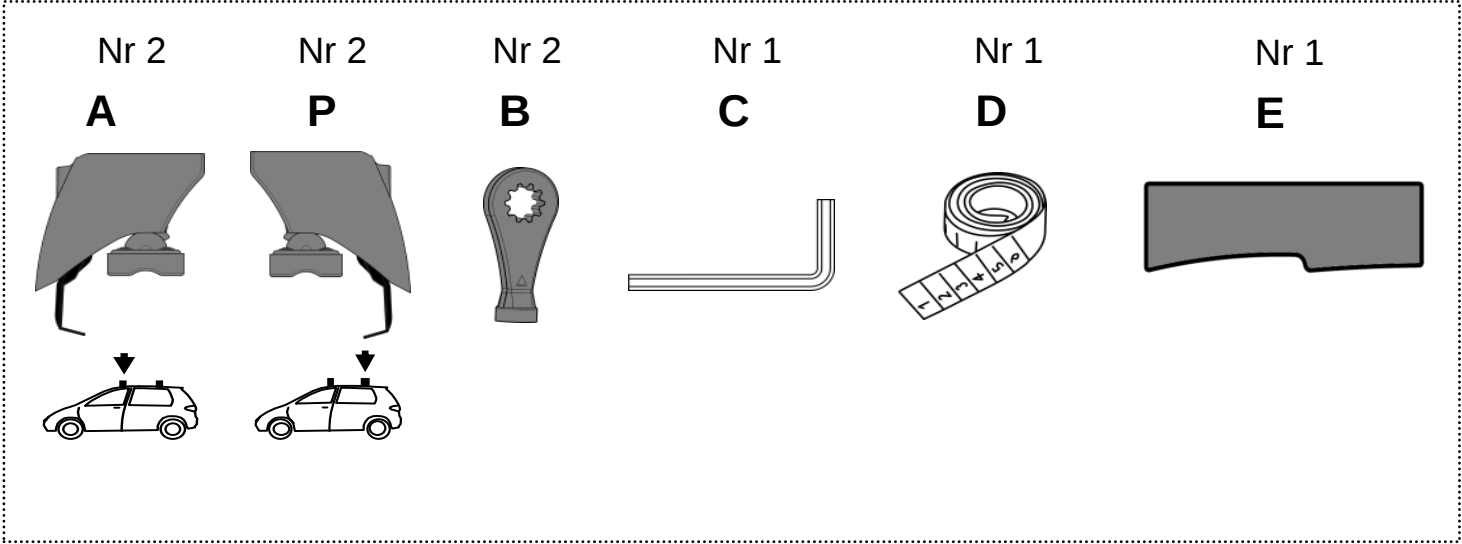











+


KIT ALU

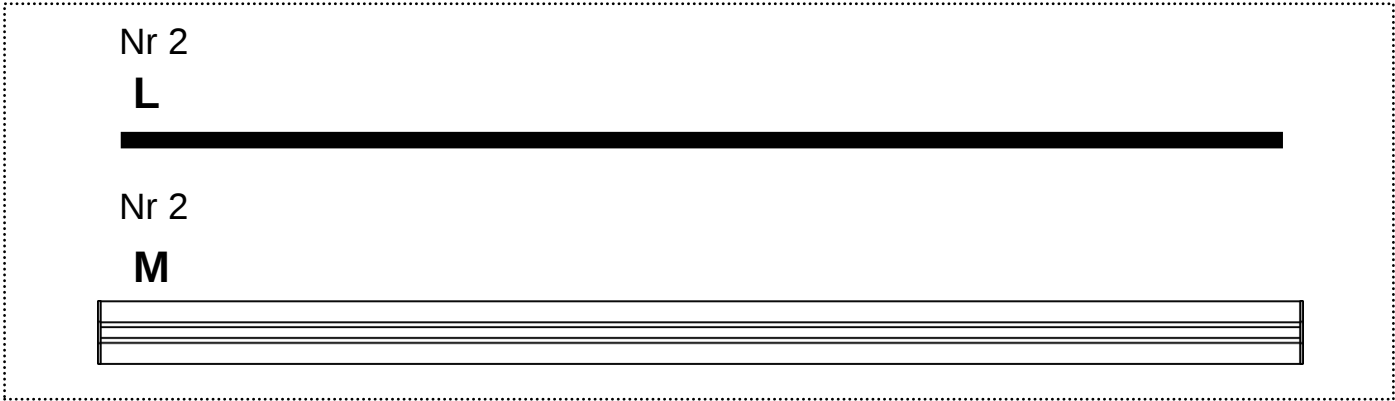




=


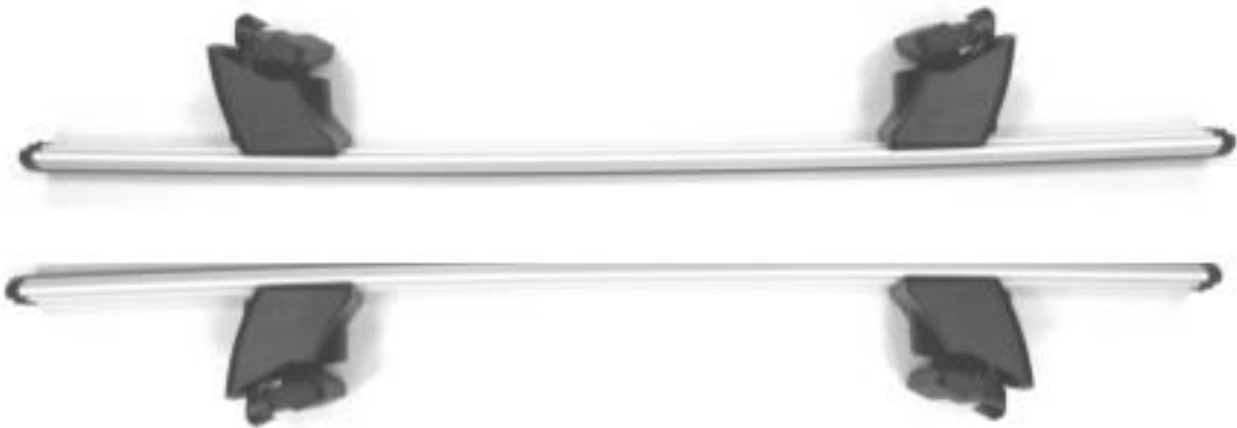


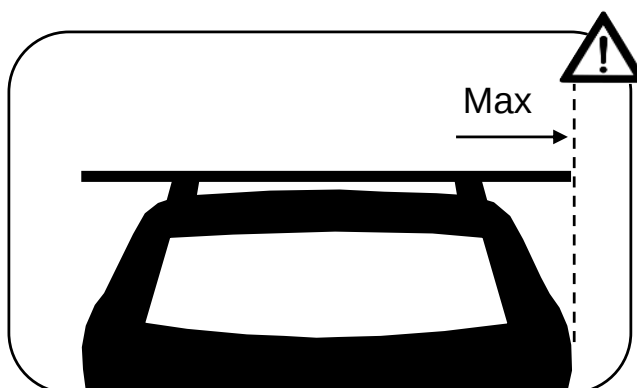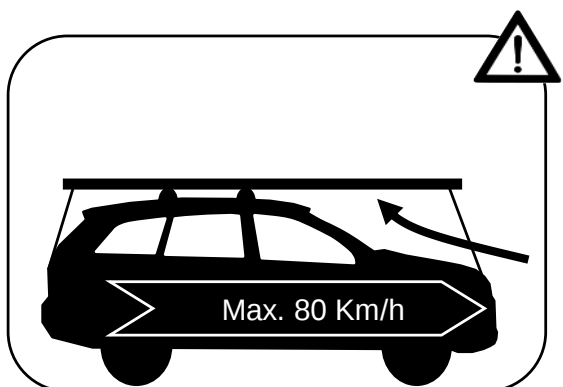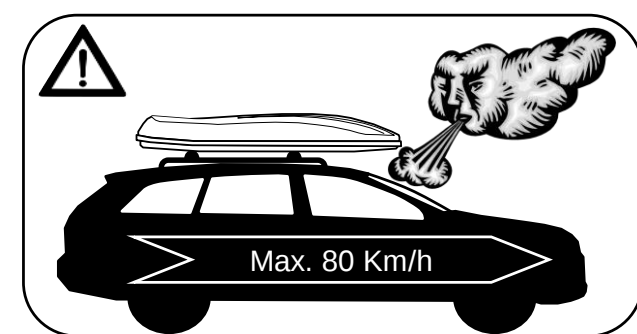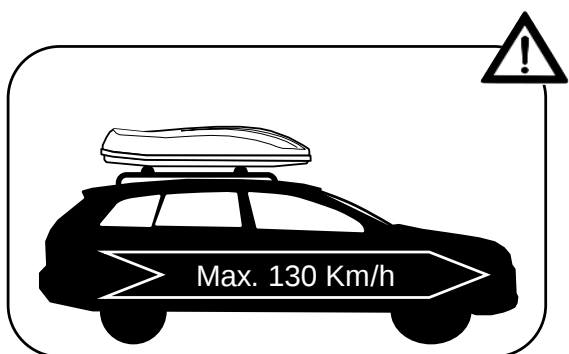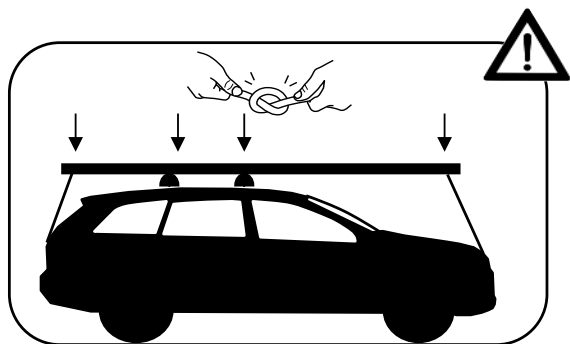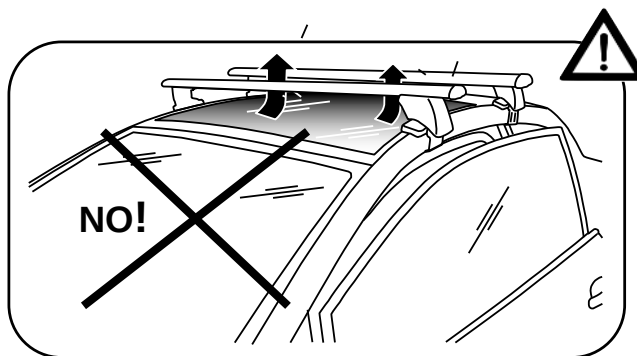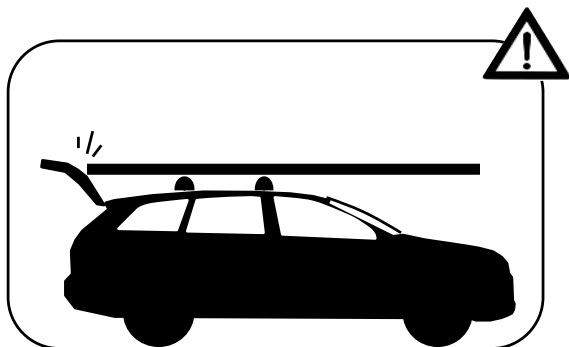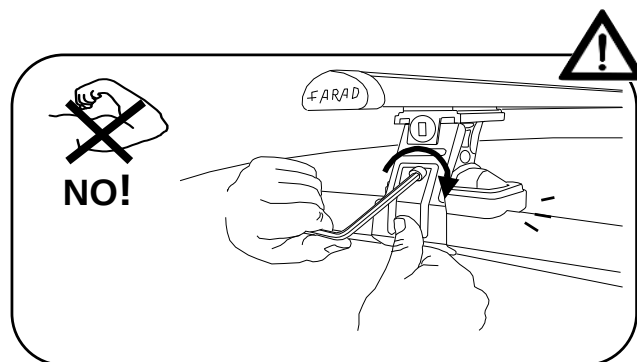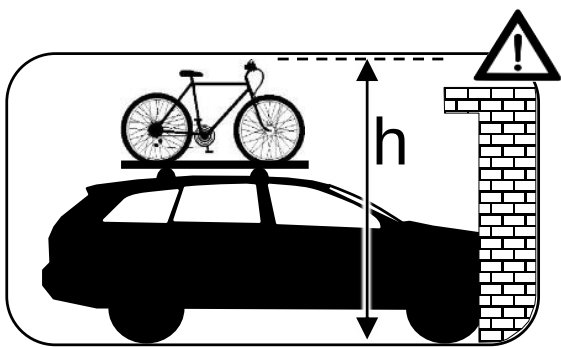

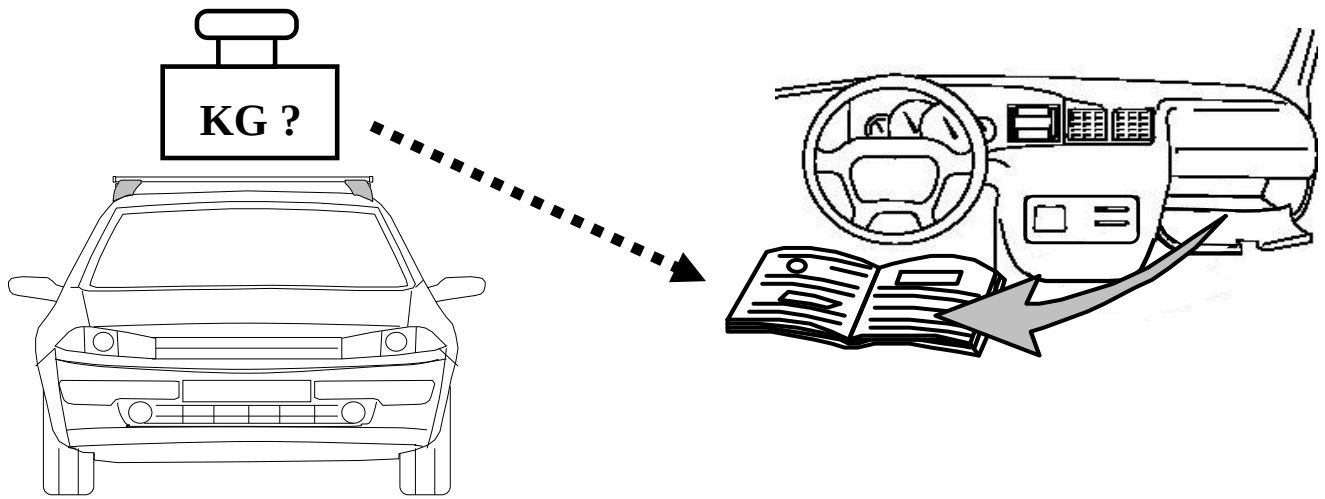


- | | |
|---|--|
| <p>I Controllare carico del tetto sul manuale dell'auto</p> <p>PL Sprawdzić ładowność dachu w instrukcji</p> <p>GB Check roof load capacity in car instruction</p> <p>NL check de handleiding belasting van het dak van de auto</p> | <p>F vérifier le chargement manuel du toit de la voiture</p> <p>D überprüfen Sie die manuelle Beladung der Autodach</p> <p>E comprobar la carga manual del techo del coche</p> <p>SWE kontrollera manuell inläggning på taket av bilen</p> |
|---|--|

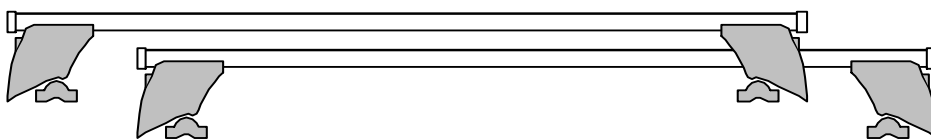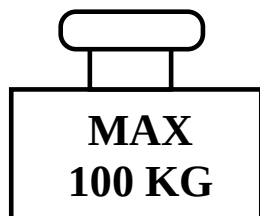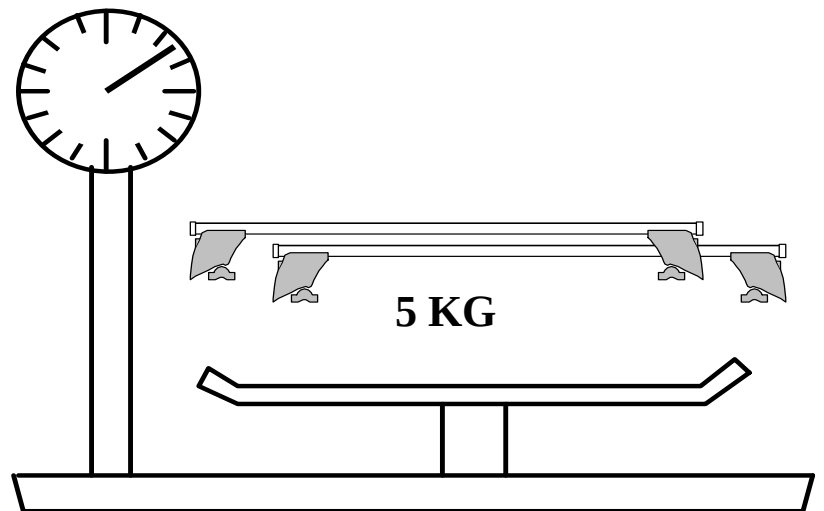

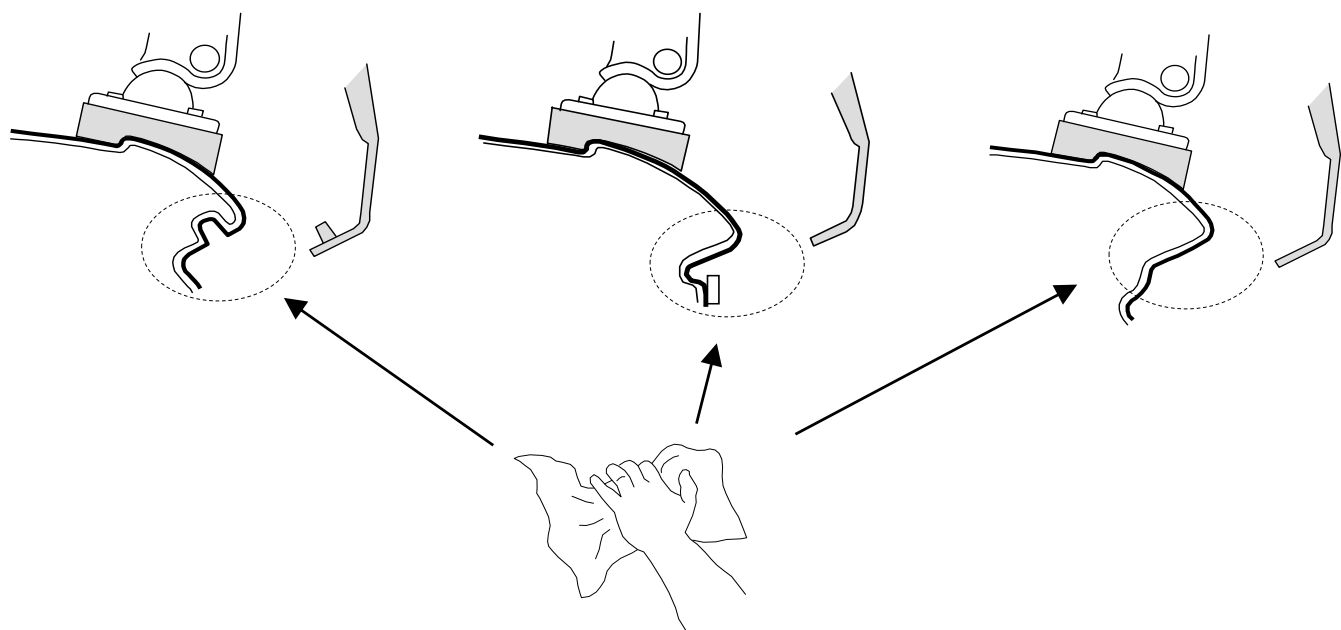
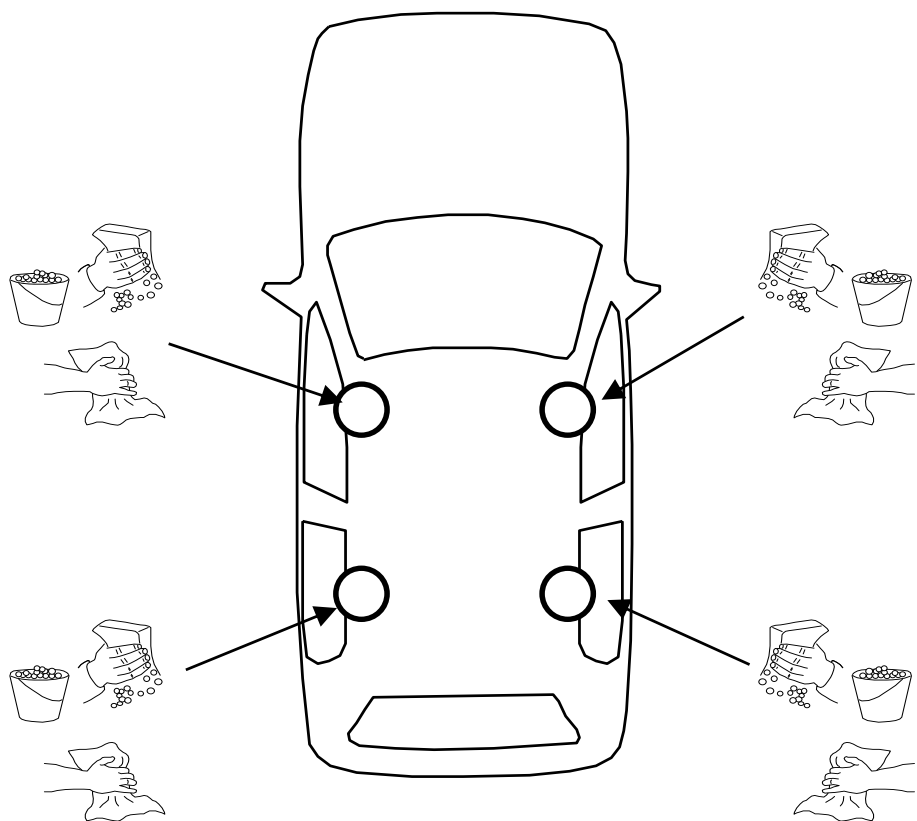



I	Montaggio Barra Anteriore	F	Fixation Barre Avant
PL	Montaż Bagażnika Bazowego Tylnego	GB	Fitting Front Roof Bar
D	Montage Vorderes Dachträgers	NL	Montage Voorste Dakdrager
SWE	Montering Av Främre Lasthållaren	E	Fijación Barra Frontal


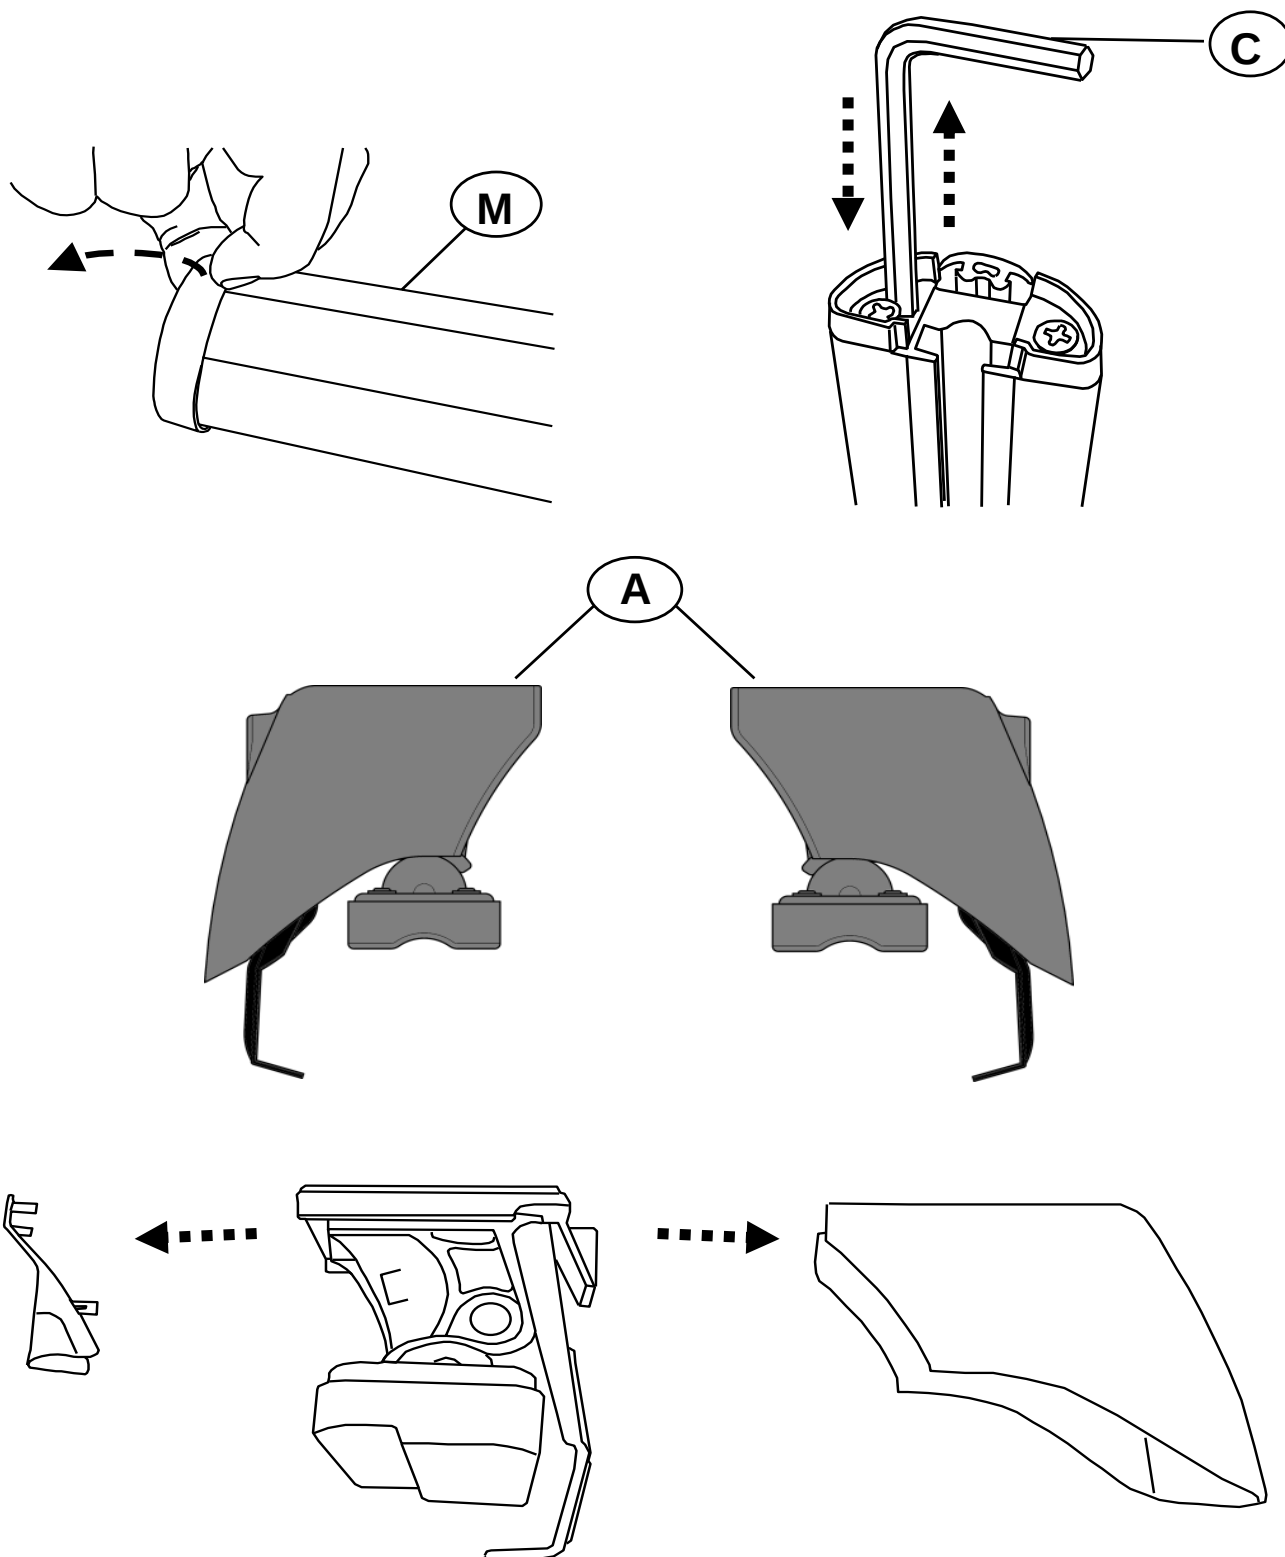








M

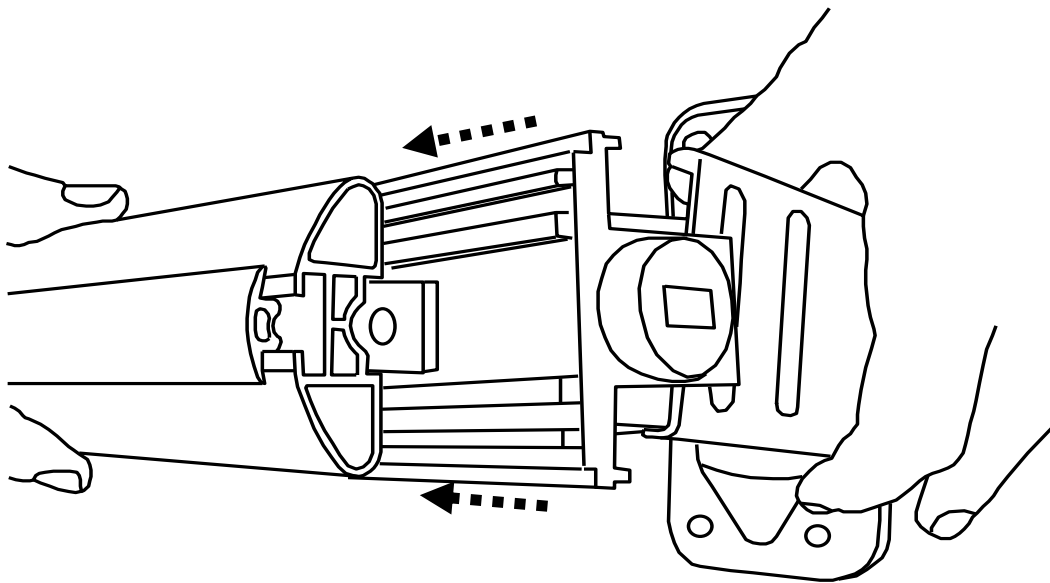
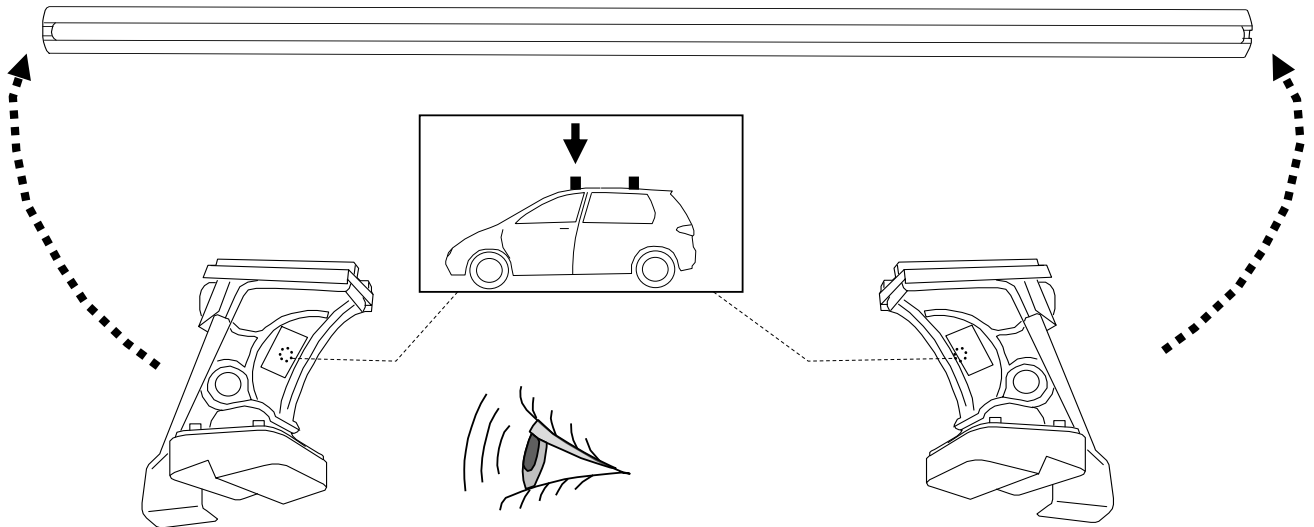



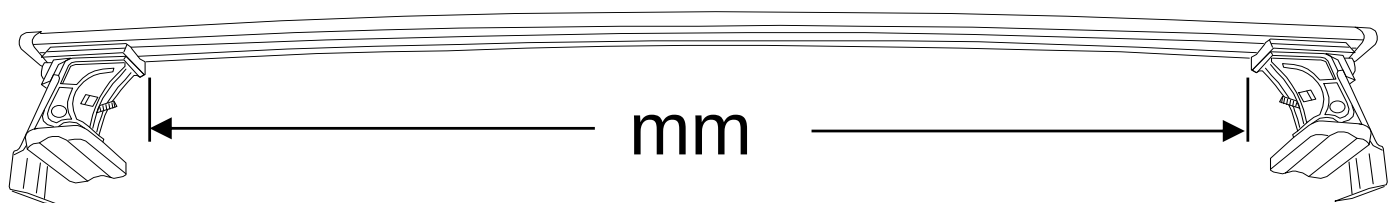



				R	mm
MERCEDES	CLASSE A W 168	5	2001-2004	R= 40	965
EVO	CROSS 4	4	2022>	R= 40	1065

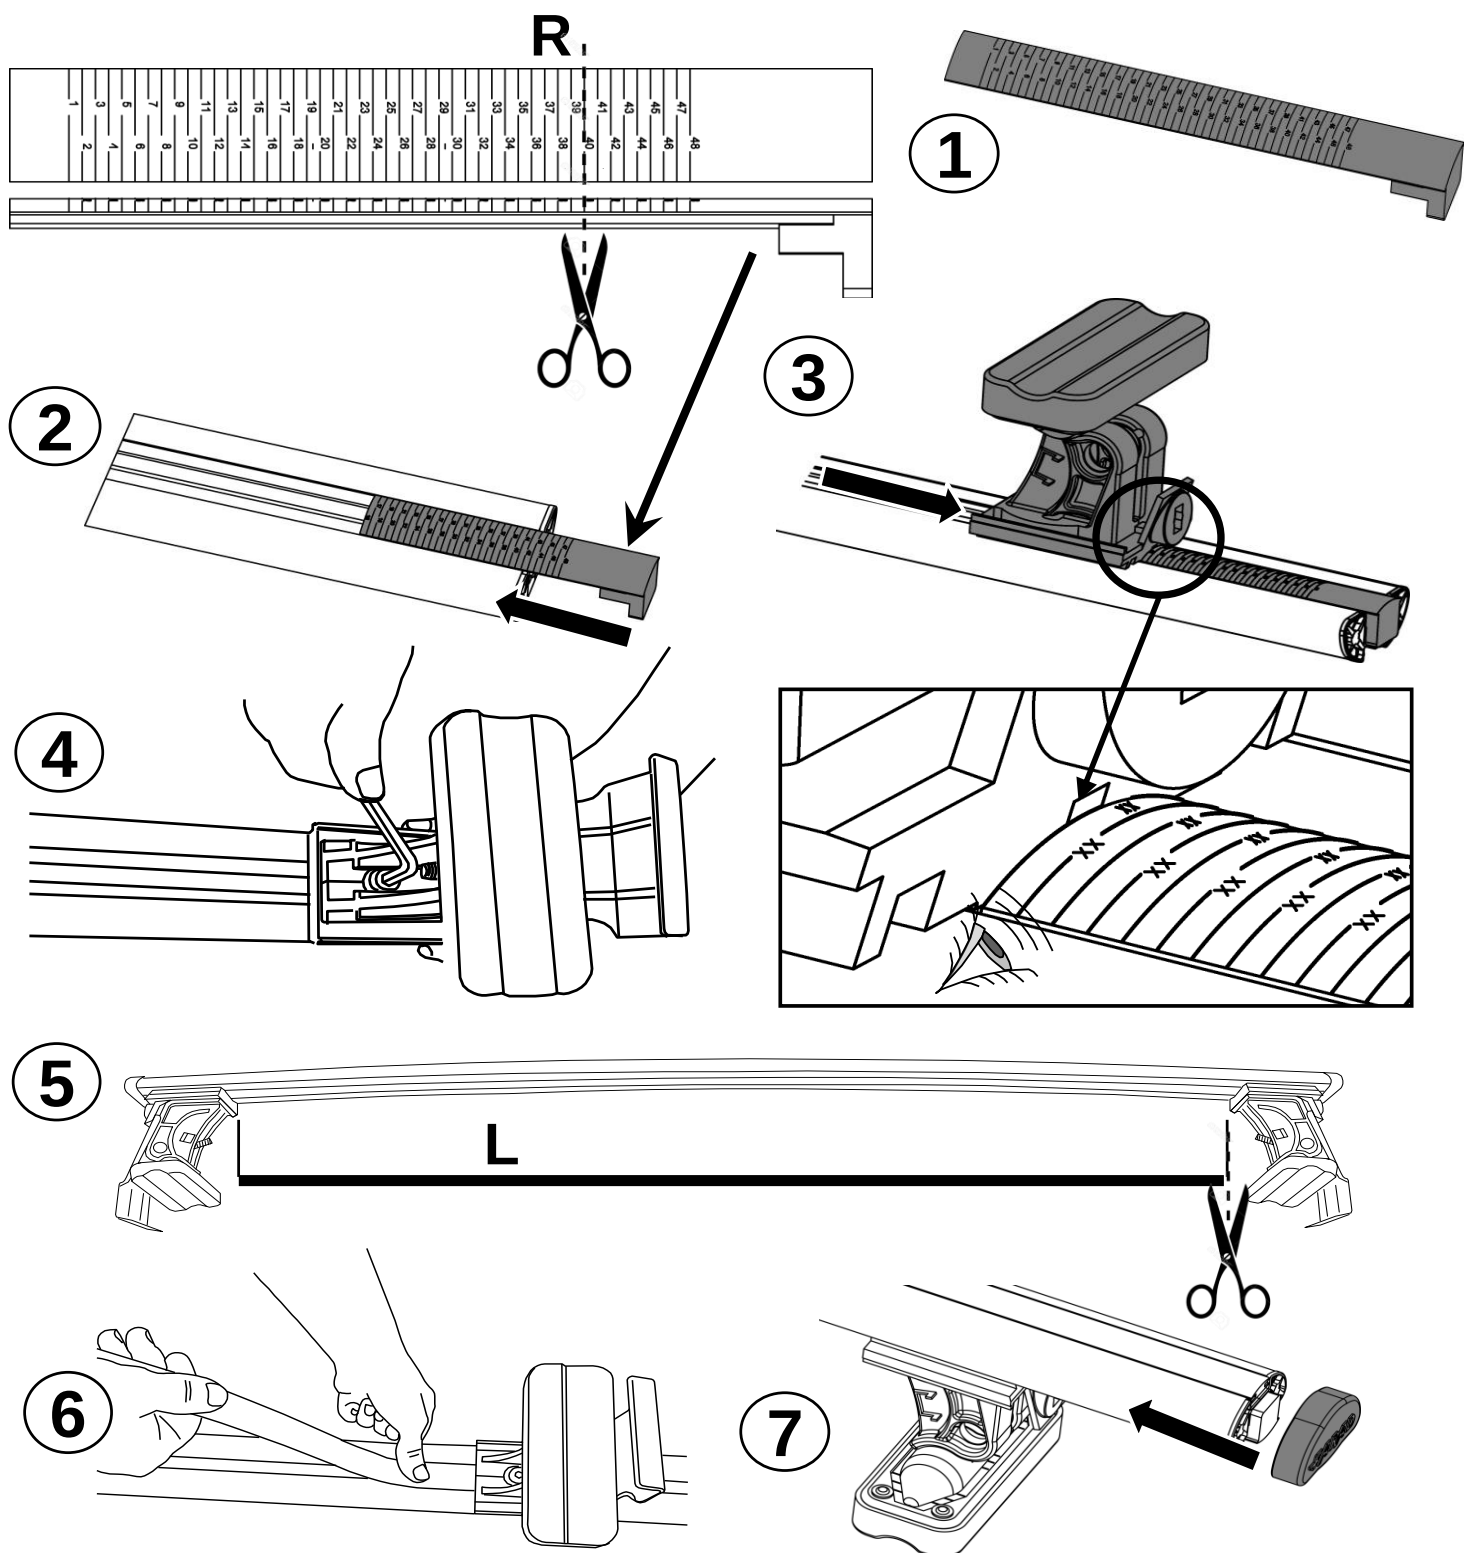

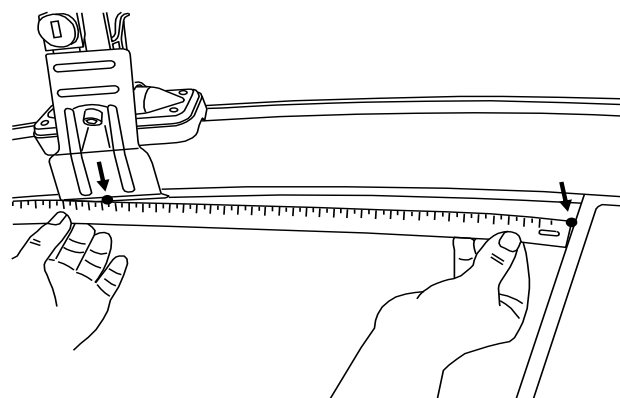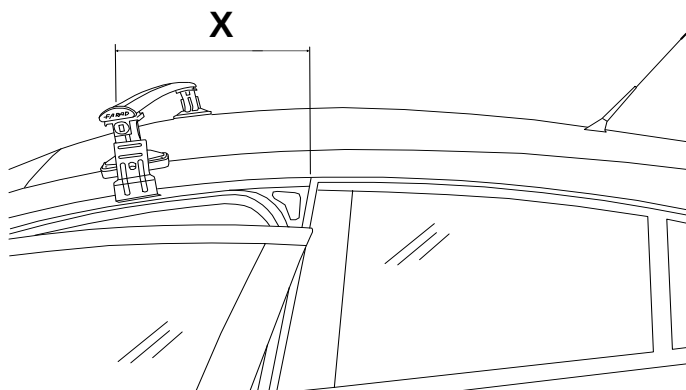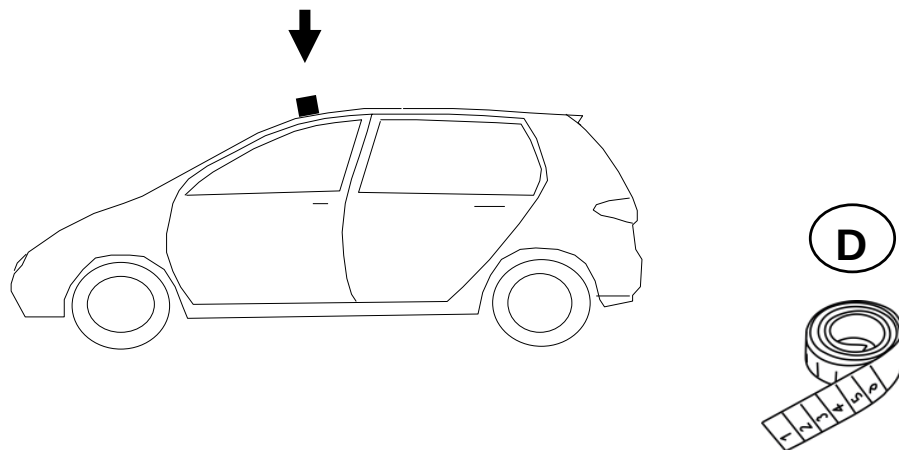



				X
MERCEDES	CLASSE A W 168	5	2001-2004	X= 230
EVO	CROSS 4	4	2022>	X= 150


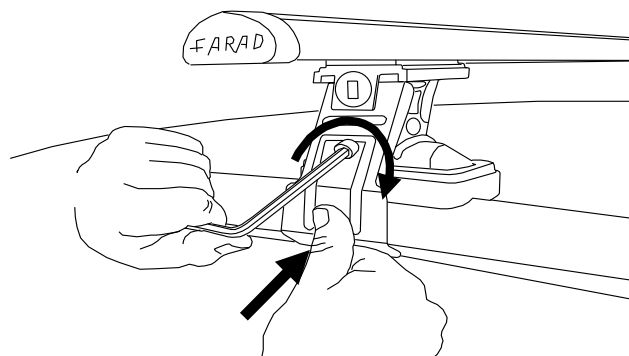
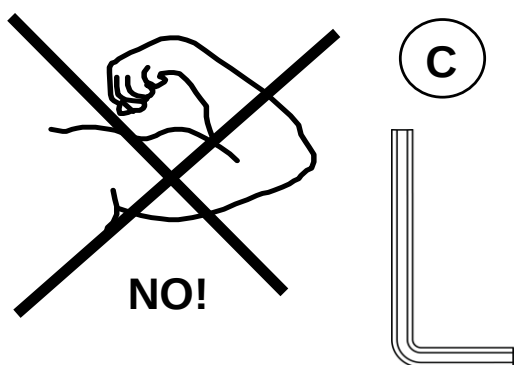


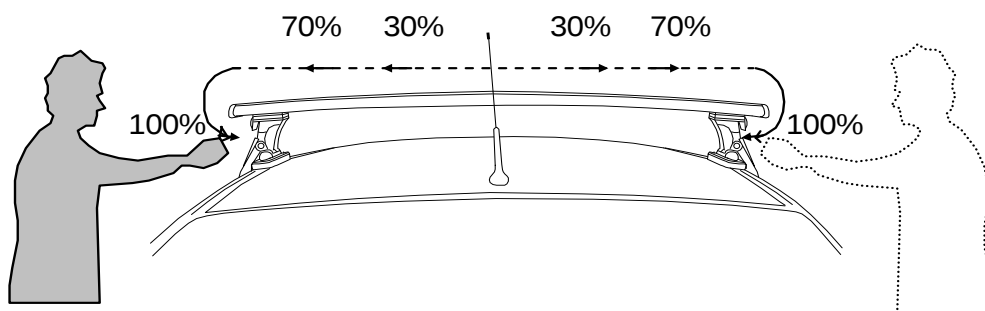


I Alternare il fissaggio delle viti
PL Śruby dokręcaj naprzemiennie
GB Tighten alternately
NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
D Die Schrauben abwechselnd anziehen
E Apretar alternativamente
SWE Dra åt växelvis

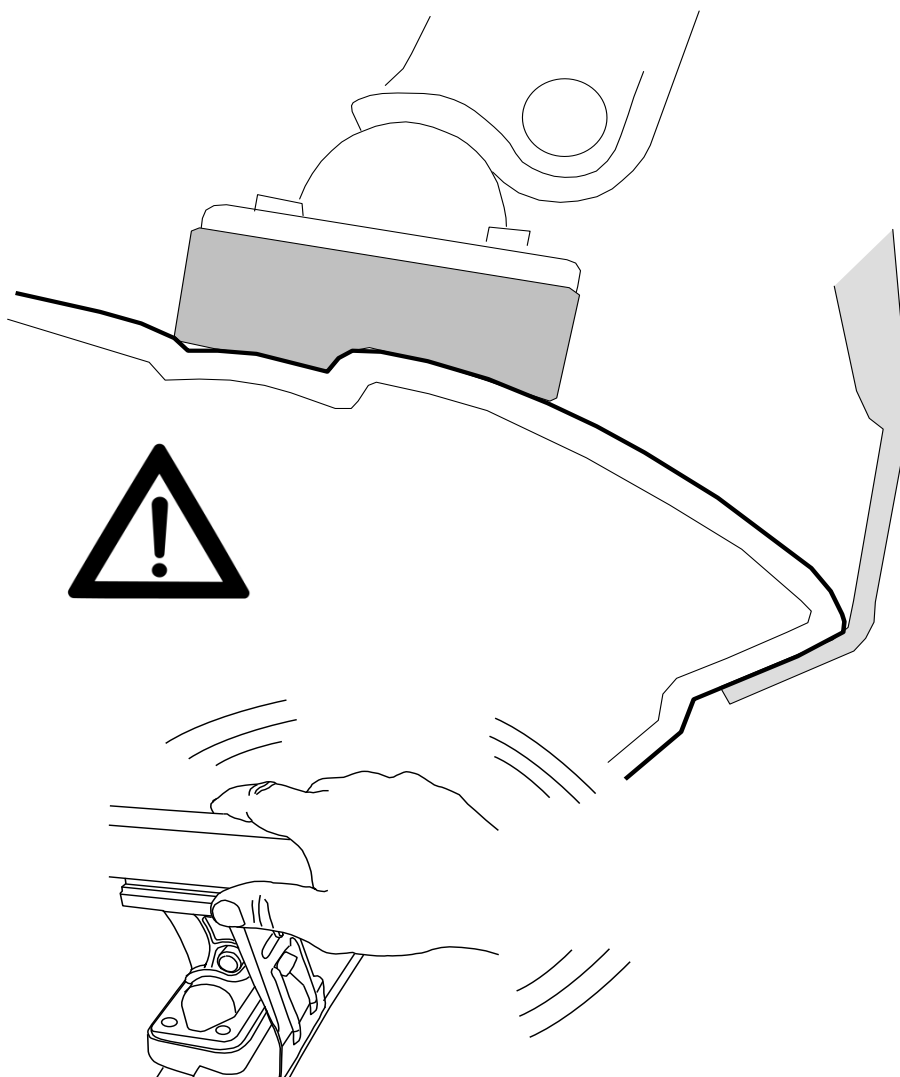

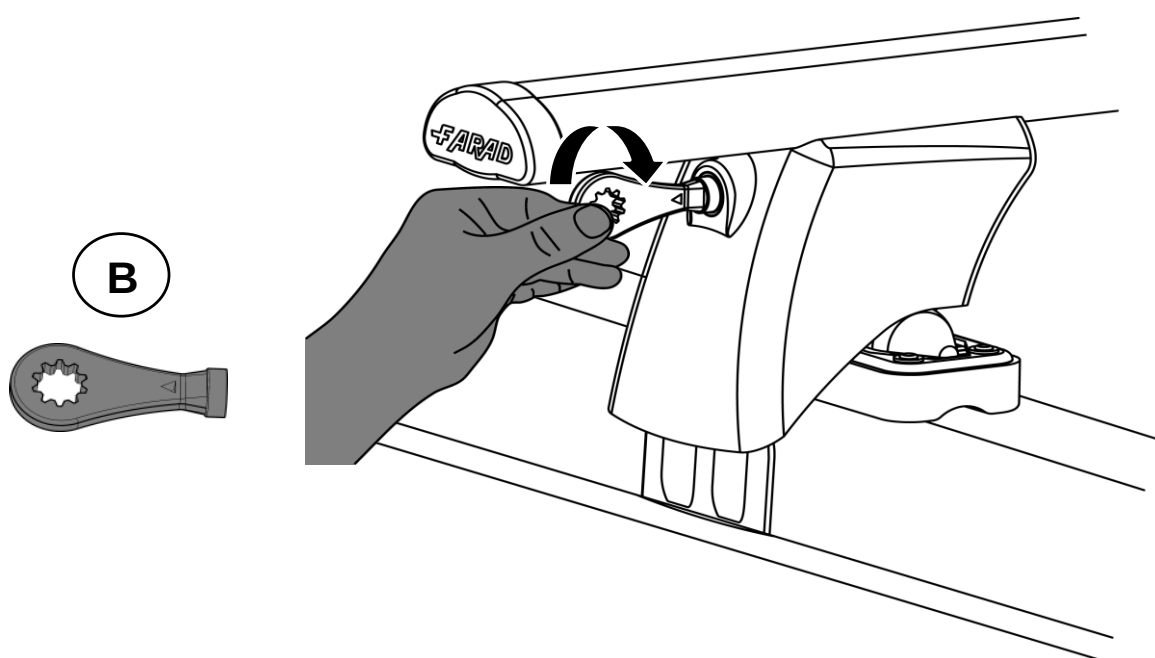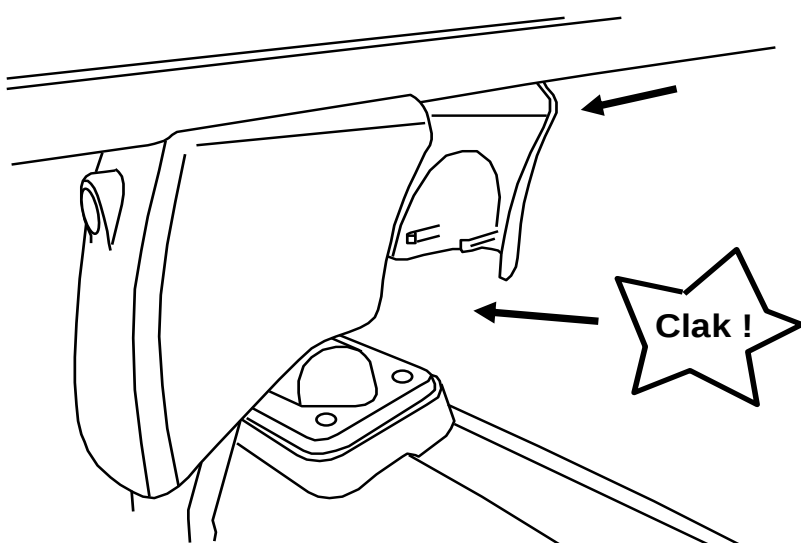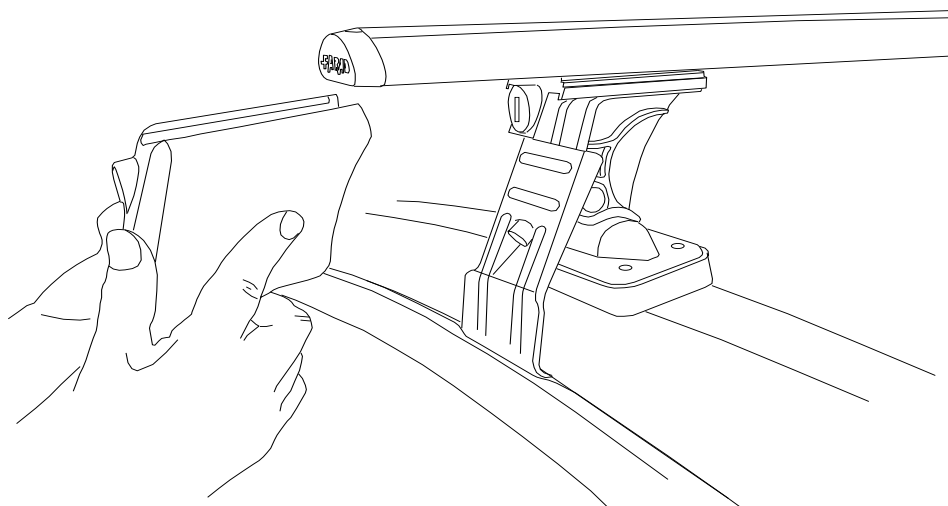

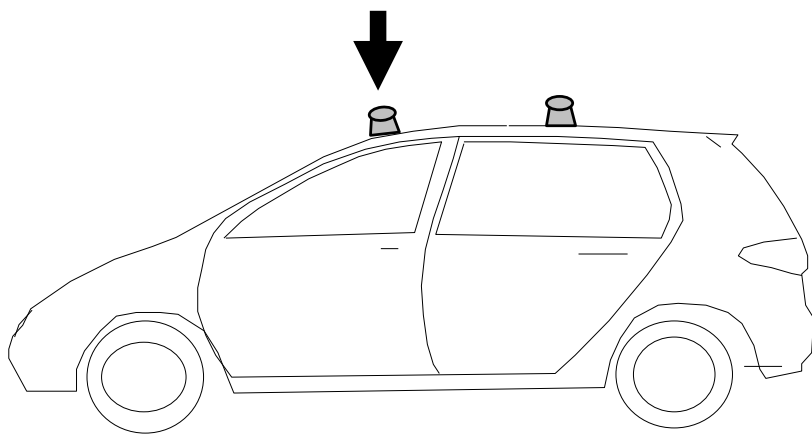

MERCEDES CLASSE A (W168) 2001-2004



EVO CROSS 4 PICK UP 2022>



- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
PL OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
GB CHECK THE SCREW FASTENING PERIODICALLY
D REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
SWE REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
F VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT



I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar


E Fijación Barra Trasera

D Montage Heckdachträgers



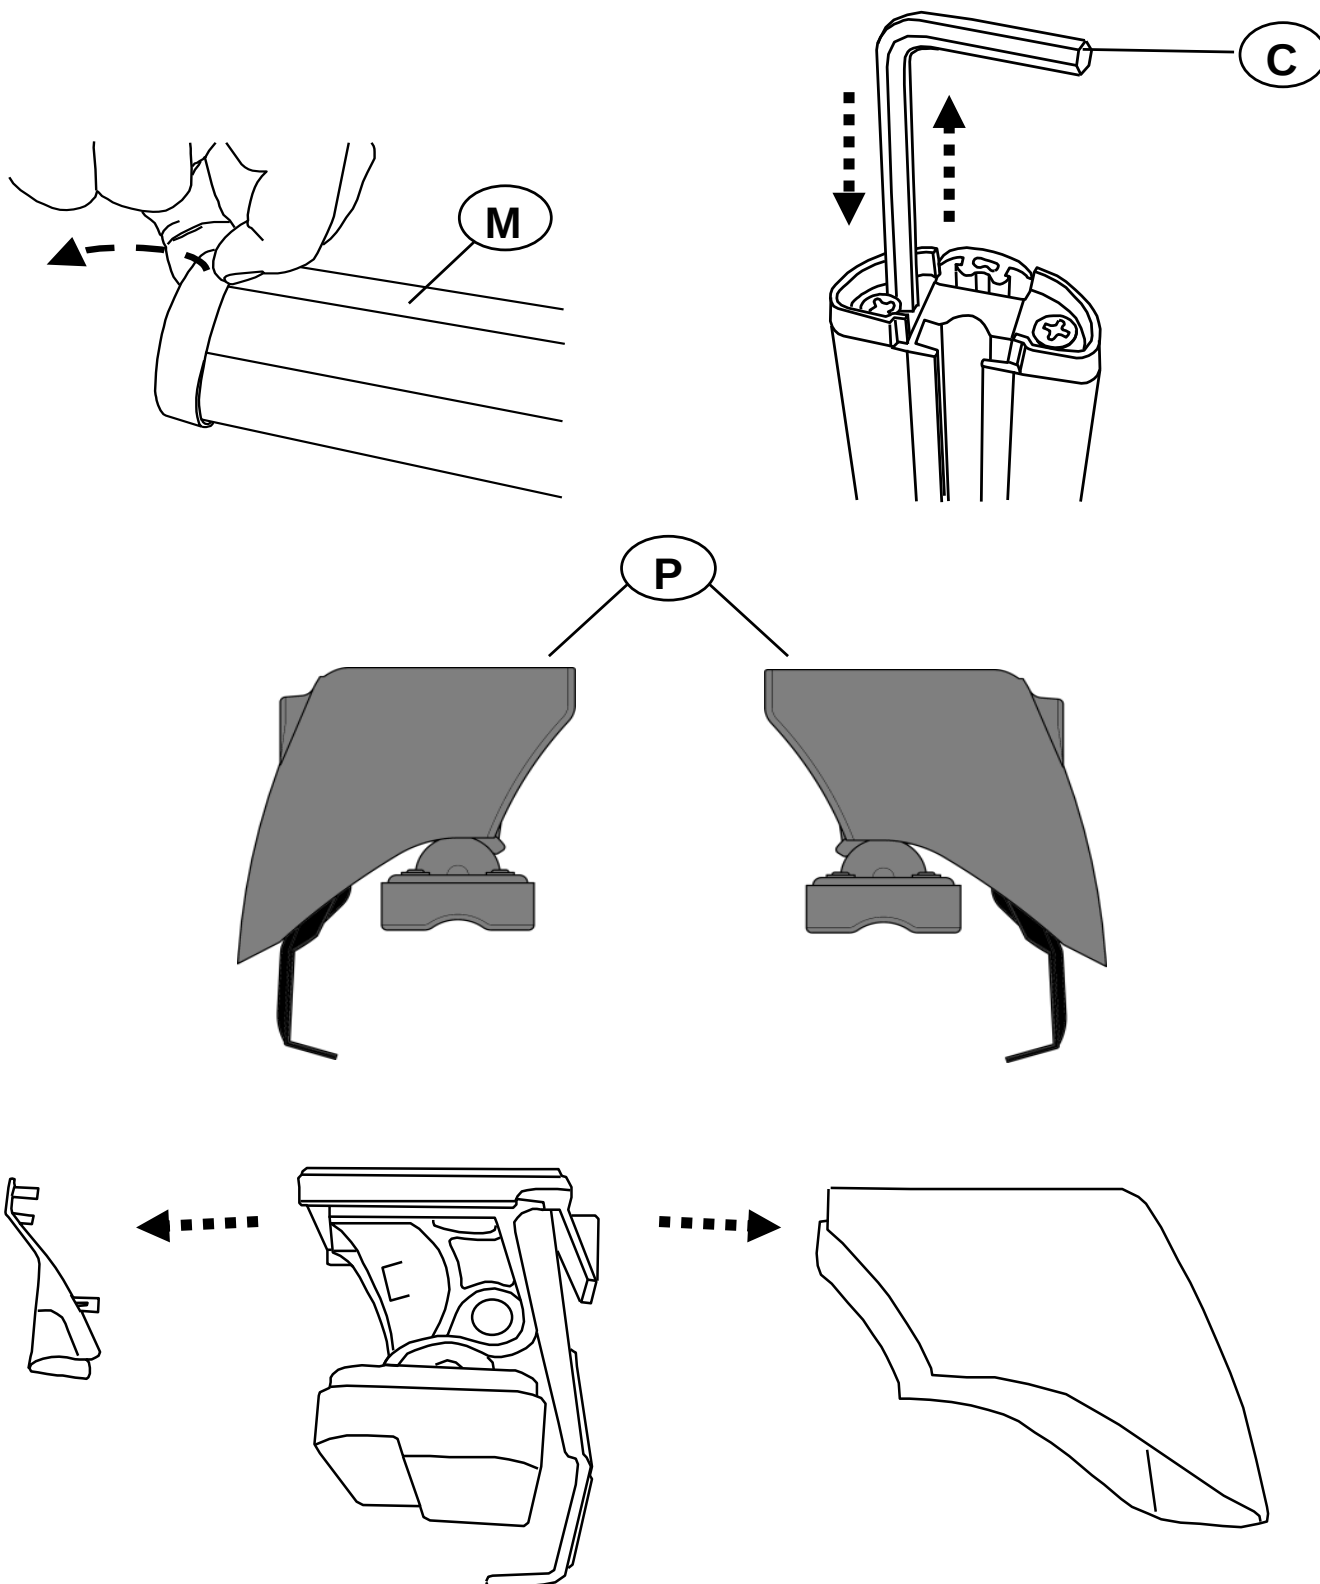


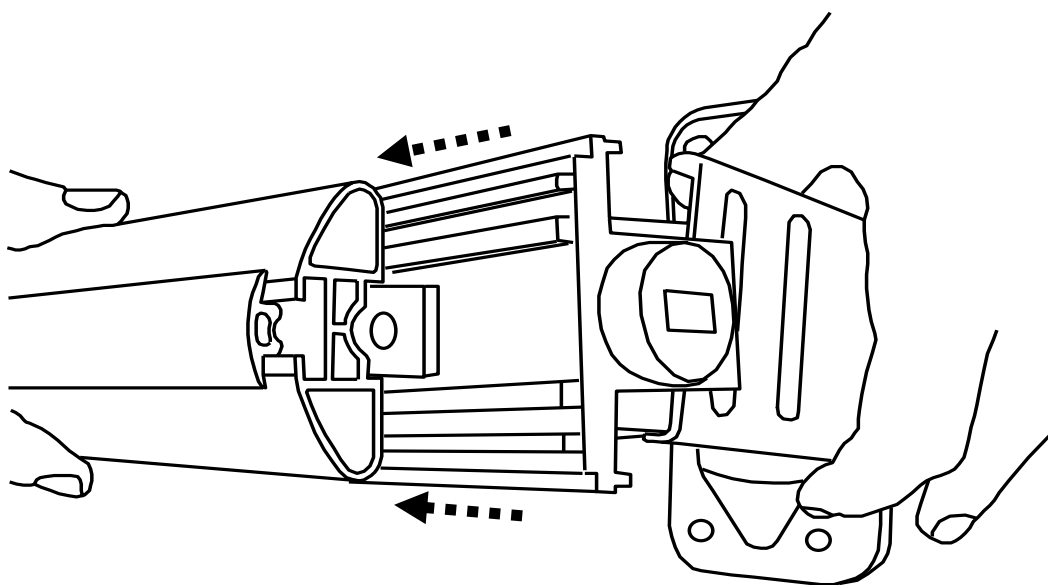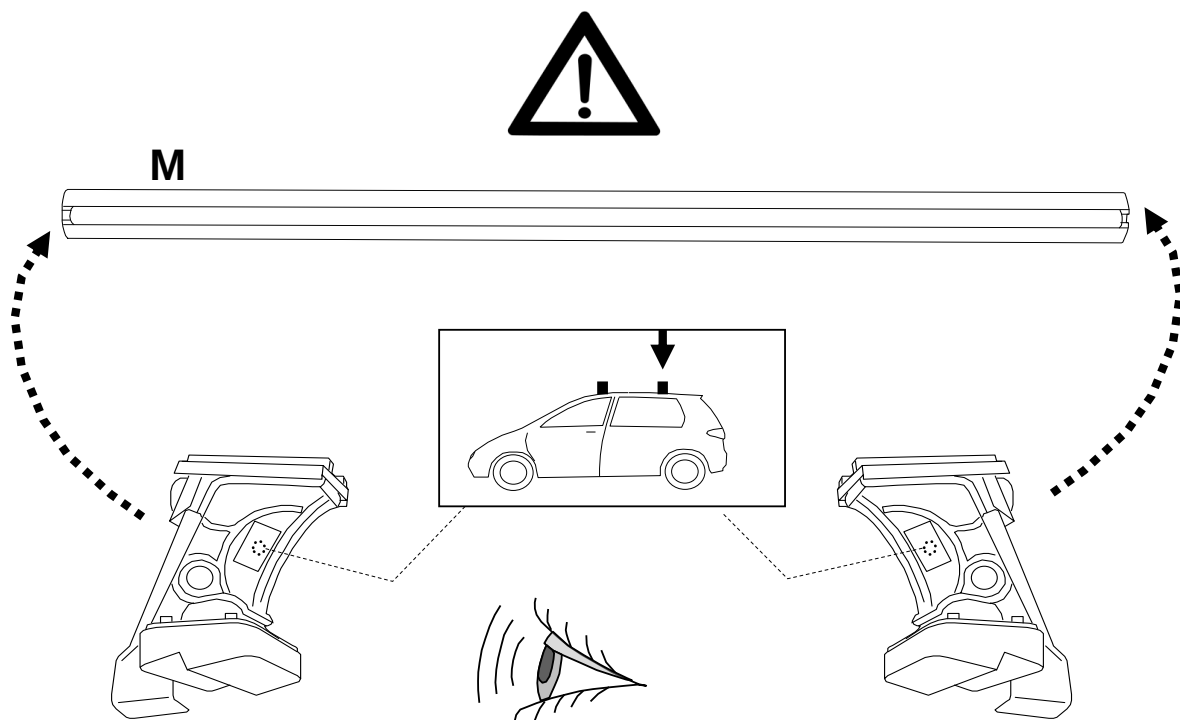

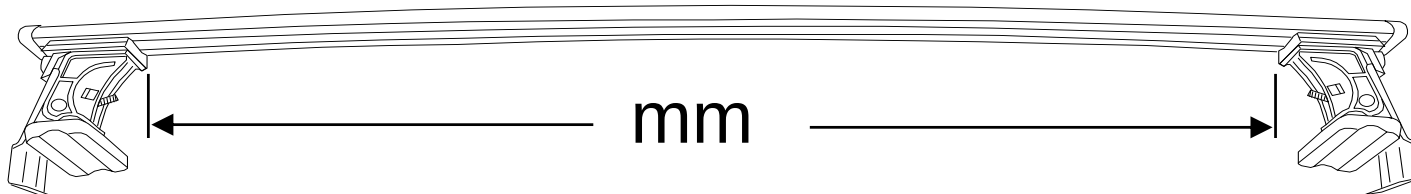


			R	mm
MERCEDES	CLASSE A W 168	5	R= 33	925
EVO	CROSS 4	4	R= 40	1065


R - R₁

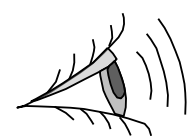



2

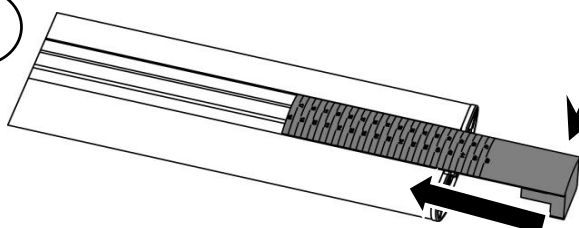


3

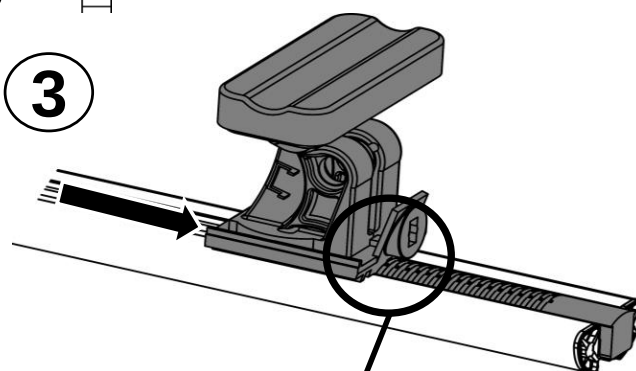


4

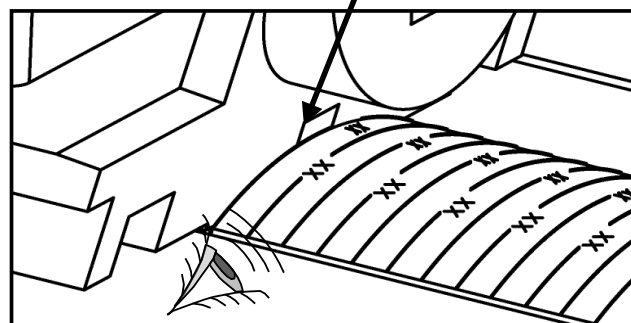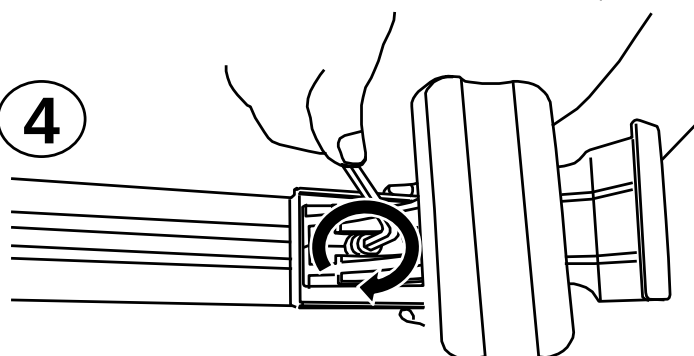


5



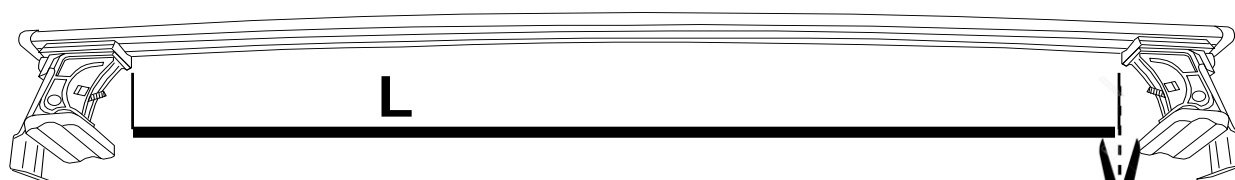


6



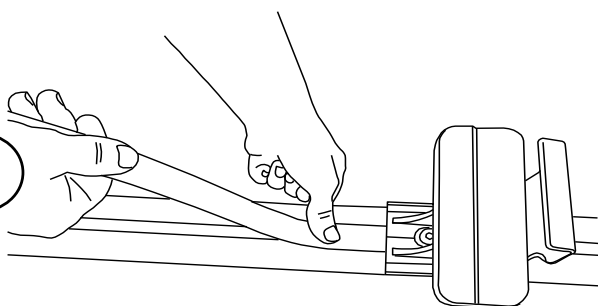


7

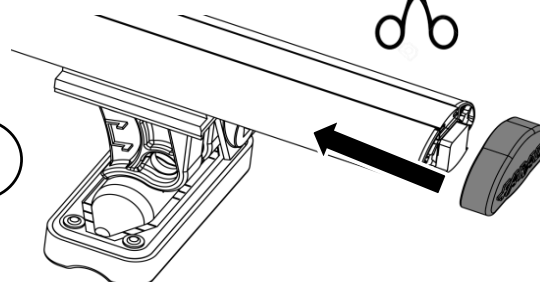


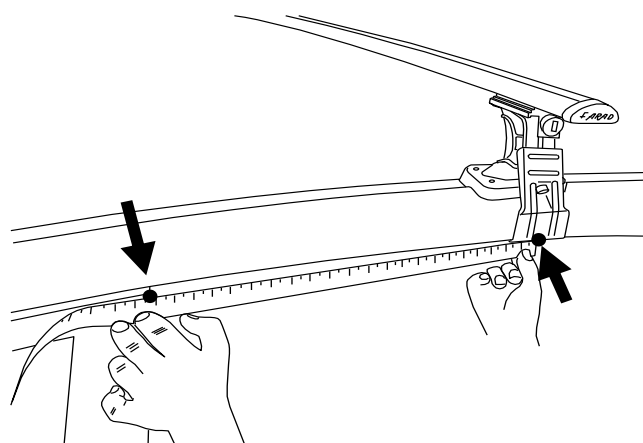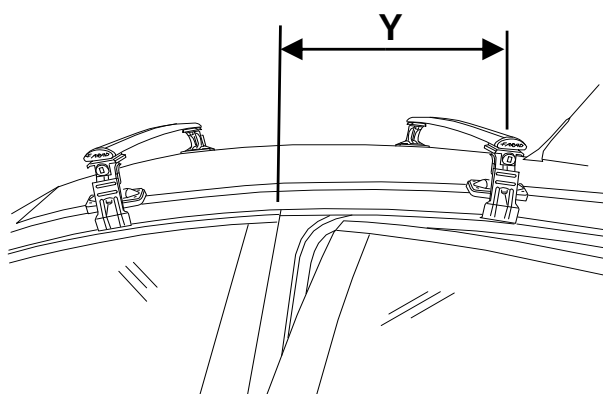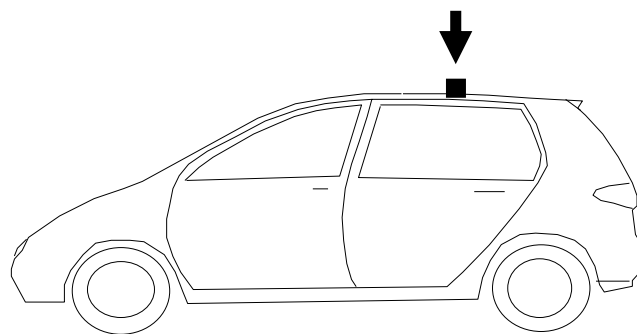

				Y
MERCEDES	CLASSE A W168	5	2001-2004	Y= 420
EVO	CROSS 4	4	2022>	Y= 500

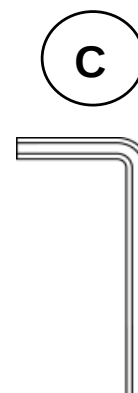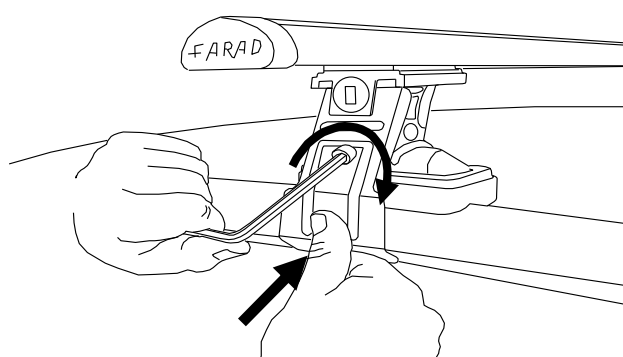



REV 001	19/06/2023	16 / 20
---------	------------	---------

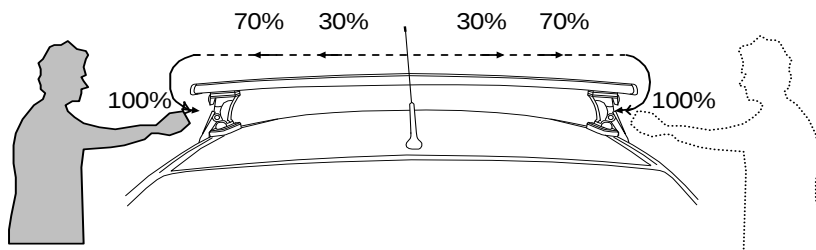



I Alternare il fissaggio delle viti
PL Śruby dokręcaj naprzemiennie
GB Tighten alternately
NL Afwisselend aan de linker- en
de rechterkant aandraaien




F Serrer alternativement chaque
D Die Schrauben abwechselnd anziehen
E Apretar alternativamente
SWE Dra åt växelvis


MERCEDES CLASSE A (W168) 2001-2004

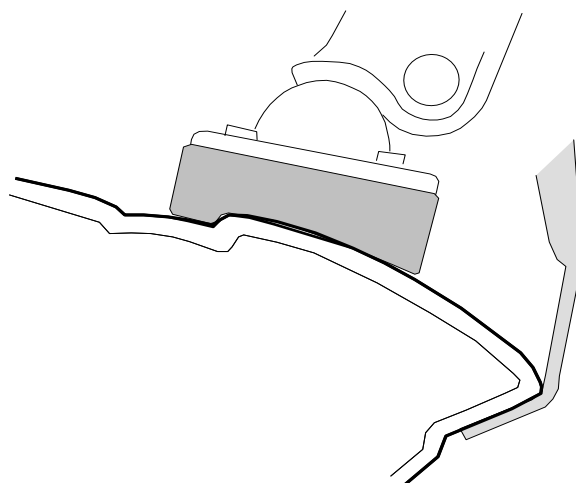

EVO CROSS 4 PICK UP 2022>

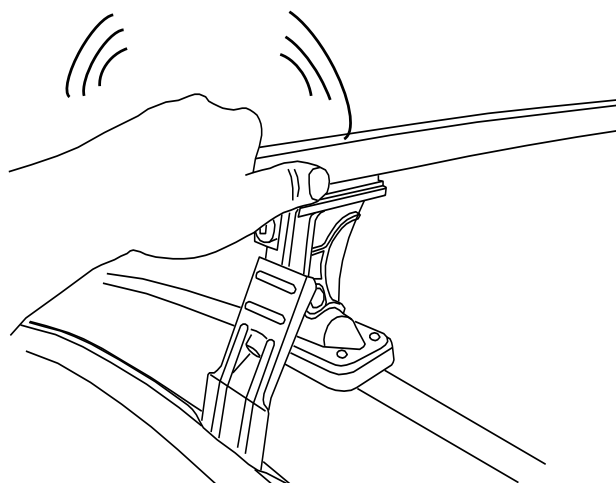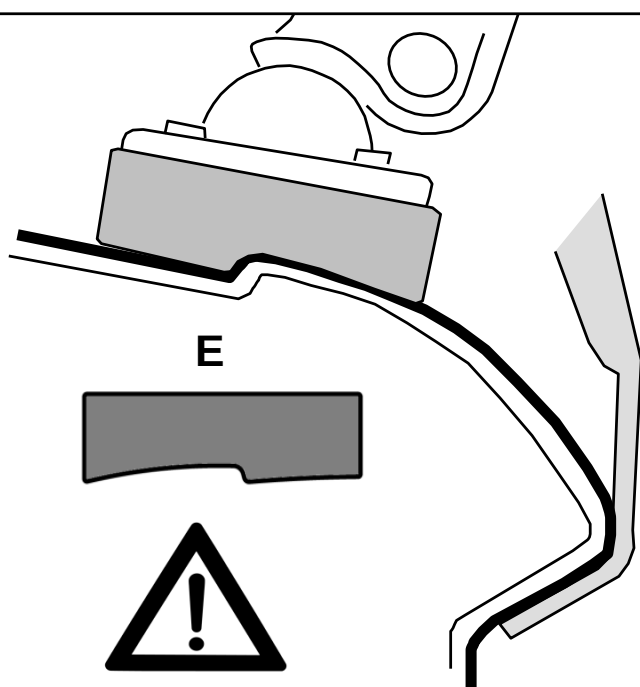

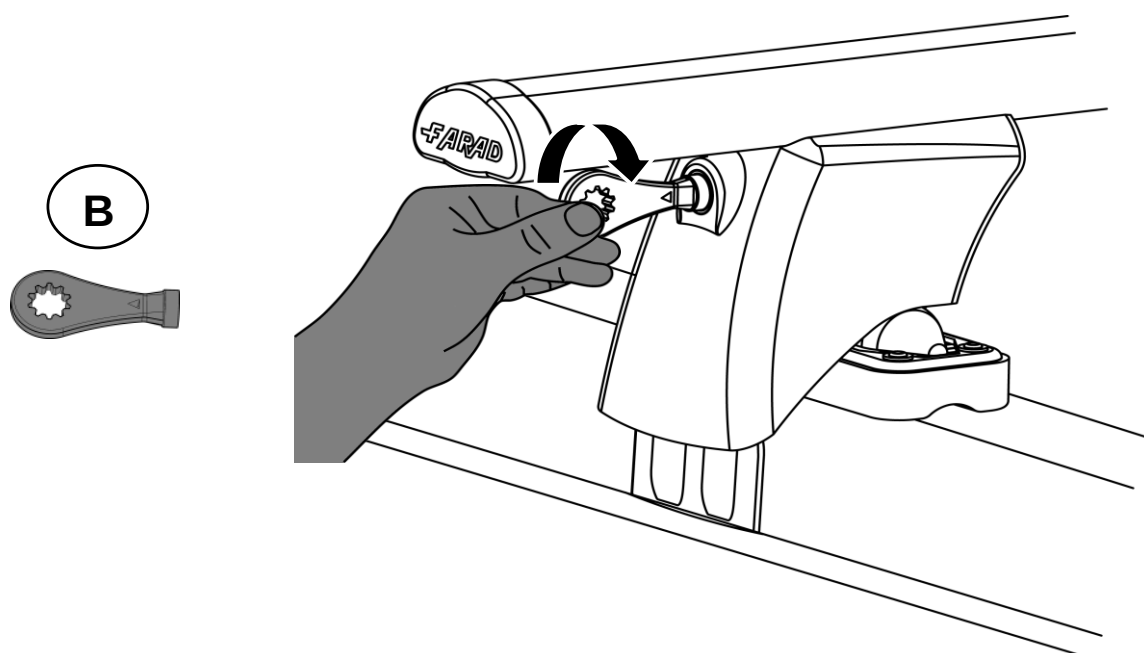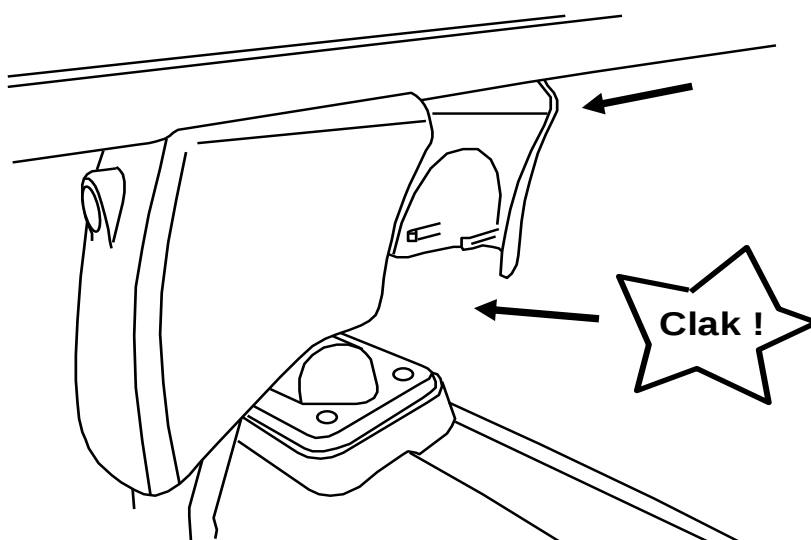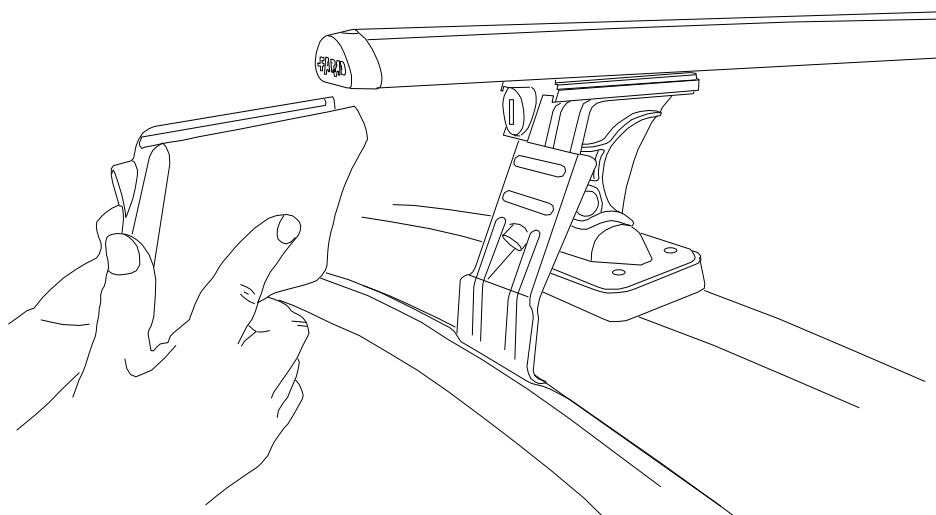

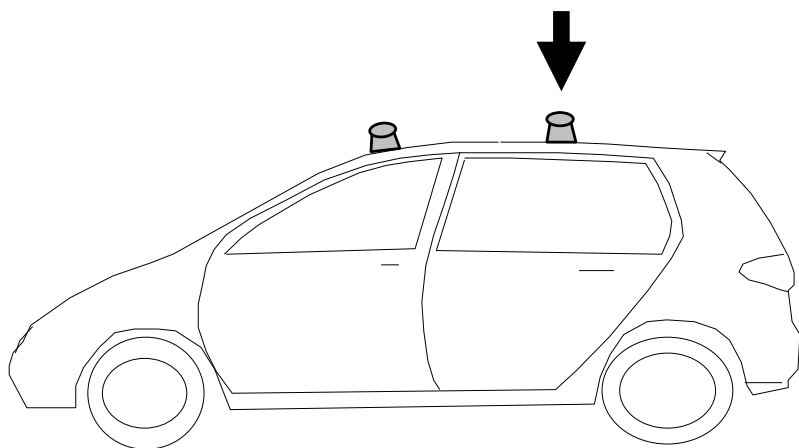

MERCEDES CLASSE A (W168) 2001-2004



EVO CROSS 4 PICK UP 2022>




- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
PL OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
GB CHECK THE SCREW FASTENING PERIODICALLY
D REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
SWE REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
F VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT




RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

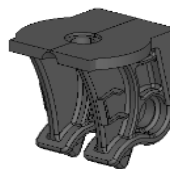


SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

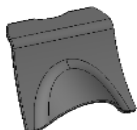


INVOLUCRO POST.
90341 / 9

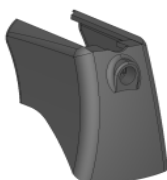

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

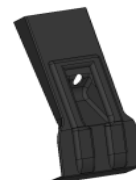

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in italy

www.faradworld.com

