

FARAD[®] BARS


made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy

www.faradworld.com

+39 0172 58575

BS 111 - 2



FIAT 500 L 2012 >

FIAT 500 L TREKKING 2013 >

FIAT 500 L LIVING 2013 >



I Istruzioni di montaggio

F Instructions de montage

P Instrukcja montażu

D Einbauanleitung


G Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

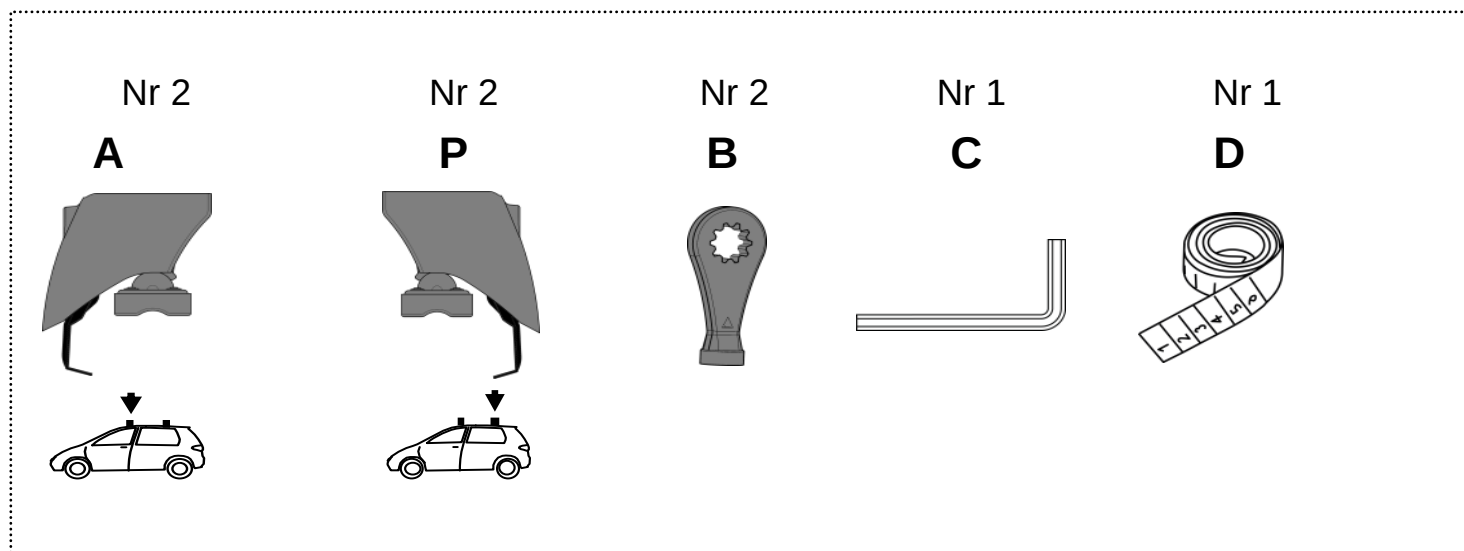












+



KIT ALU

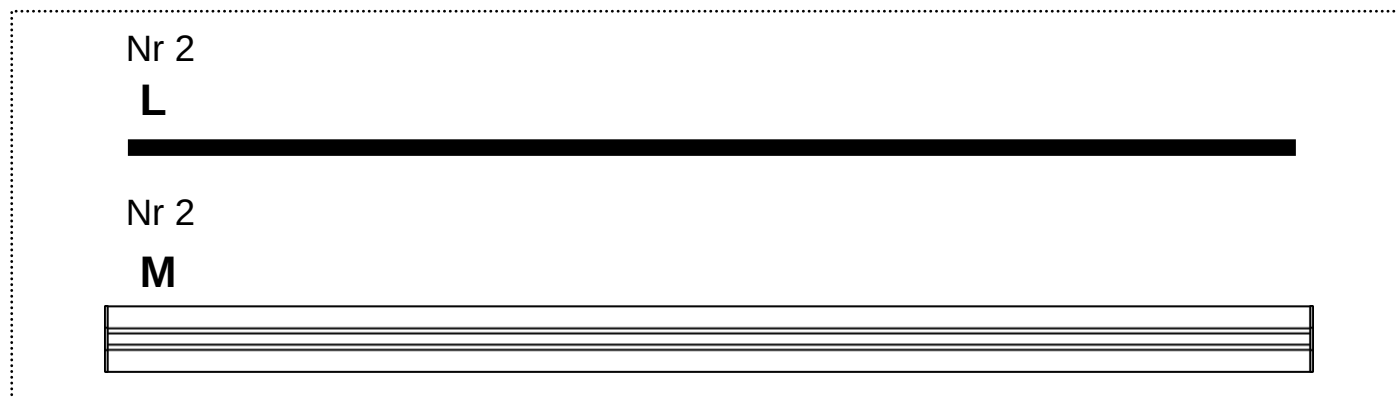




=


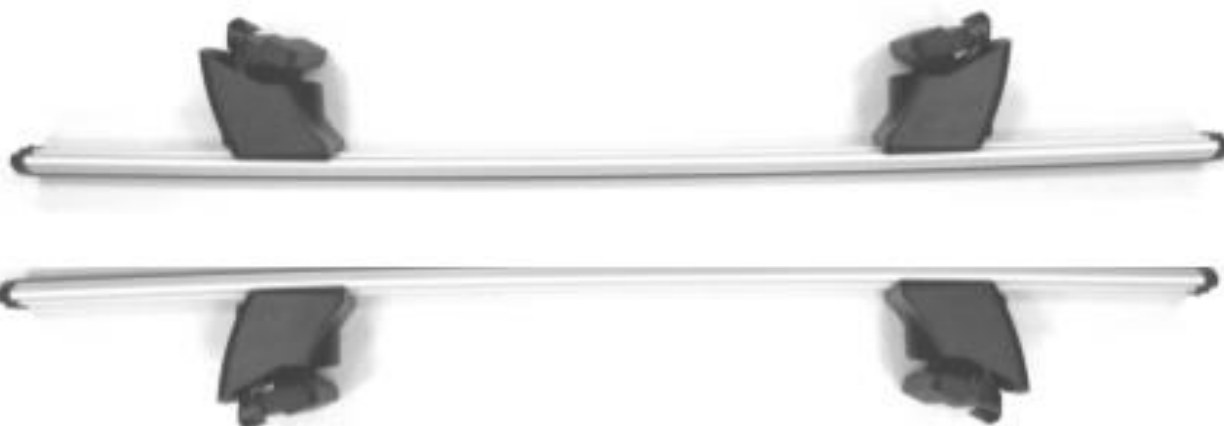


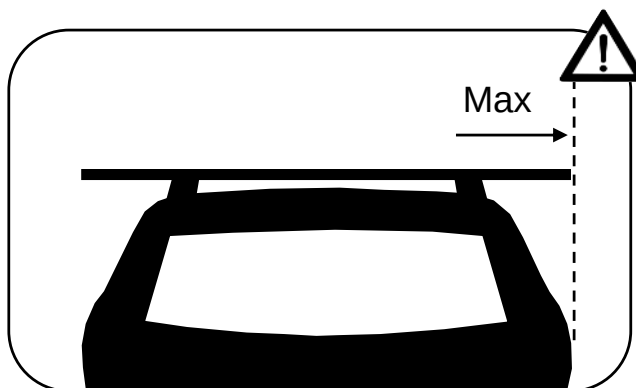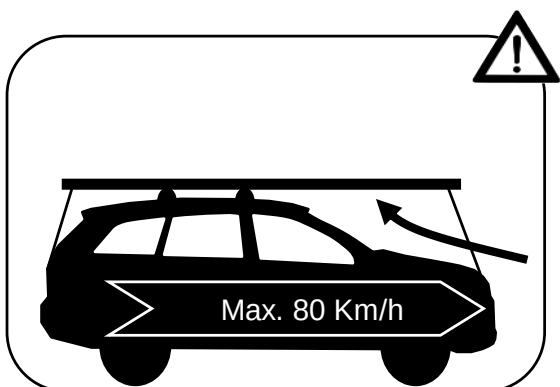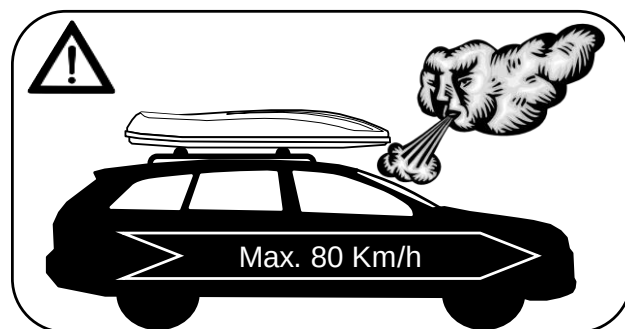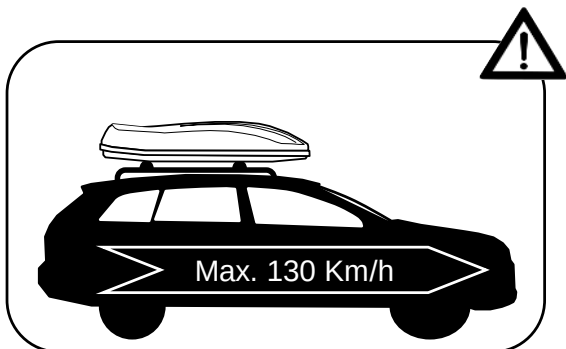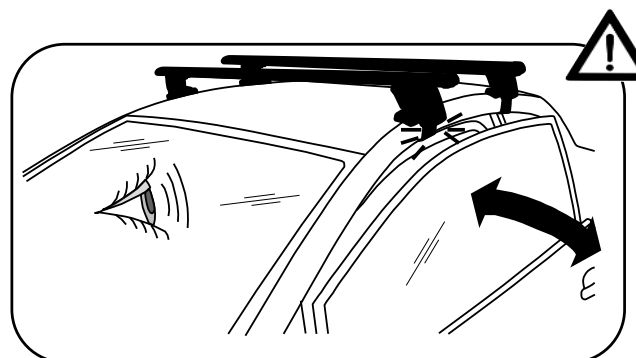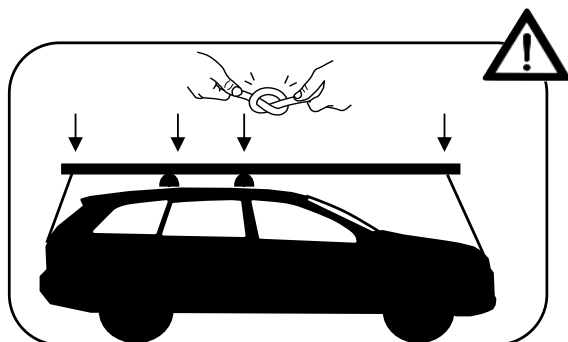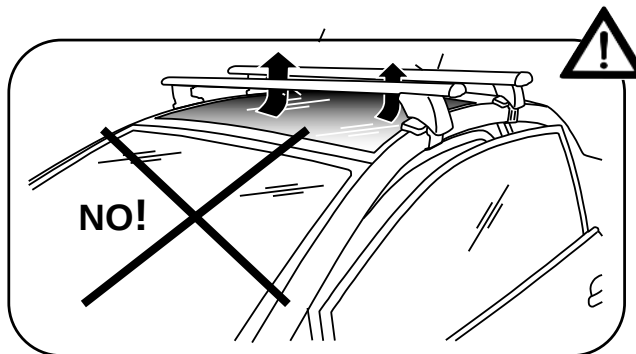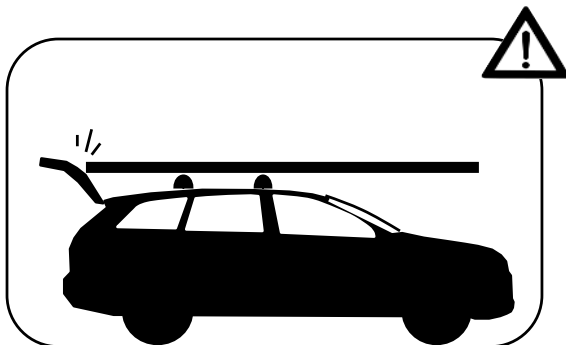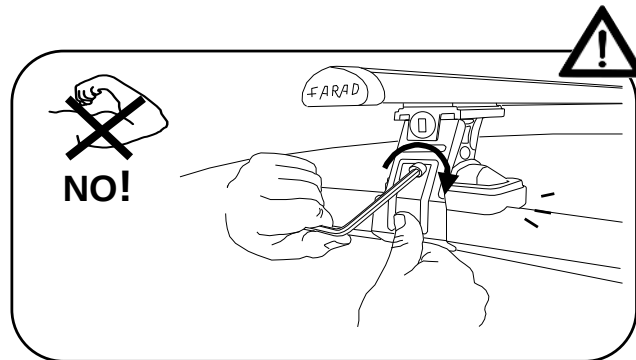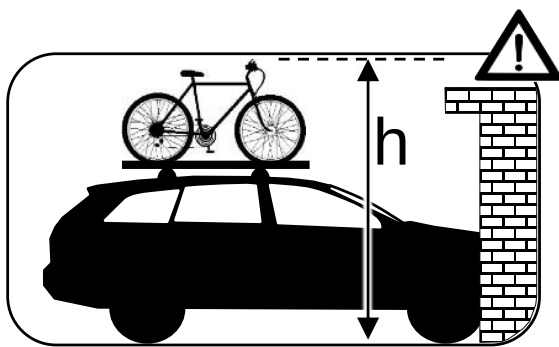

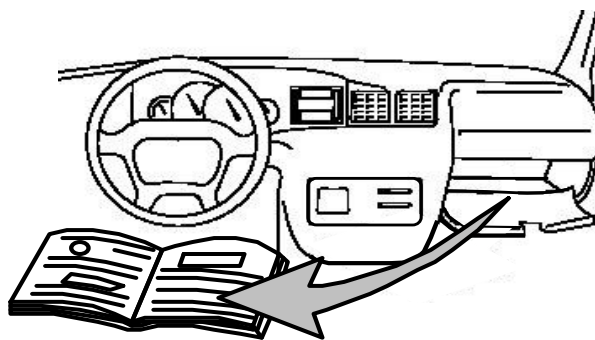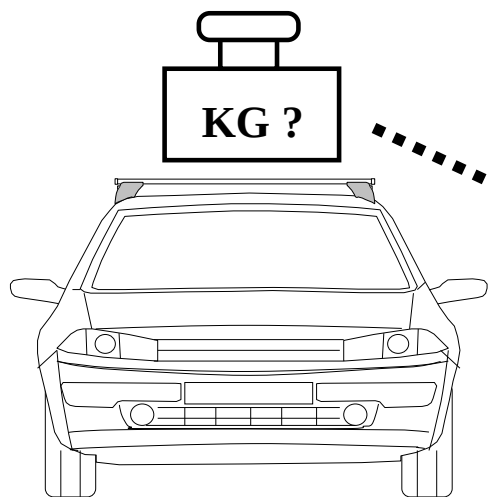

- | | |
|--|--|
| I Controllare carico del tetto sul manuale dell'auto | F vérifier le chargement manuel du toit de la voiture |
| PL Sprawdzić ładowność dachu w instrukcji | D überprüfen Sie die manuelle Beladung der Autodach |
| GB Check roof load capacity in car instruction | E comprobar la carga manual del techo del coche |
| NL check de handleiding belasting van het dak van de auto | SWE kontrollera manuell inläggning på taket av bilen |

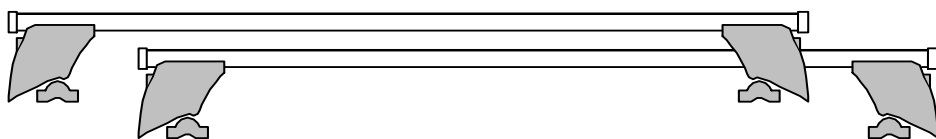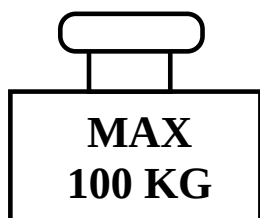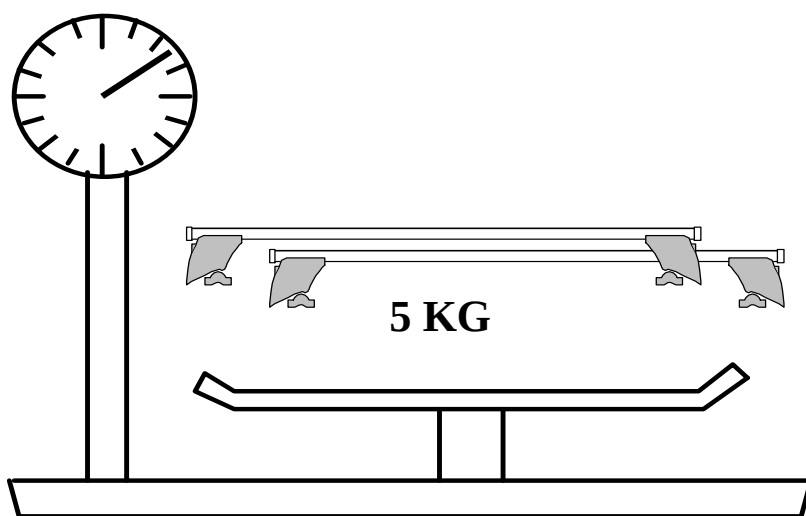

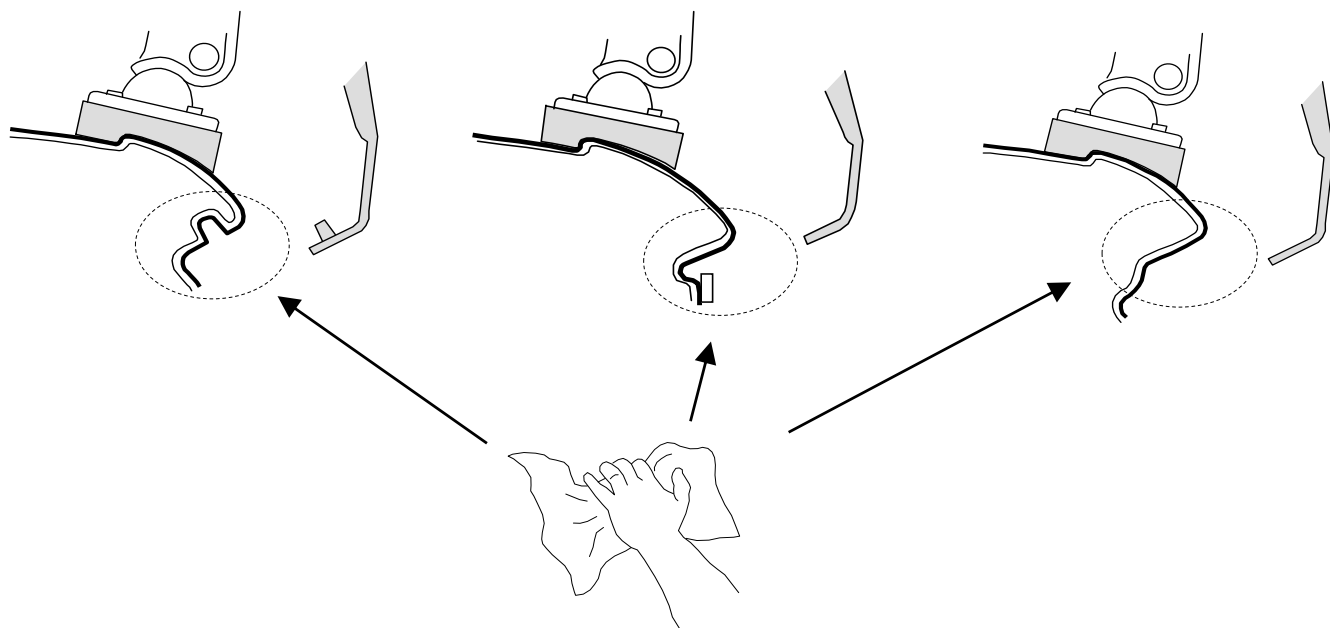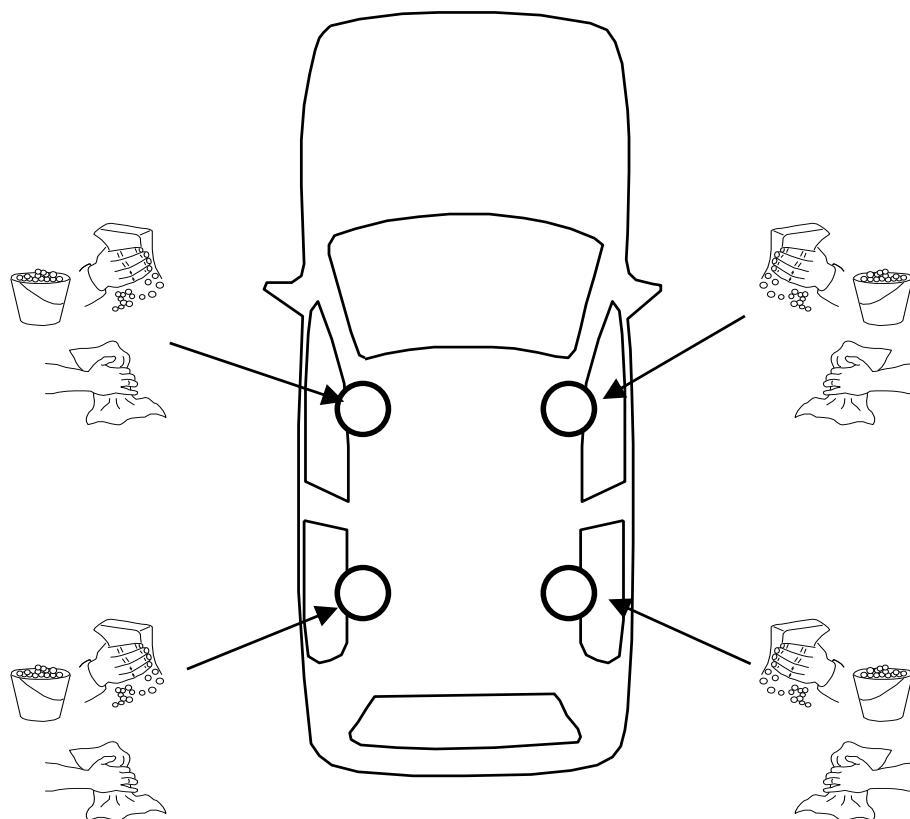

I Montaggio Barra Anteriore

F Fixation Barre Avant

PL Montaż Bagażnika Bazowego Tylnego


GB Fitting Front Roof Bar

D Montage Vorderes Dachträgers

NL Montage Voorste Dakdrager



SWE Montering Av Främre Lasthållaren


E Fijación Barra Frontal

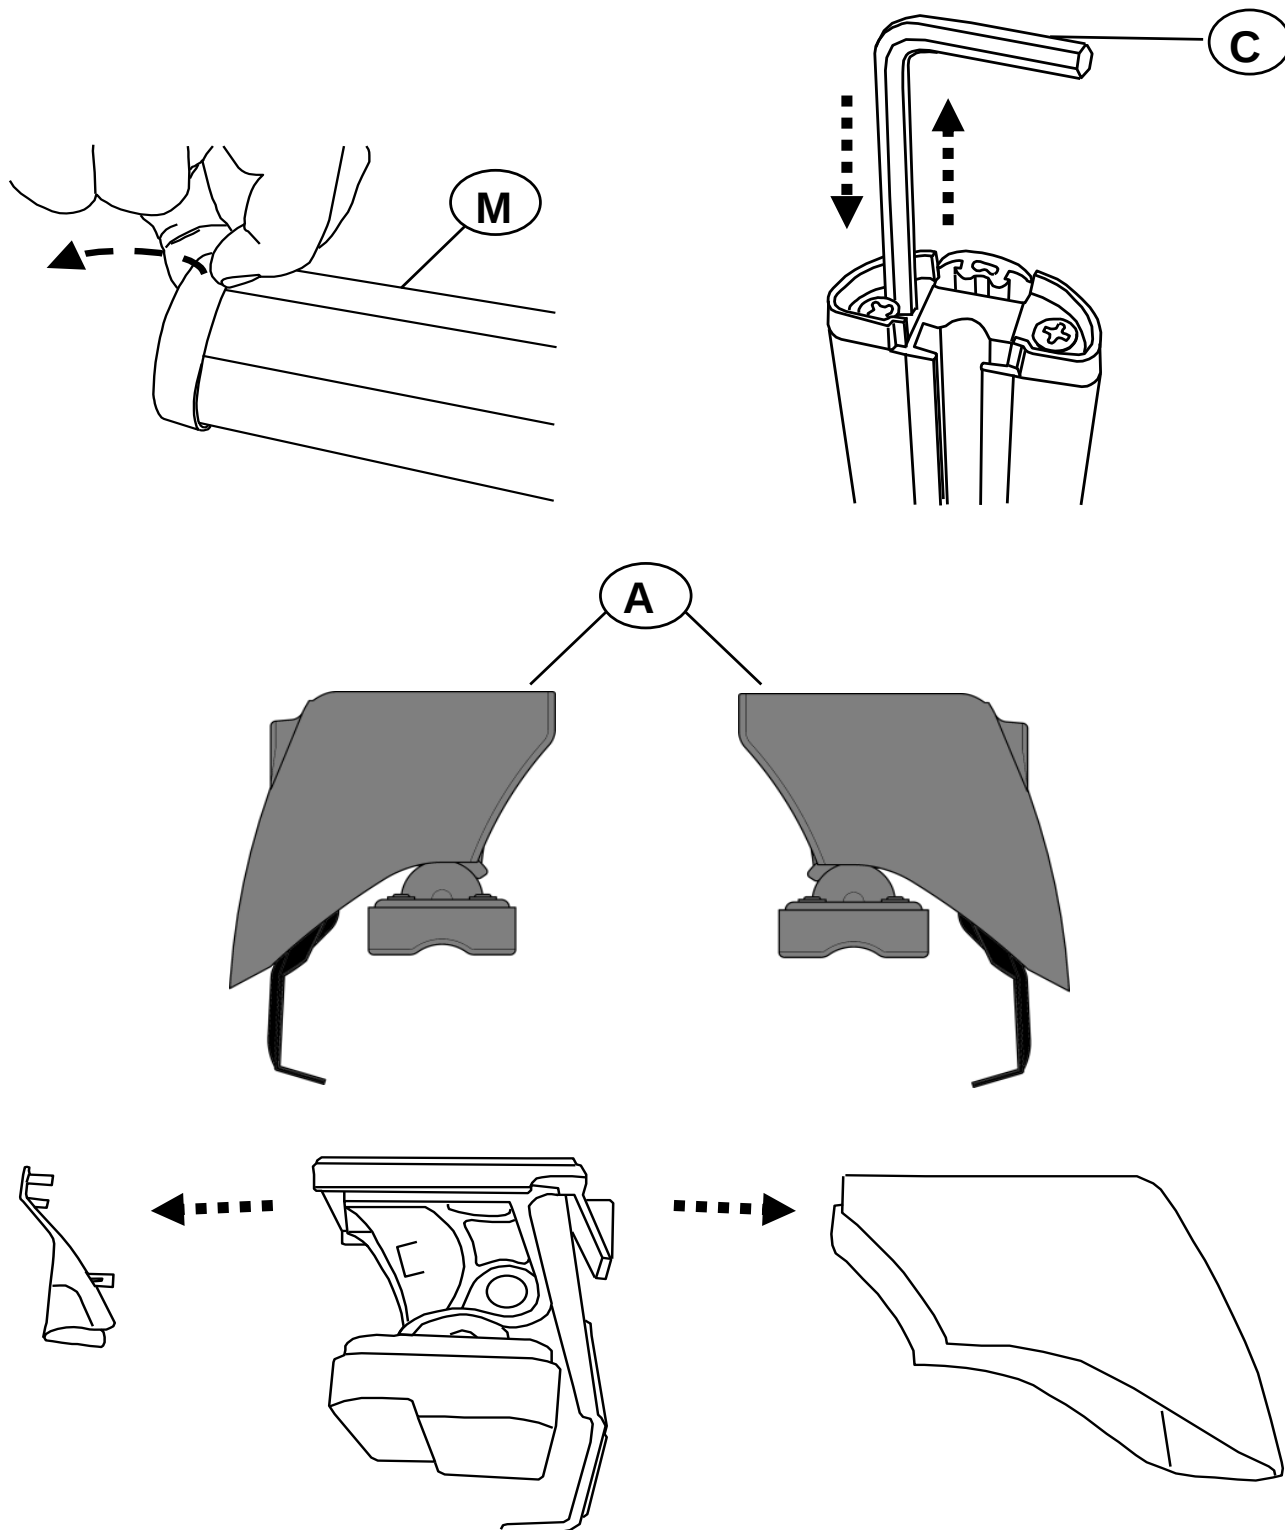







M

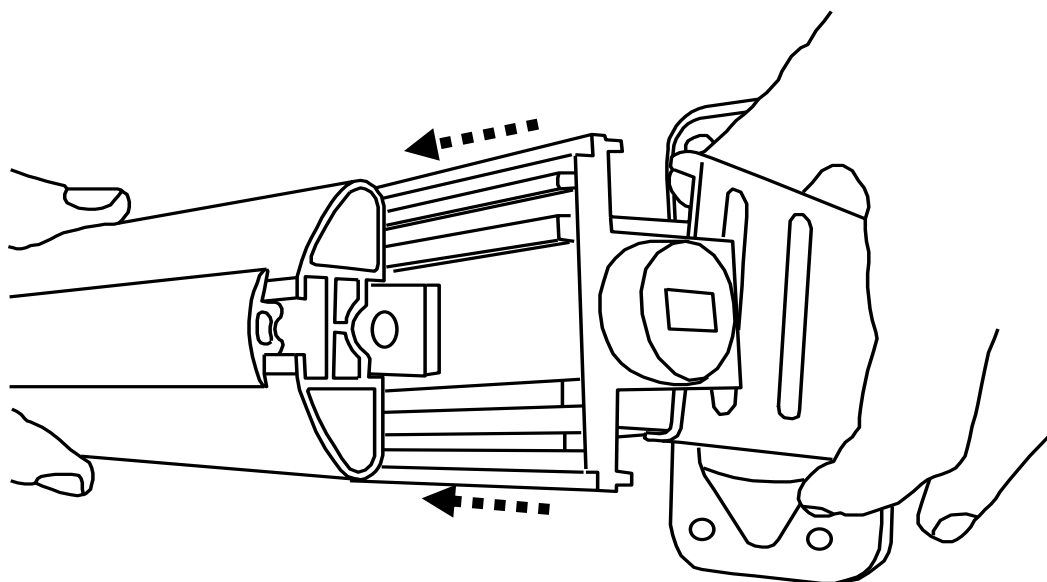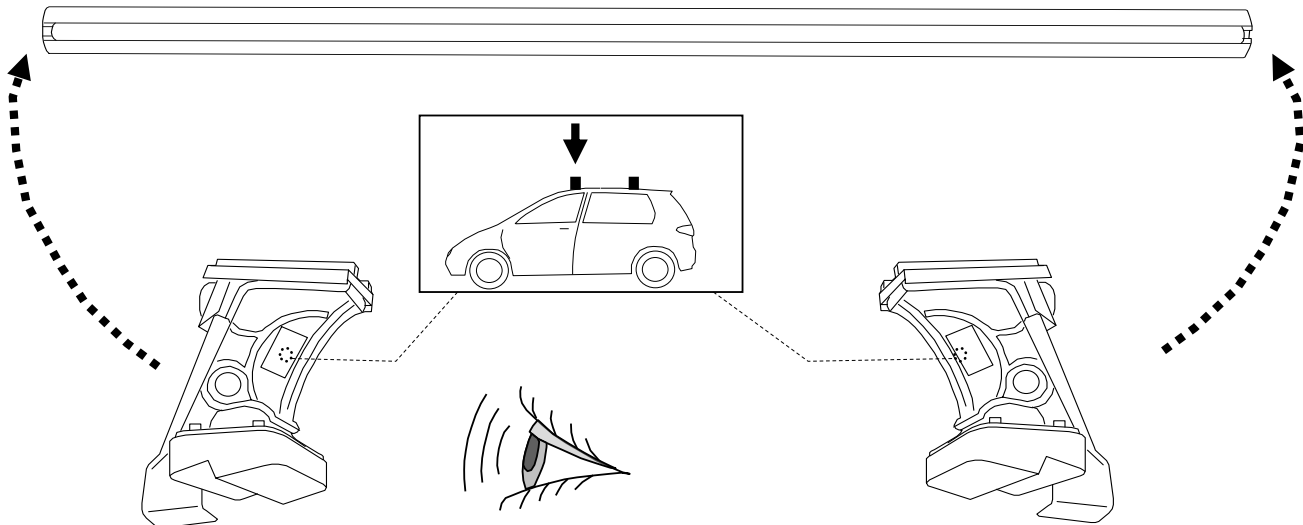

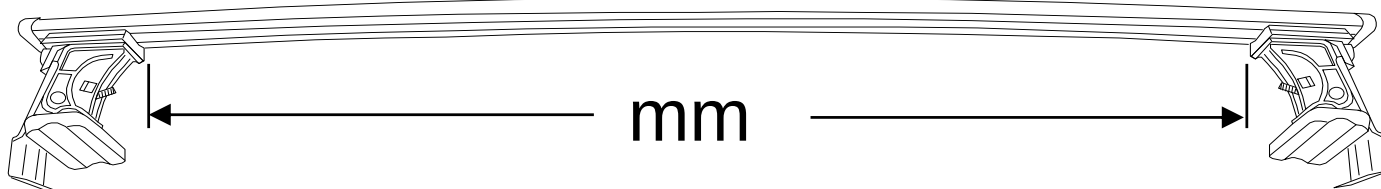


				R	mm
FIAT	500 L	5	2012>	R= 36	1045
FIAT	500 L TREKKING	5	2013 >	R= 36	1045
FIAT	500 L LIVING	5	2013 >	R= 36	1045


R.

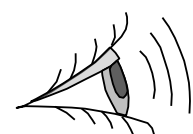


2

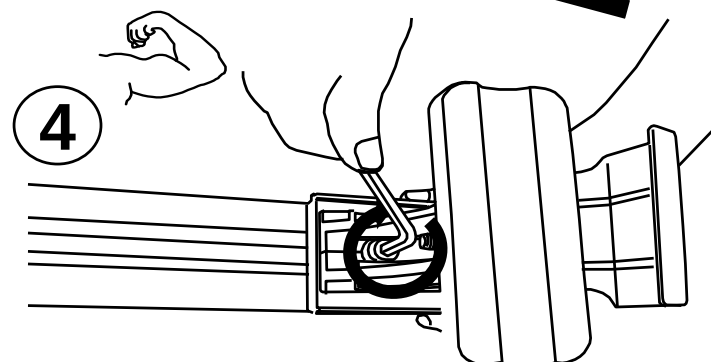


4

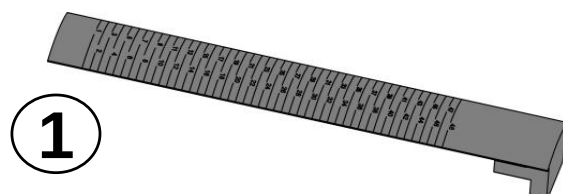



1

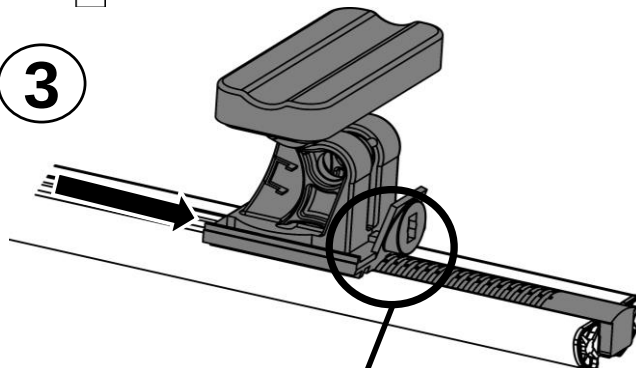


3

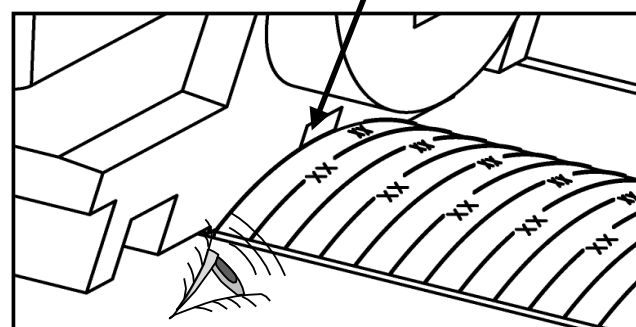




5

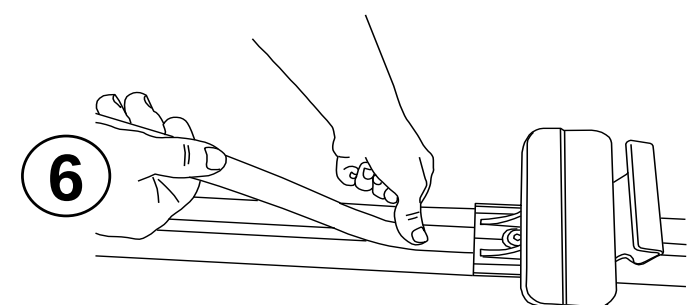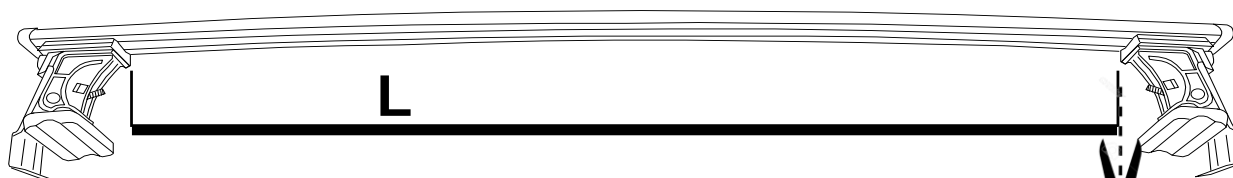



6


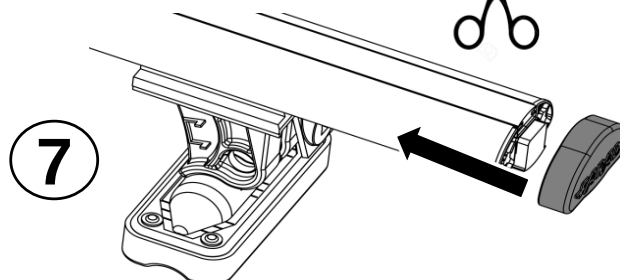


7

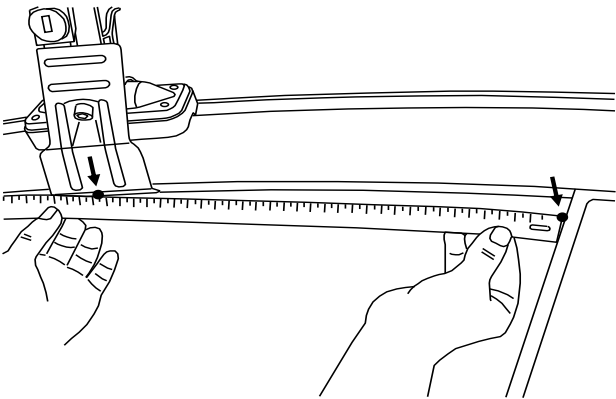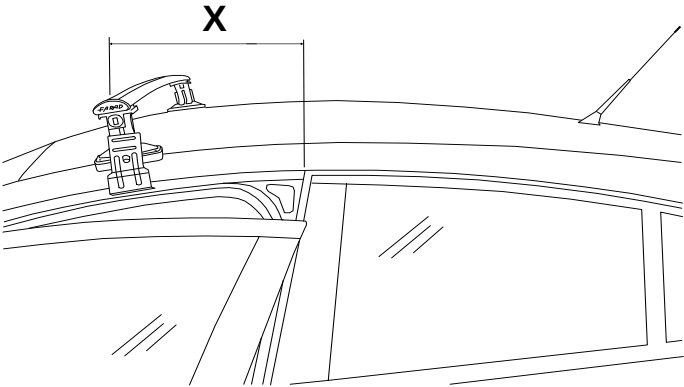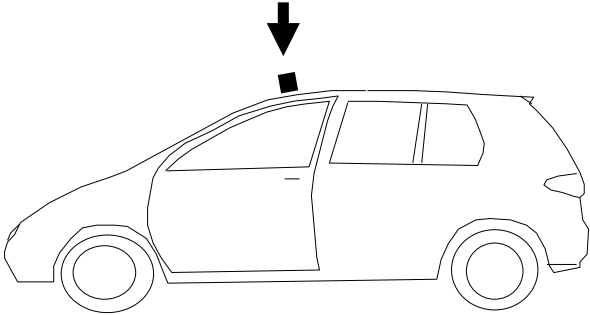





				X
FIAT	500 L	5	2012 >	X= 475
FIAT	500 L TREKKING	5	2013 >	X= 475
FIAT	500 L LIVING	5	2013 >	X= 475

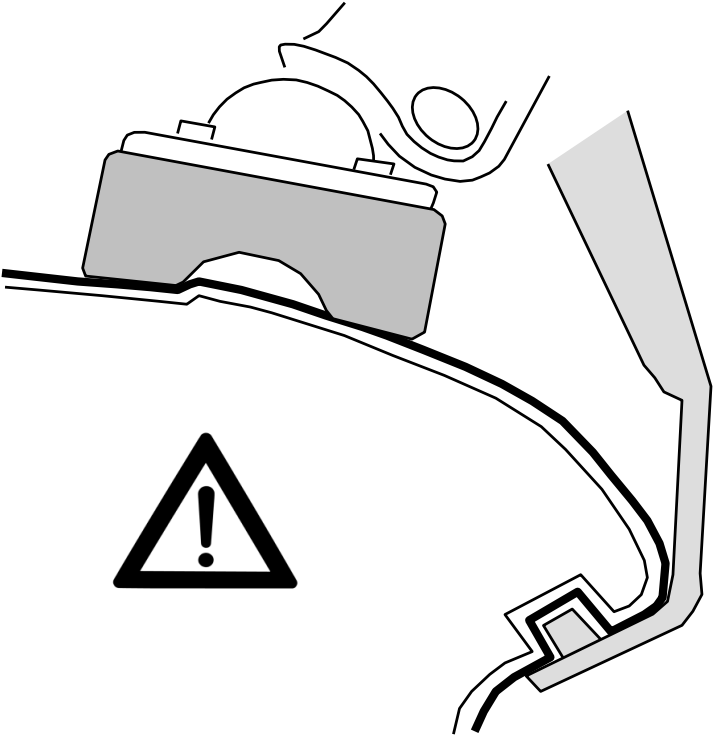


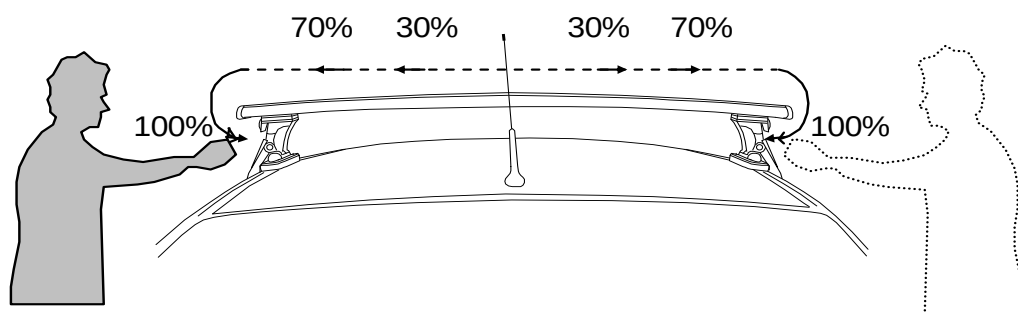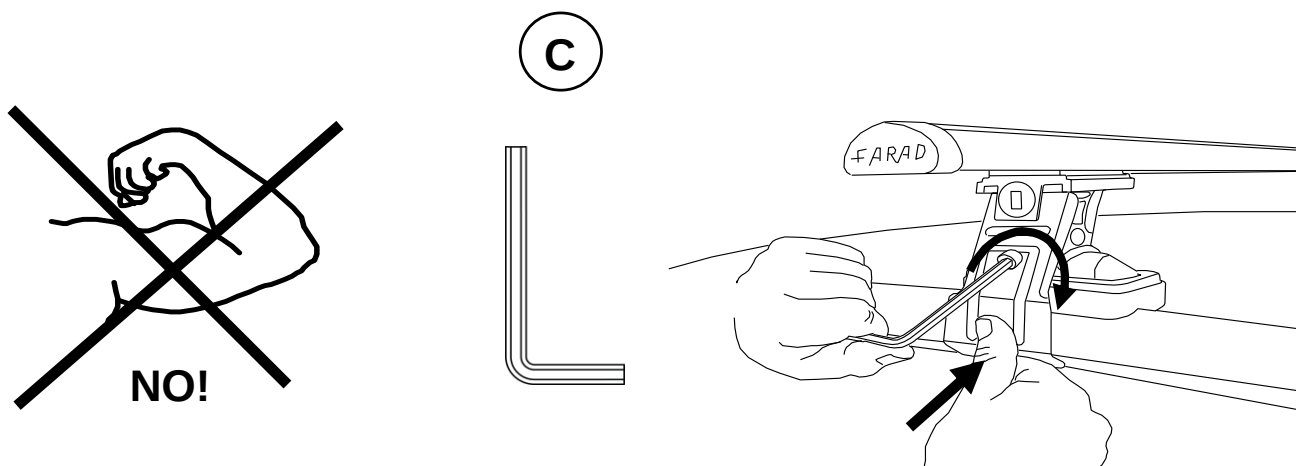

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

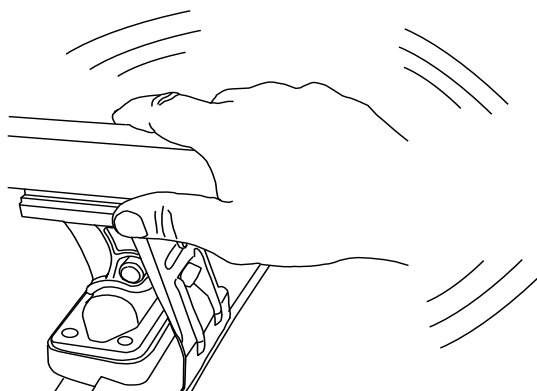

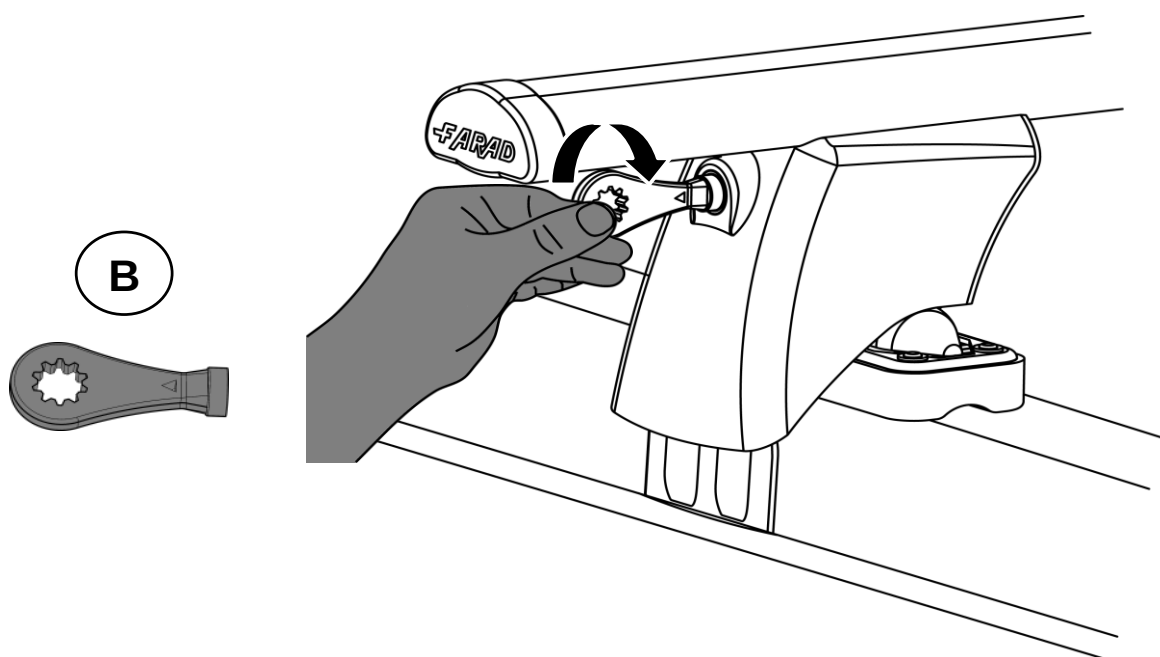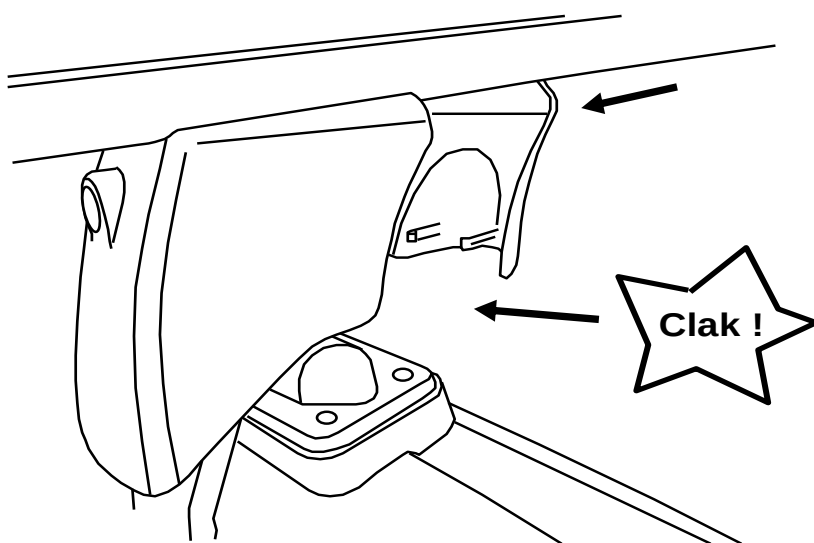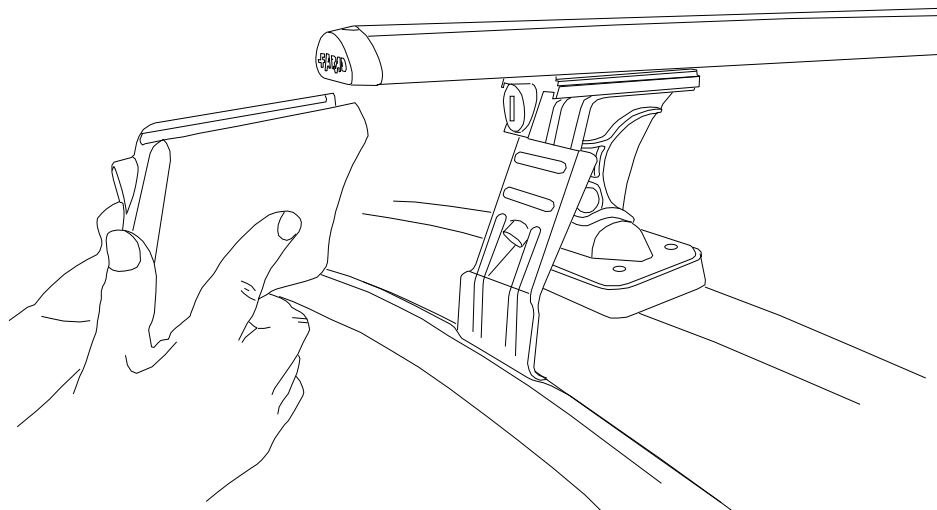

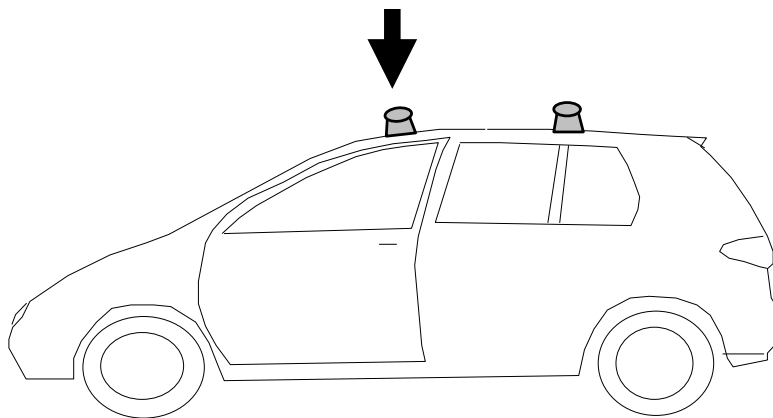

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar


E Fijación Barra Trasera


D Montage Heckdachträgers

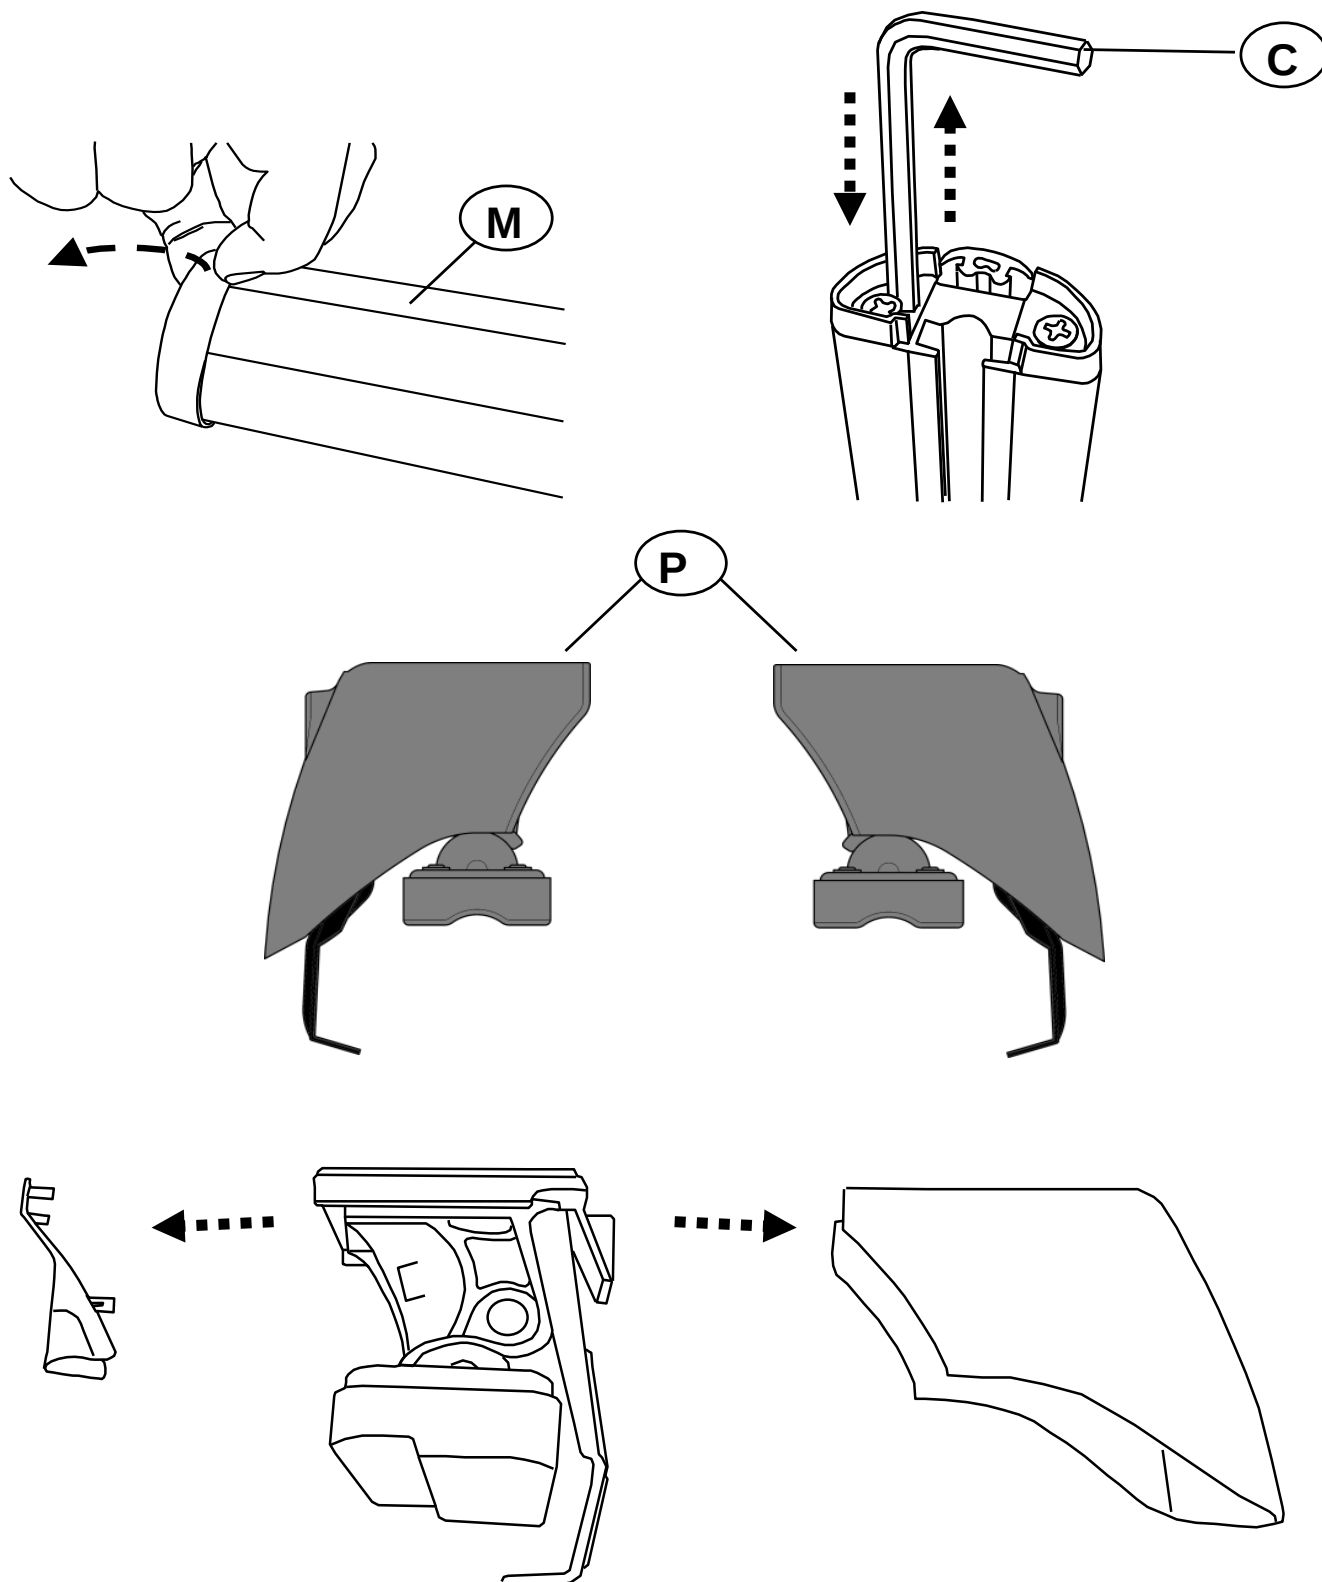


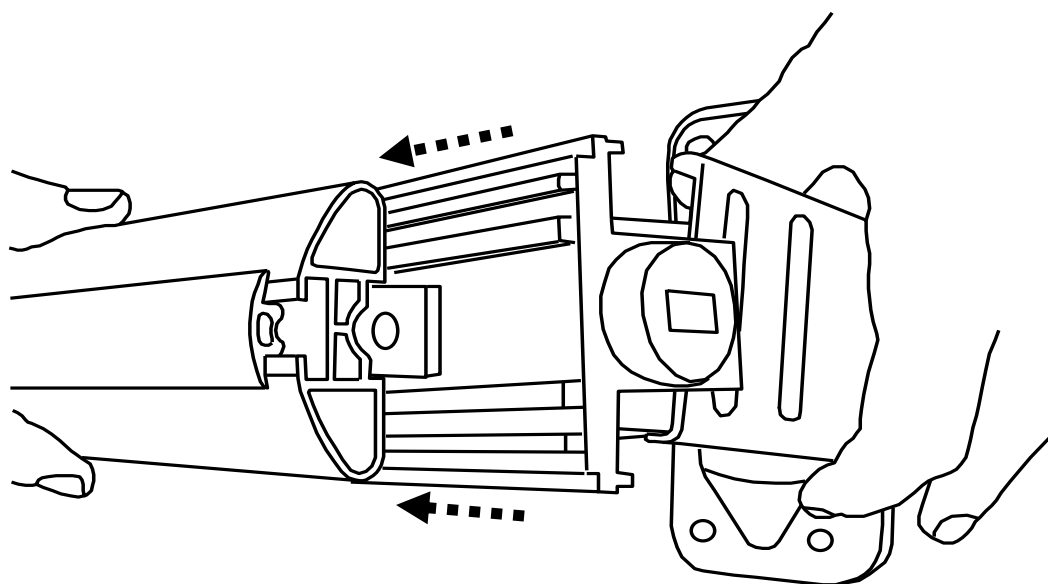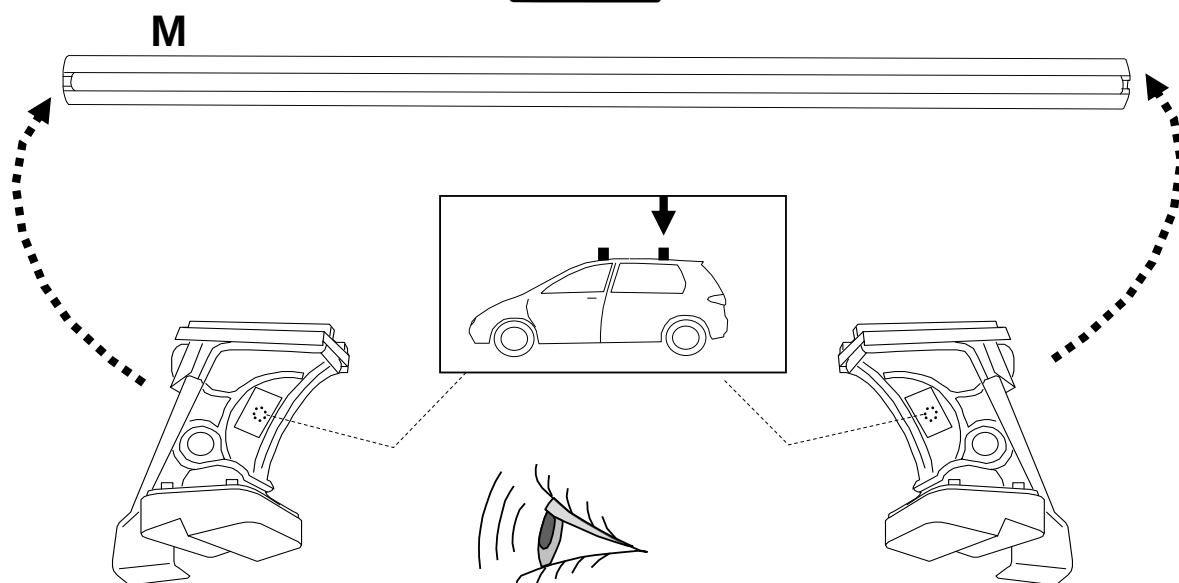


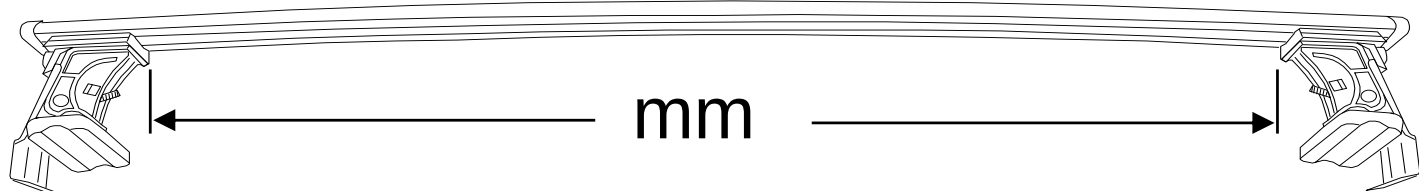




				R	mm
FIAT	500 L	5	2012>	R= 30	1015
FIAT	500 L TREKKING	5	2013 >	R= 30	1015
FIAT	500 L LIVING	5	2013 >	R= 30	1015

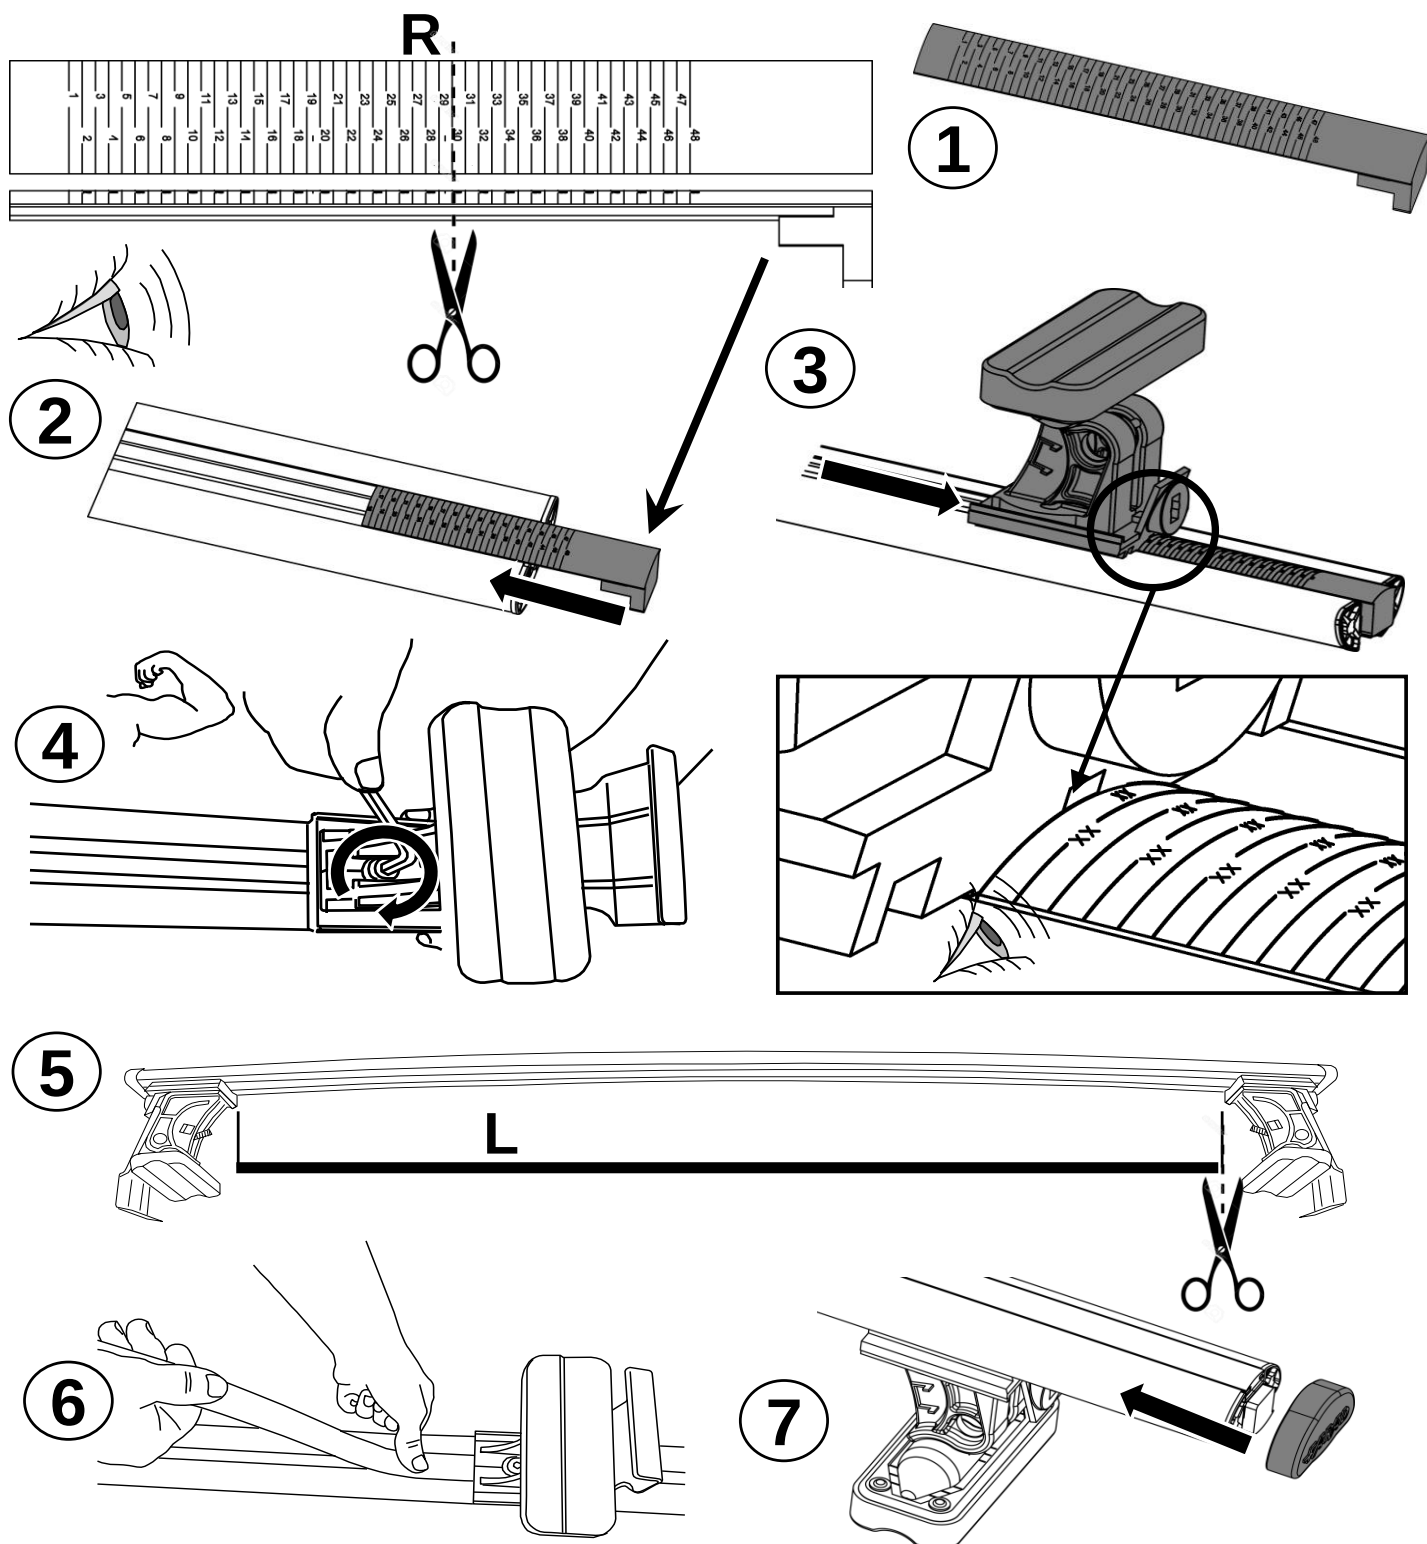


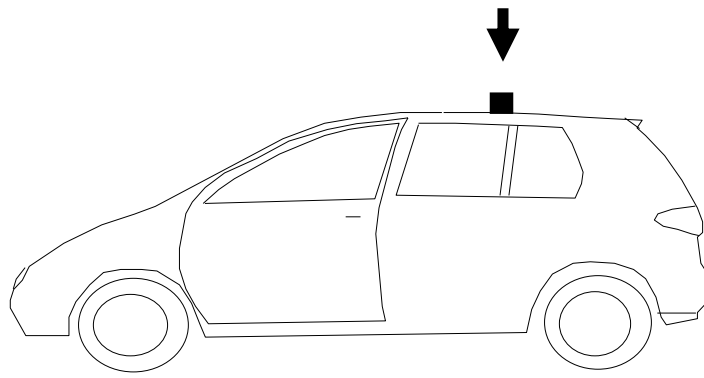


D

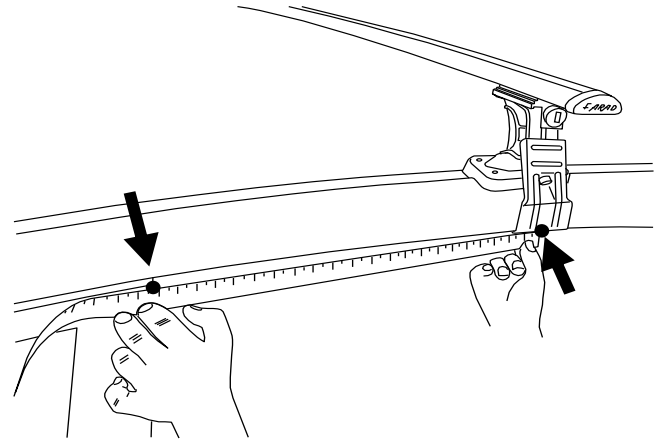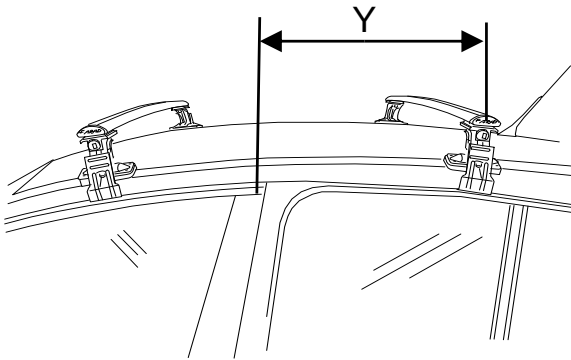


				Y
FIAT	500 L	5	2012 >	Y= 270
FIAT	500 L TREKKING	5	2013 >	Y= 270
FIAT	500 L LIVING	5	2013 >	Y= 270

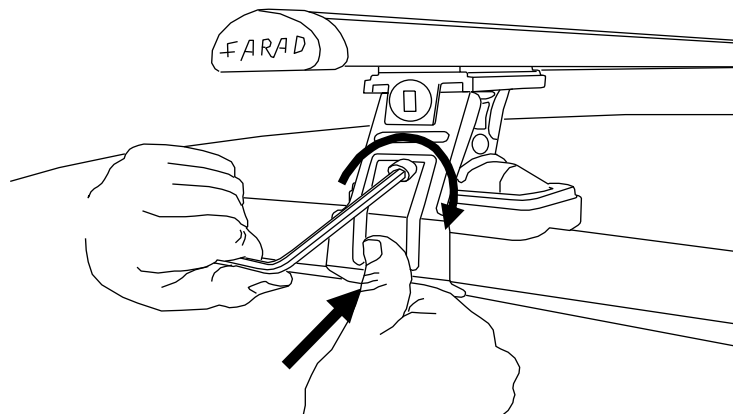


C






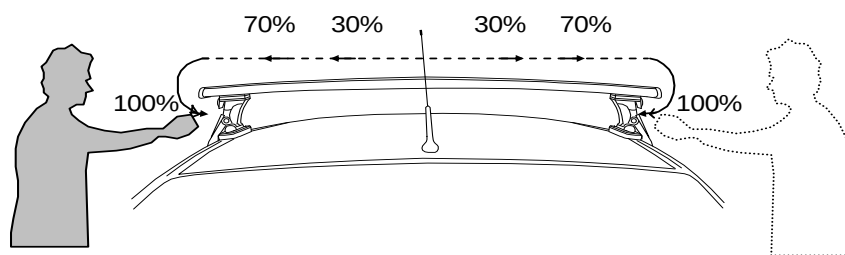



- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

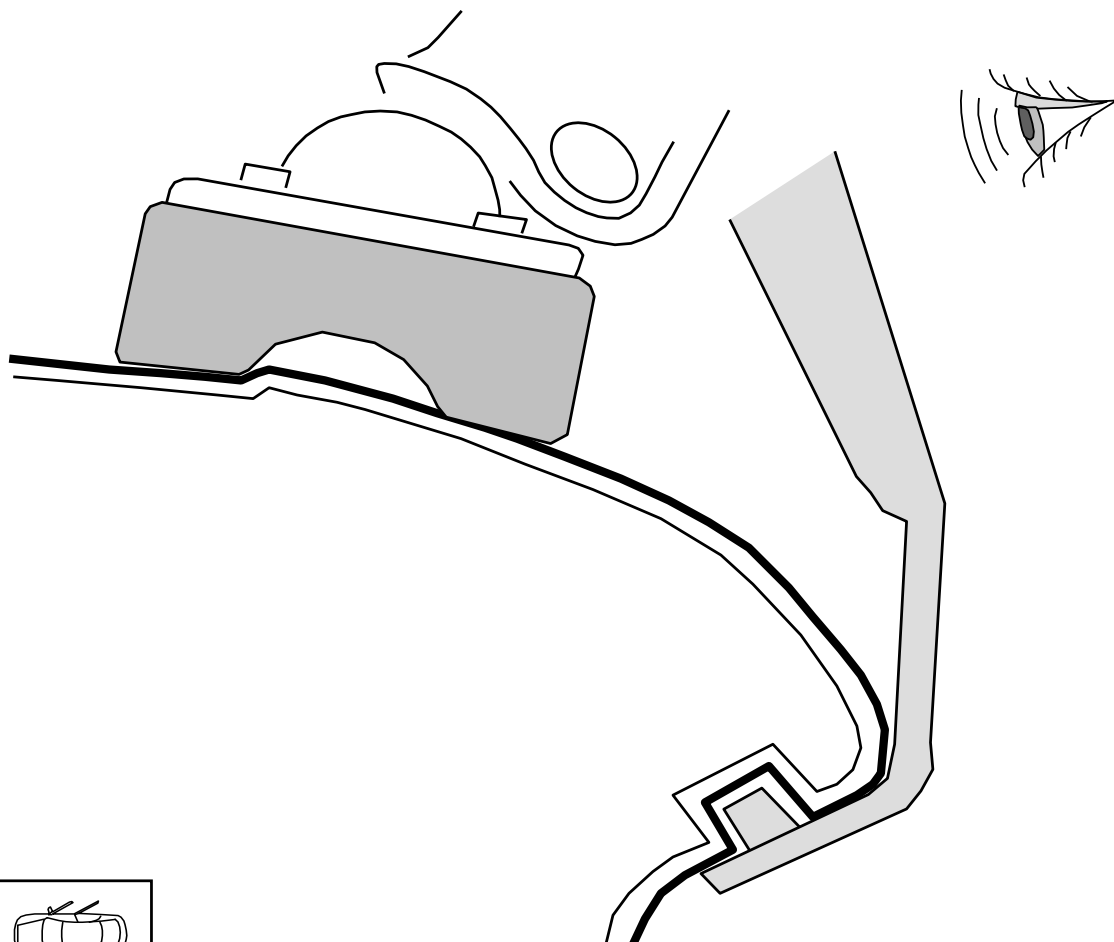

5



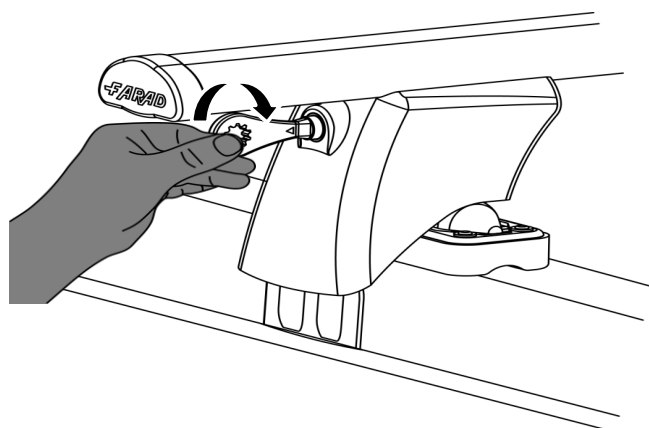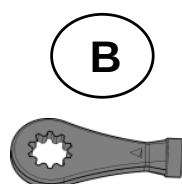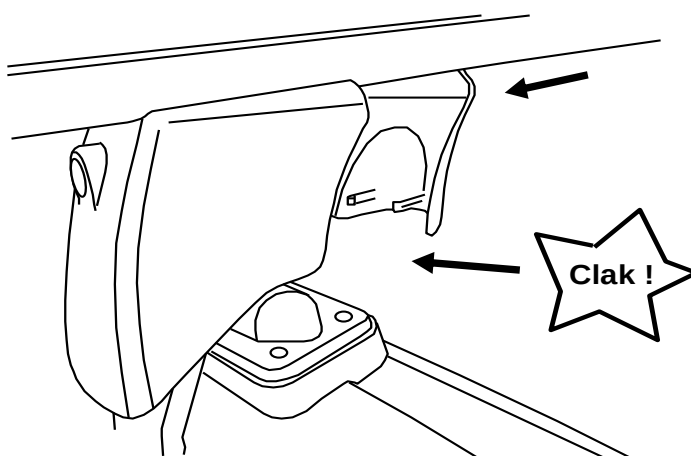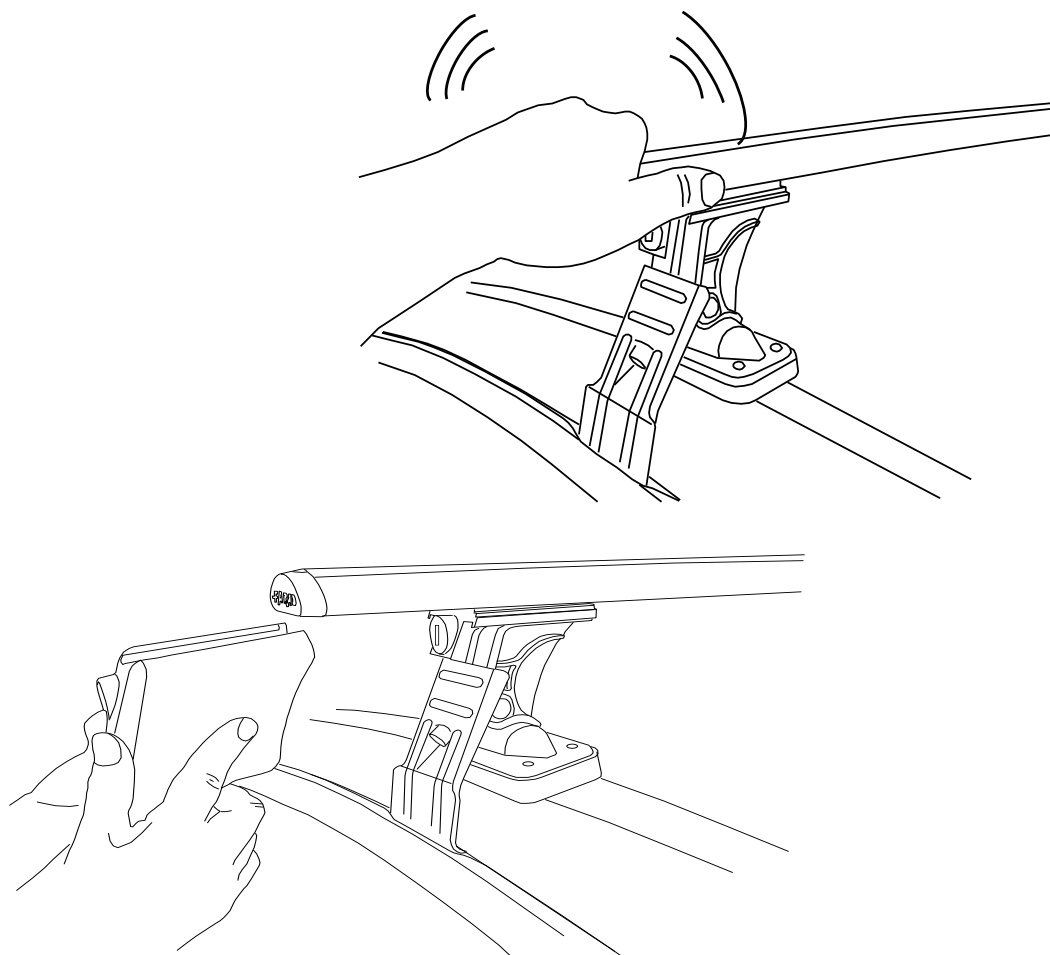

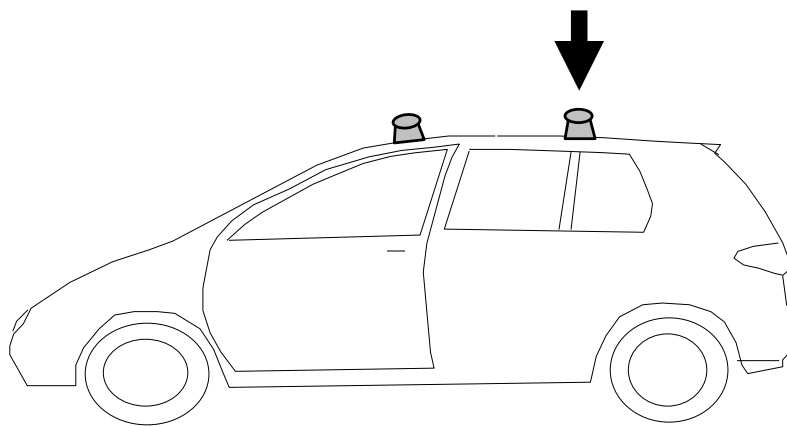


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

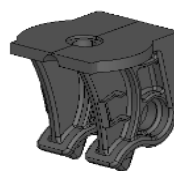

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

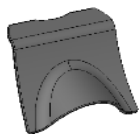


INVOLUCRO POST.
90341 / 9

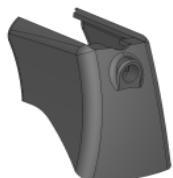

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

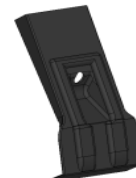

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in Italy

www.faradworld.com

