

FARAD[®]BARS

made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy

www.faradworld.com

+39 0172 58575

BS 176

NISSAN JUKE 2020>

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcje wbudowania

D Einbauanleitung

GB Fitting instructions

E Instrucciones de montaje


NL Inbouwhandleiding

SWE Montageanvisnin

KIT BS


Nr 2

A

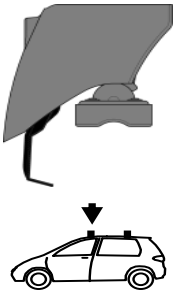

Nr 2

P

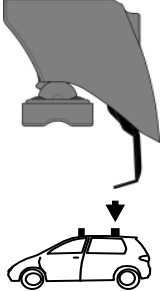

Nr 2

B



Nr 1

C



Nr 1

D




+

KIT ALU


Nr 2

L














Nr 2


M





=


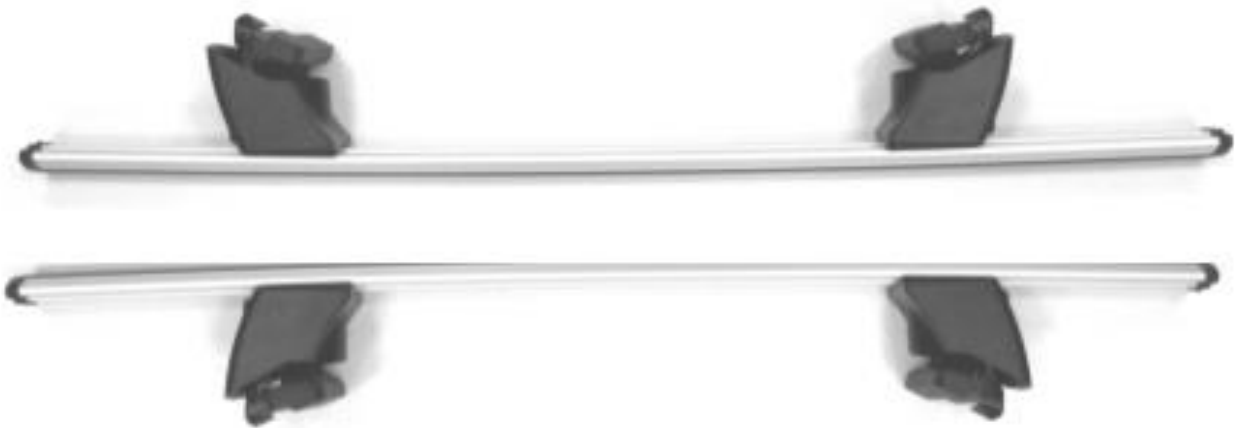


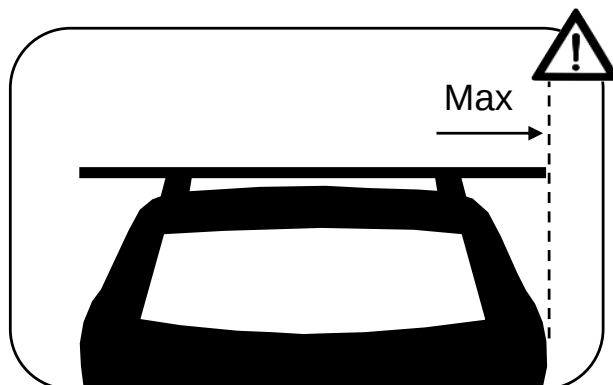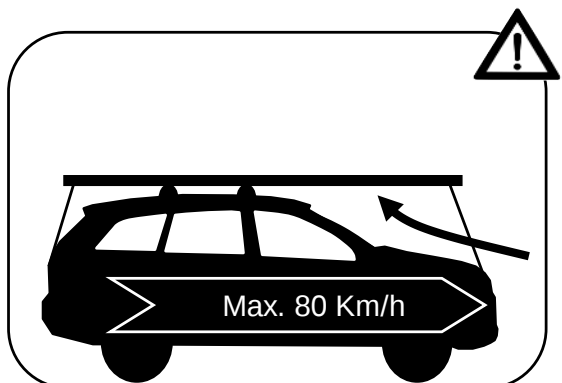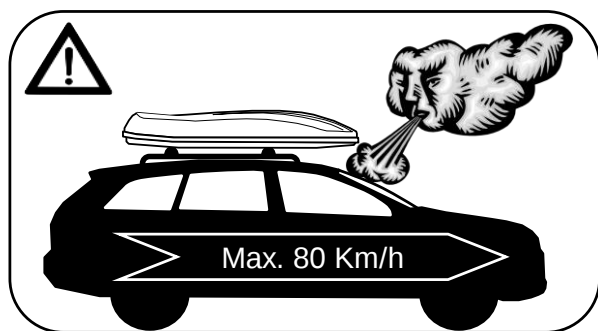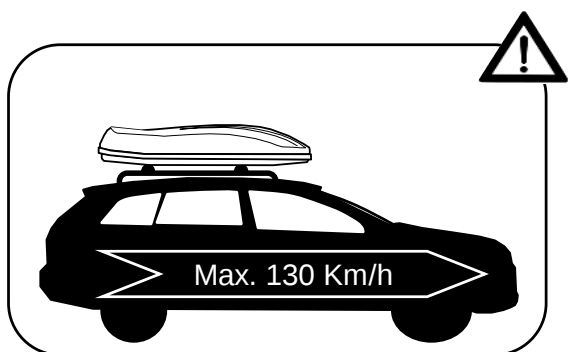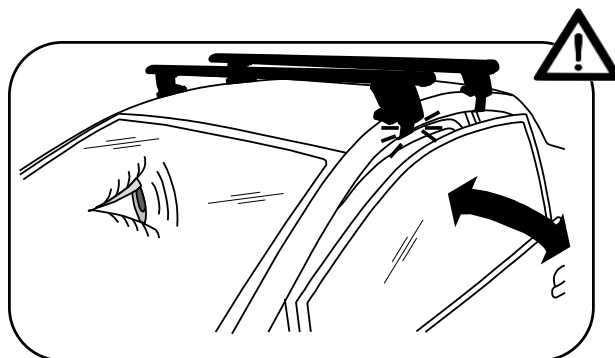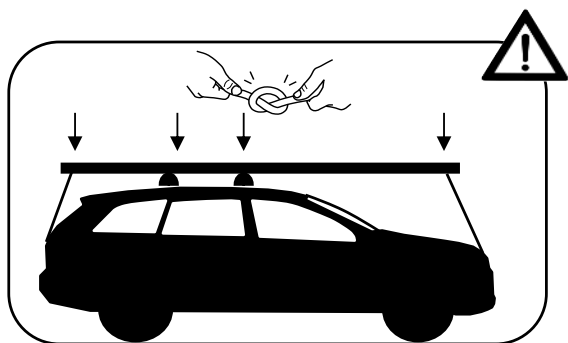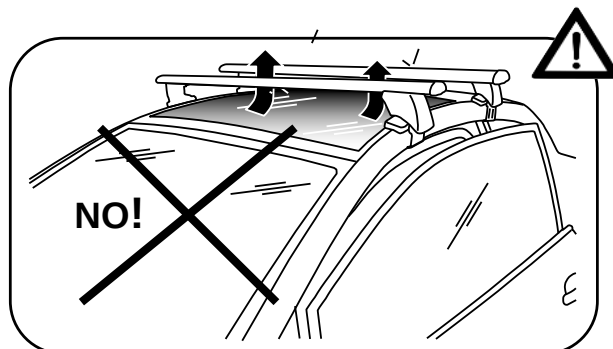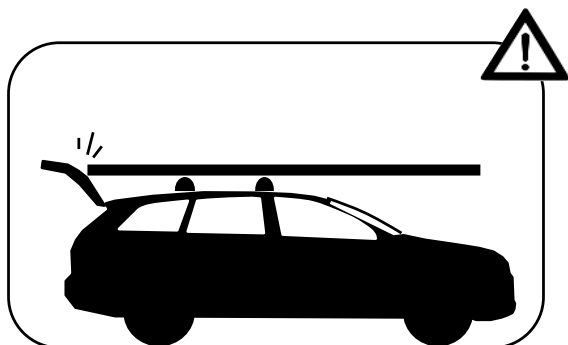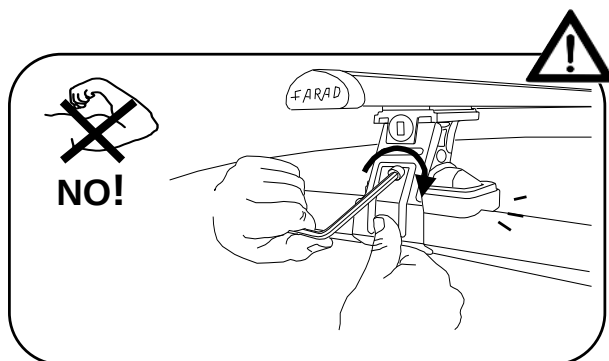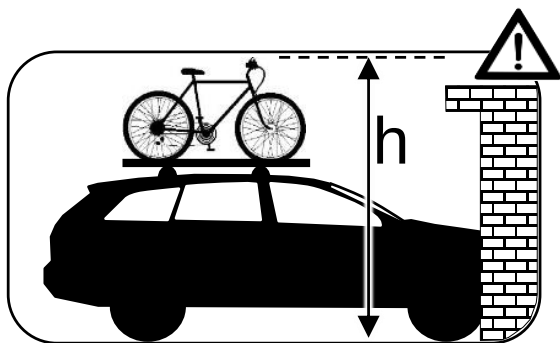

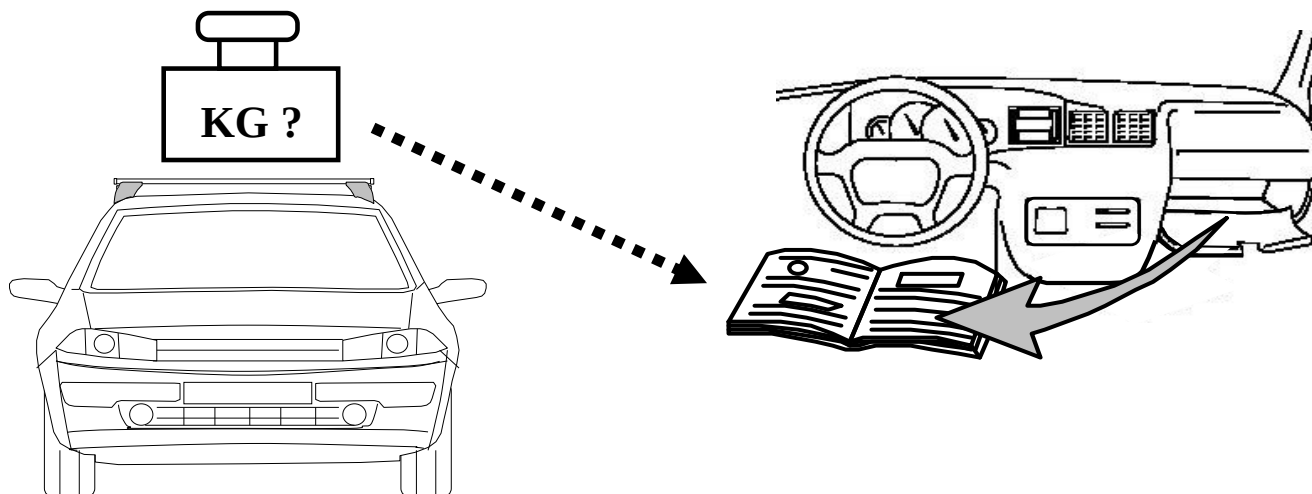


- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |

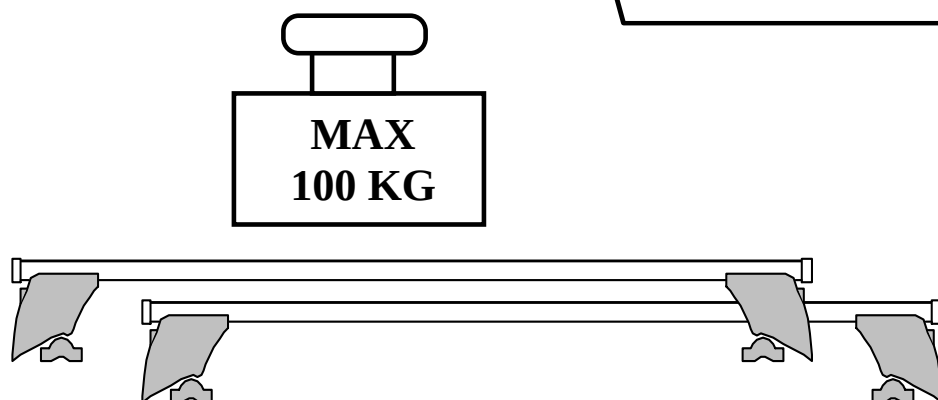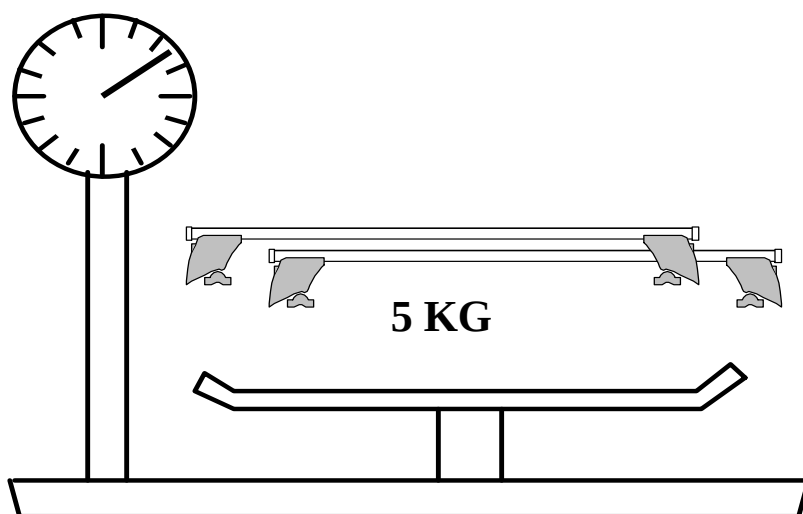

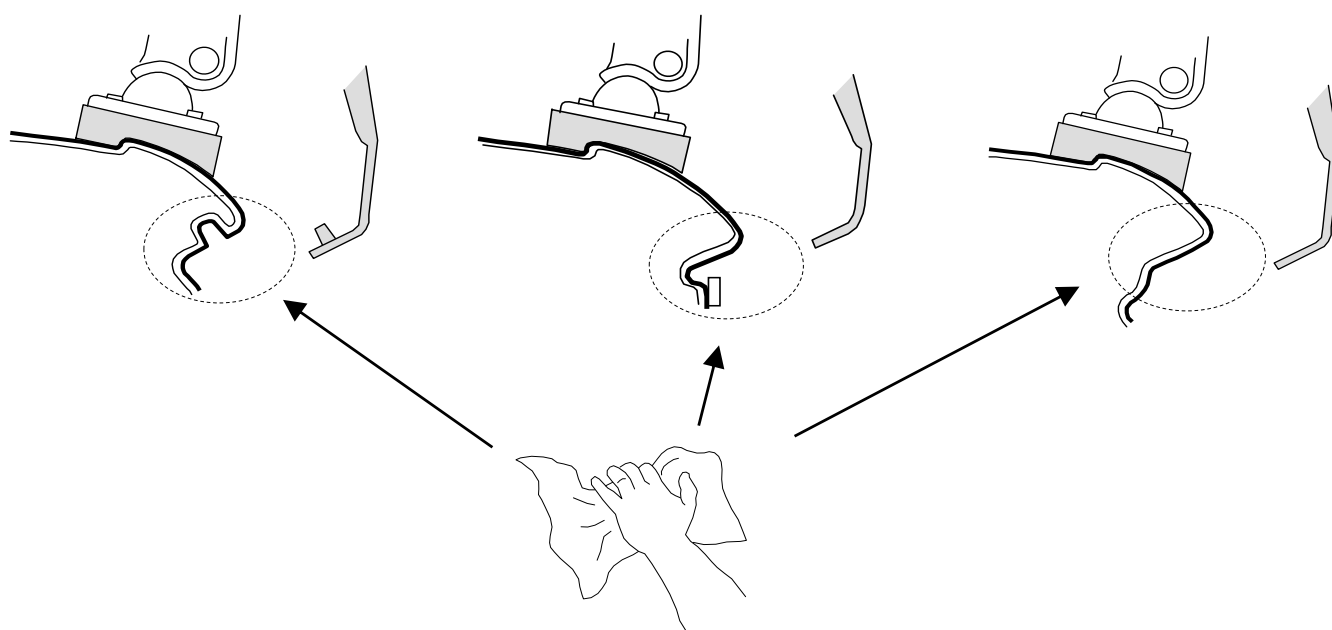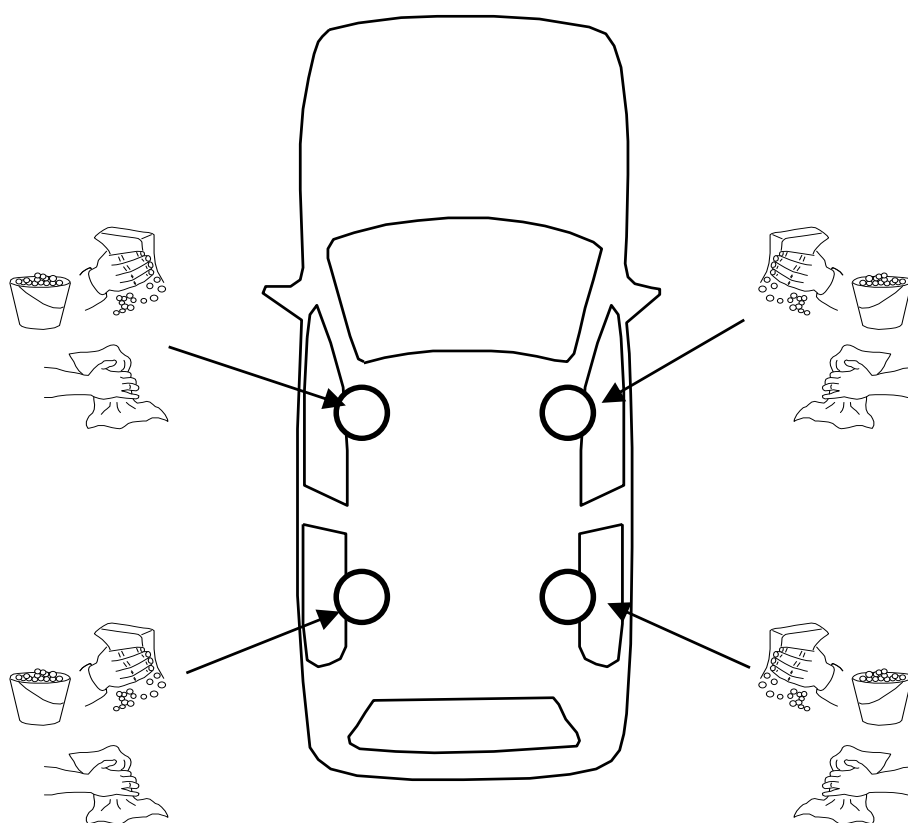



I Montaggio Barra Anteriore
PL Montaż Bagażnika Bazowego Tylnego
D Montage Vorderes Dachträgers
SWE Montering Av Främre Lasthållaren


F Fixation Barre Avant
GB Fitting Front Roof Bar
NL Montage Voorste Dakdrager
E Fijación Barra Frontal


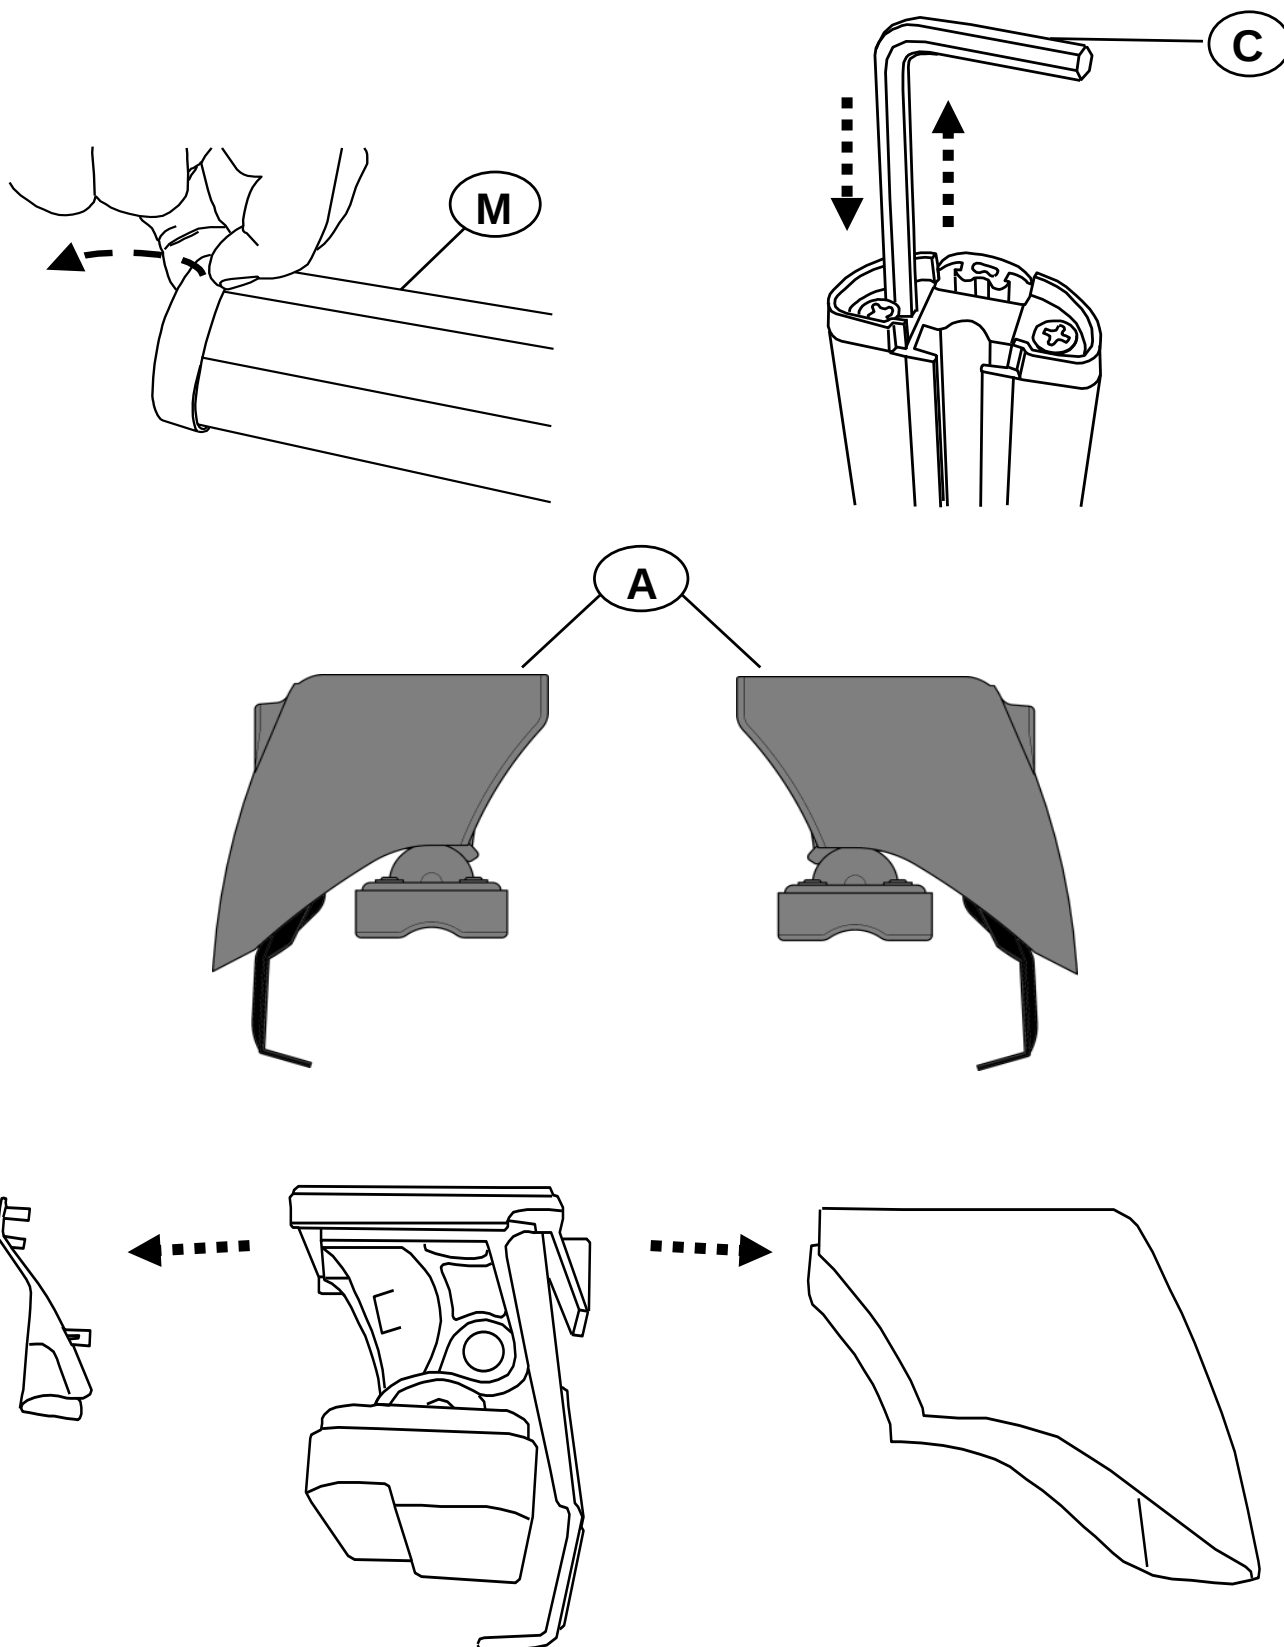







M


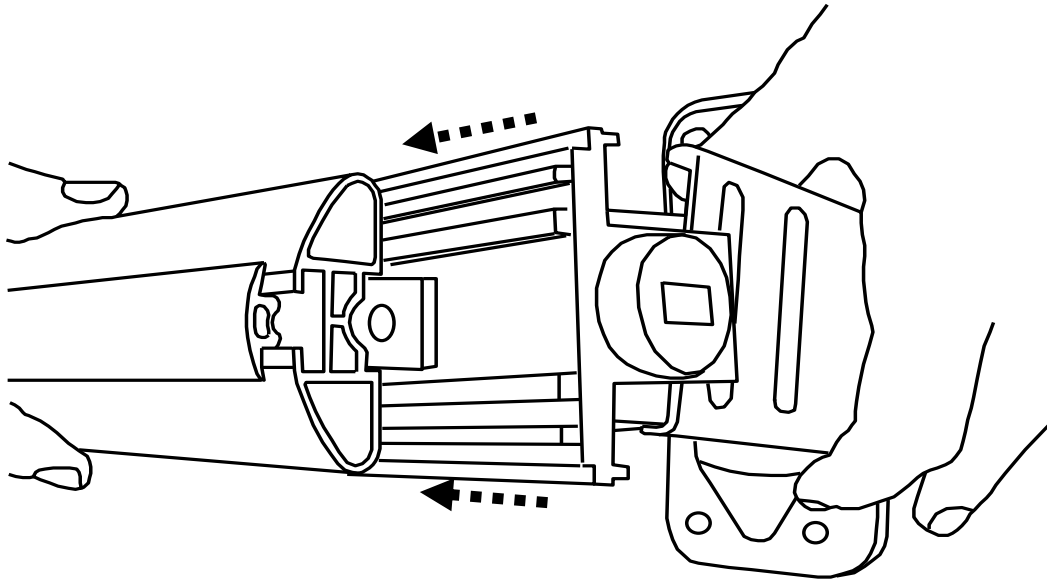
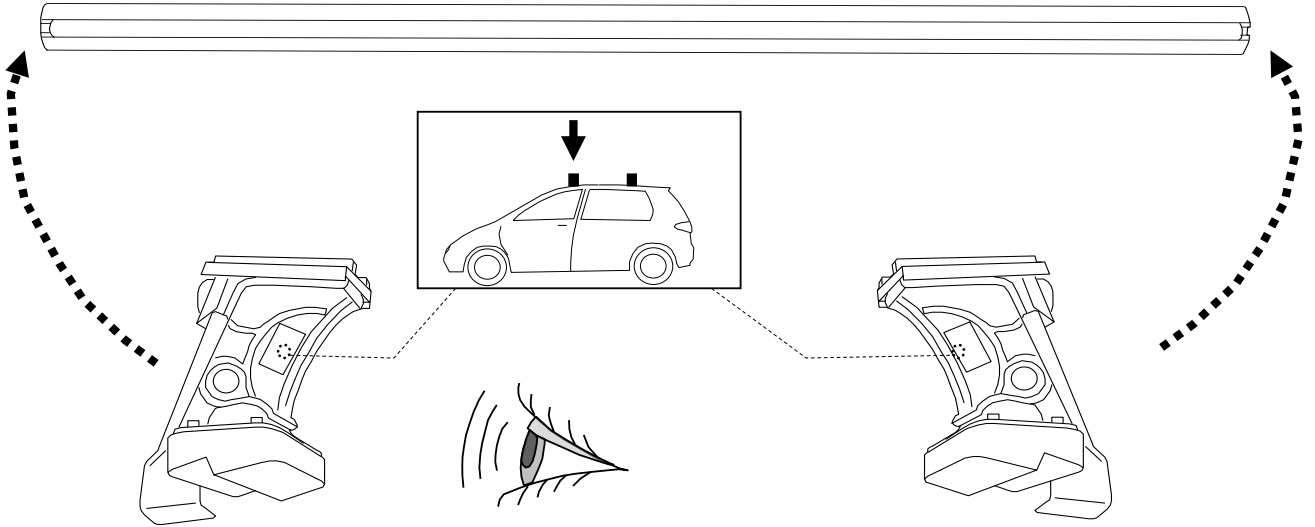


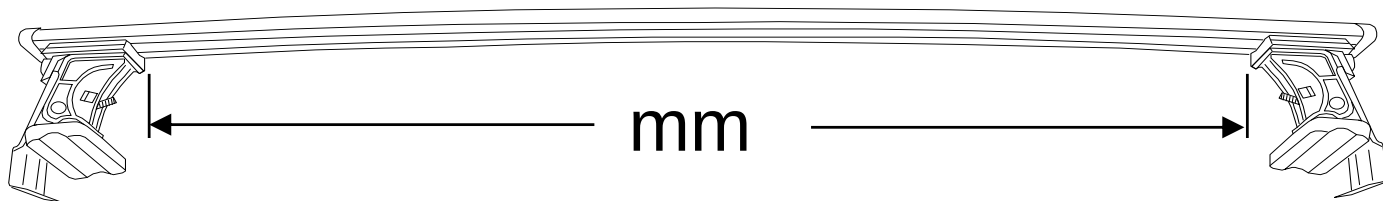


			R	mm
NISSAN	JUKE	5	2020>	R= 28
				1005

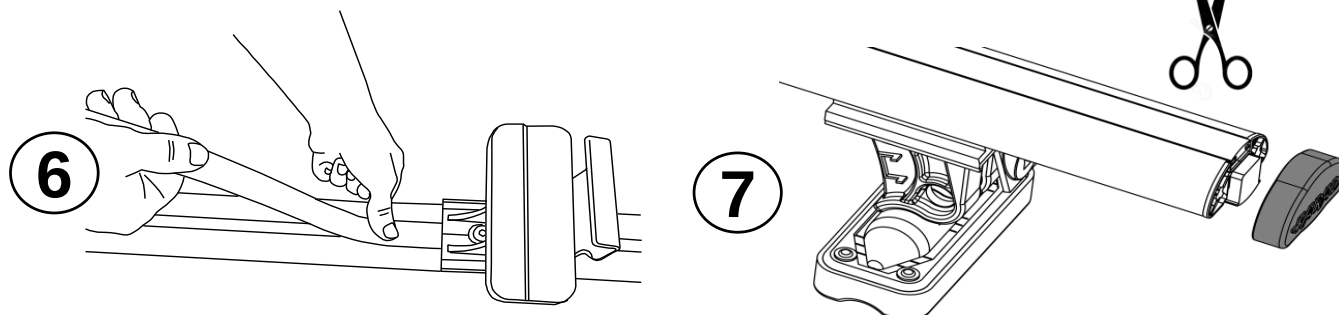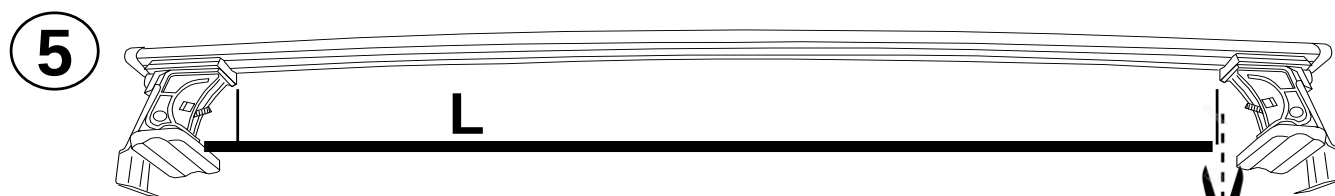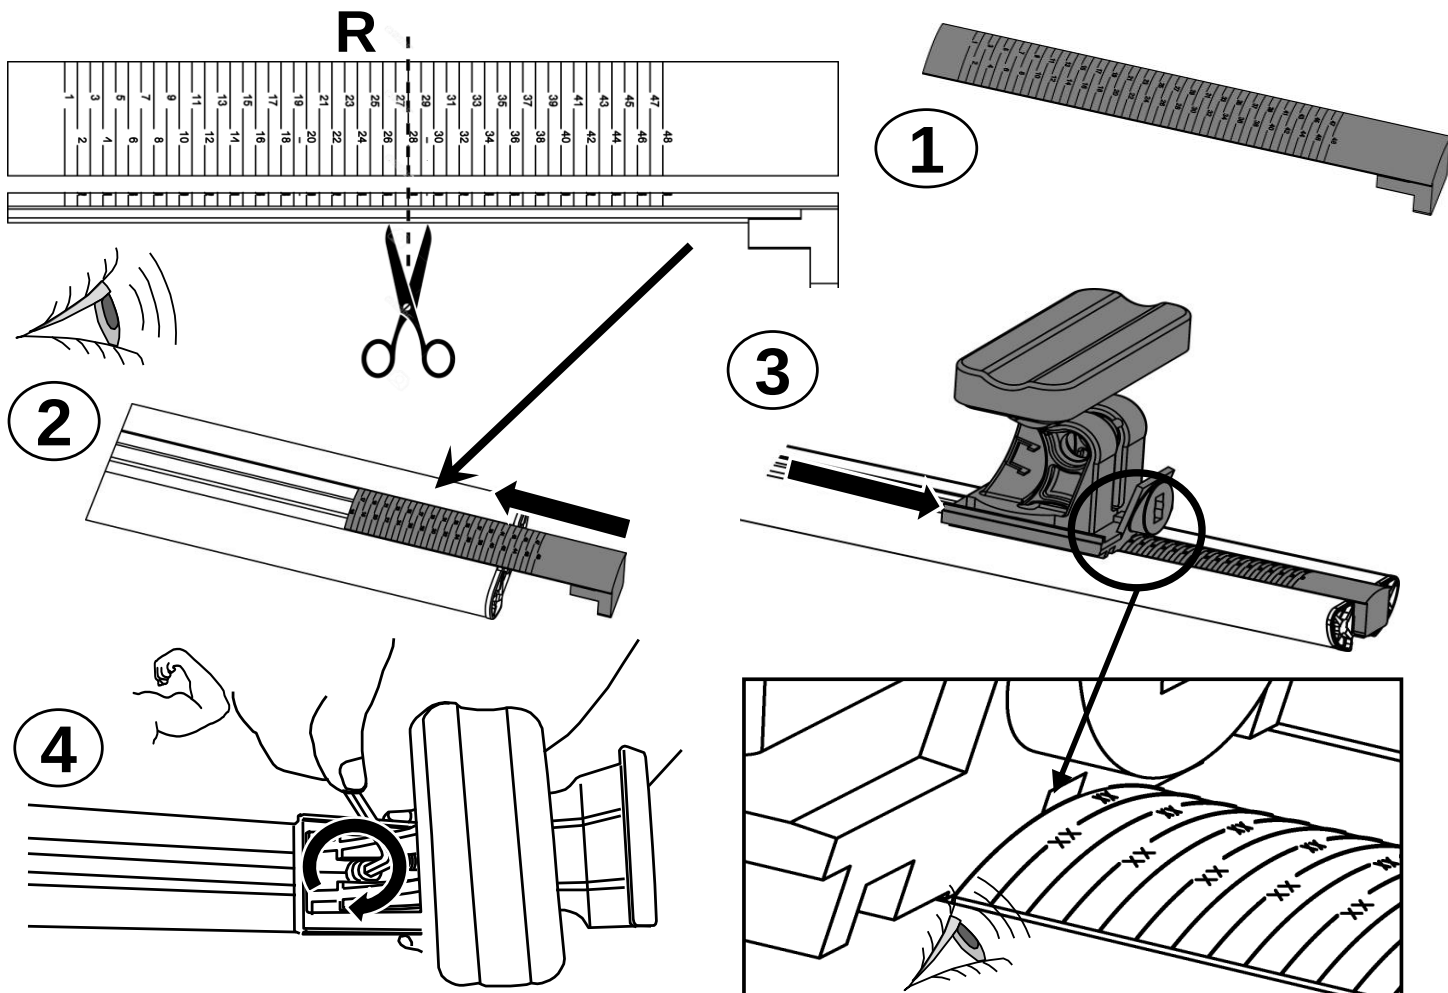


REV 000	18/05/2020	8 / 20
---------	------------	--------

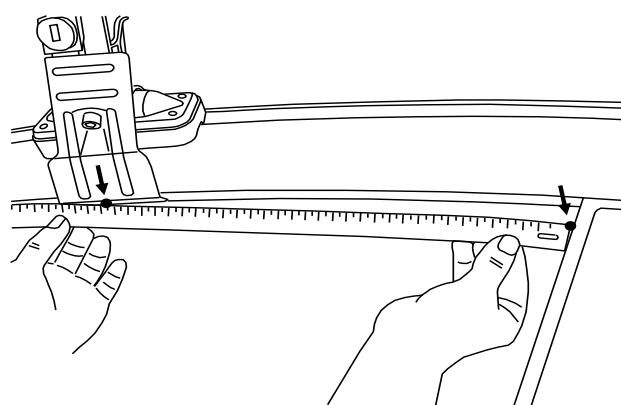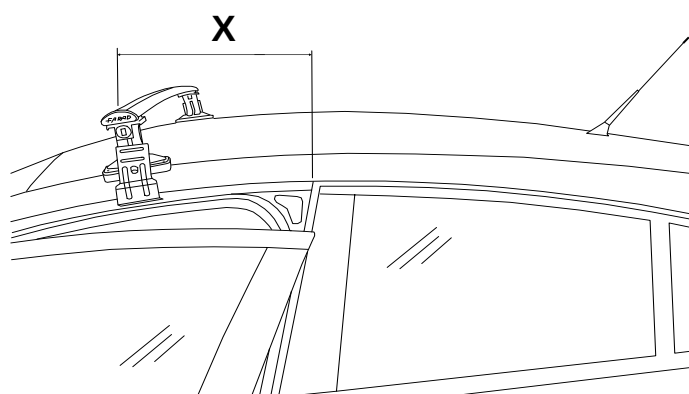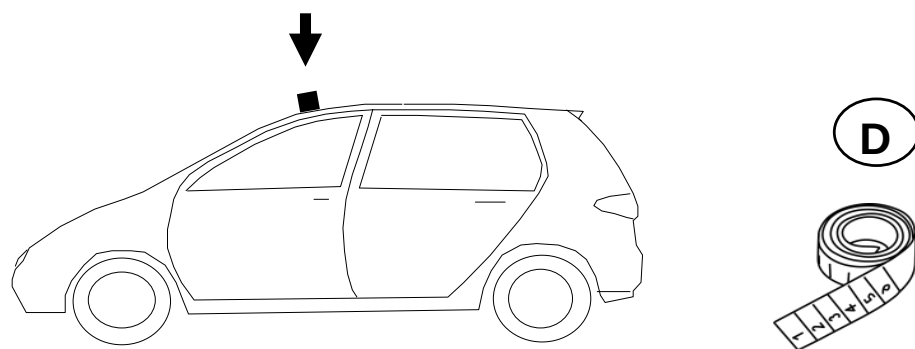



				X
NISSAN	JUKE	5	2020>	X= 320



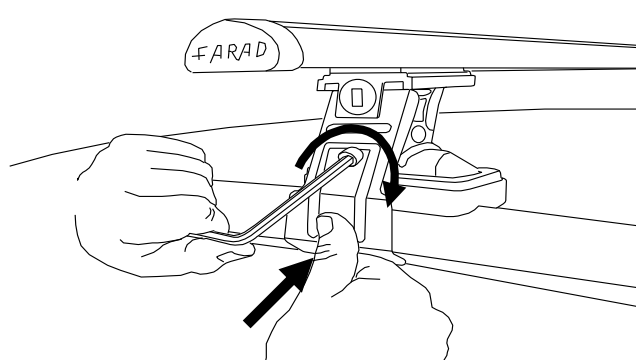


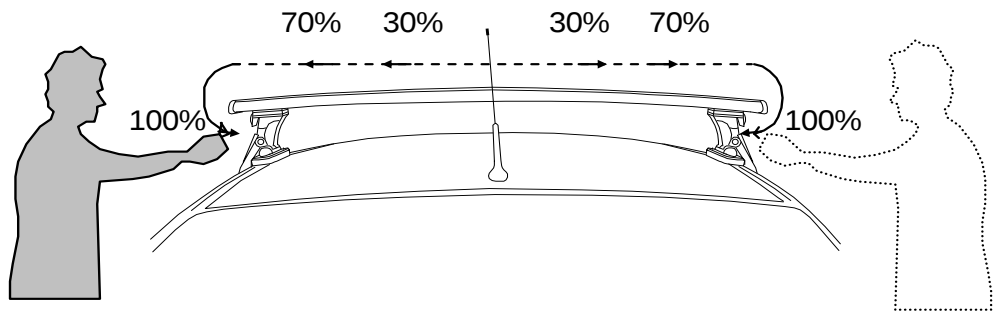


I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

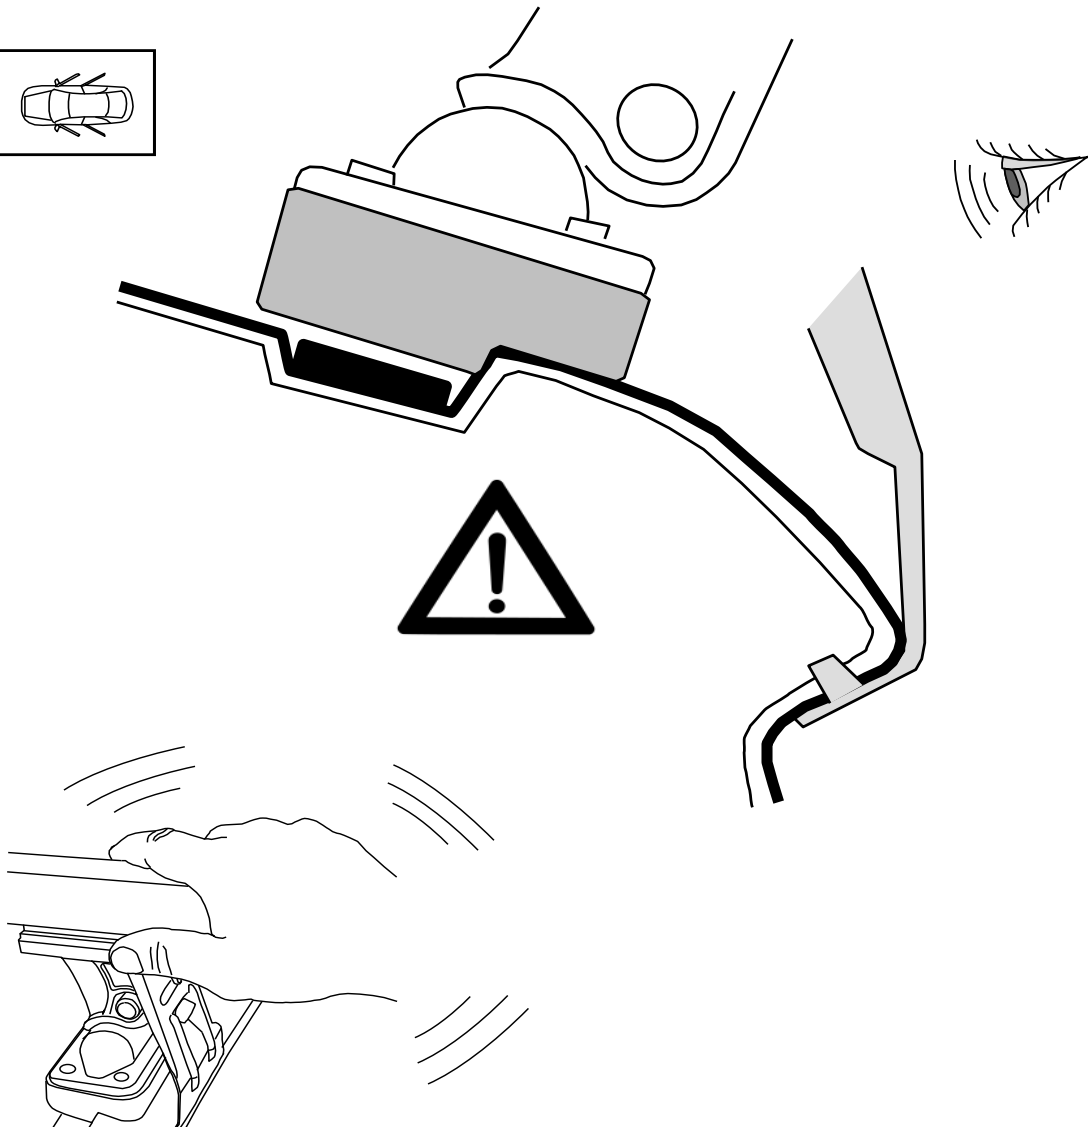

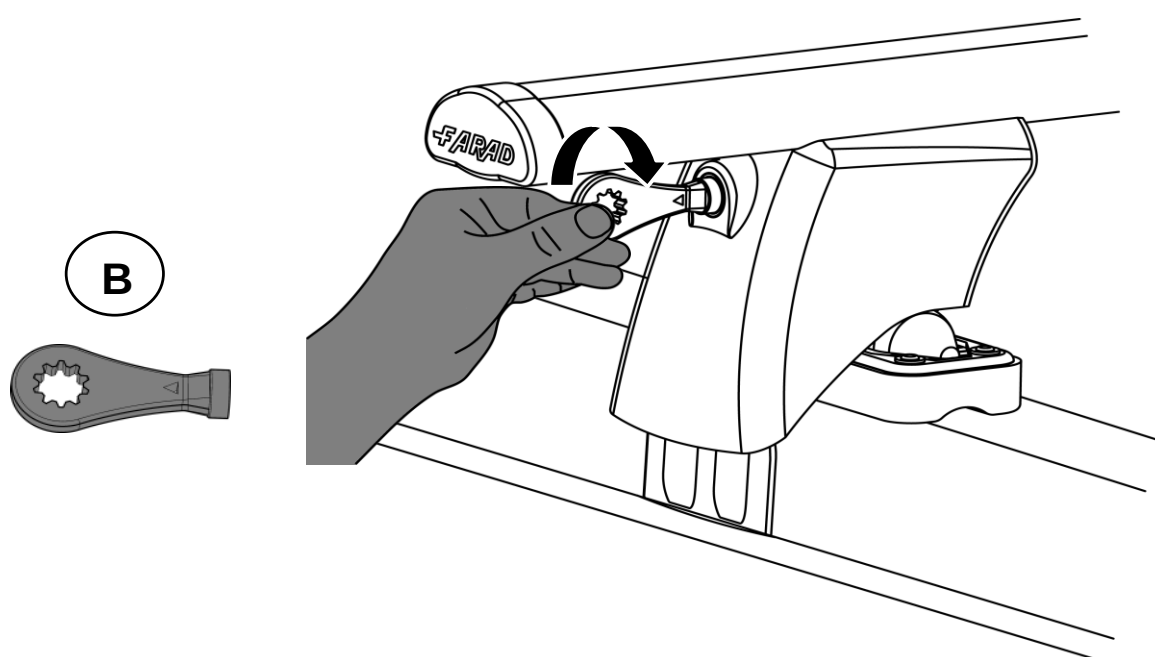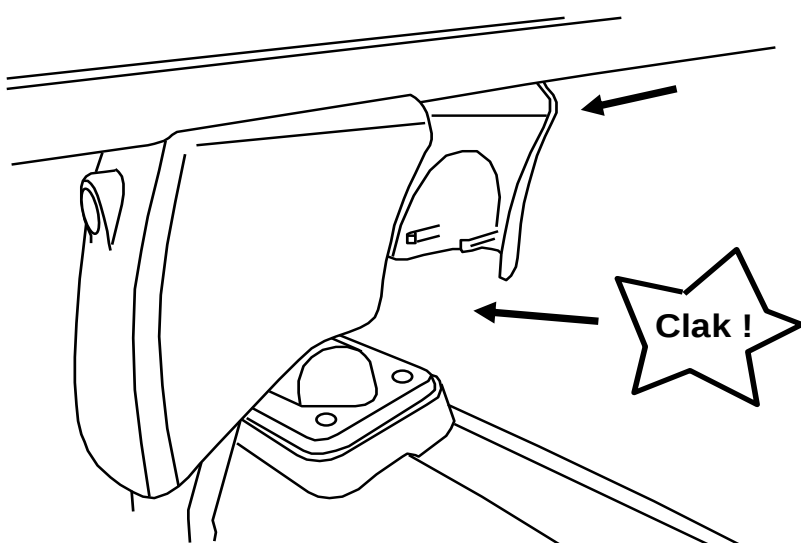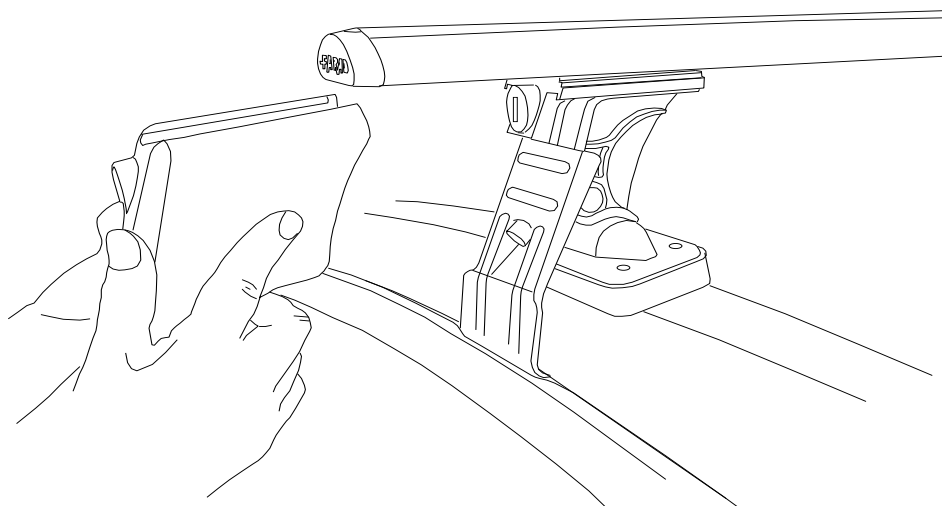

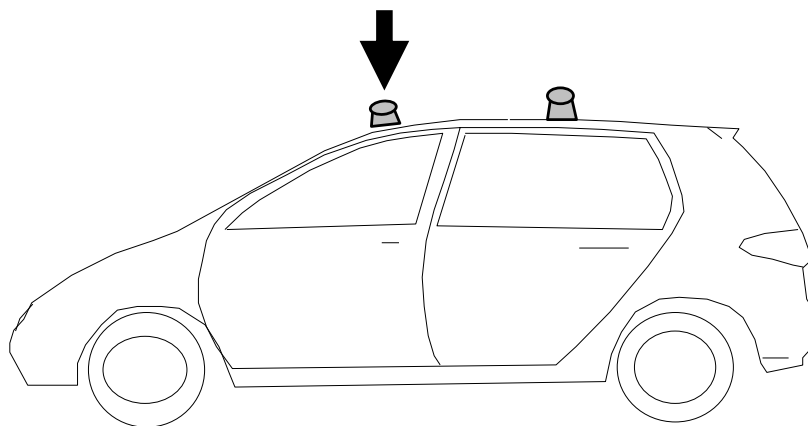

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar


E Fijación Barra Trasera


D Montage Heckdachträgers



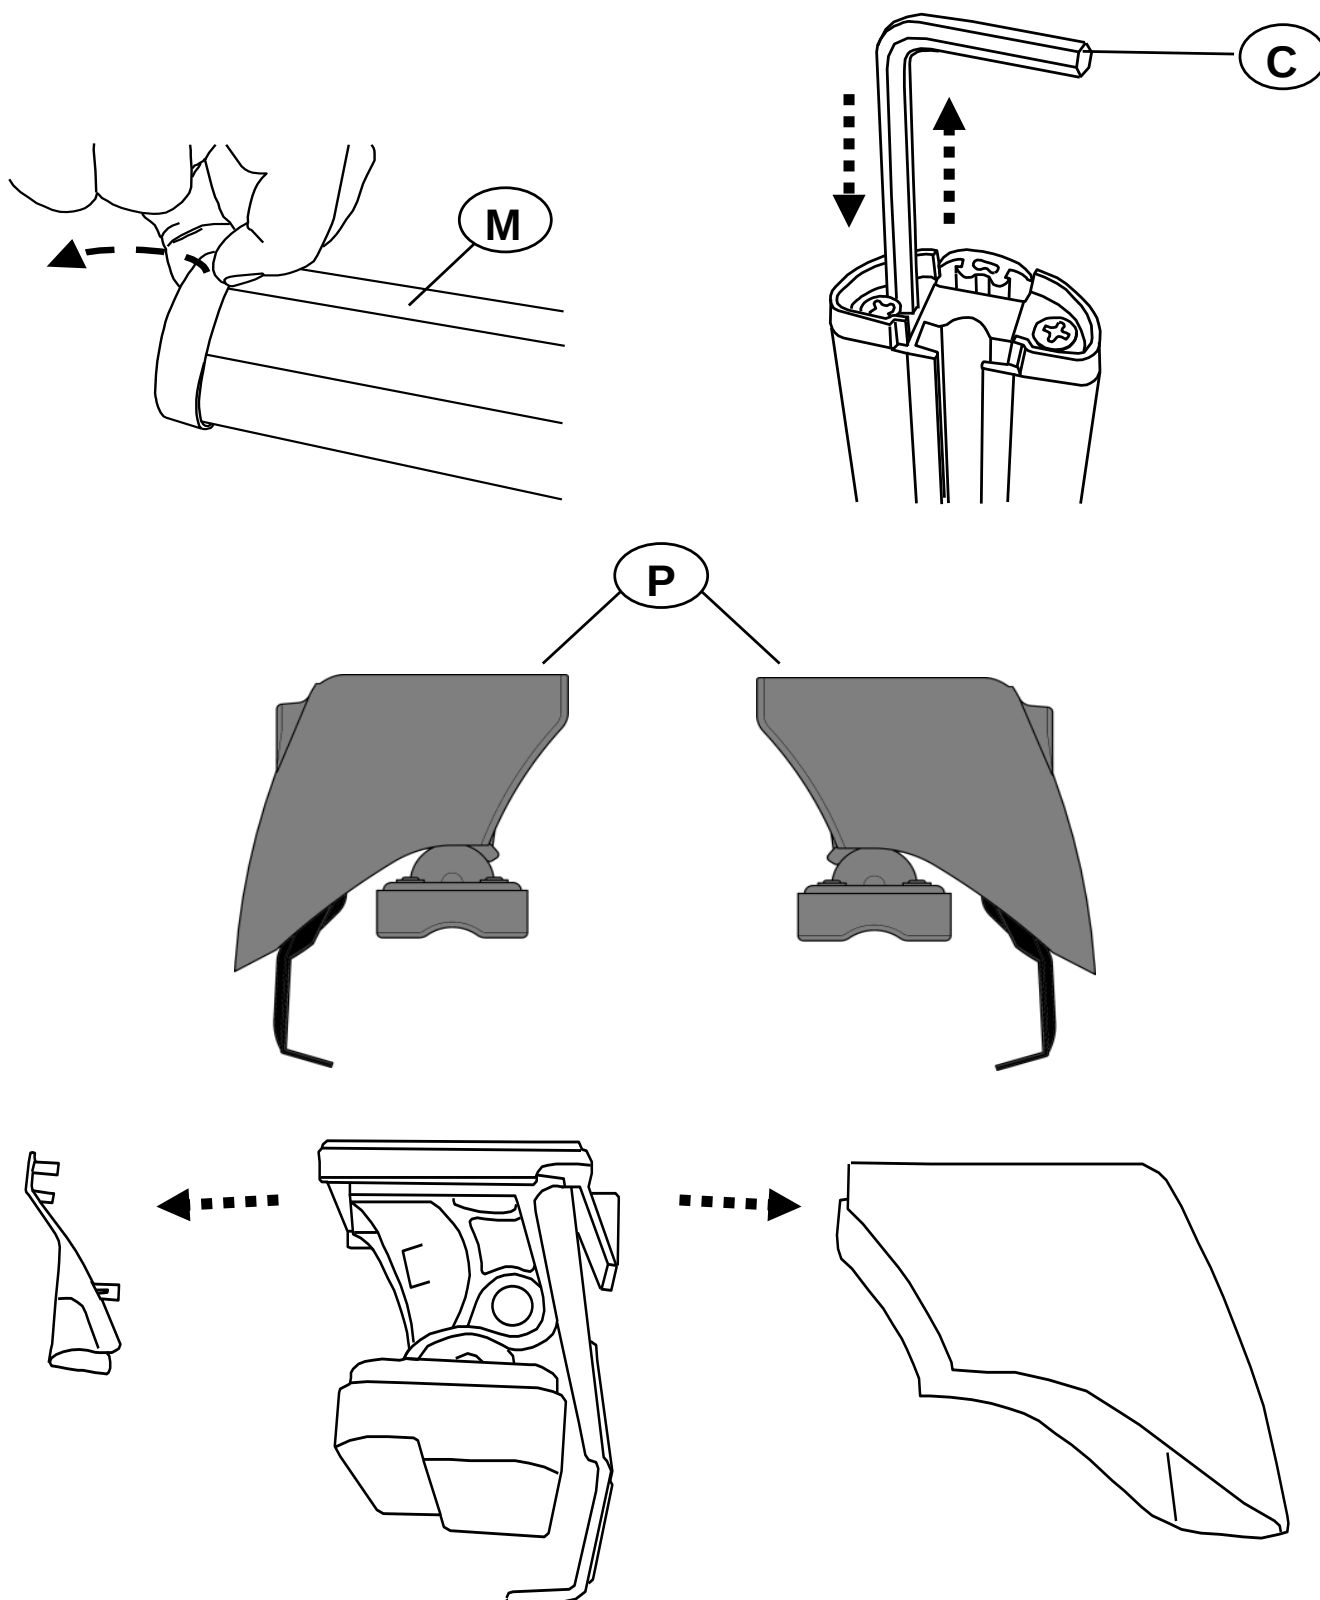


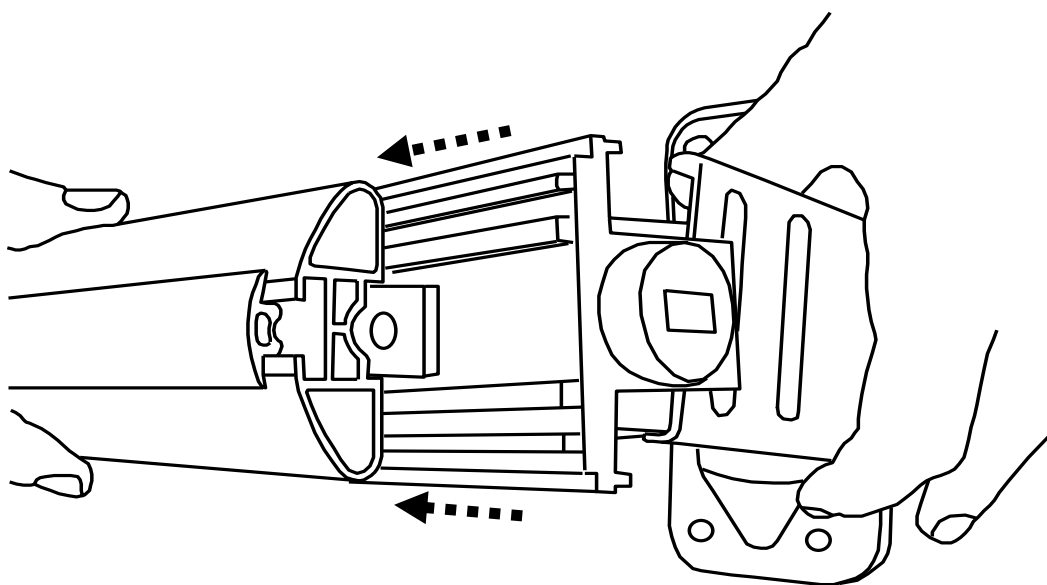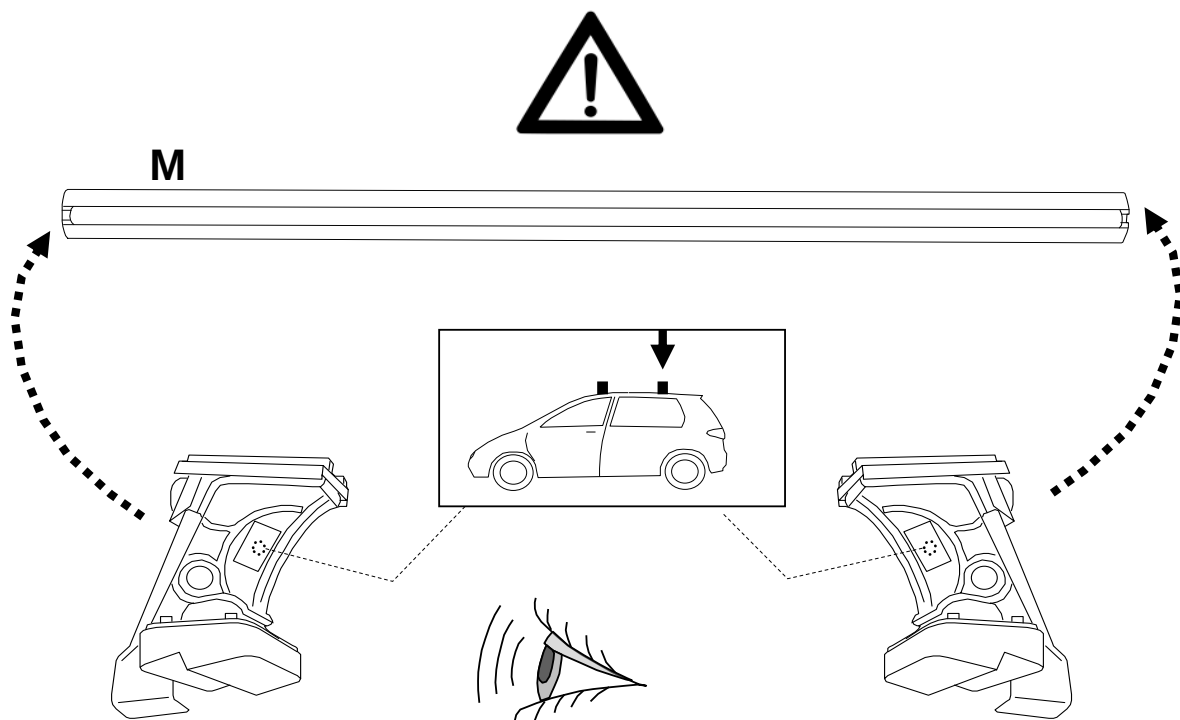


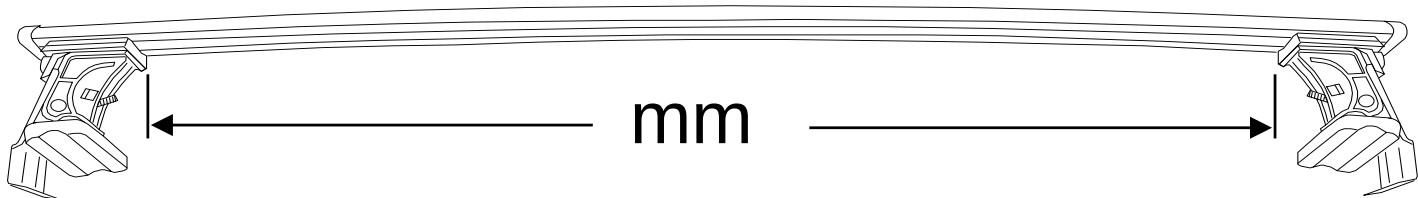


				R	mm
NISSAN	JUKE	5	2020>	R= 19	960

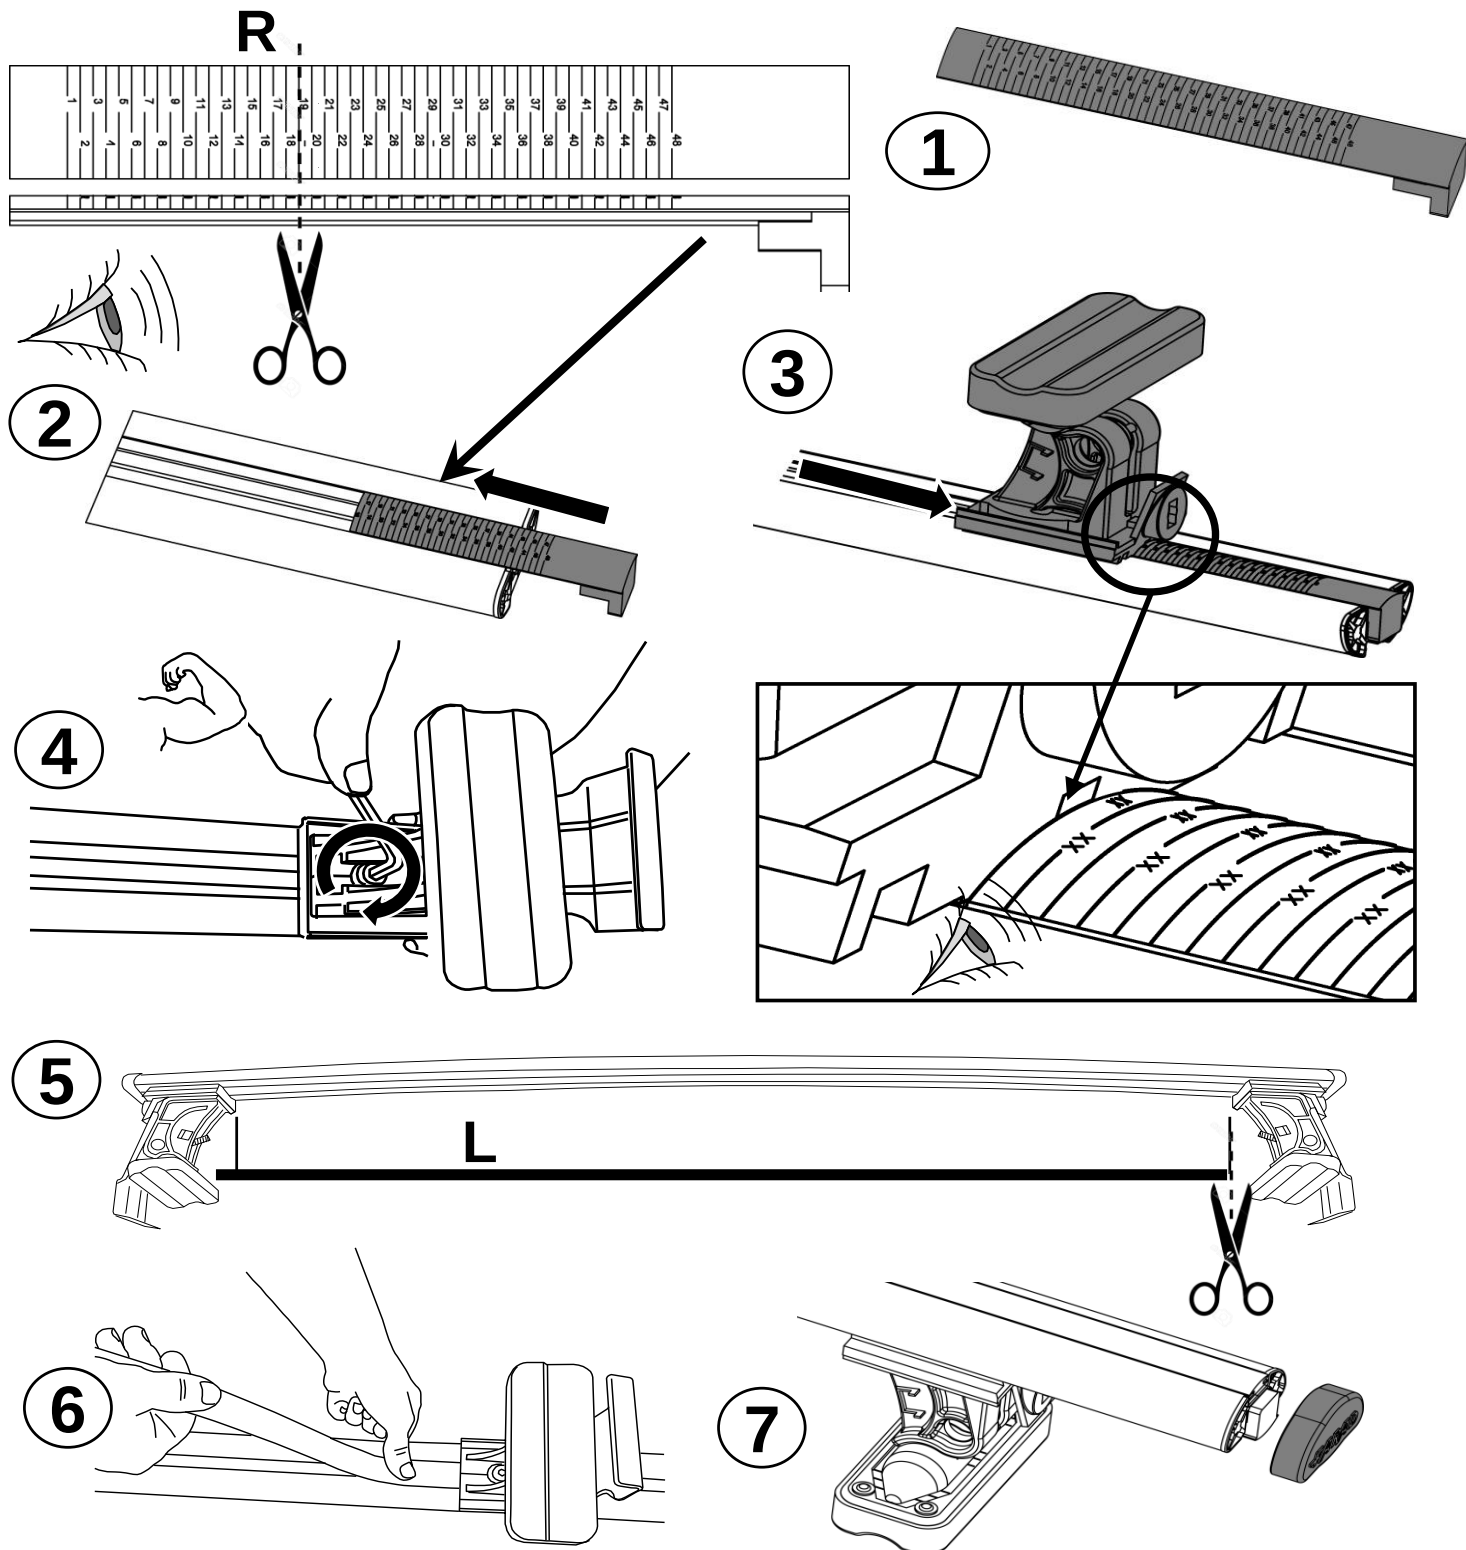


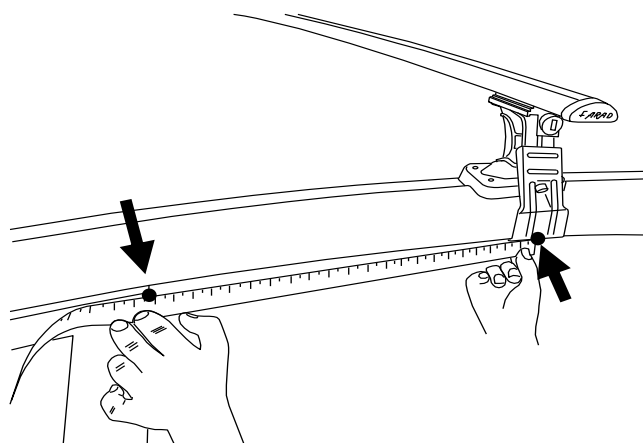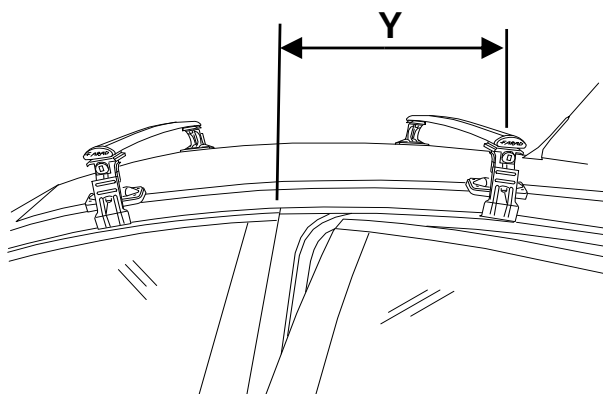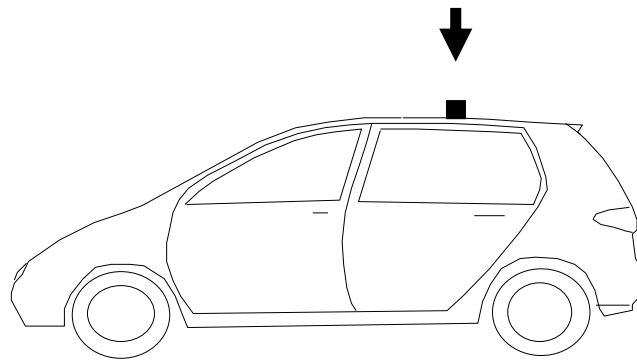



				Y
NISSAN	JUKE	5	2020>	Y= 380


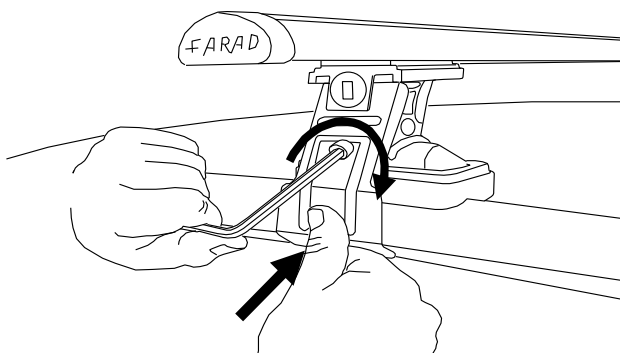




REV 000	18/05/2020	16 / 20
----------------	-------------------	----------------

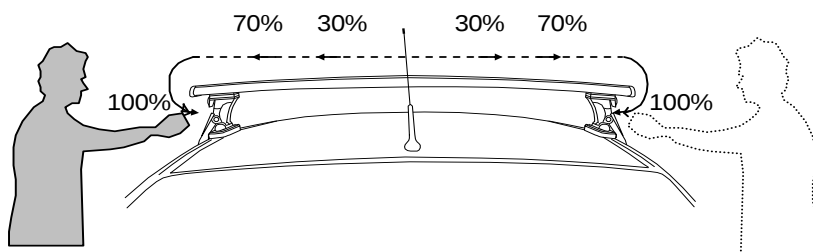

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

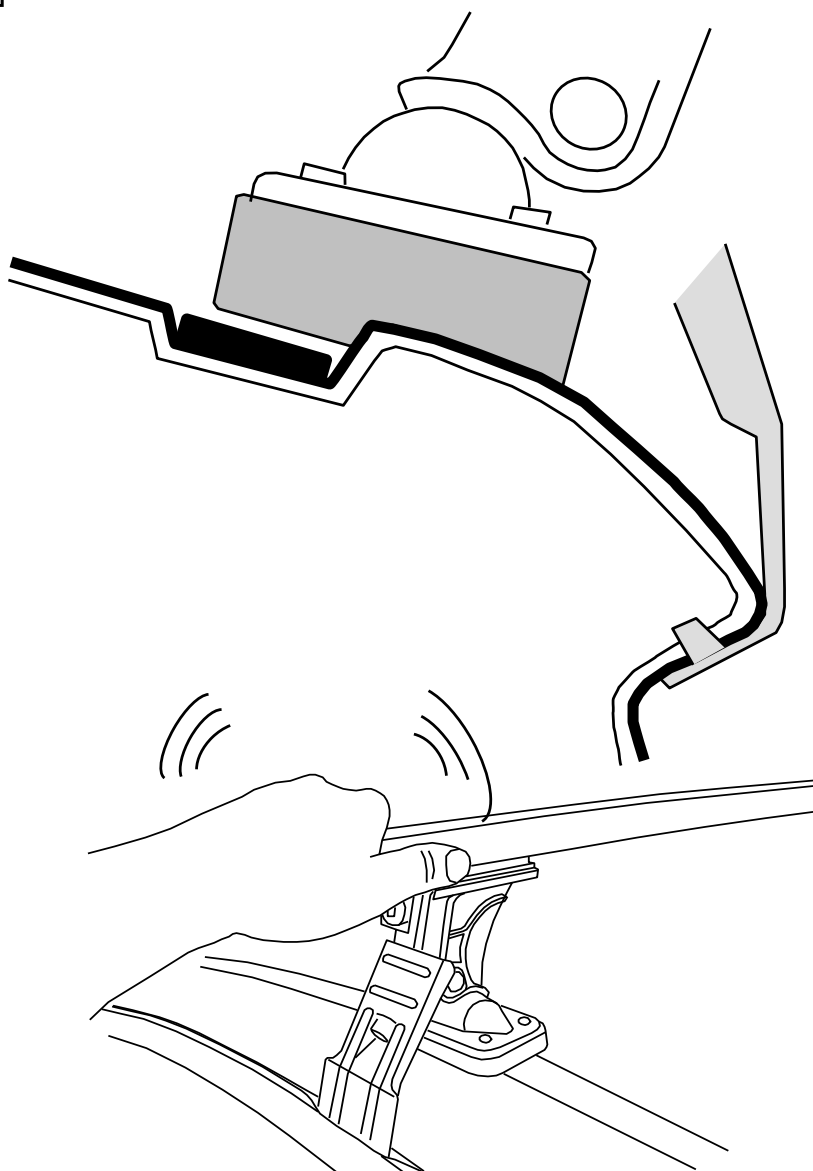

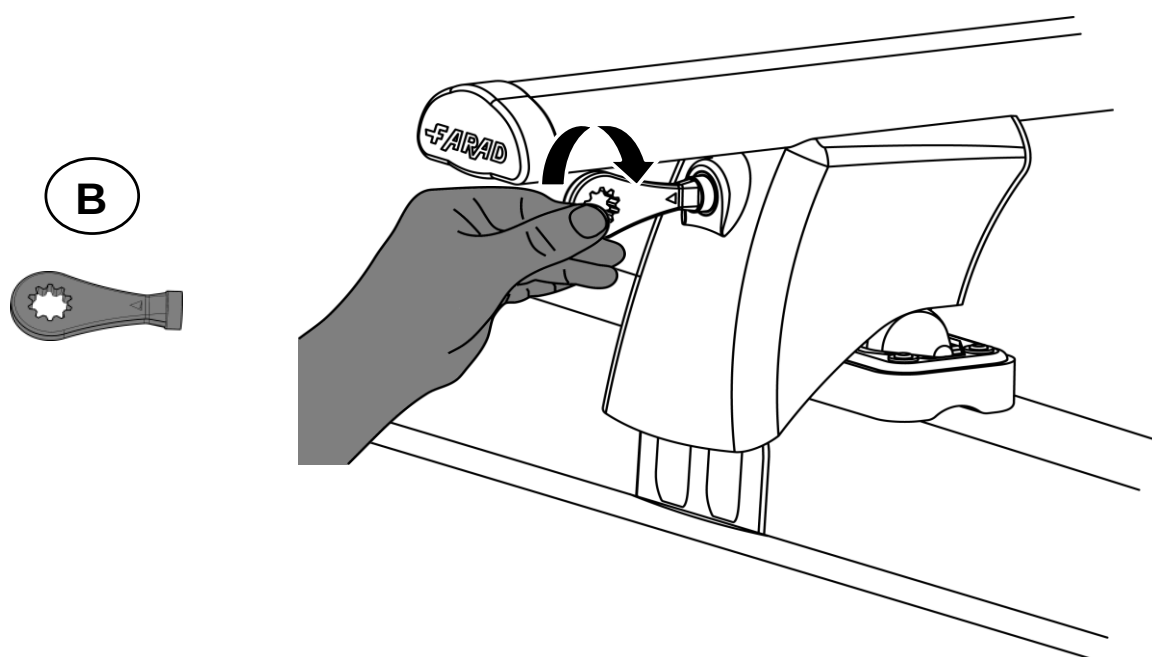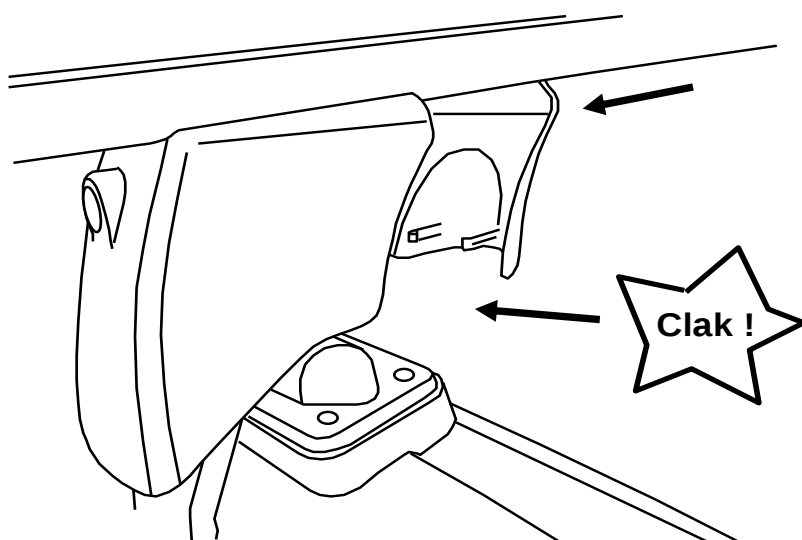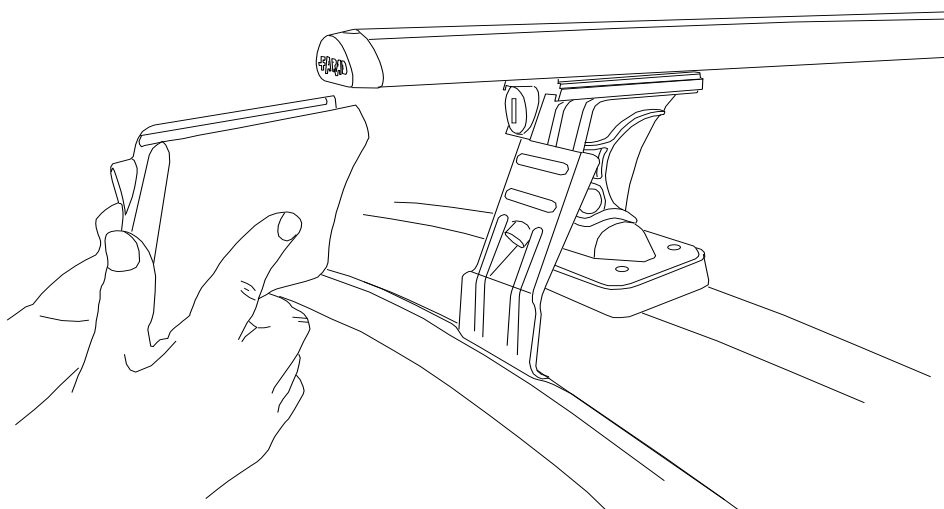

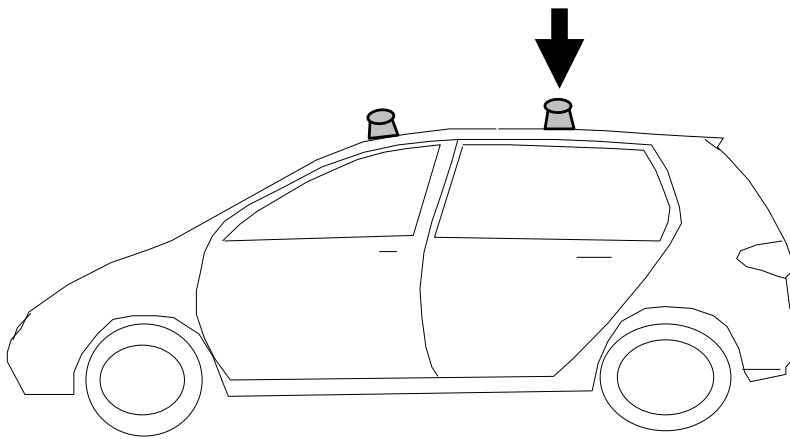


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

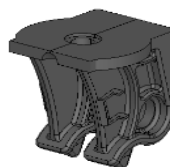

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

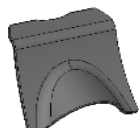


INVOLUCRO POST.
90341 / 9

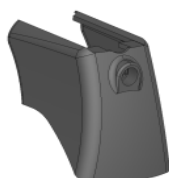

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

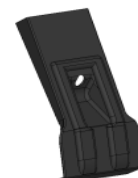

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



**GUARNIZIONE
NUMERICA**
91141 / 14

FARAD[®]
made in Italy

www.faradworld.com

