

FARAD[®]BARS

made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy


www.faradworld.com

+39 0172 58575

BS 106 - 1

AUDI A3 2012-220

AUDI A3 SPORT BACK 2013-2020



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

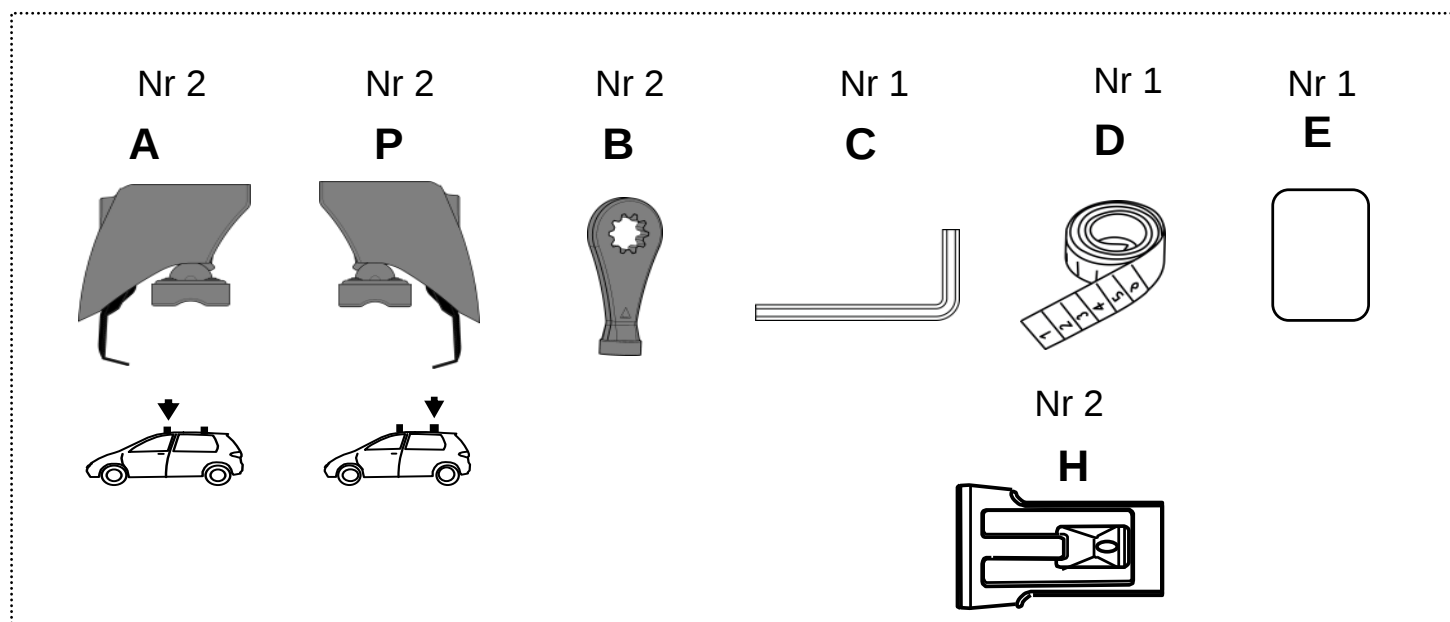












+


KIT ALU

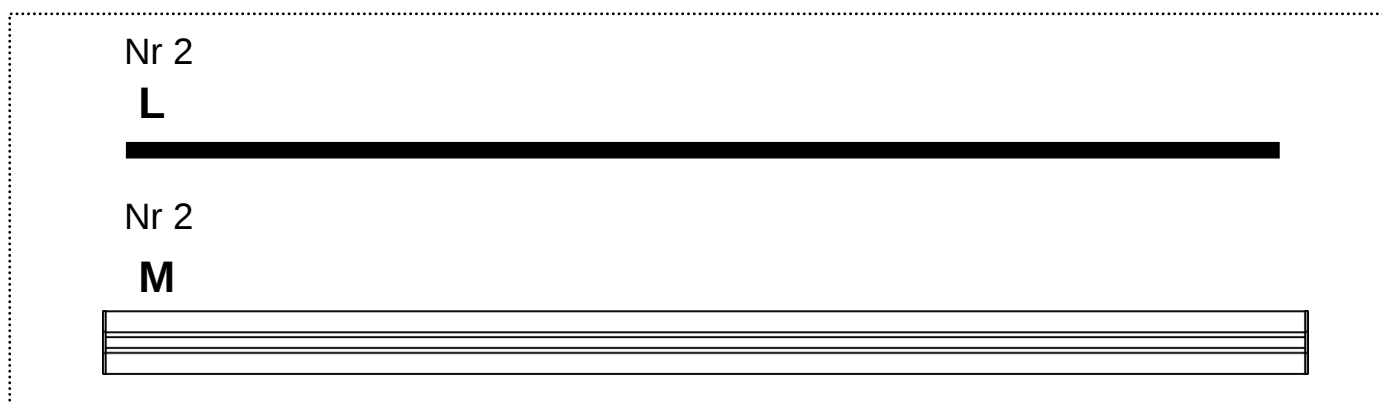




=


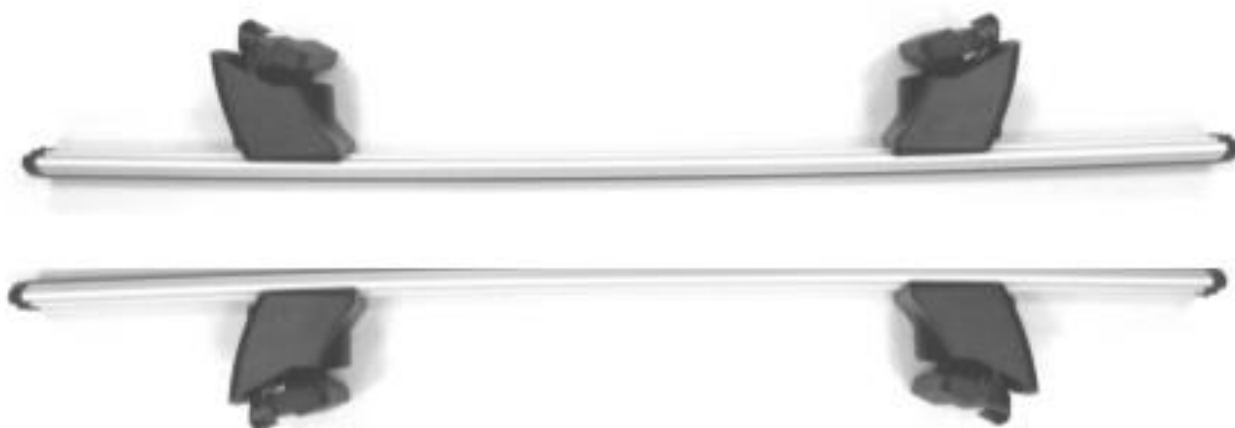


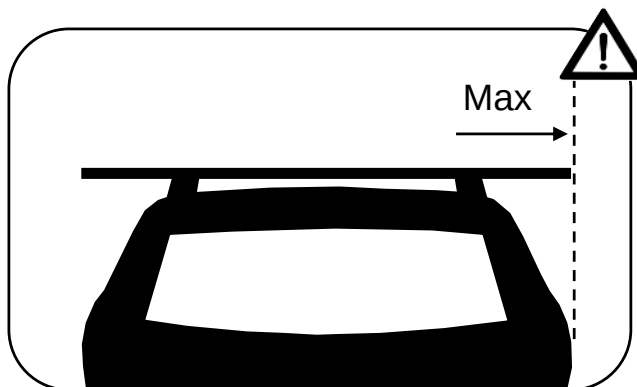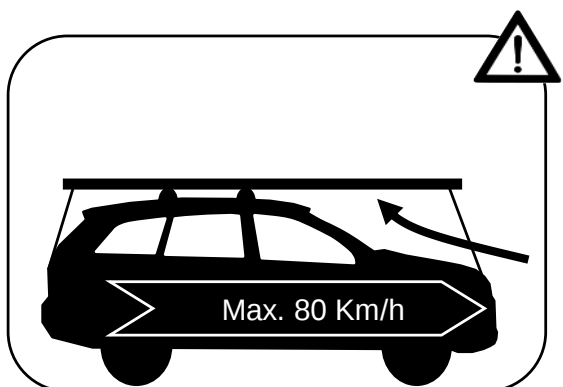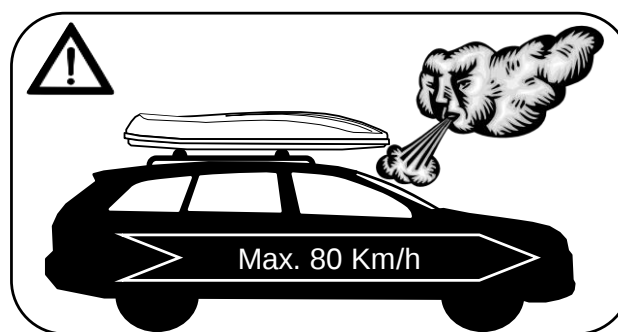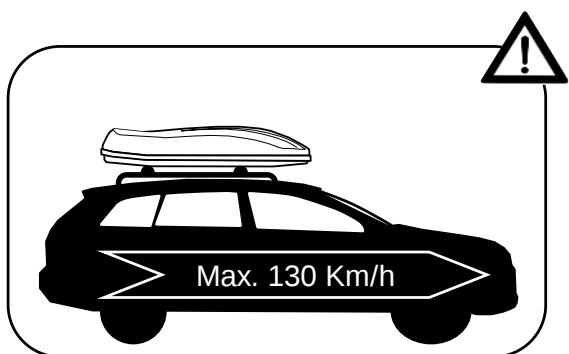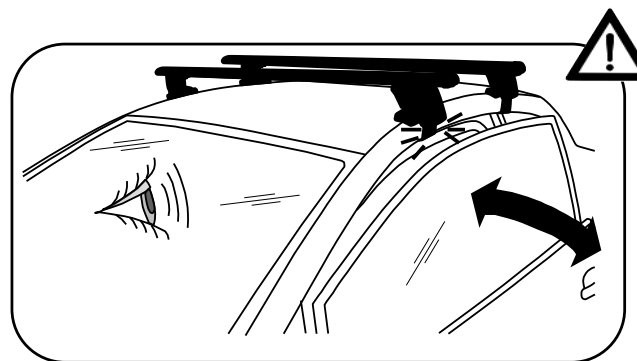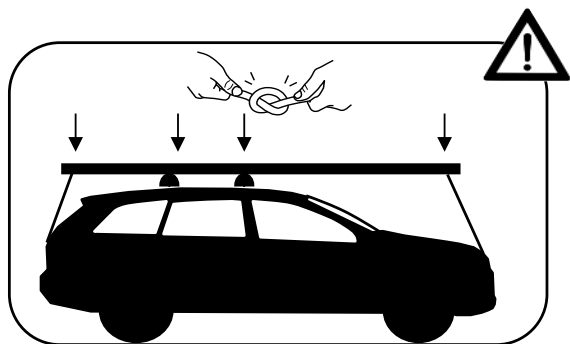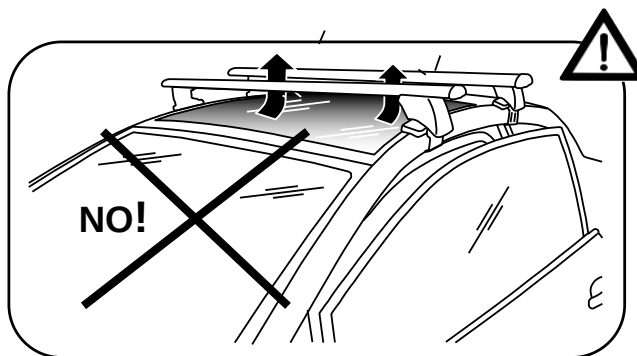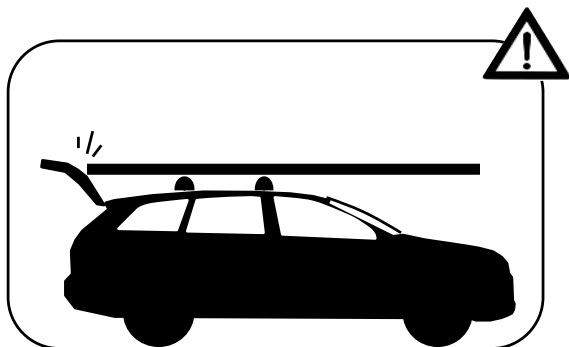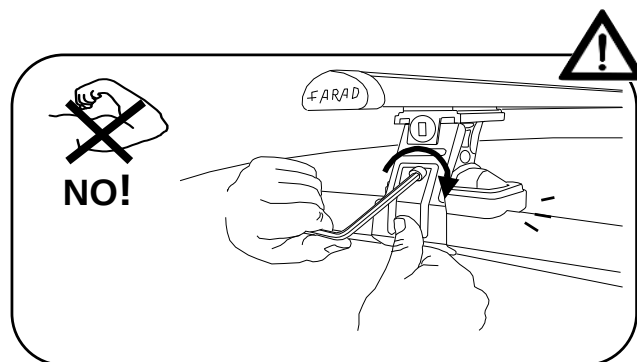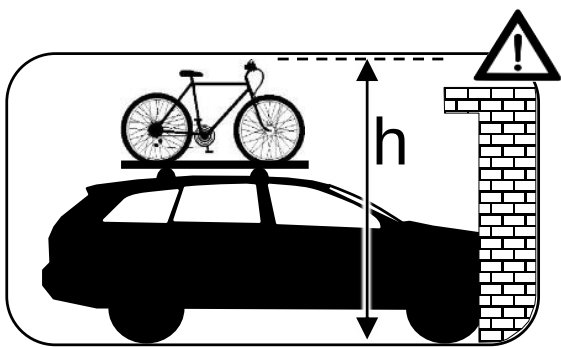

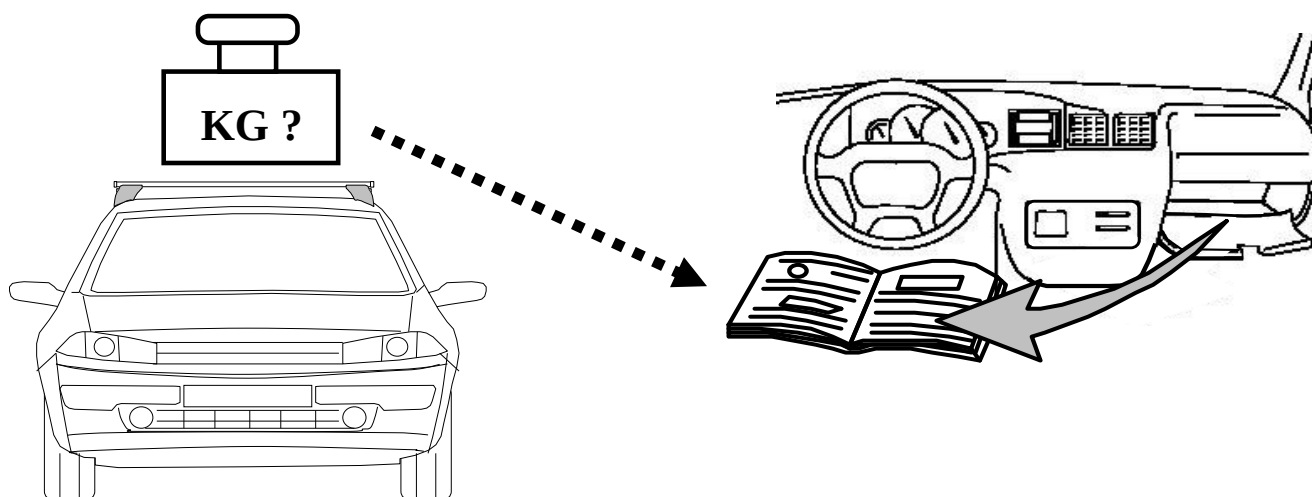


- | | |
|---|--|
| <p>I Controllare carico del tetto sul manuale dell'auto</p> <p>PL Sprawdzić ładowność dachu w instrukcji</p> <p>GB Check roof load capacity in car instruction</p> <p>NL check de handleiding belasting van het dak van de auto</p> | <p>F vérifier le chargement manuel du toit de la voiture</p> <p>D überprüfen Sie die manuelle Beladung der Autodach</p> <p>E comprobar la carga manual del techo del coche</p> <p>SWE kontrollera manuell inläggning på taket av bilen</p> |
|---|--|

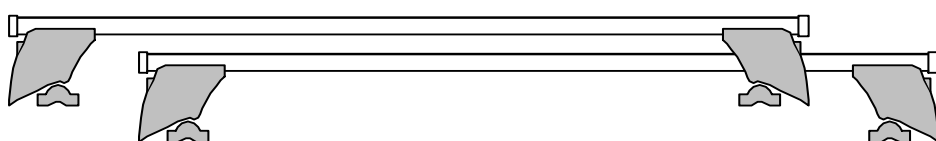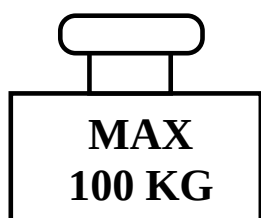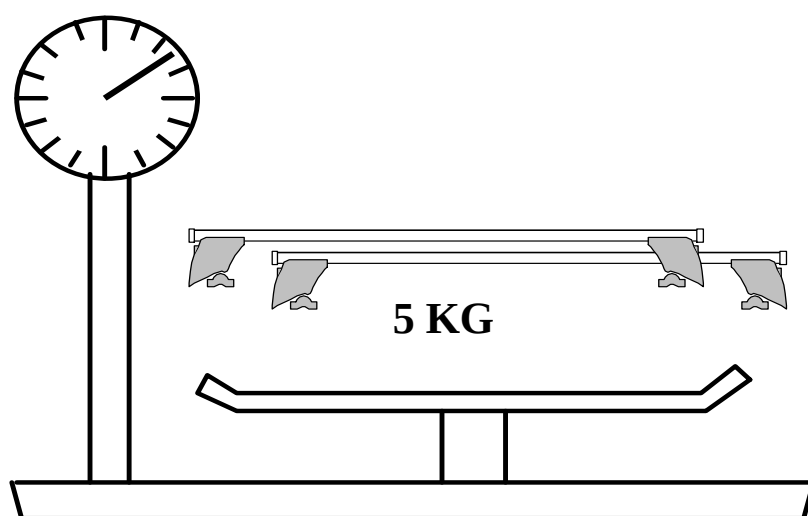

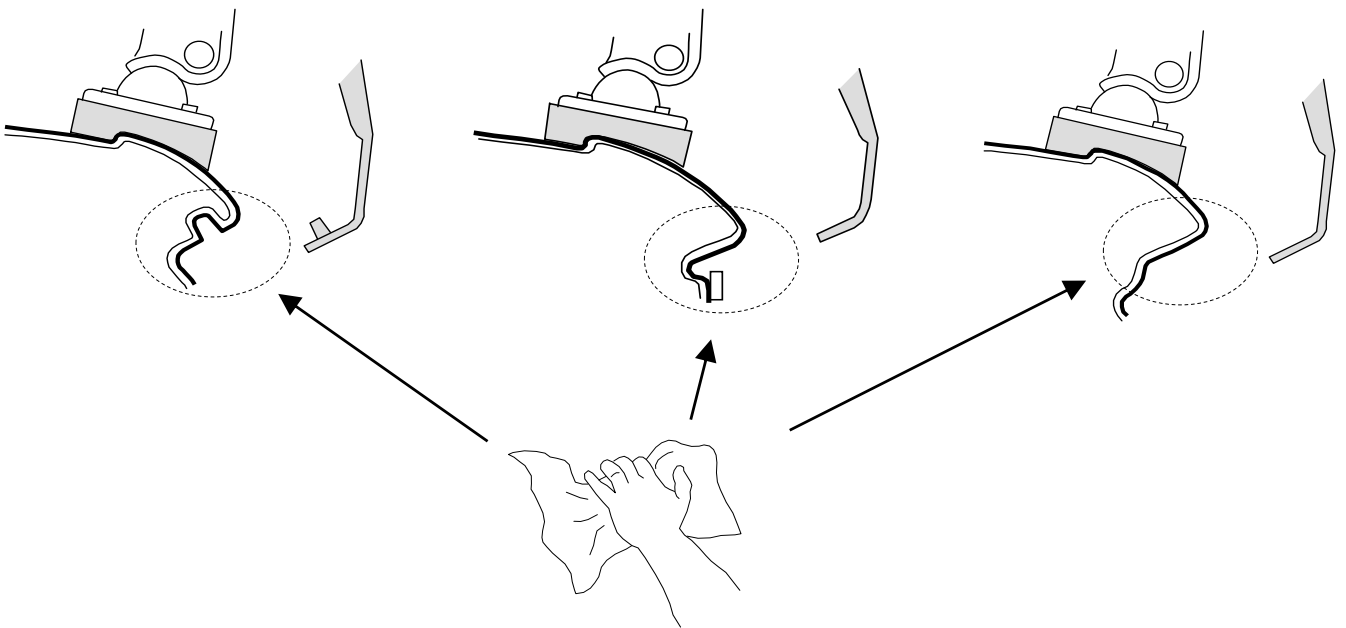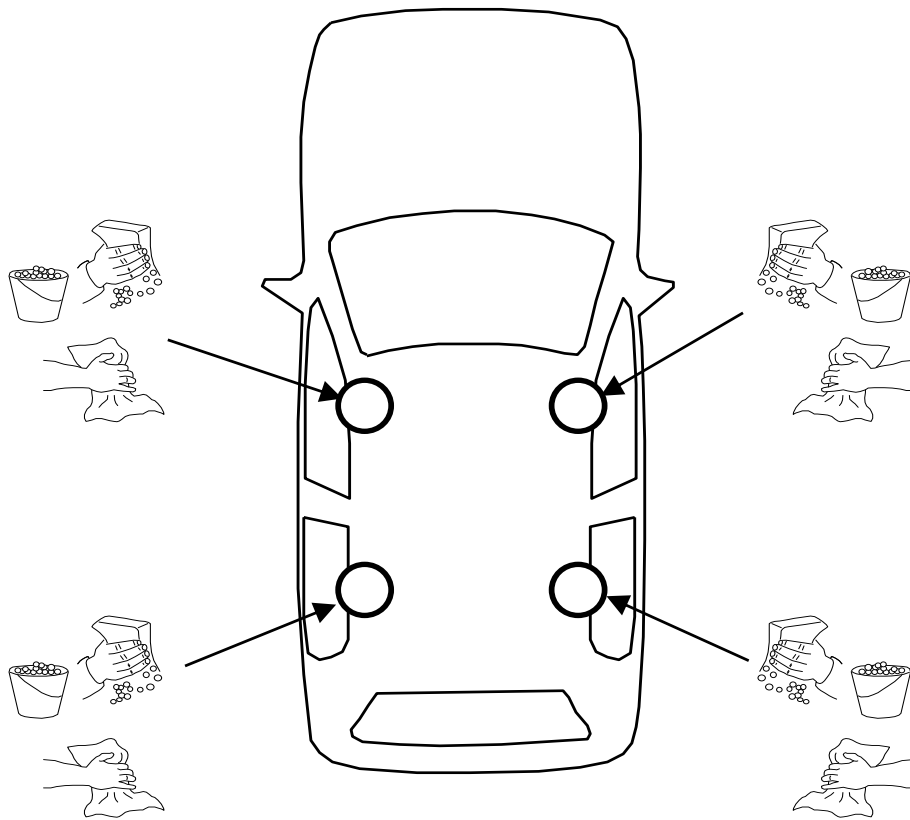



I Montaggio Barra Anteriore
PL Montaż Bagażnika Bazowego Tylnego
D Montage Vorderes Dachträgers
SWE Montering Av Främre Lasthållaren


F Fixation Barre Avant
GB Fitting Front Roof Bar
NL Montage Voorste Dakdrager
E Fijación Barra Frontal

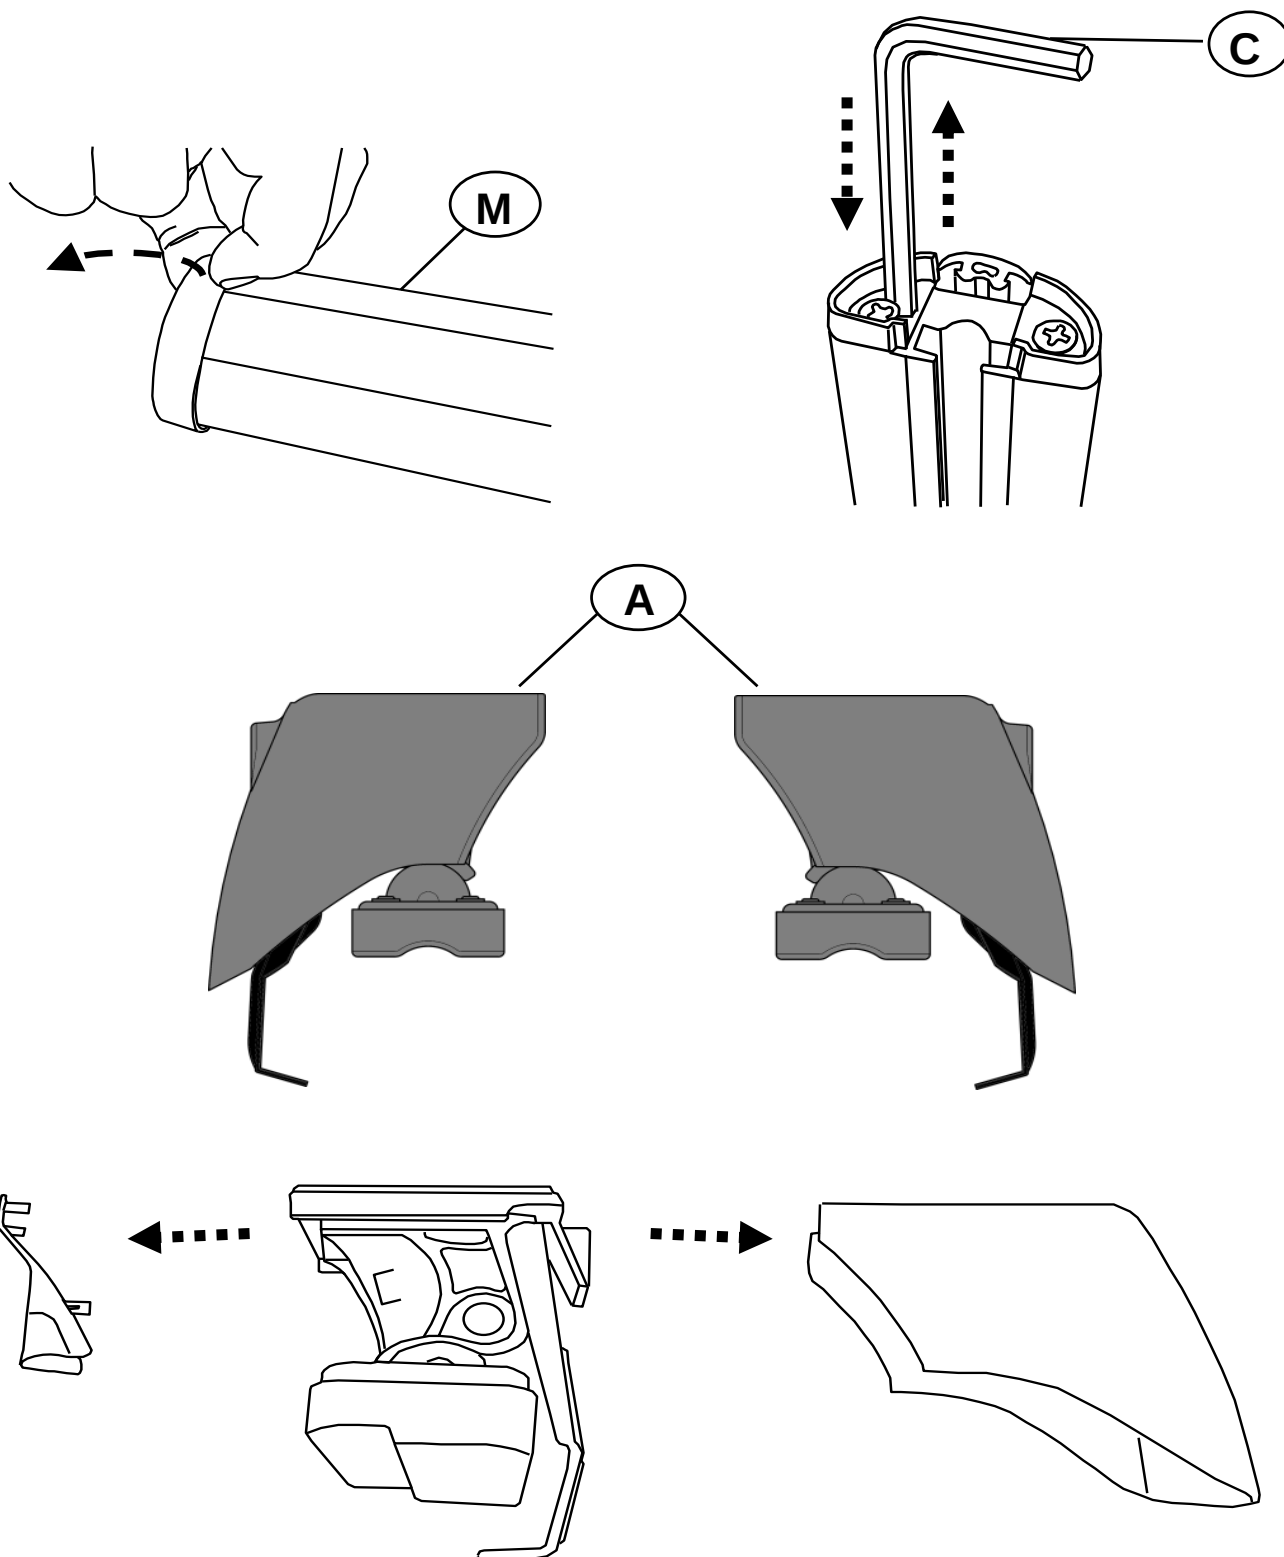





M

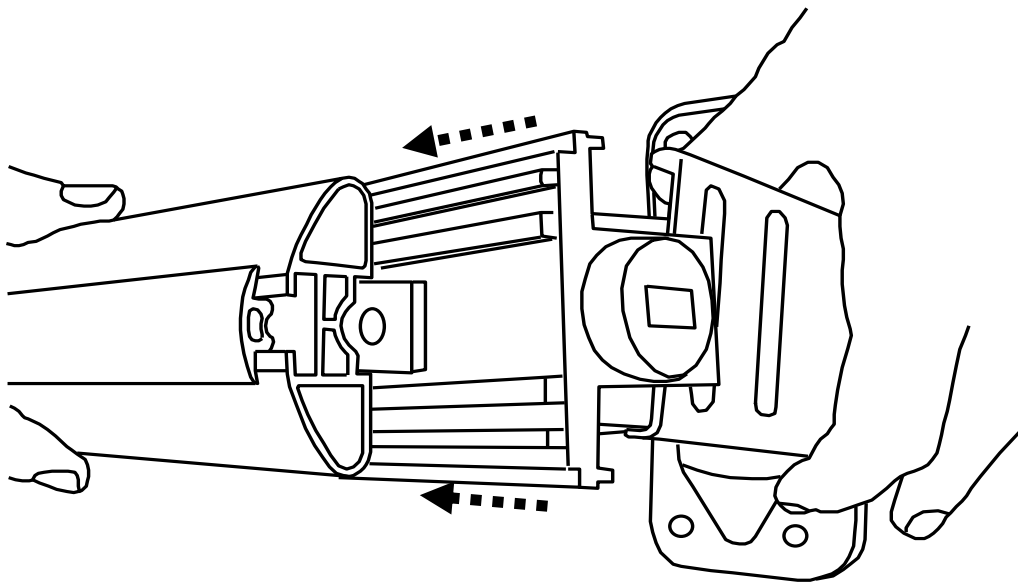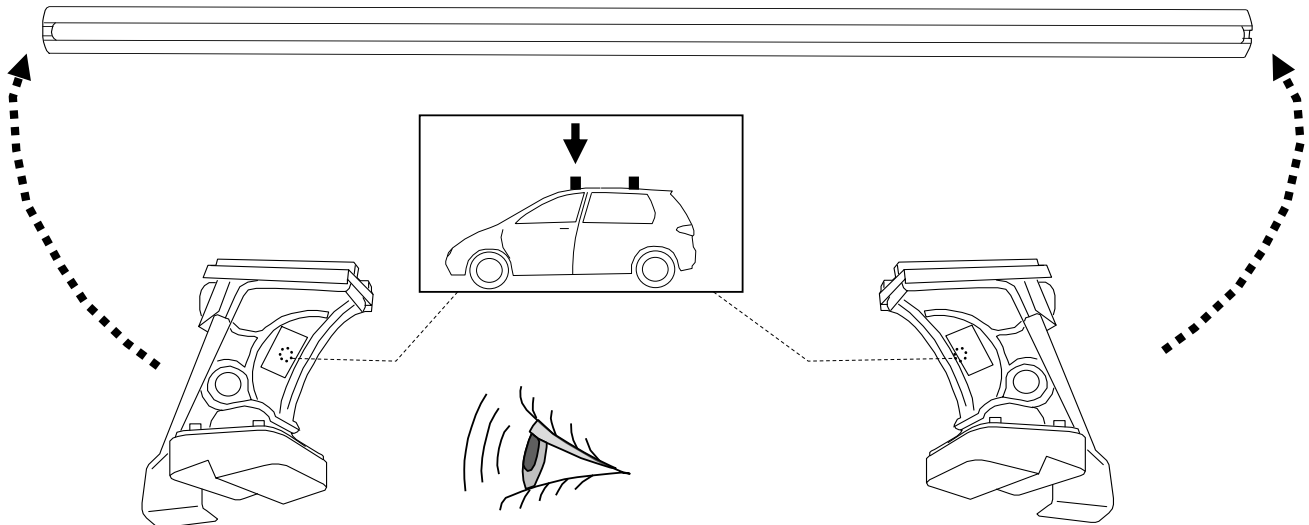


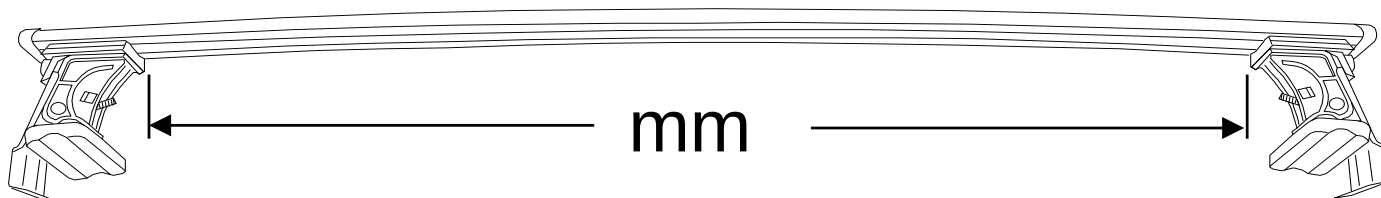


				R	mm
AUDI	A3	3	2012-2020	R= 34	1035
AUDI	A3 SB	5	2013-2020	R= 34	1035

R


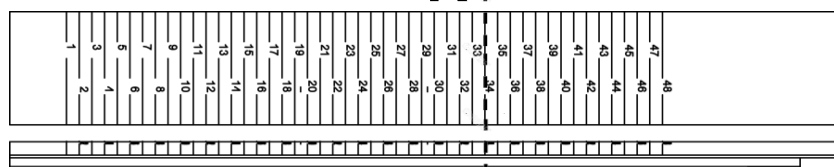


1

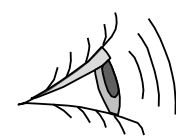
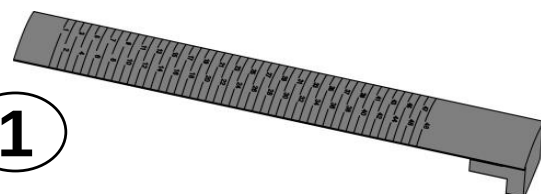


3


2

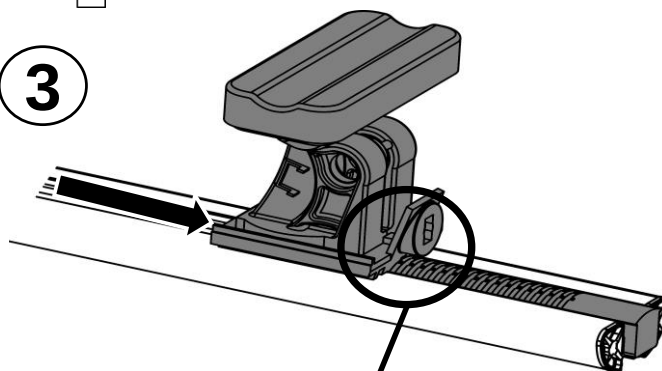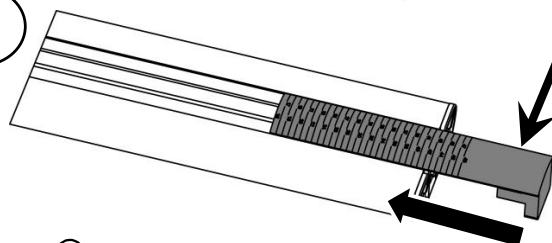


4

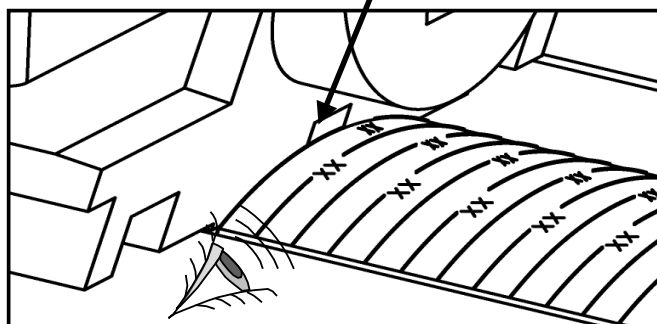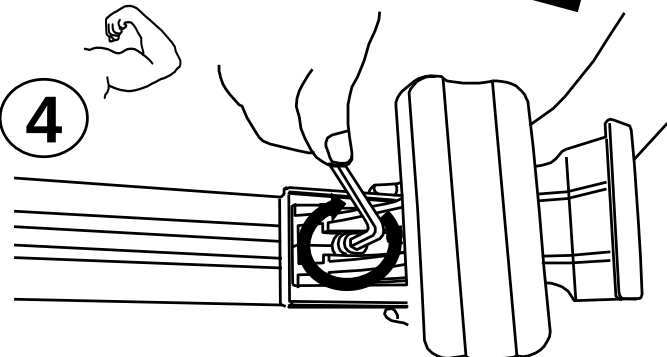


5

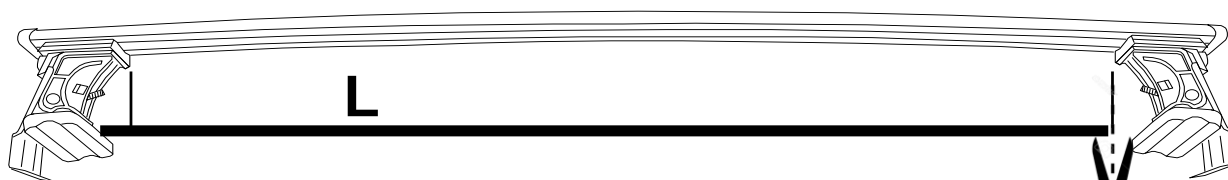




6


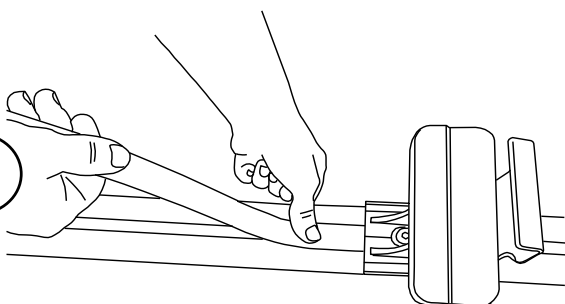



7

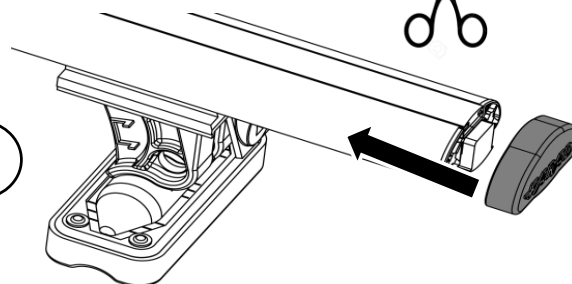

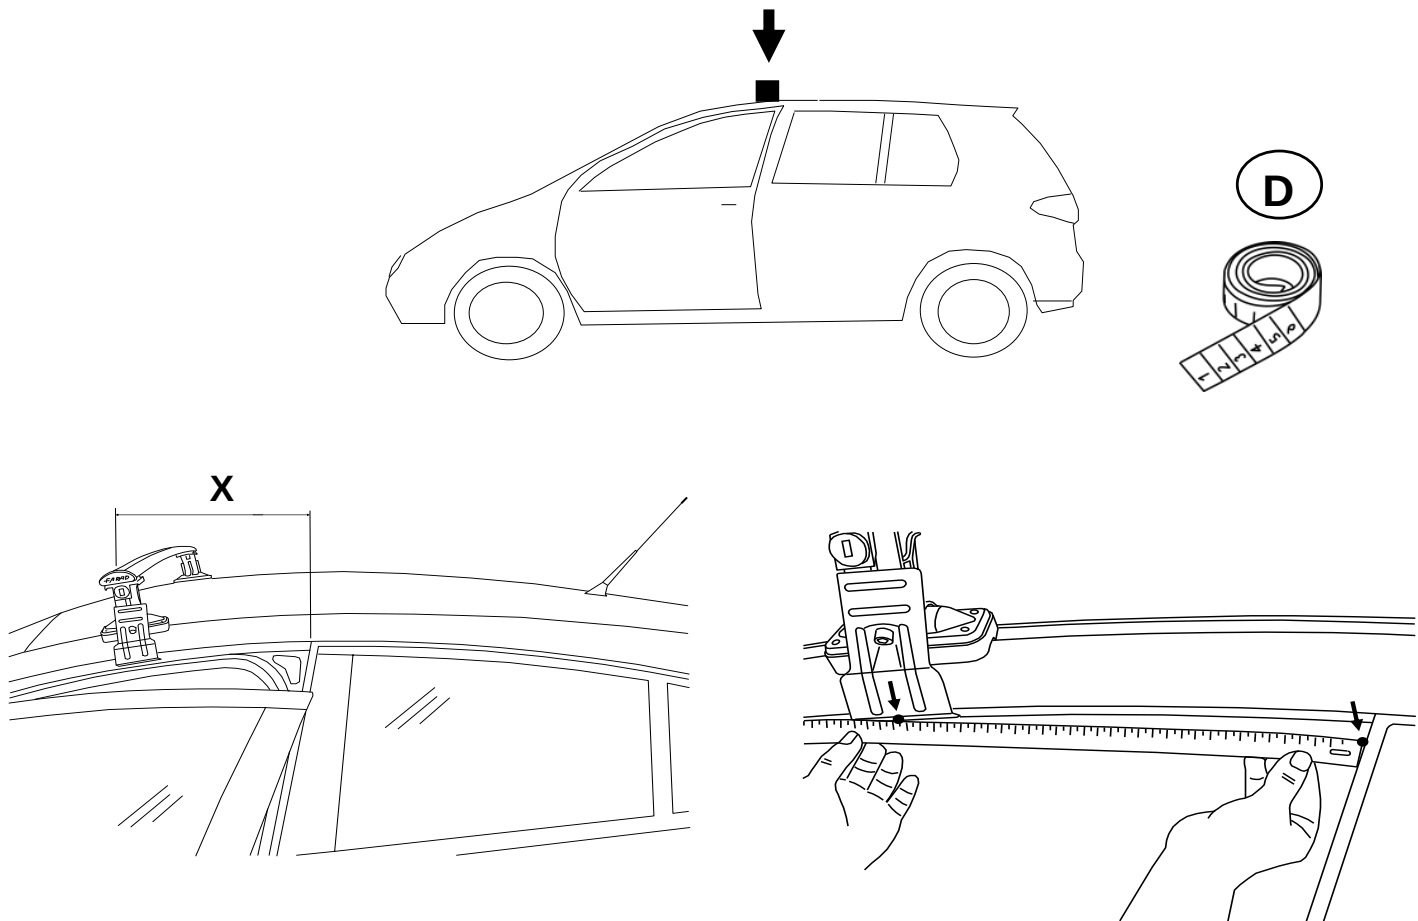






				X
AUDI	A3	3	2012-2020	X= 410
AUDI	A3 SB	5	2013-2020	X= 340


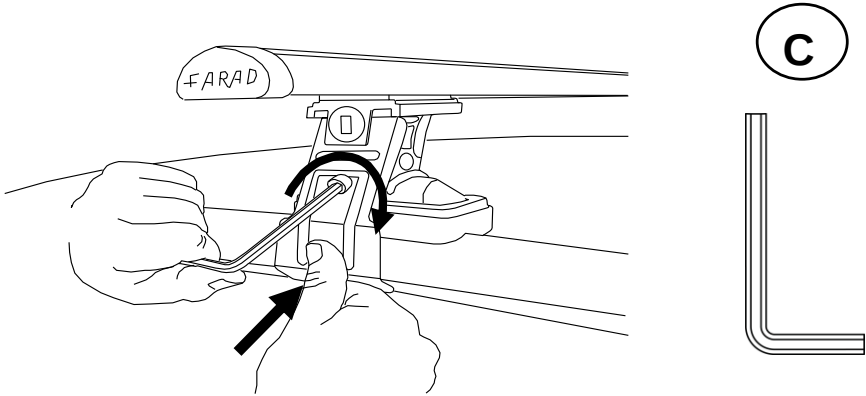





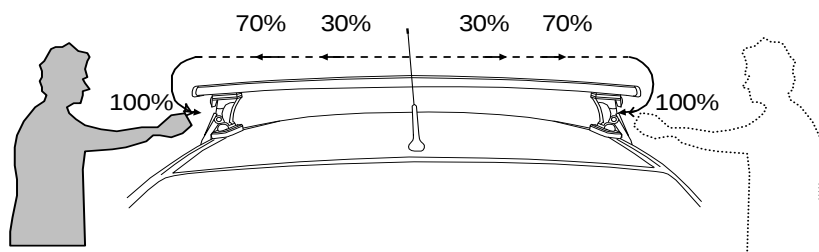


I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

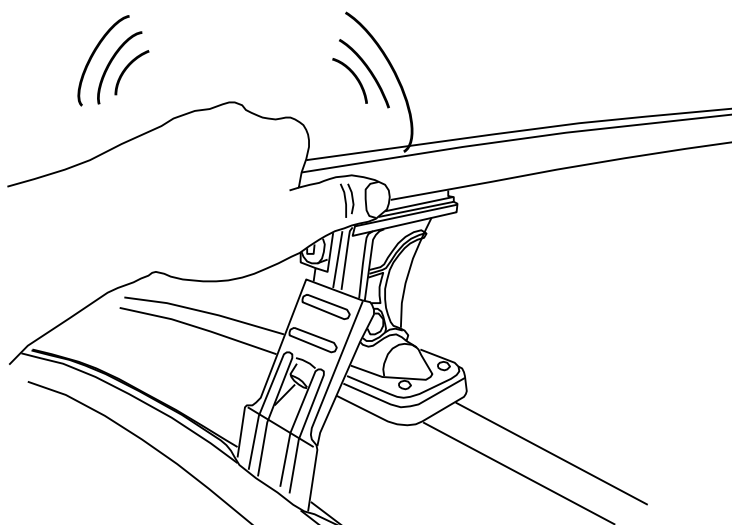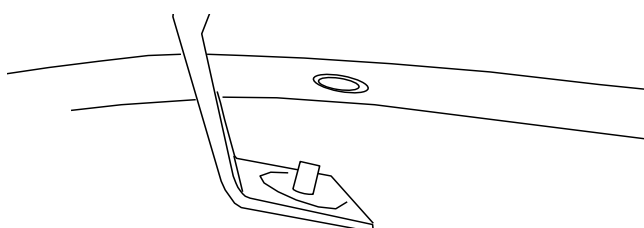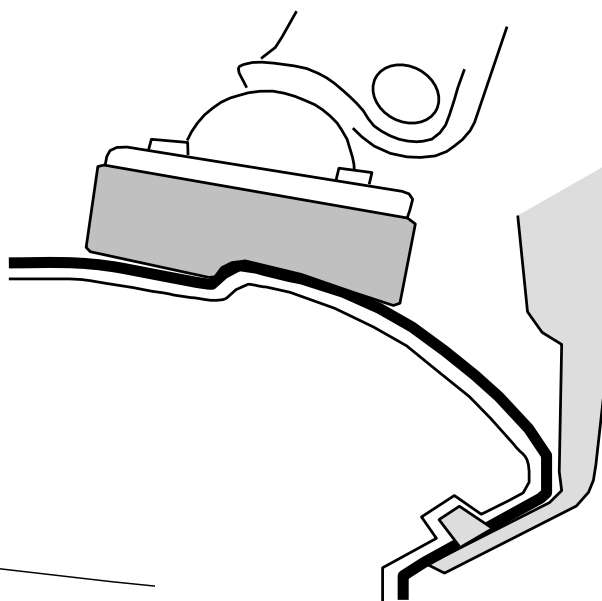

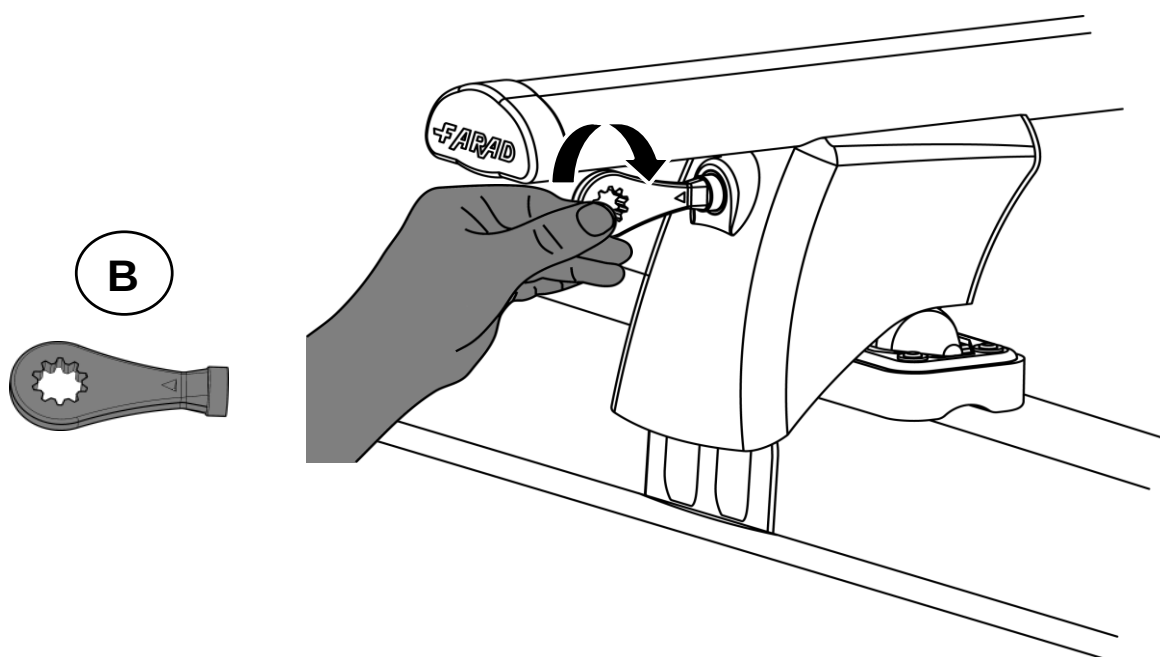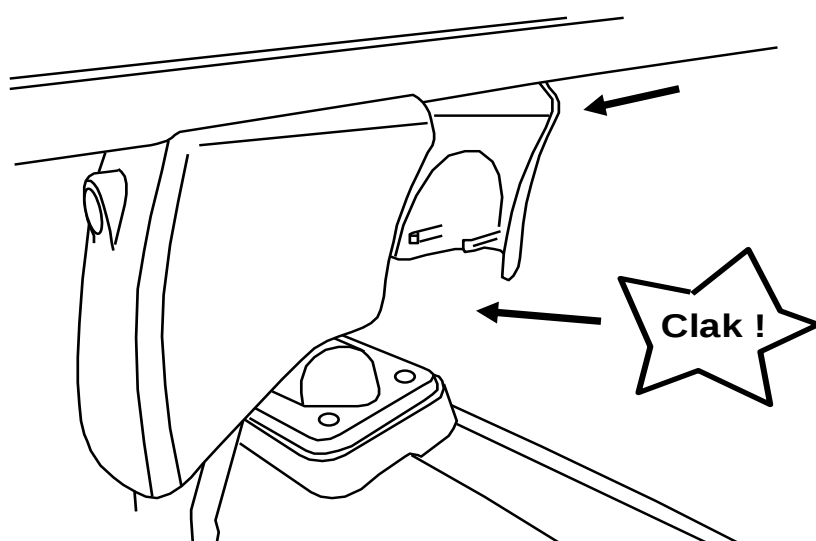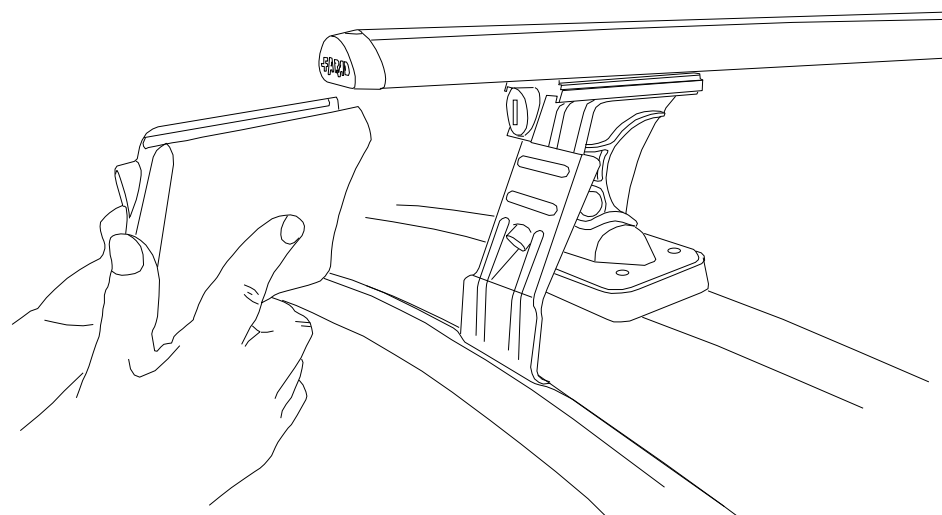

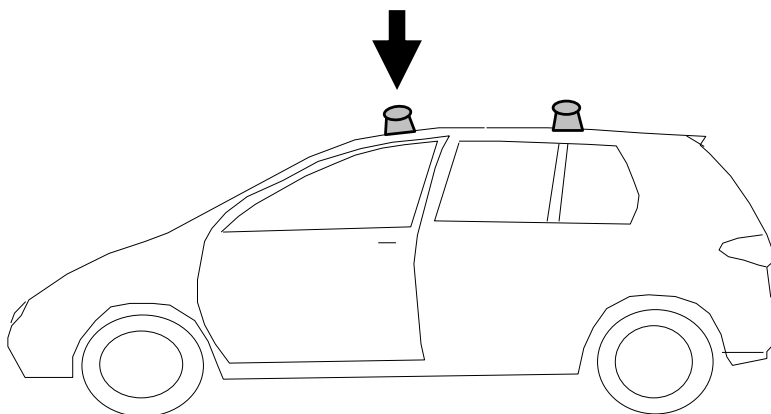

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I Montaggio barra posteriore

PL Montaż Bagażnika Bazowego Przedniego

SWE Montering Främre Lasthållaren


NL Montage Achterste Dakdrager



F Fixation Barre Arriere


GB Fitting Rear Roof Bar


E Fijación Barra Trasera


D Montage Heckdachträgers



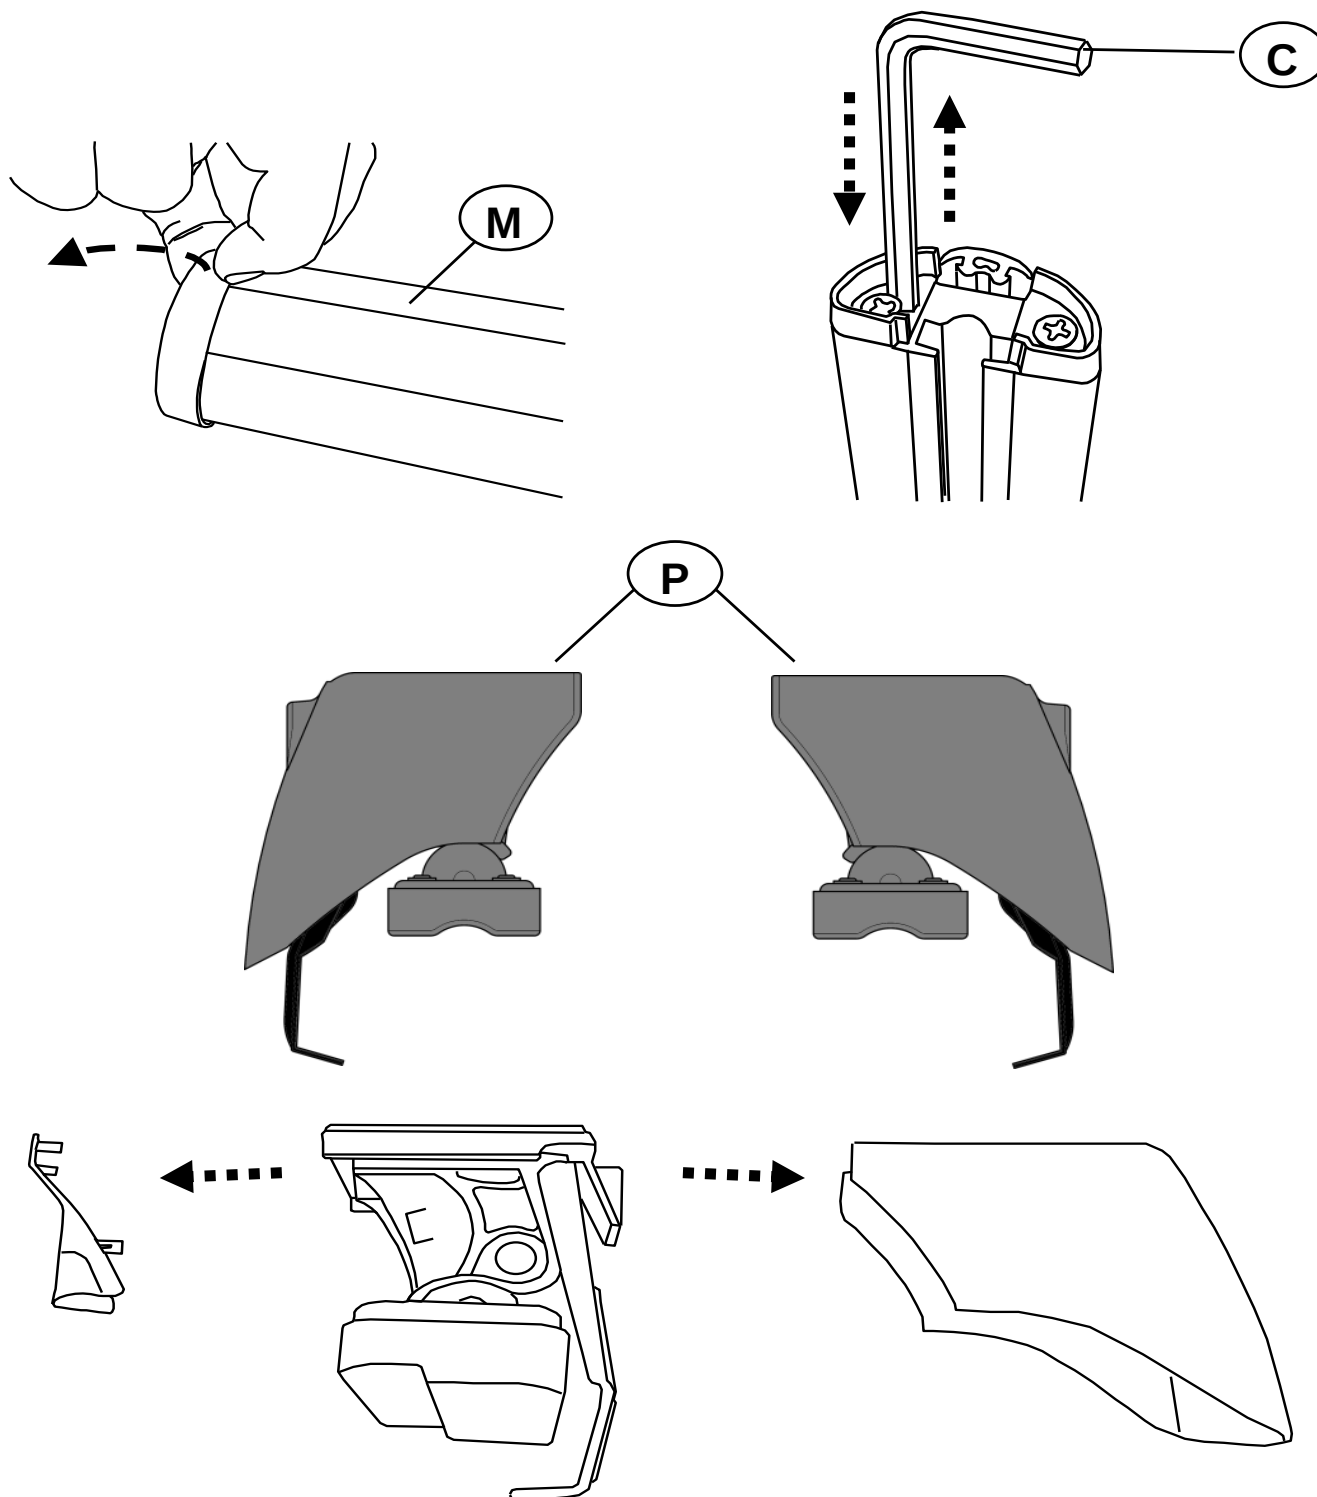


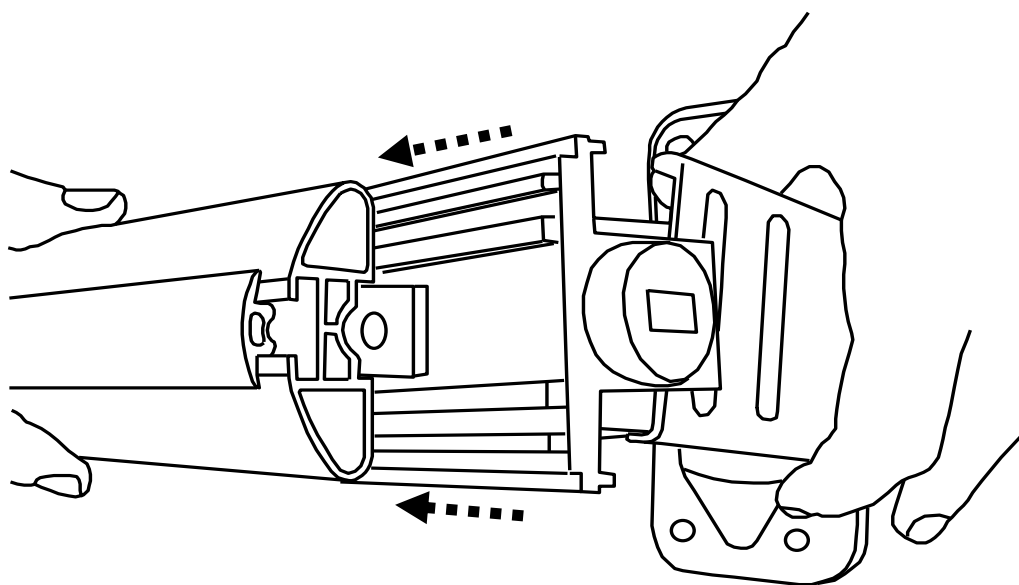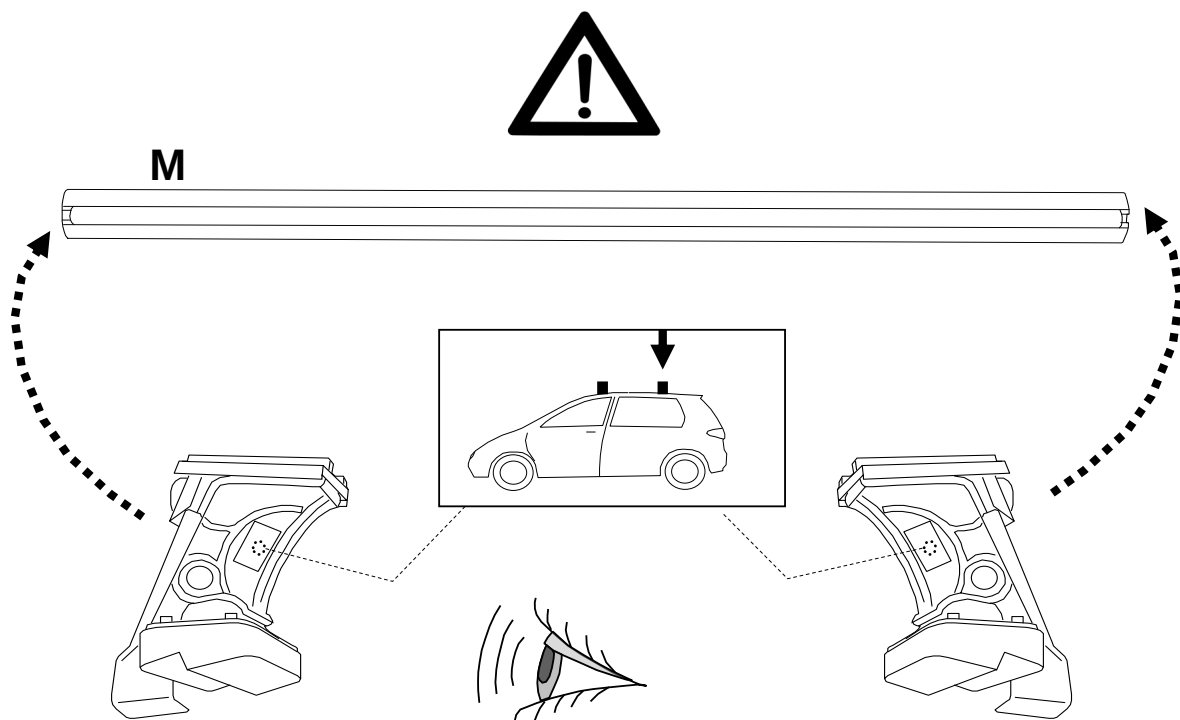









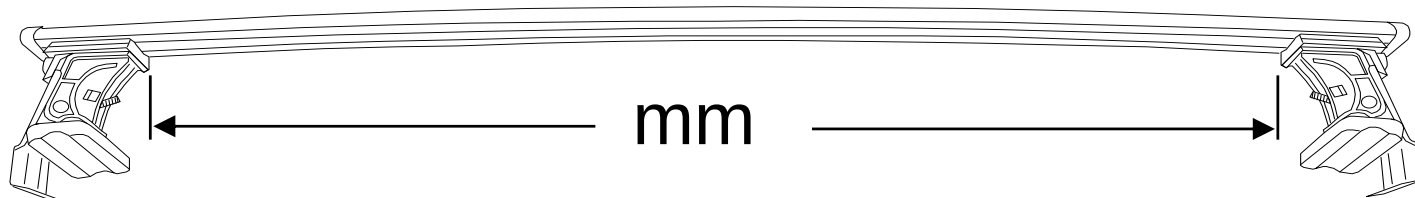



				R	mm
AUDI	A3	3	2012-2020	R=20	965
AUDI	A3 SB	5	2013-2020	R=20	965

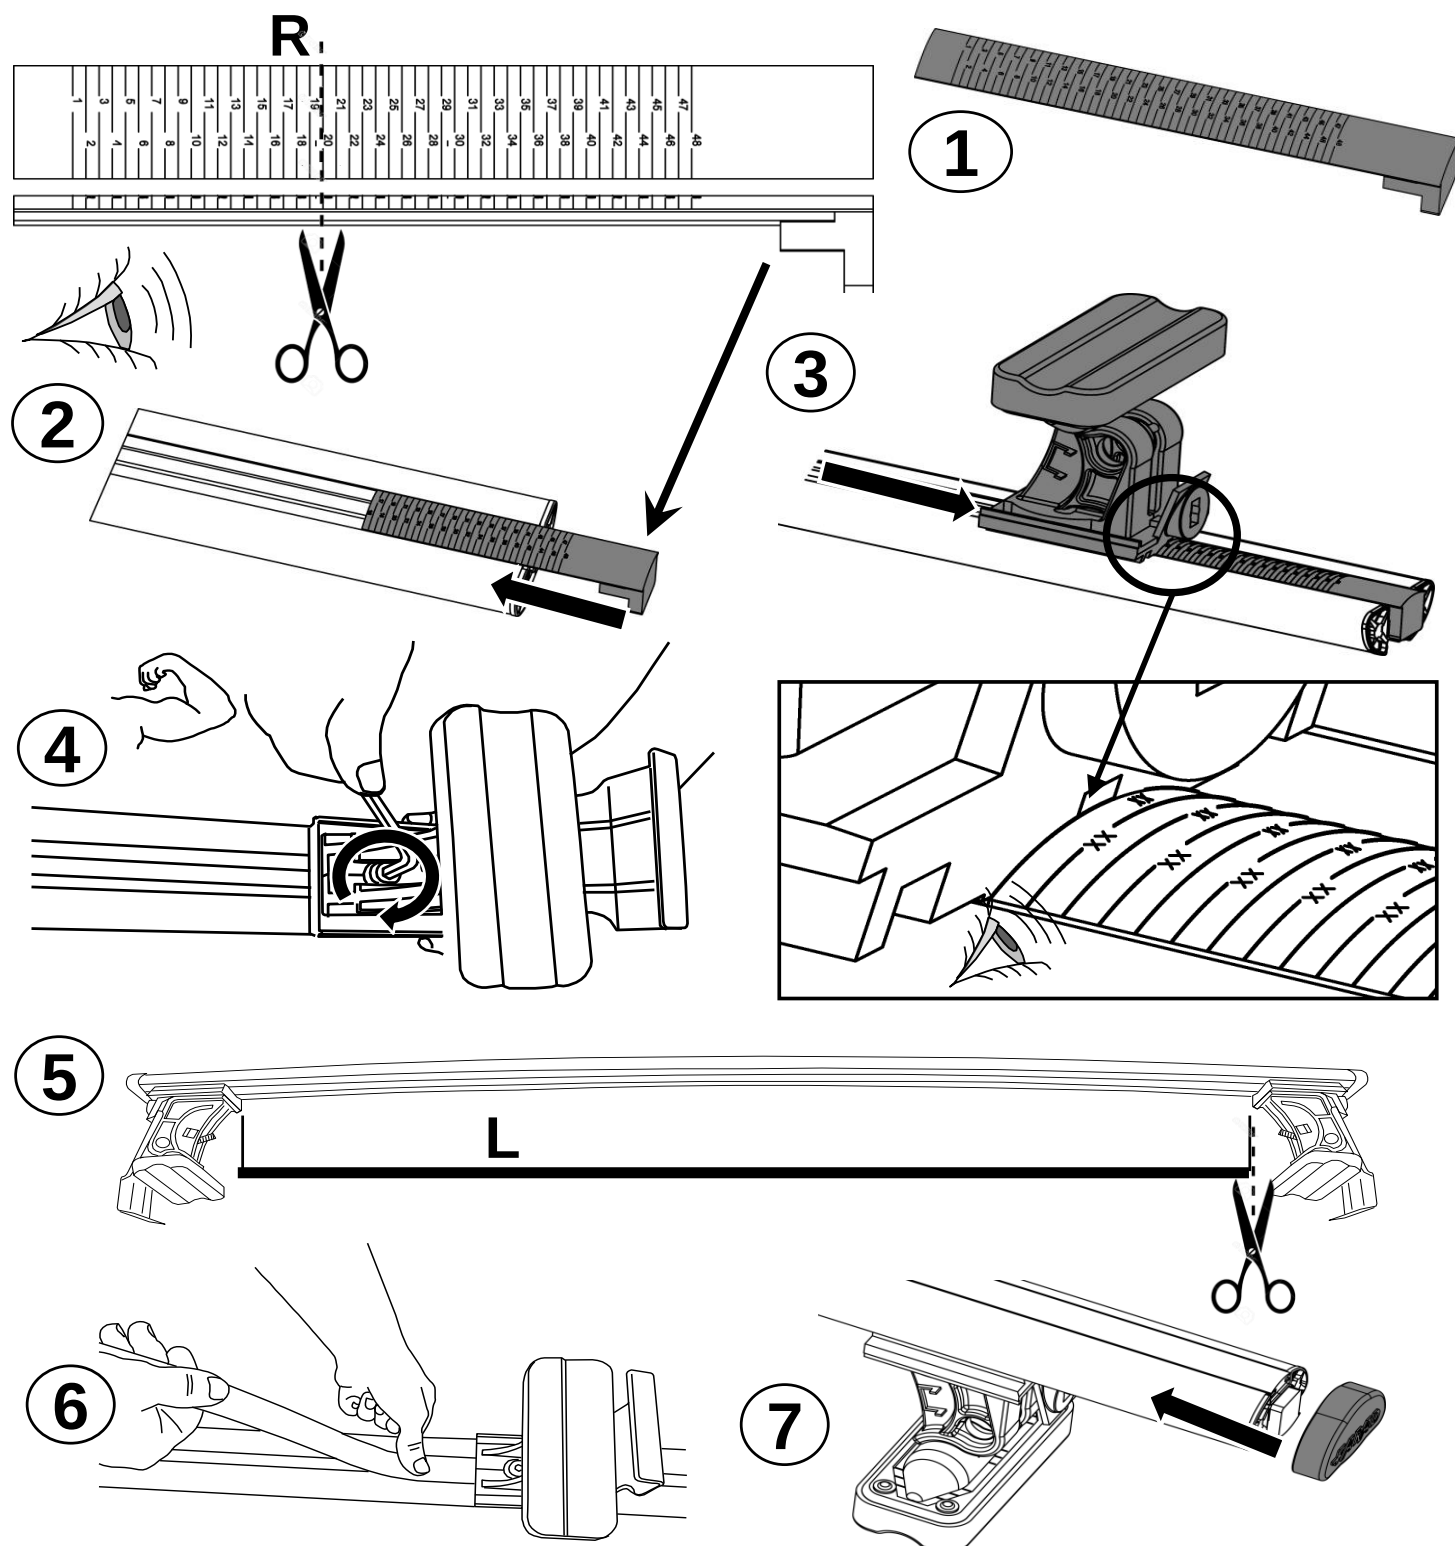



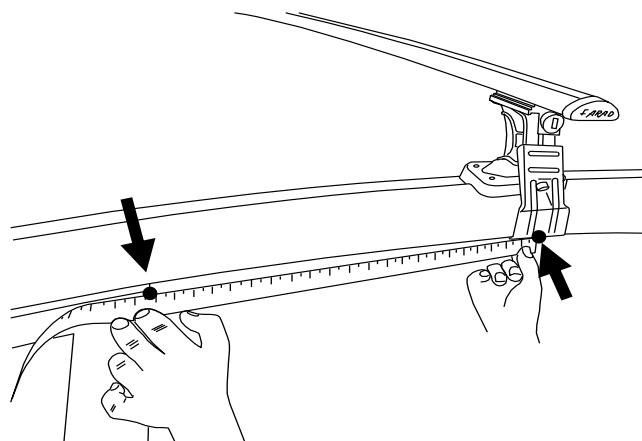
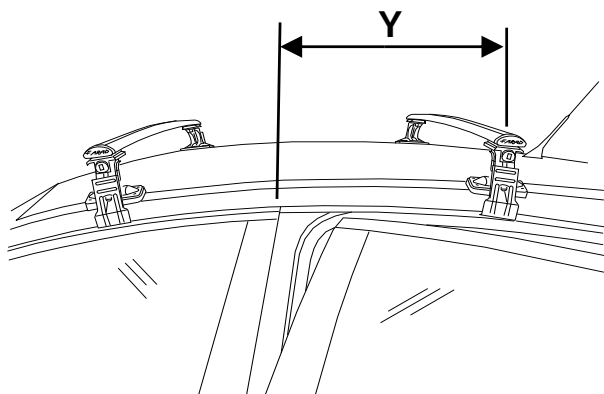
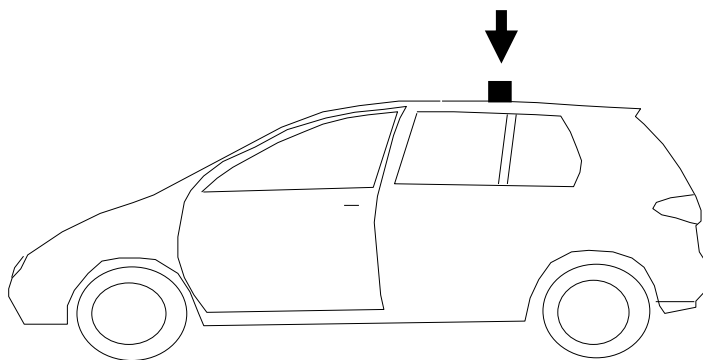





				Y
AUDI	A3	3	2012-2020	Y= 280
AUDI	A3 SB	5	2013-2020	Y= 350

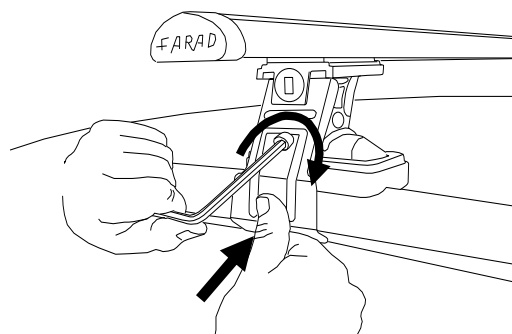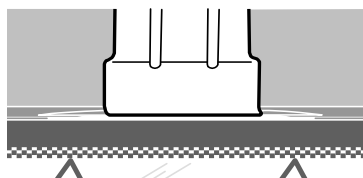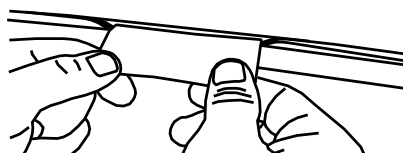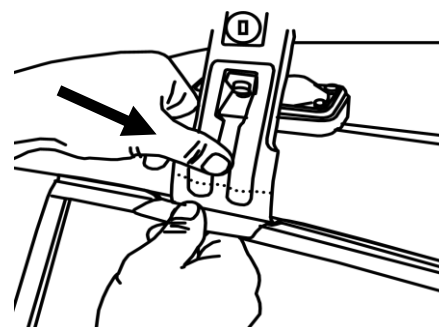




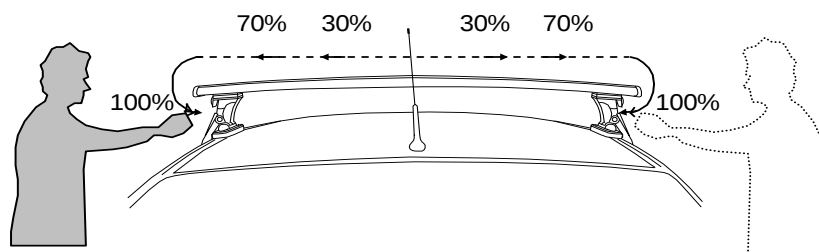

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

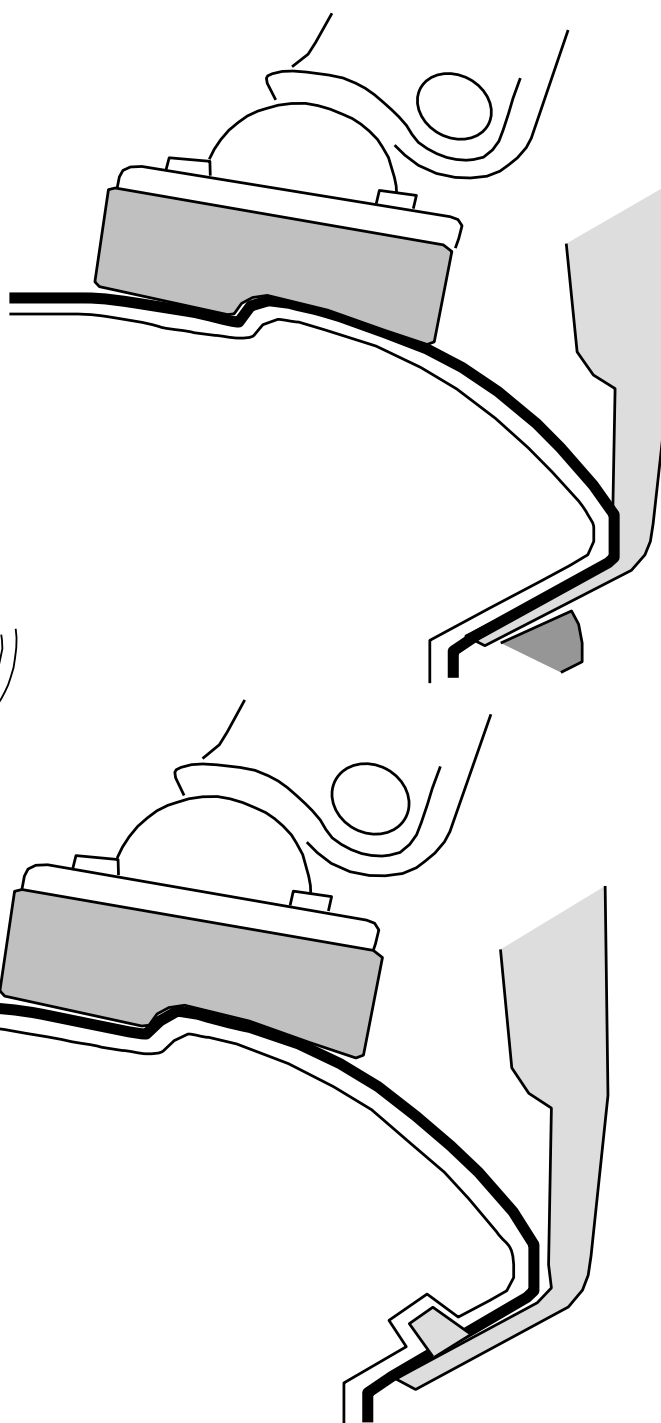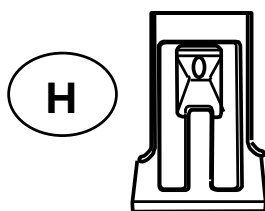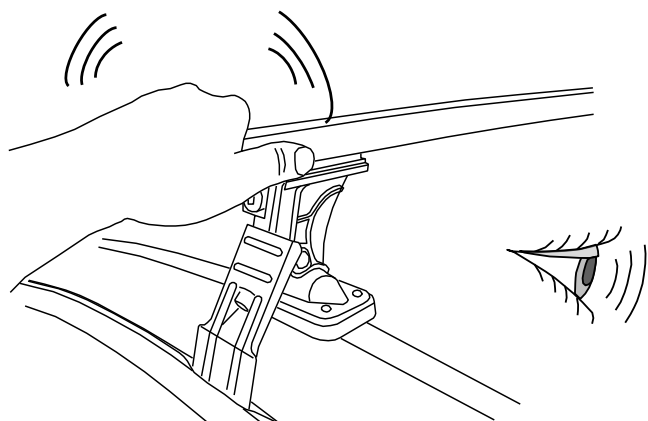

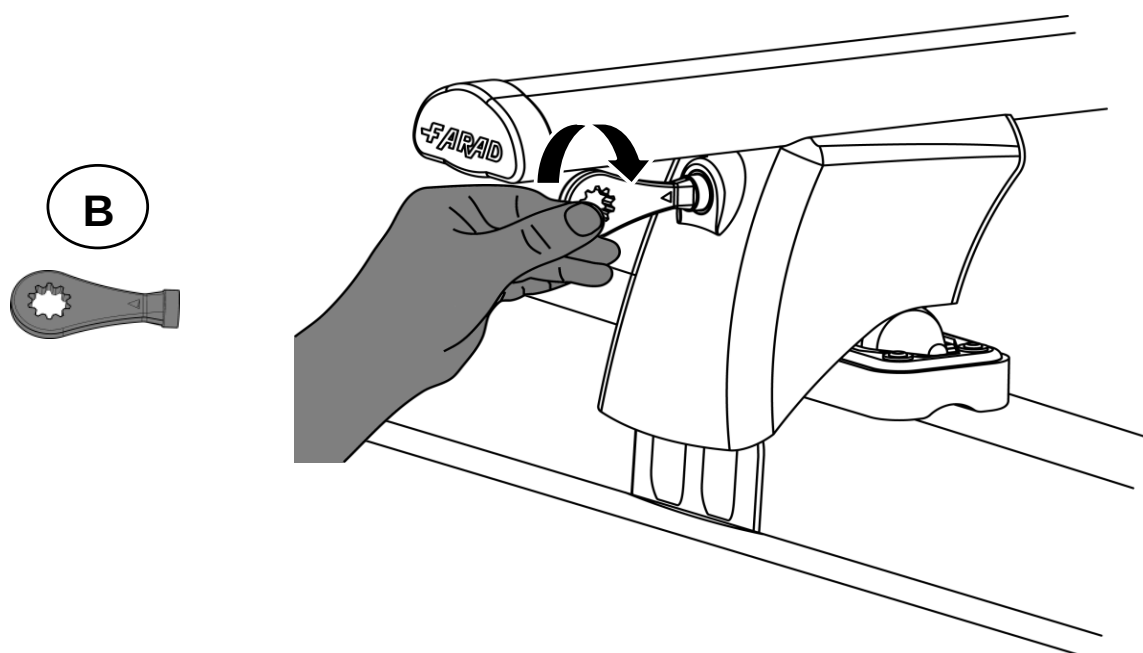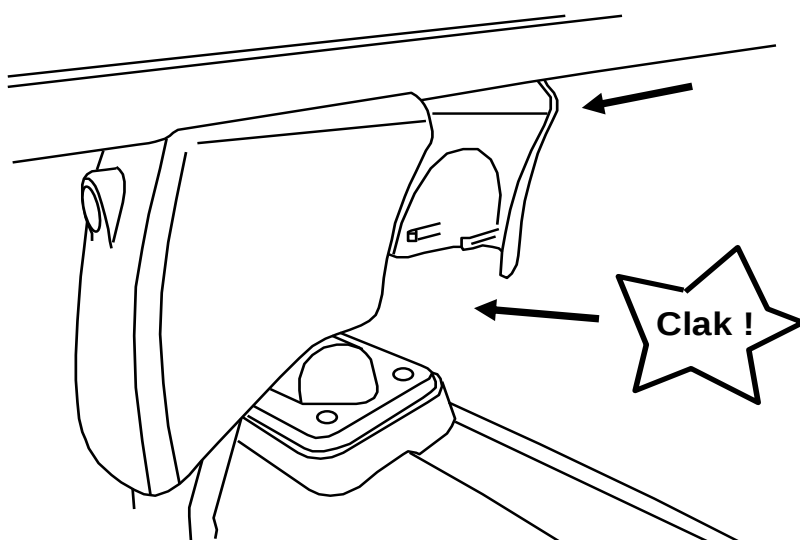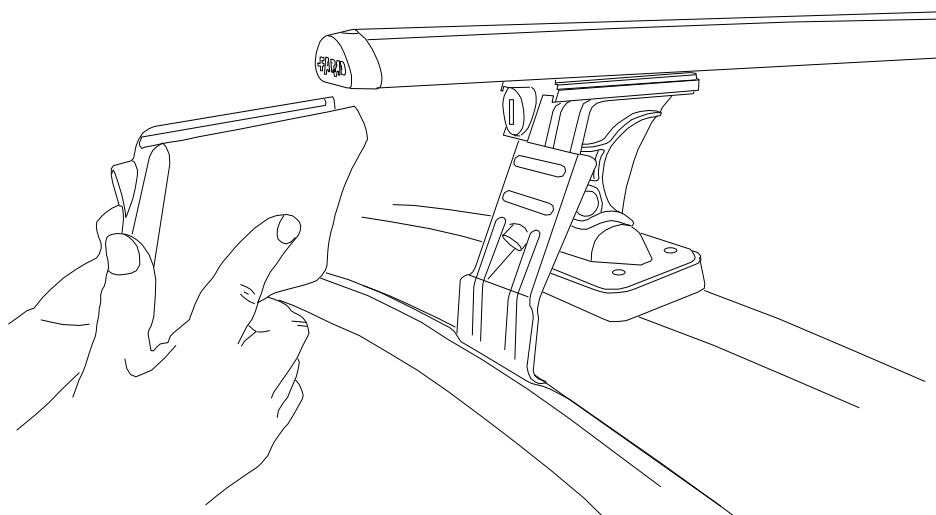

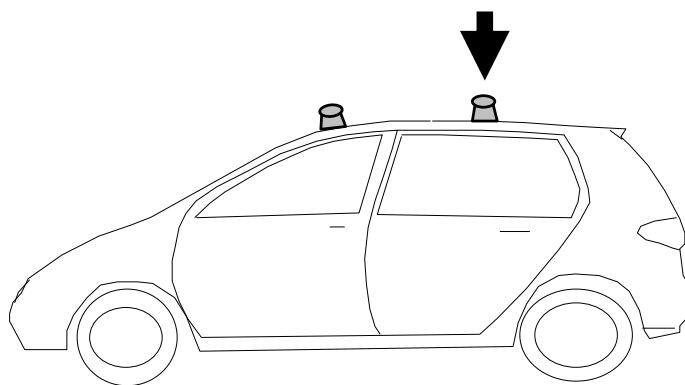


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

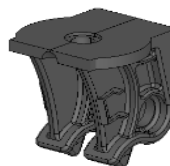

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

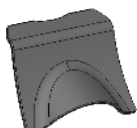


INVOLUCRO POST.
90341 / 9

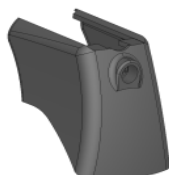

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

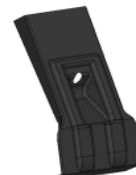

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



**GUARNIZIONE
NUMERICA**
91141 / 14

FARAD[®]
made in Italy

www.faradworld.com

