


FARAD[®] BARS

made in italy
Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy


www.faradworld.com

+39 0172 58575

BS 093 - 2



AUDI A3 1999-2003
AUDI A3 2003-2012
AUDI A3 sportback 2003-2012
AUDI A6 1997 - 2003
INFINITI Q50 2014>
MG MOTOR 4 ELECTRIC 2022>



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung


GB Fitting instructions


E Instrucciones de montaje

NL Inbouwhandleiding

SWE Montageanvisnin

KIT BS

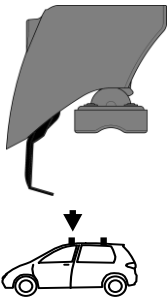Nr 2
A

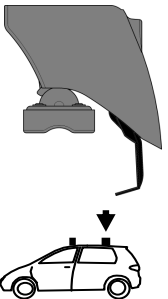
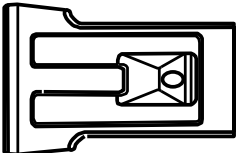
Nr 2
P


Nr 2
B


Nr 1
C


Nr 1
D



Nr 1
E


Nr 2
F


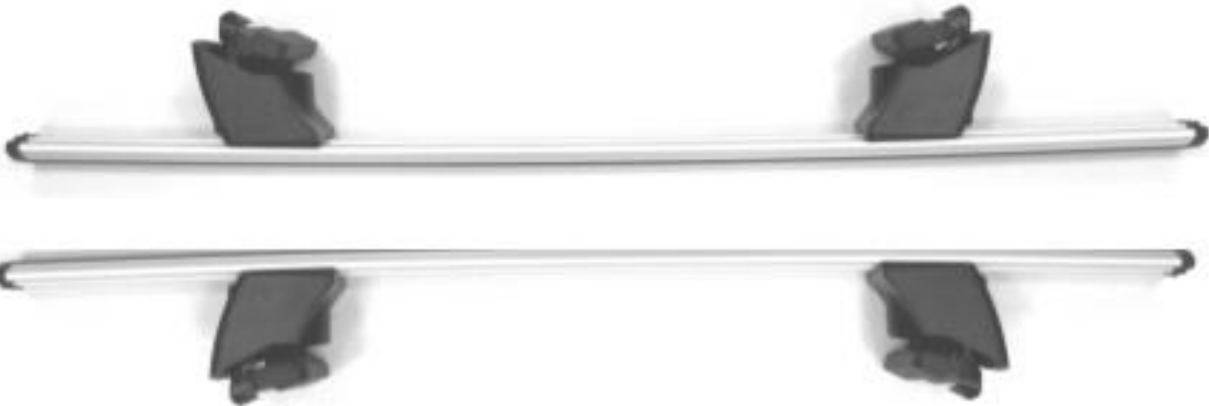
+











KIT ALU


Nr 2
L


Nr 2
M


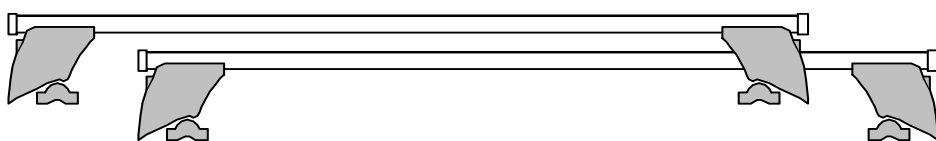
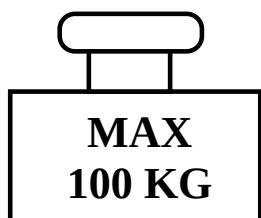
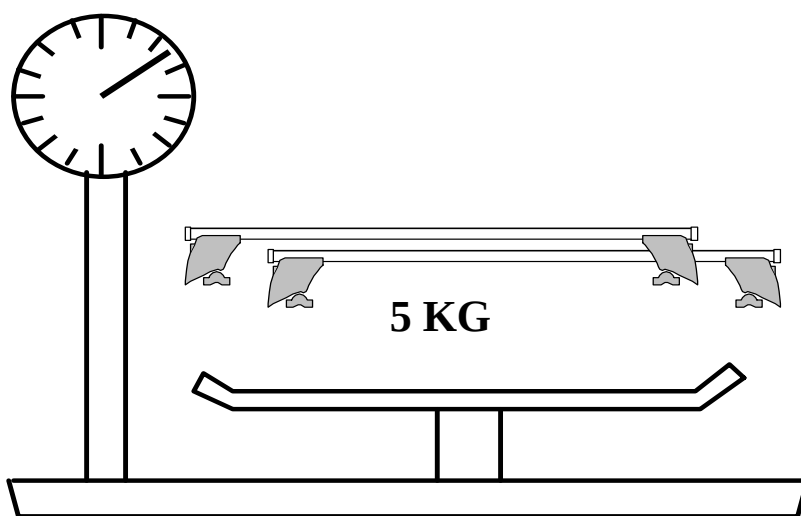
=





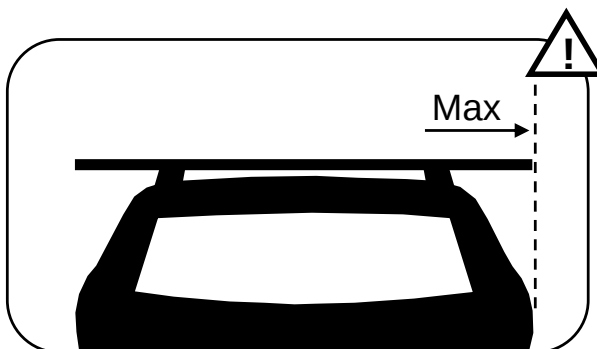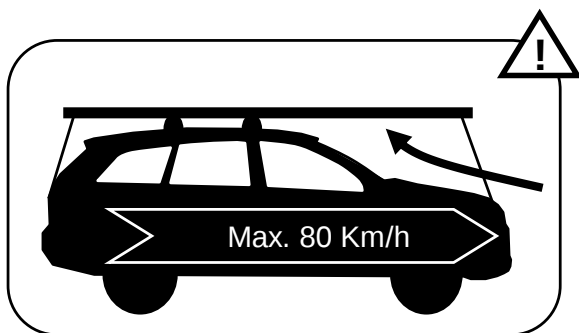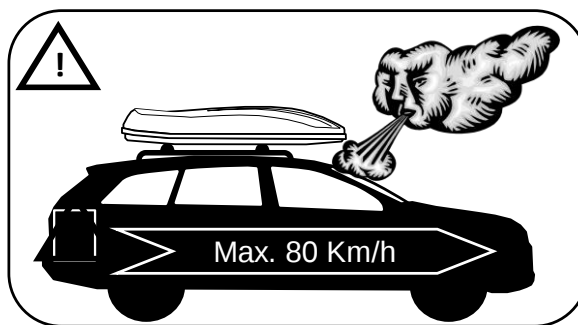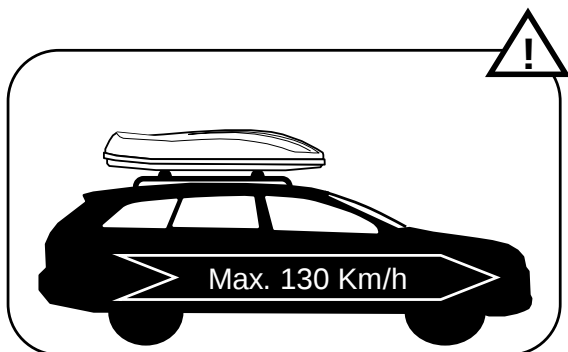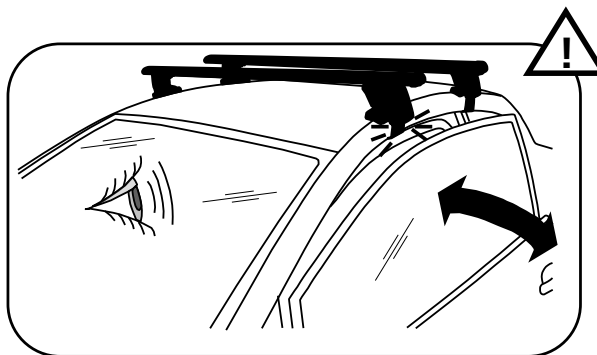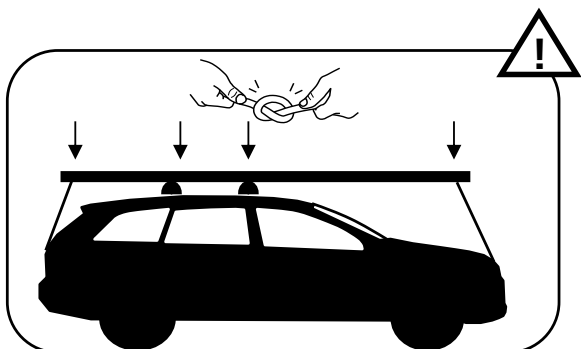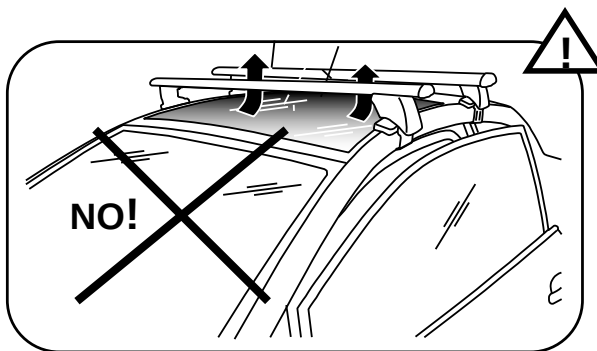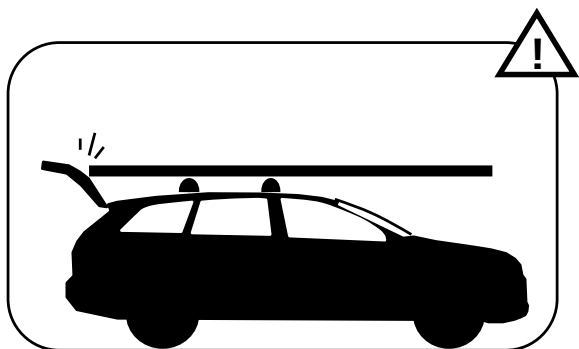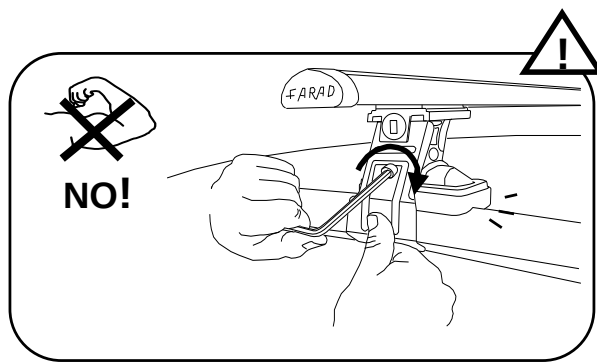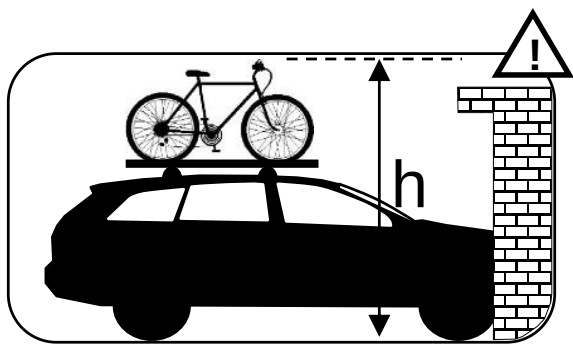

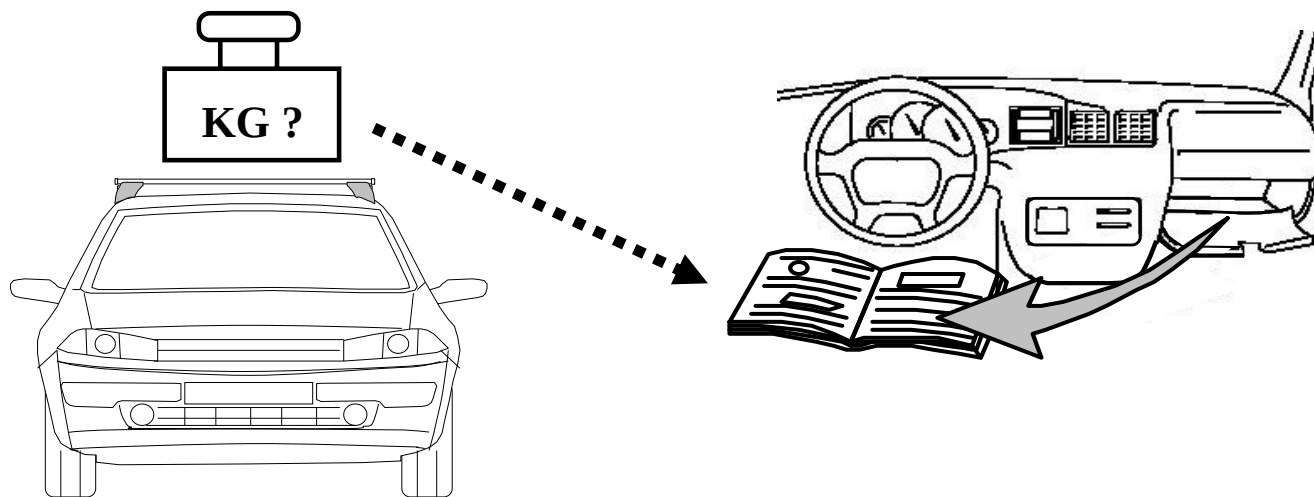

- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |



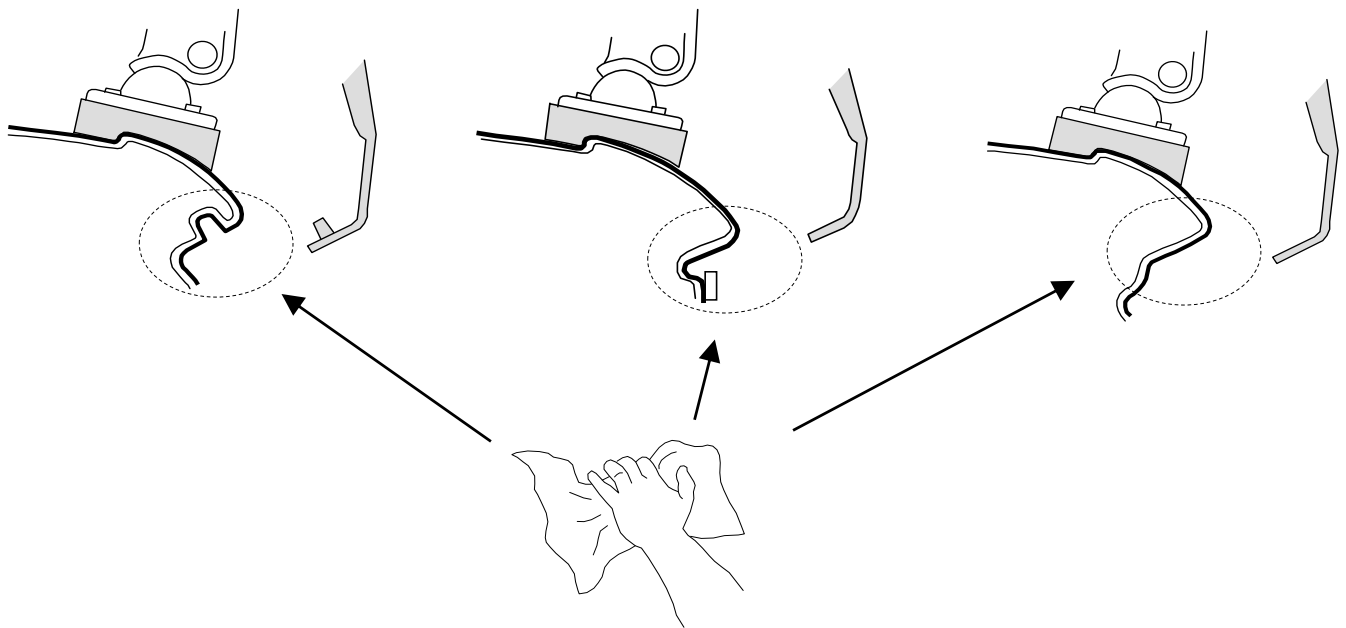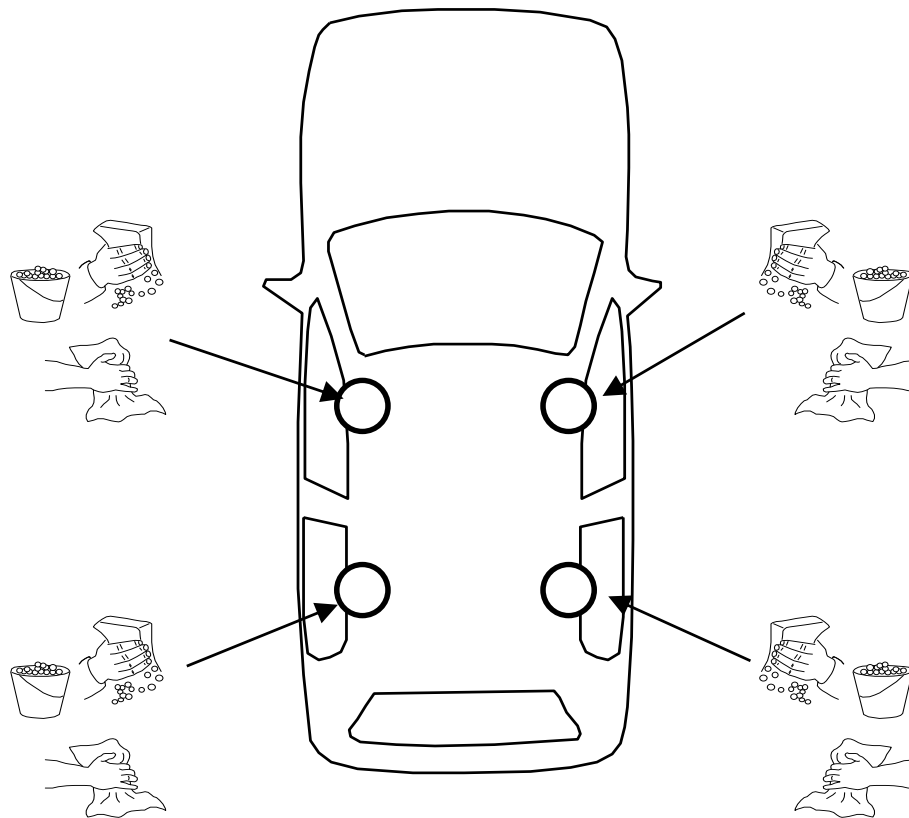

I Montaggio Barra Anteriore

F Fixation Barre Avant

PL Montaż Bagażnika Bazowego Tylnego


GB Fitting Front Roof Bar



D Montage Vorderes Dachträgers


NL Montage Voorste Dakdrager

SWE Montering Av Främre Lasthållaren

E Fijación Barra Frontal

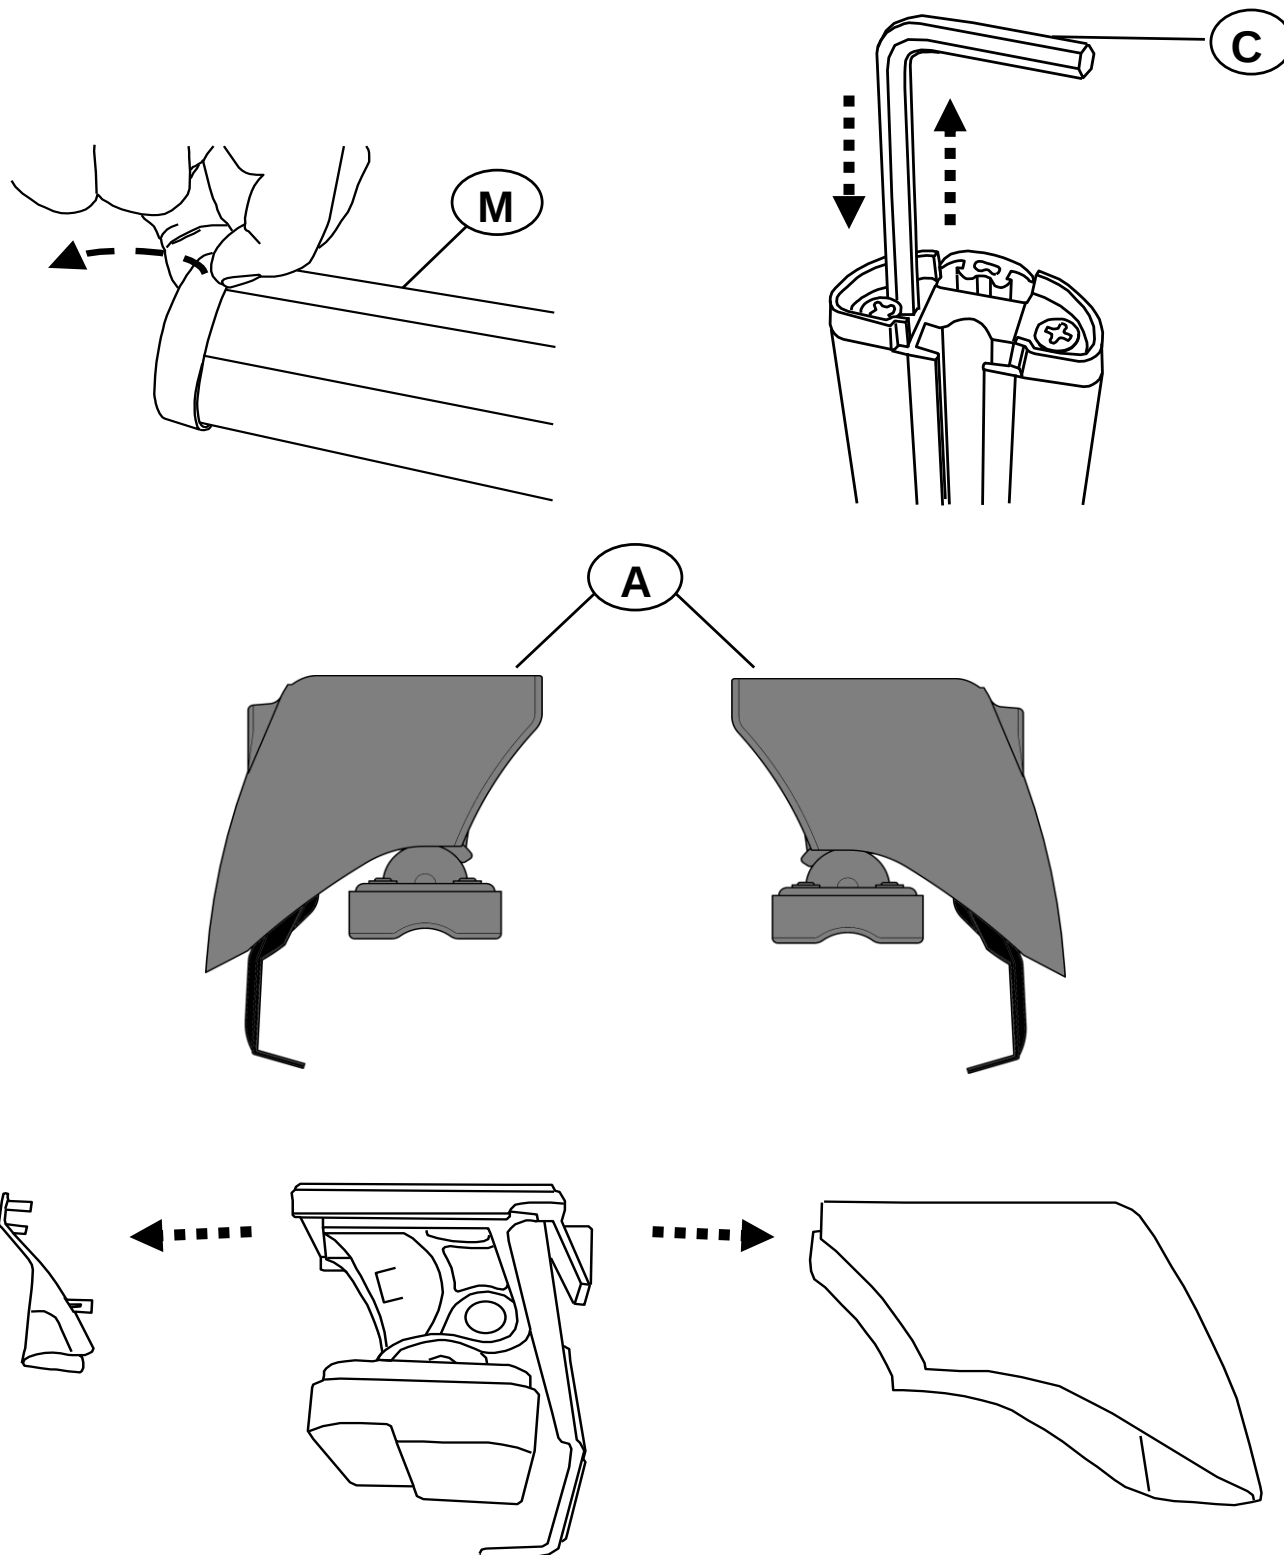


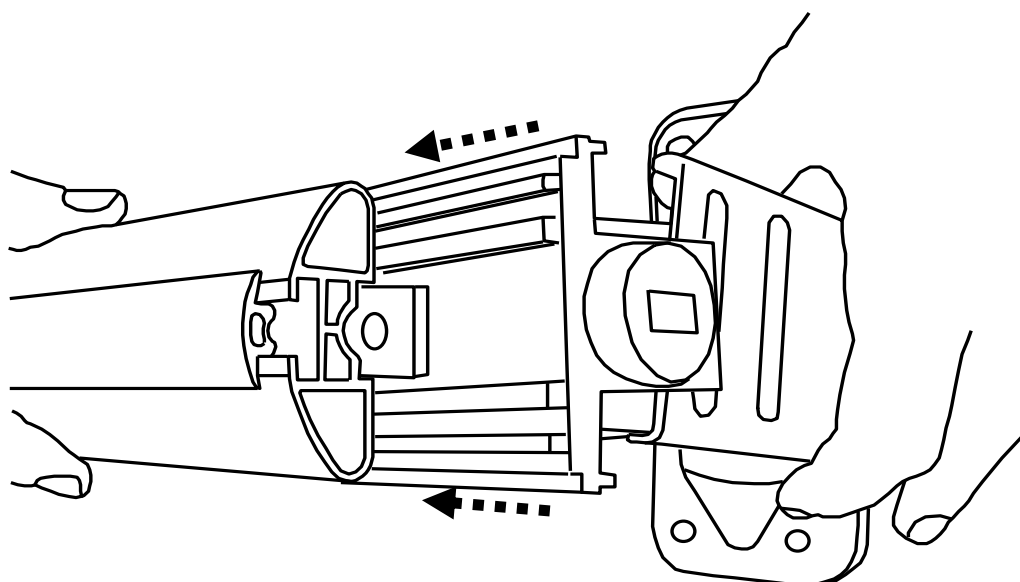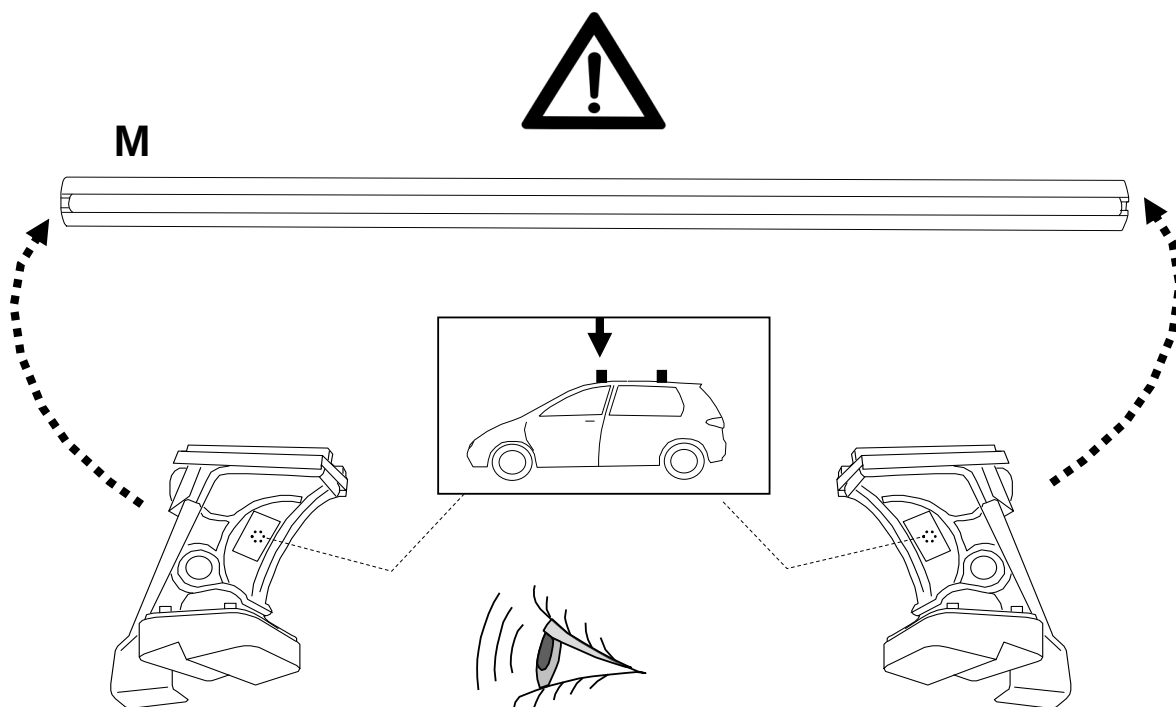

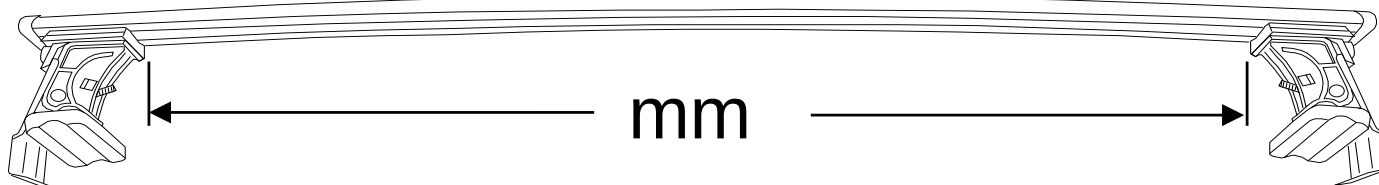


				R	mm
AUDI	A3	3-5	2003-2012	R= 32	1025
AUDI	A3	5	1999-2003	R= 40	965
AUDI	A6	5	1997-2003	R= 48	1005
INFINITI	Q50	5	2014>	R= 46	995
MG MOTOR	4	5	2022>	R= 37	1050


R R R

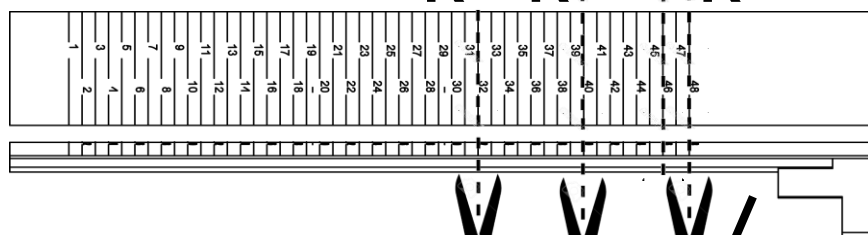


1

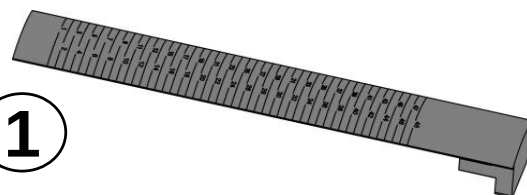



2

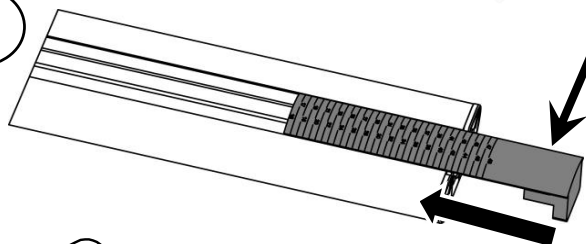


3

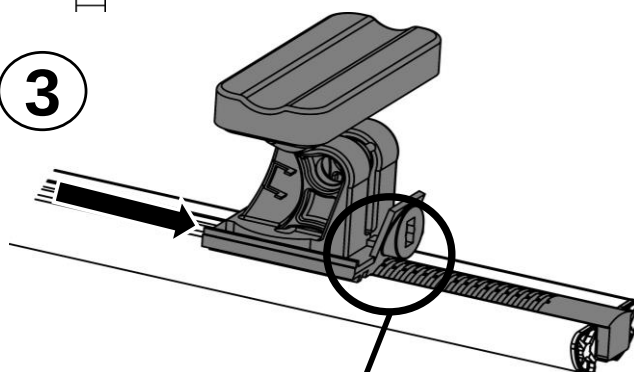


4

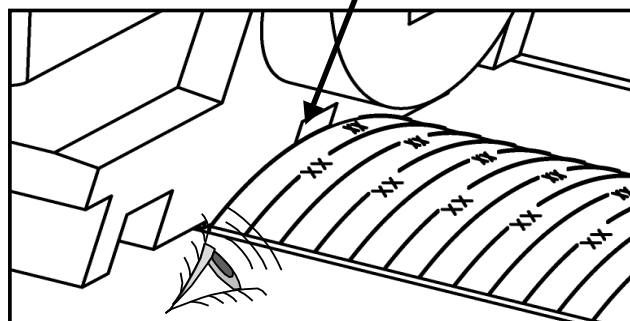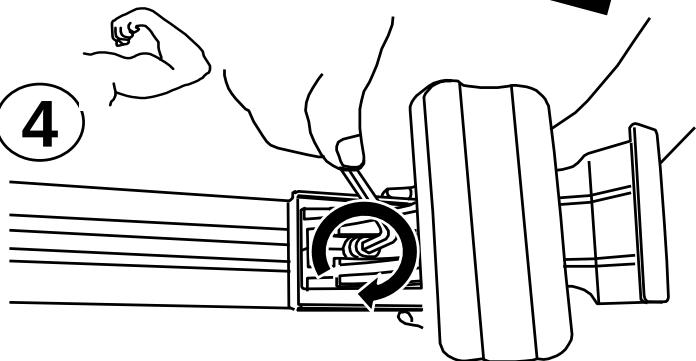


5

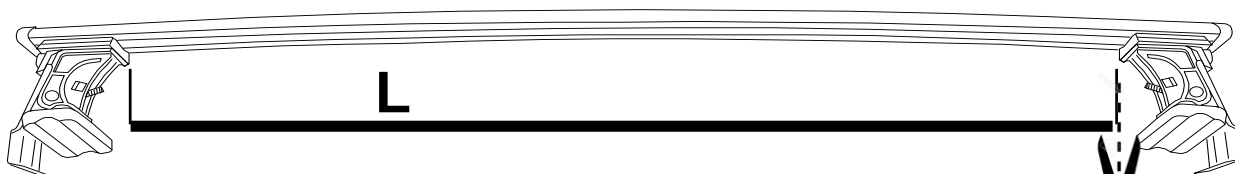



6

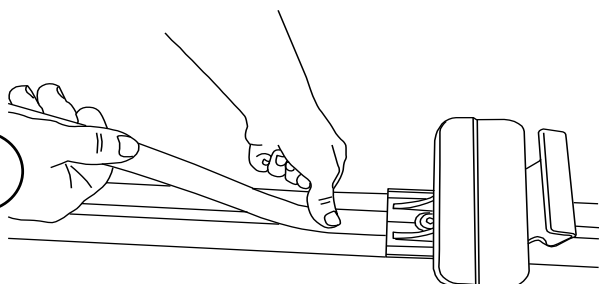


7

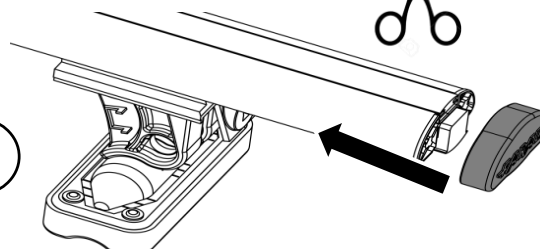



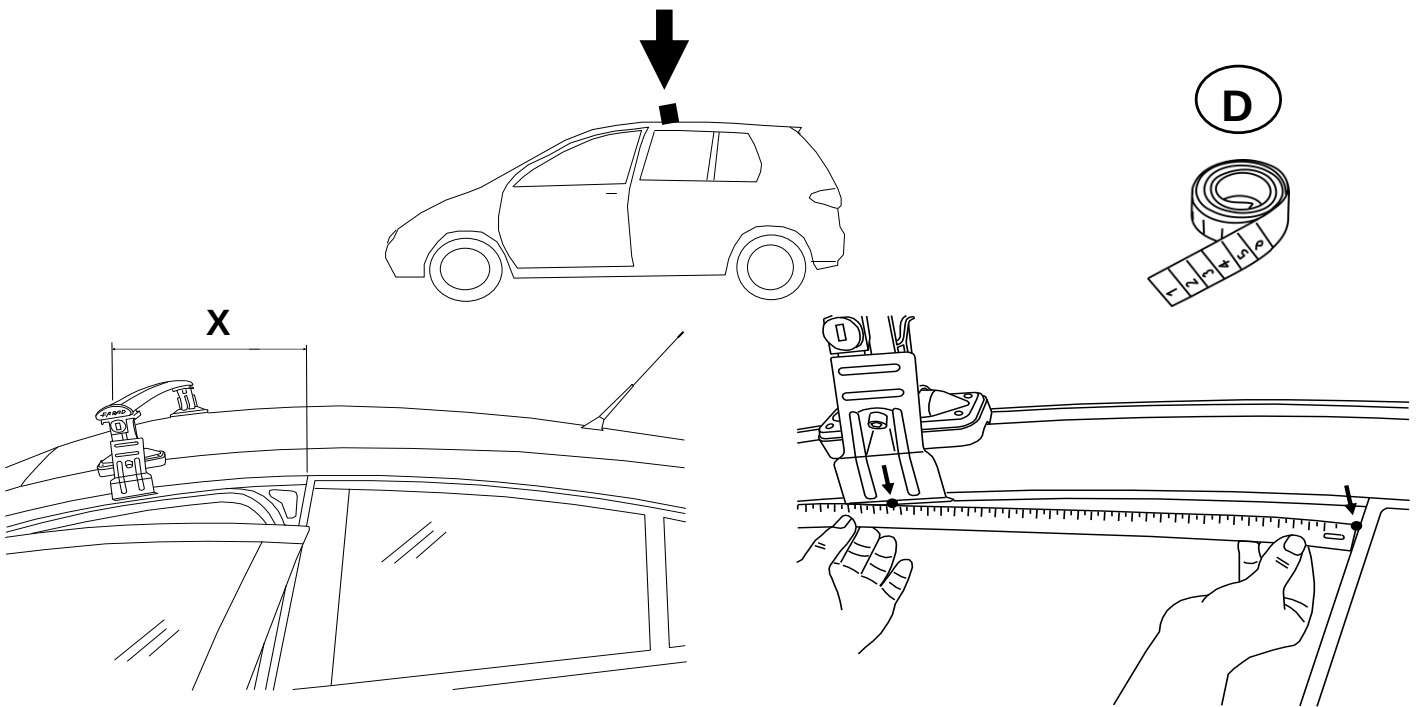


				X
AUDI	A3	3-5	2003-2012	X= 290
AUDI	A3	5	1999-2003	X= 160
AUDI	A6	5	1997-2003	X= 290
INFINITI	Q50	5	2014>	X= 250
MG MOTOR	4	5	2022>	X= 150

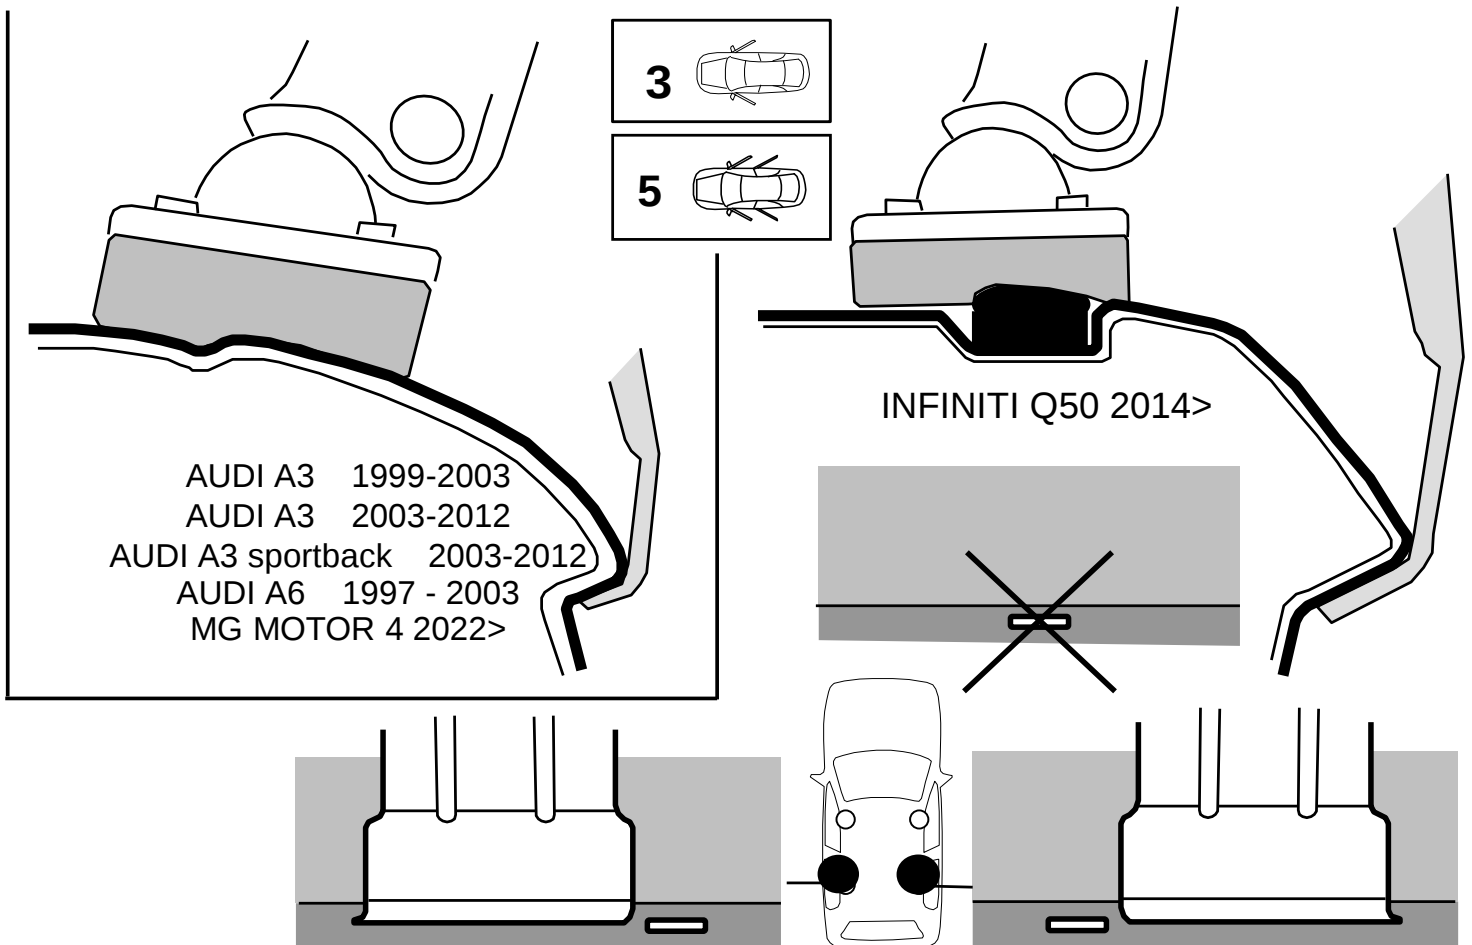







(C)

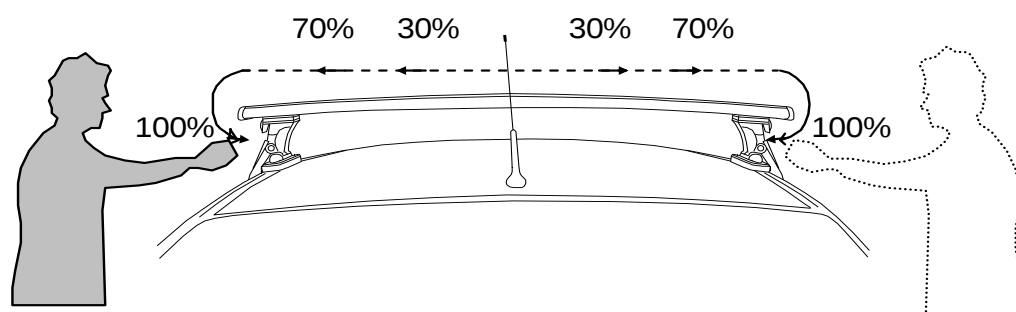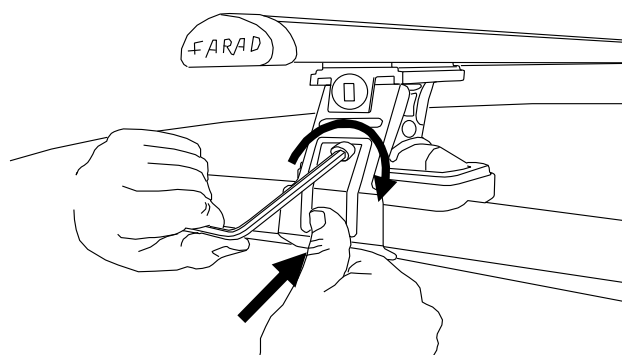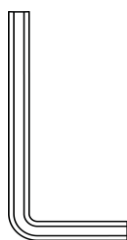


- I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien


- F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

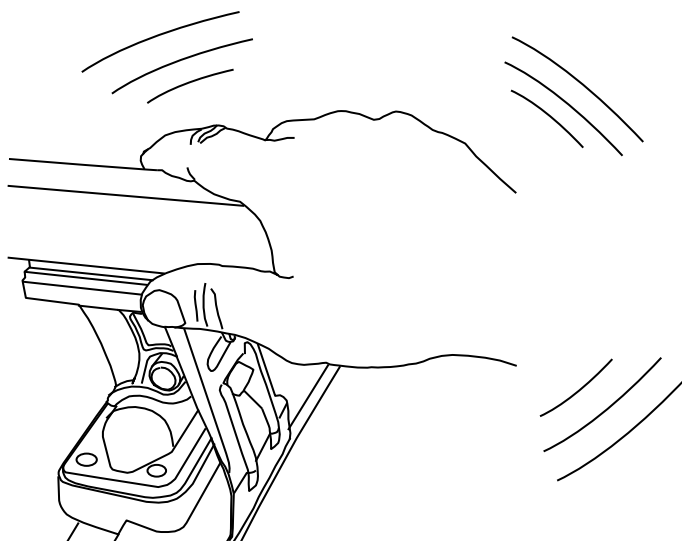

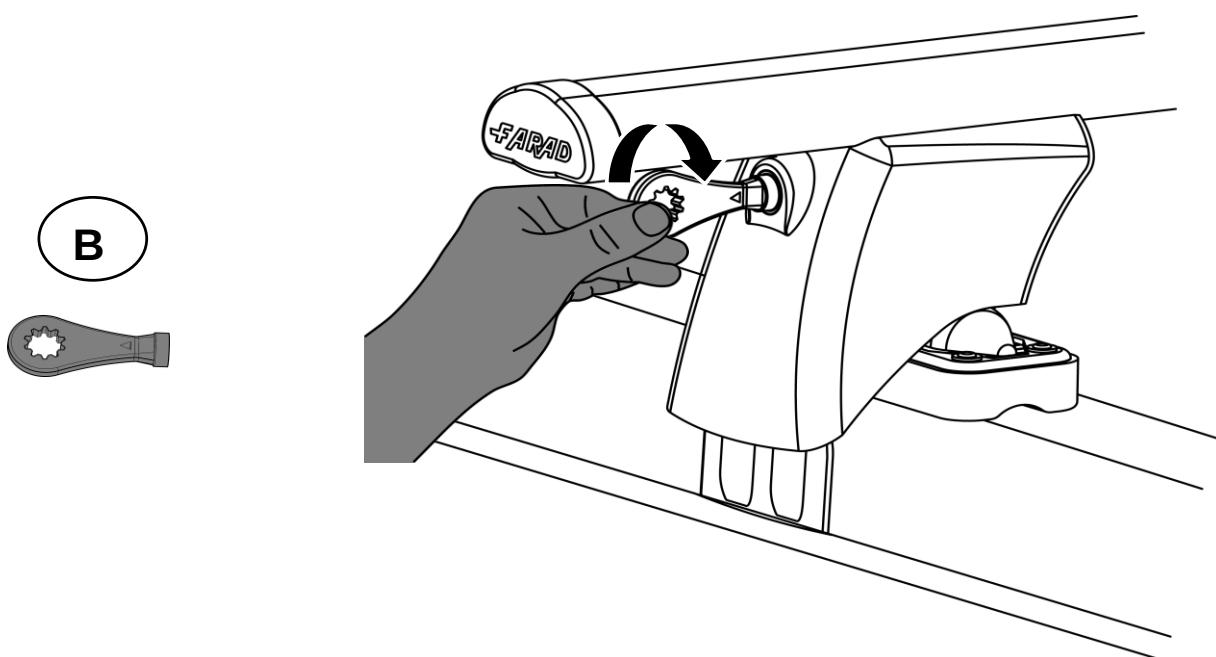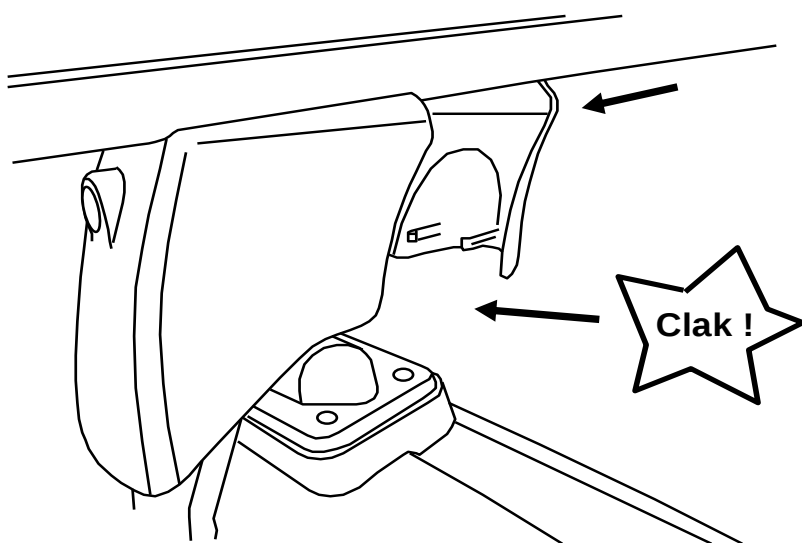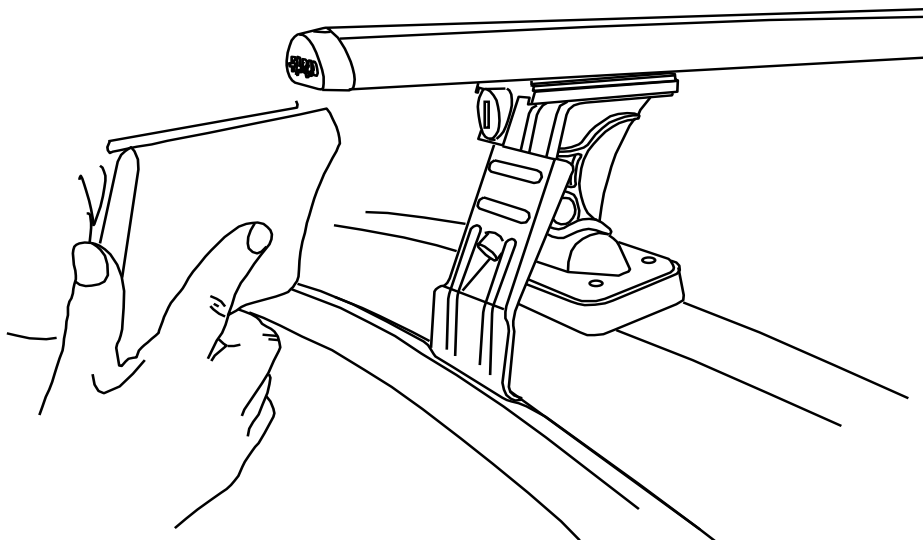

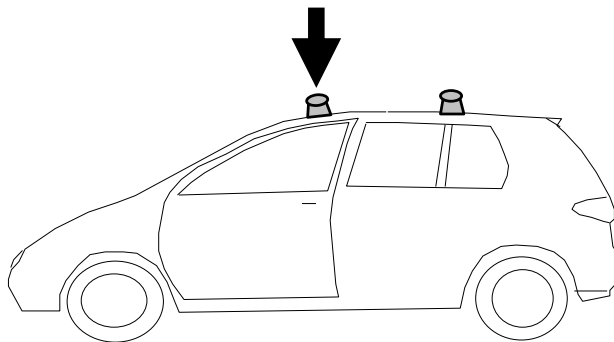

AUDI A3 1999-2003	AUDI A3 2003-2012
AUDI A3 sportback 2003-2012	AUDI A6 1997 - 2003
MG MOTOR 4 ELECTRIC 2022>	

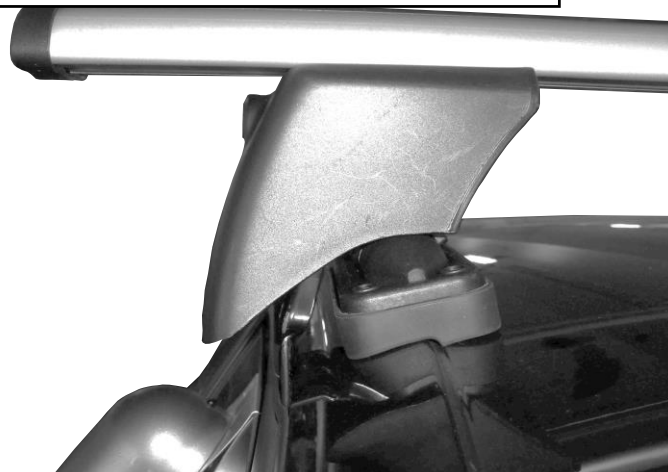

INFINITI Q50 2014>



- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT



I **Montaggio barra posteriore**

PL **Montaż Bagażnika Bazowego Przedniego**

SWE **Montering Främre Lasthållaren**


NL **Montage Achterste Dakdrager**



F **Fixation Barre Arriere**


GB **Fitting Rear Roof Bar**


E **Fijación Barra Trasera**

D **Montage Heckdachträgers**





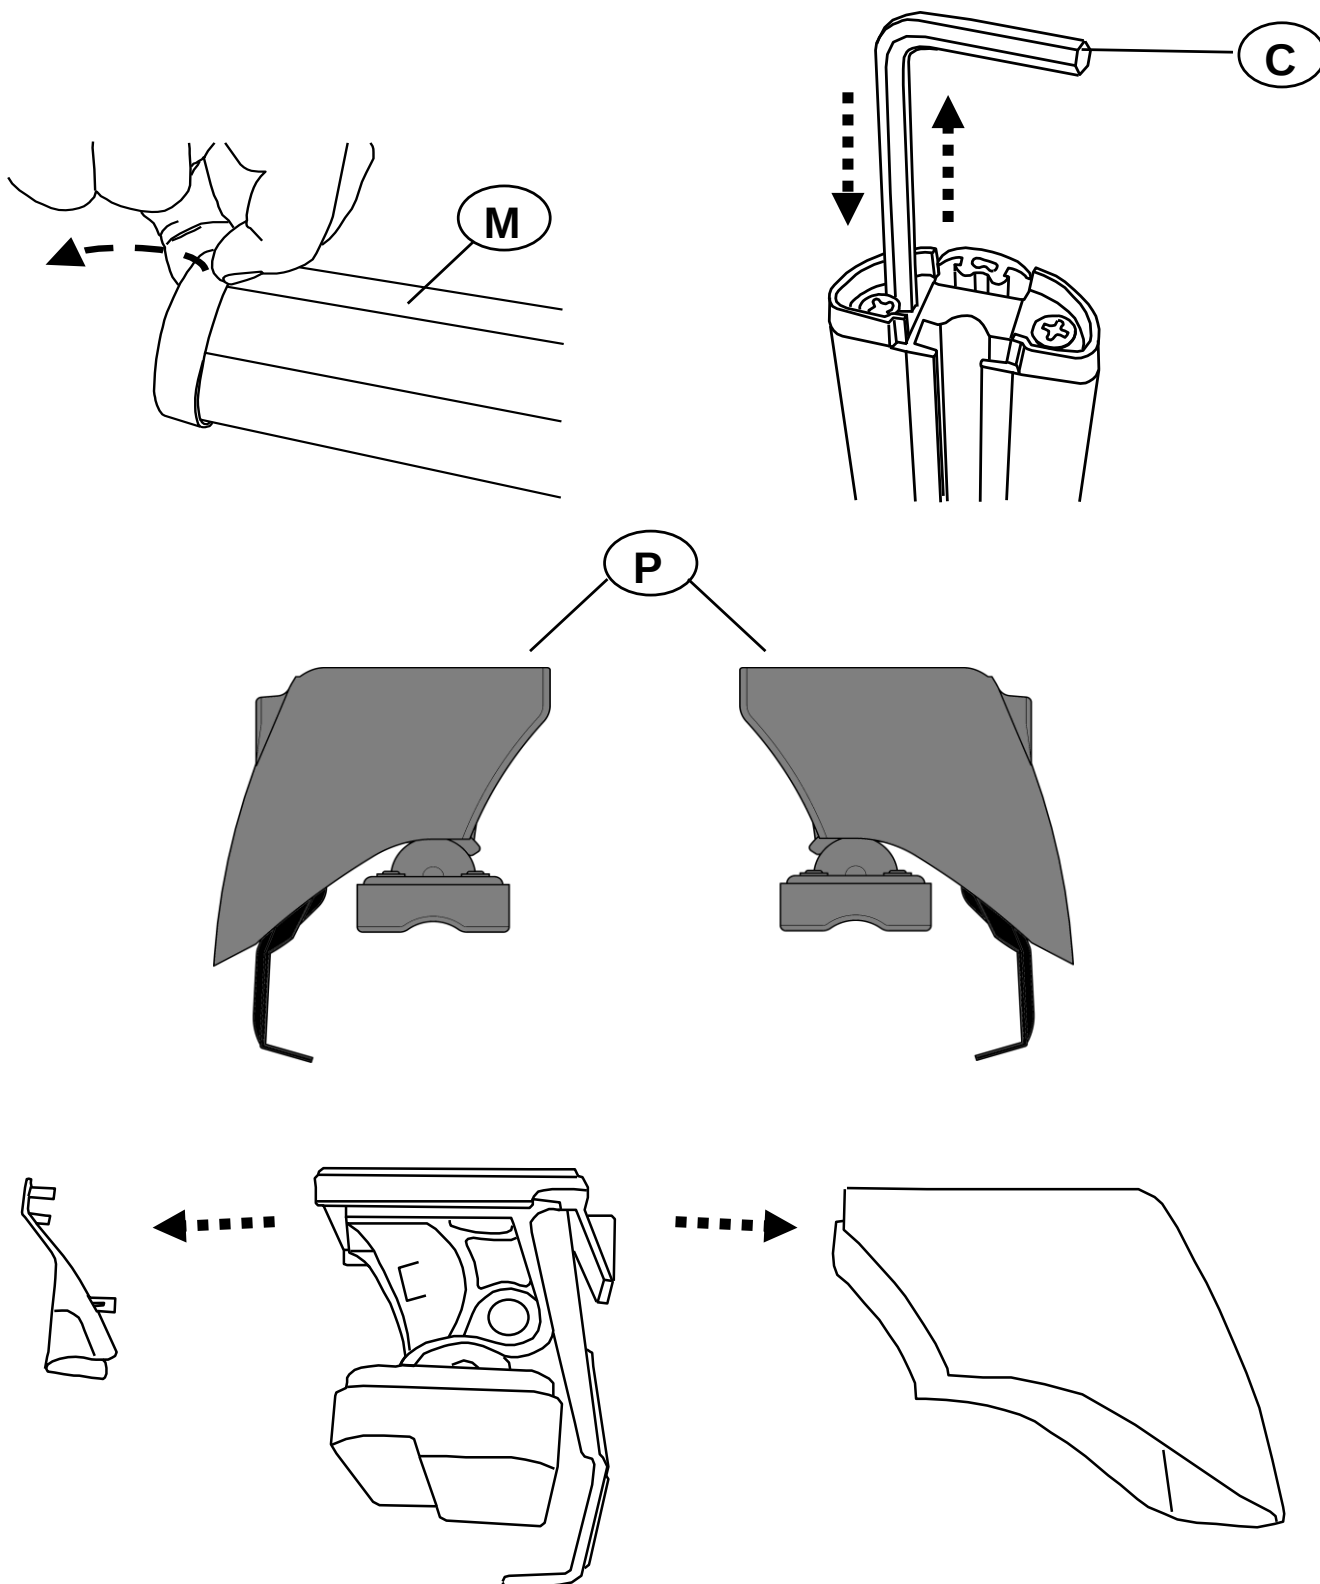


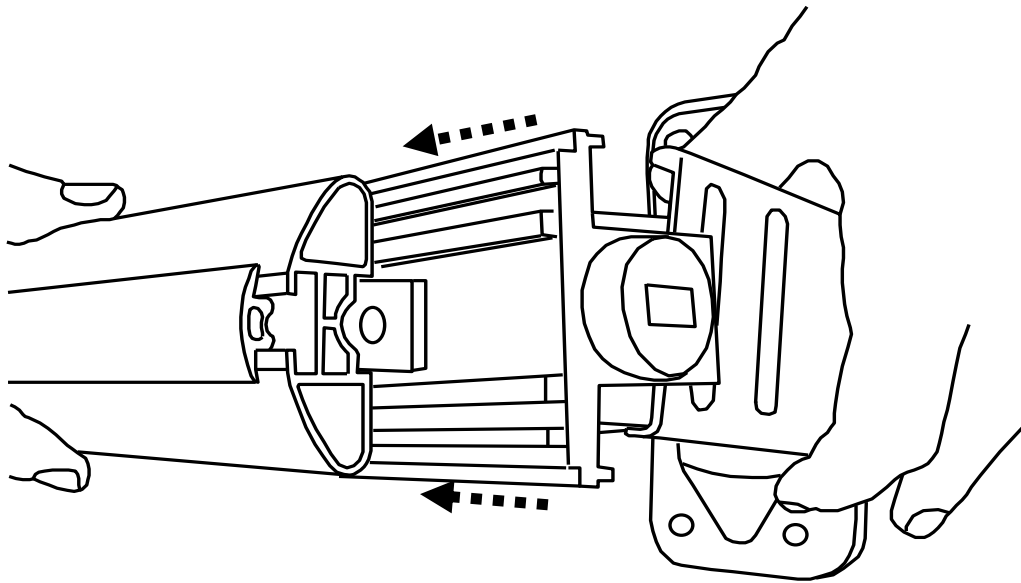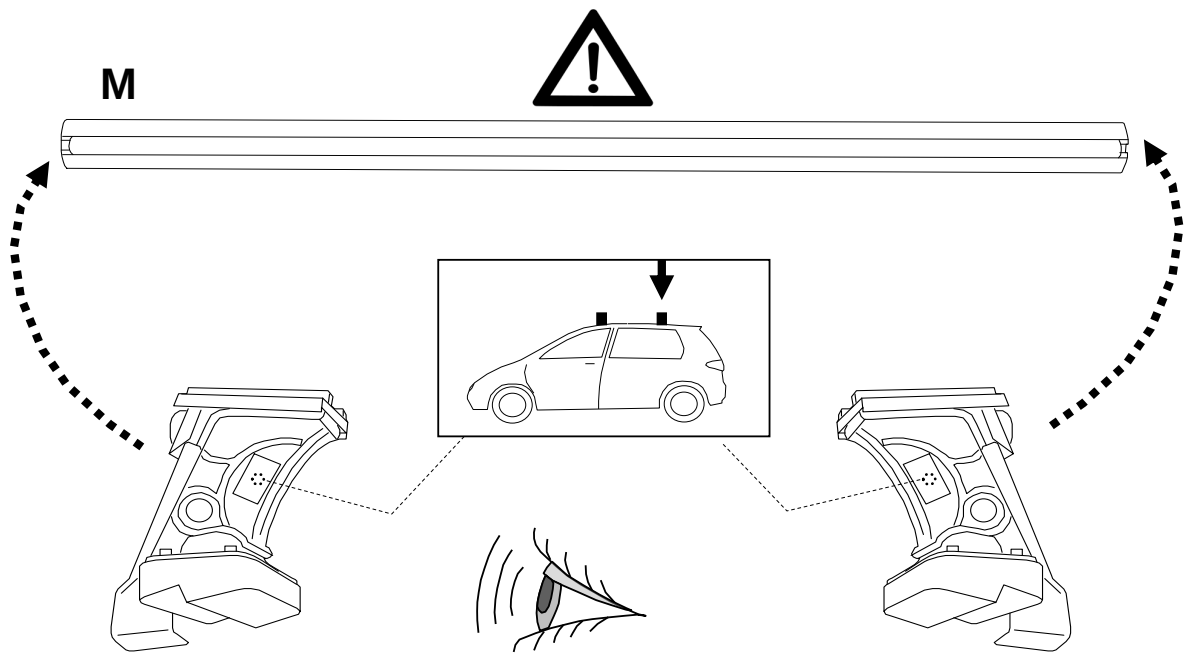



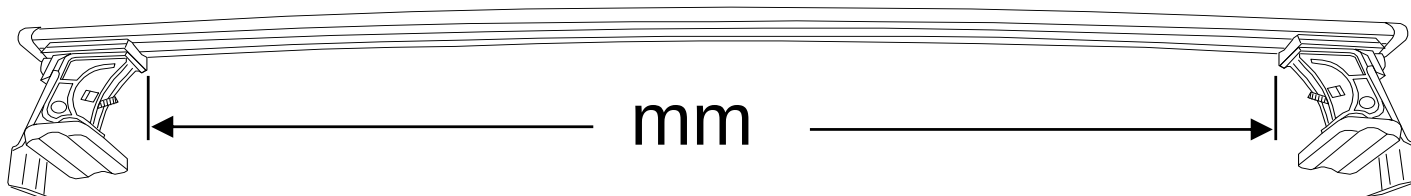





				R	mm
AUDI	A3	3-5	2003-2012	R= 24	980
AUDI	A3	5	1999-2003	R= 31	915
AUDI	A6	5	1997-2003	R= 45	990
INFINITI	Q50	5	2014>	R= 40	965
MG MOTOR	4	5	2022>	R= 27	1000

R . R . R . R .

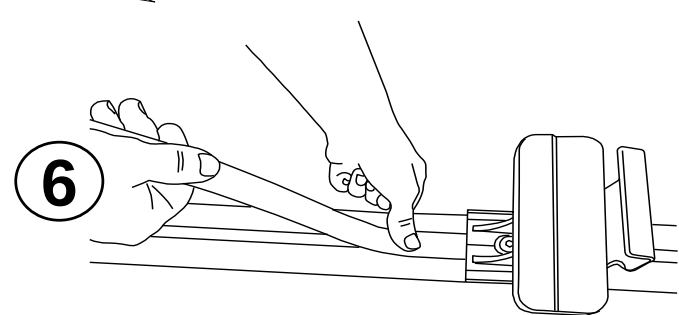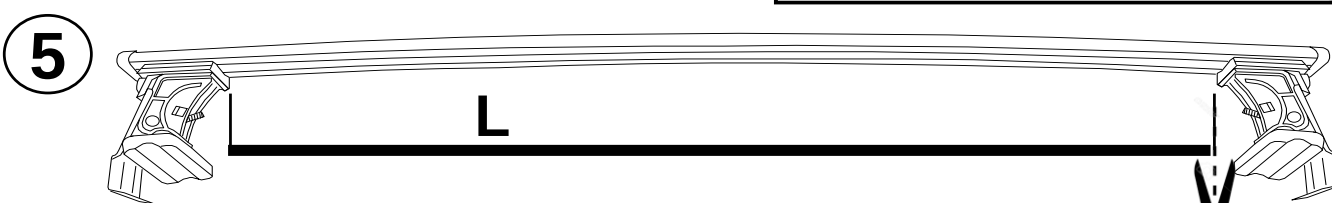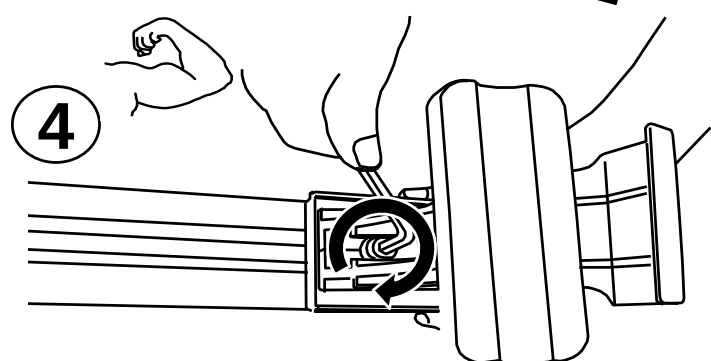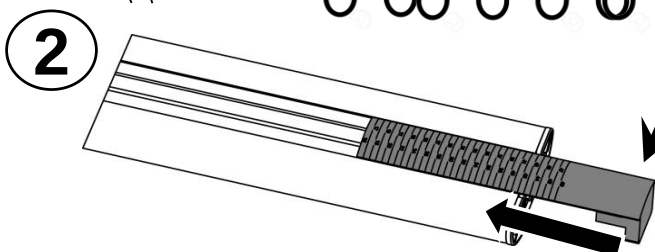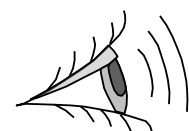


7



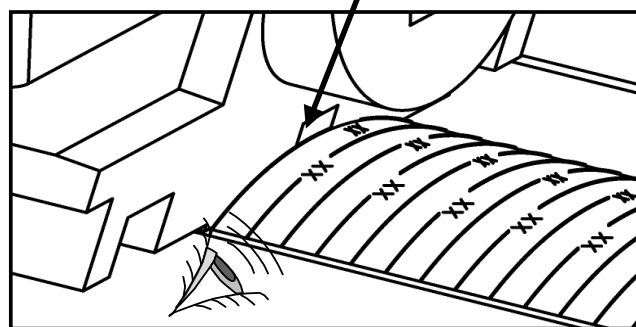
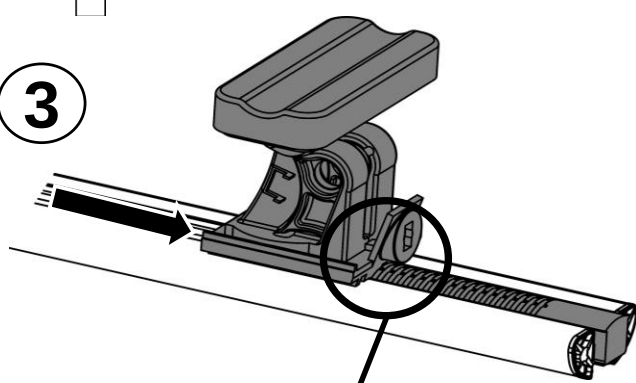
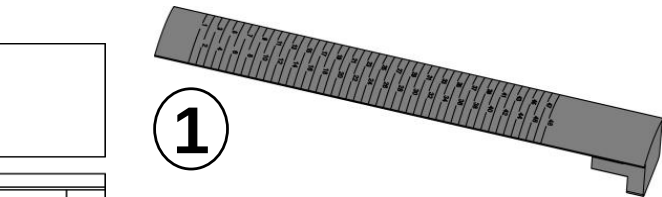


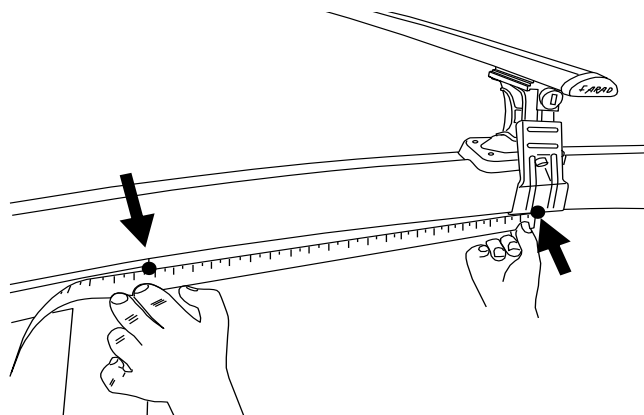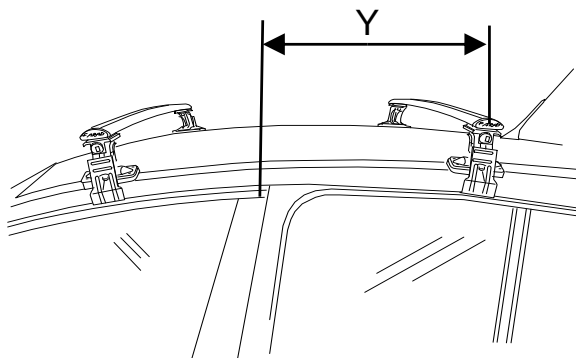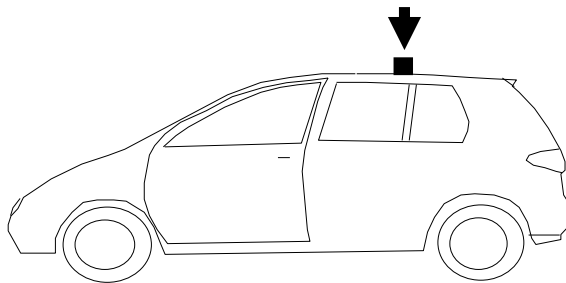

				Y
AUDI	A3	3-5	2003-2012	Y= 400
AUDI	A3	5	1999-2003	Y= 450
AUDI	A6	5	1997-2003	Y= 330
INFINITI	Q50	5	2014>	Y= 510
MG MOTOR	4	5	2022>	Y= 550






AUDI A3 3P 2003-2012

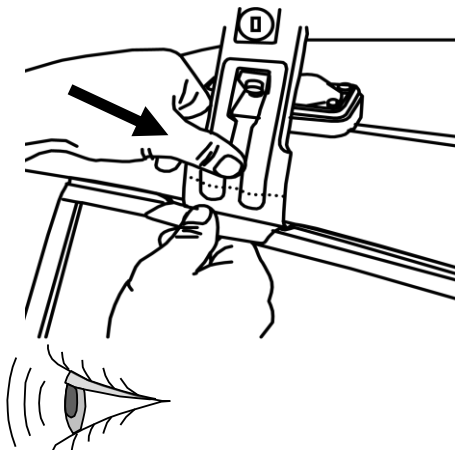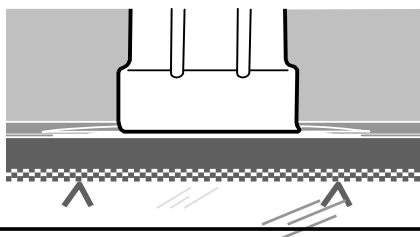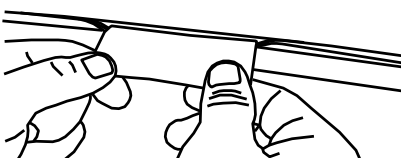


NO!

✓ 4 Nm

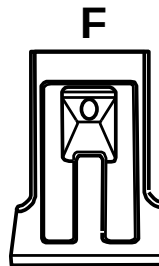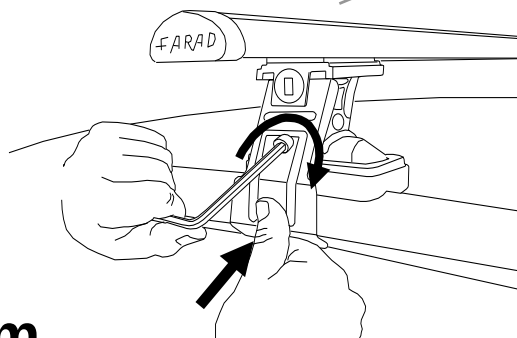

INFINITI Q50 2014>

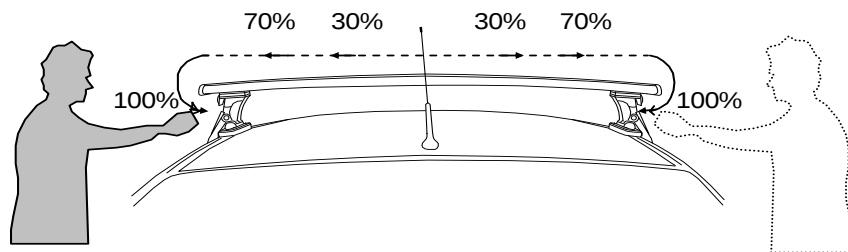

I Alternare il fissaggio delle viti
Śruby dokręcaj naprzemiennie

F Serrer alternativement chaque côté




D Die Schrauben abwechselnd anziehen




GB Tighten alternately


E Apretar alternativamente

NL Afwisselend aan de linker- en de rechterkant aandraaien

SWE Dra åt växelvis

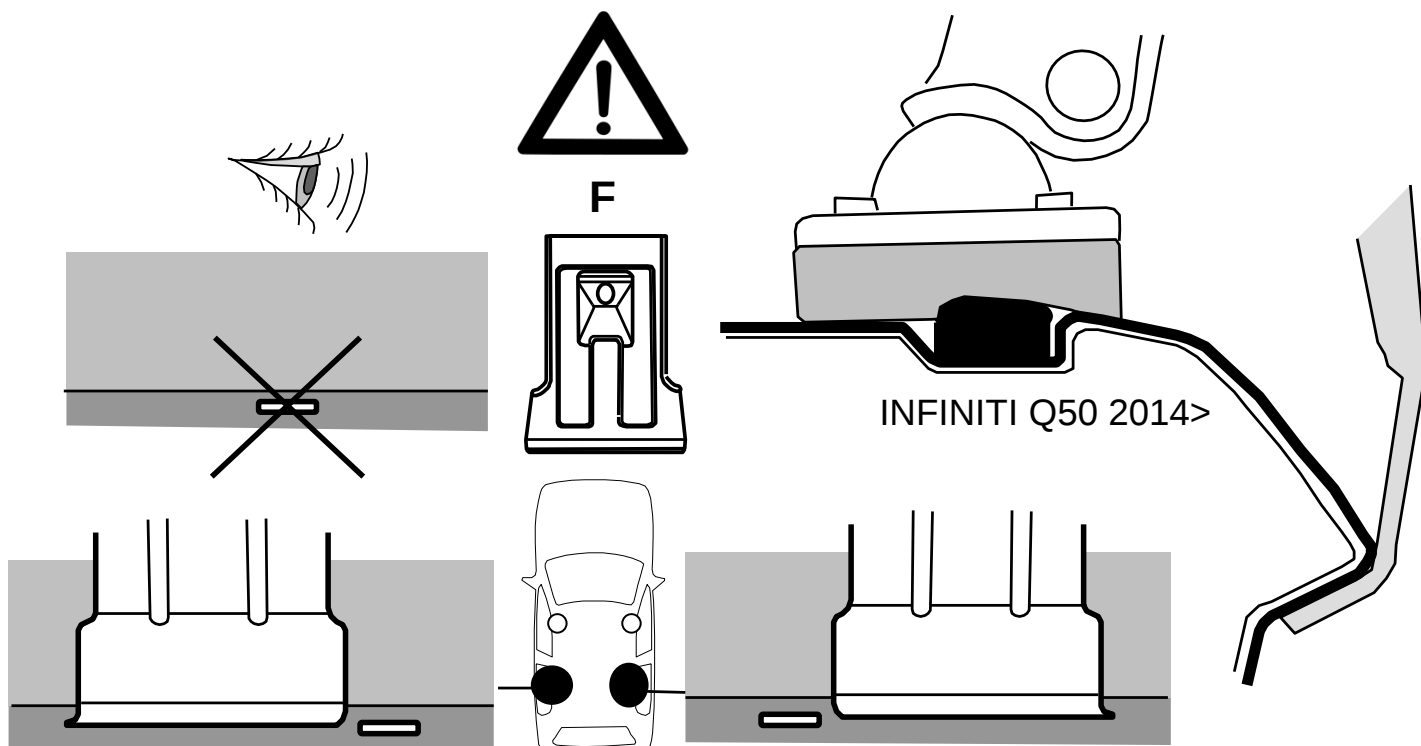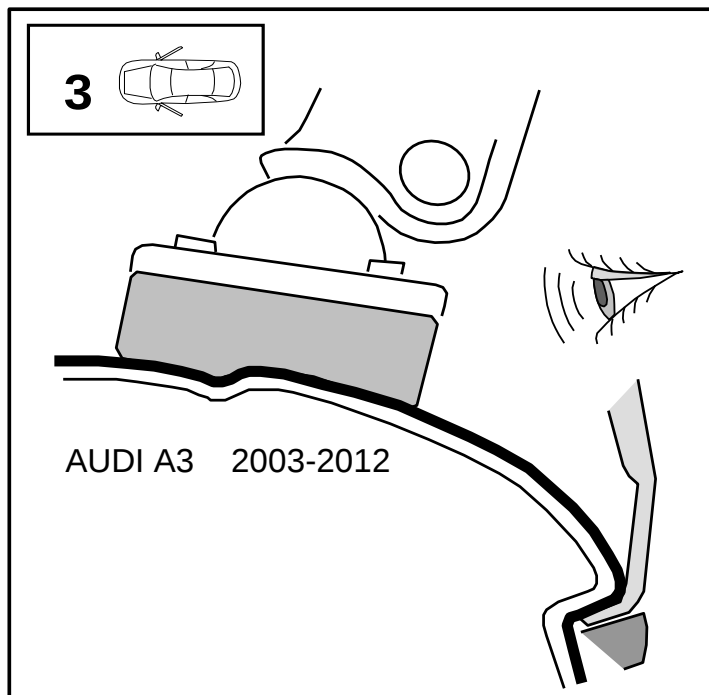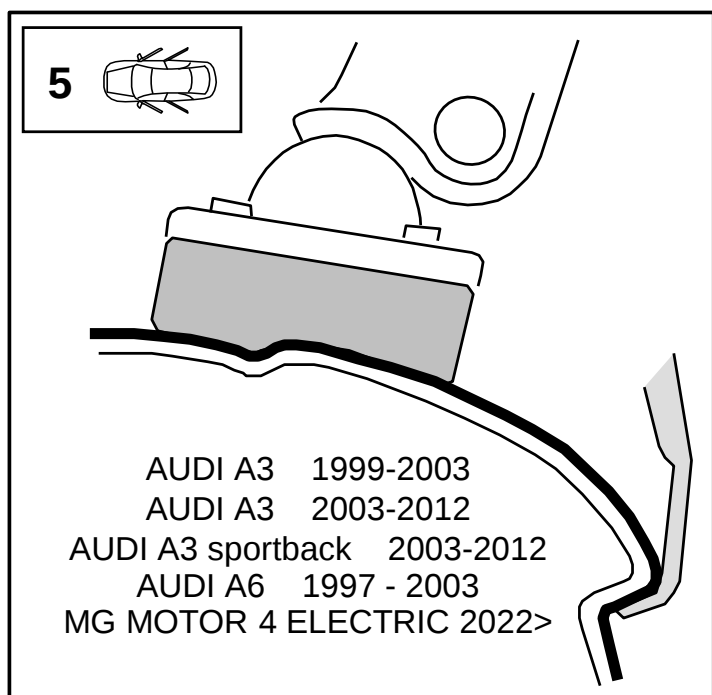


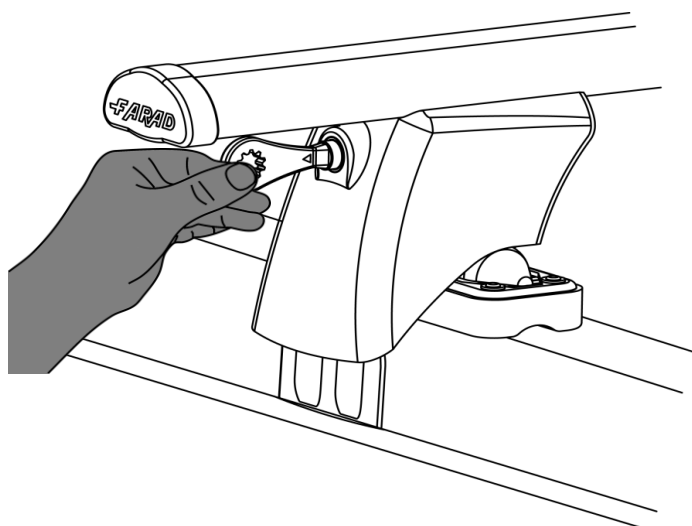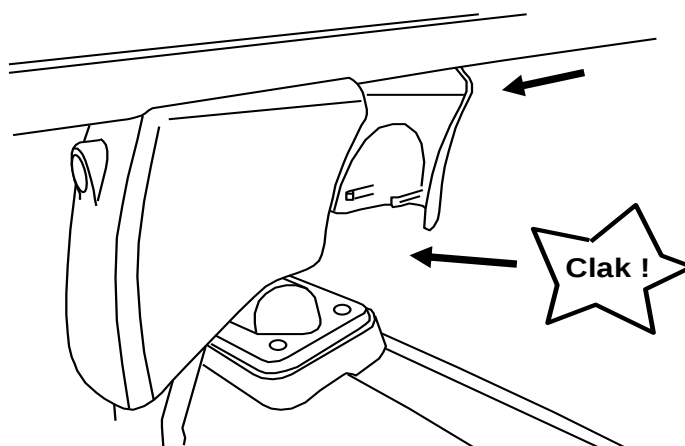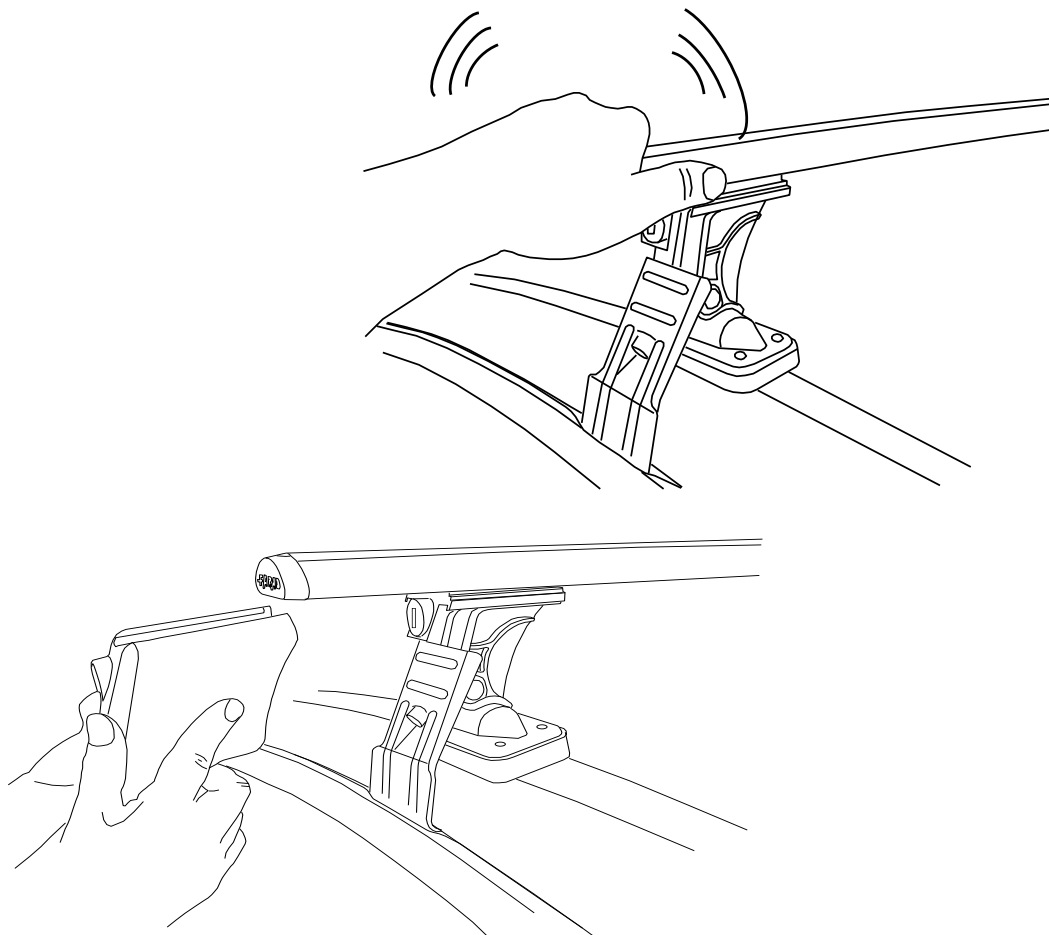

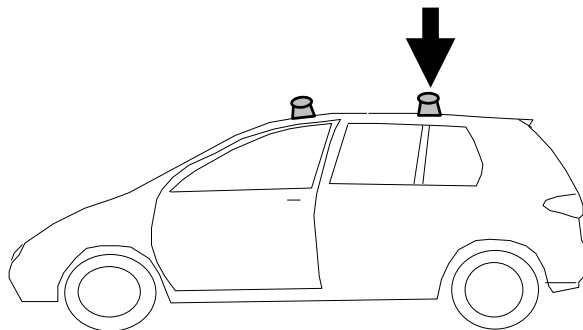

AUDI A3 1999-2003
AUDI A3 sportback 2003-2012
MG MOTOR 4 ELECTRIC 2022>

AUDI A3 2003-2012
AUDI A6 1997 - 2003

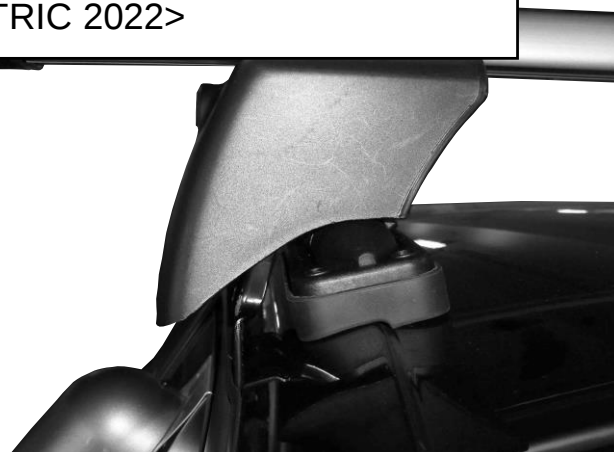

INFINITI Q50 2014>




- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT




RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

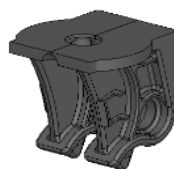

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5



SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

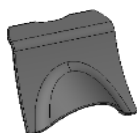


INVOLUCRO POST.
90341 / 9

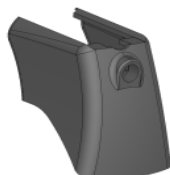

INVOLUCRO ANTERIORE
90341 / 8



CHIAVE + N° COMB
90341 / 7

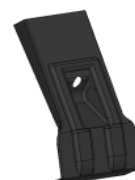

PALETTA
90341 / 4



BARRA ALLUMINIO
90241 / 7




GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in Italy

www.faradworld.com

