

FARAD[®]BARS

made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy

www.faradworld.com

+39 0172 58575

BS 134 - 3

BMW 2 ACTIVE TOURER 2014-2022

BMW 2 GRAN TOURER 2015-2022

HYUNDAI I20 2015>

TOYOTA COROLLA SPORT 2019>

5



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung


GB Fitting instructions

E Instrucciones de montaje

NL Inbouwhandleiding


SWE Montageanvisnin

KIT BS

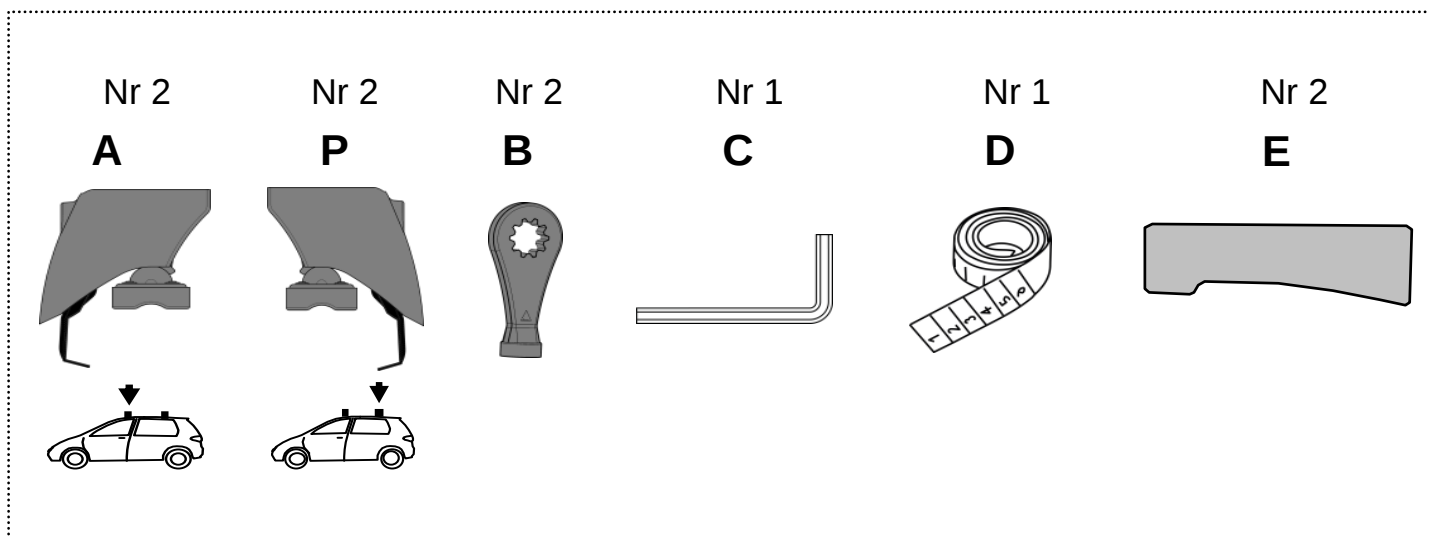












+


KIT ALU

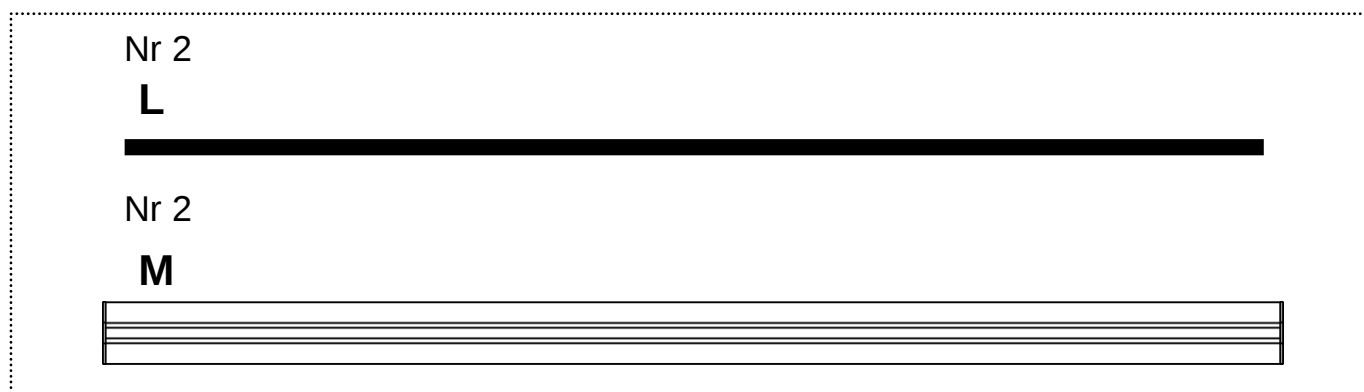



=


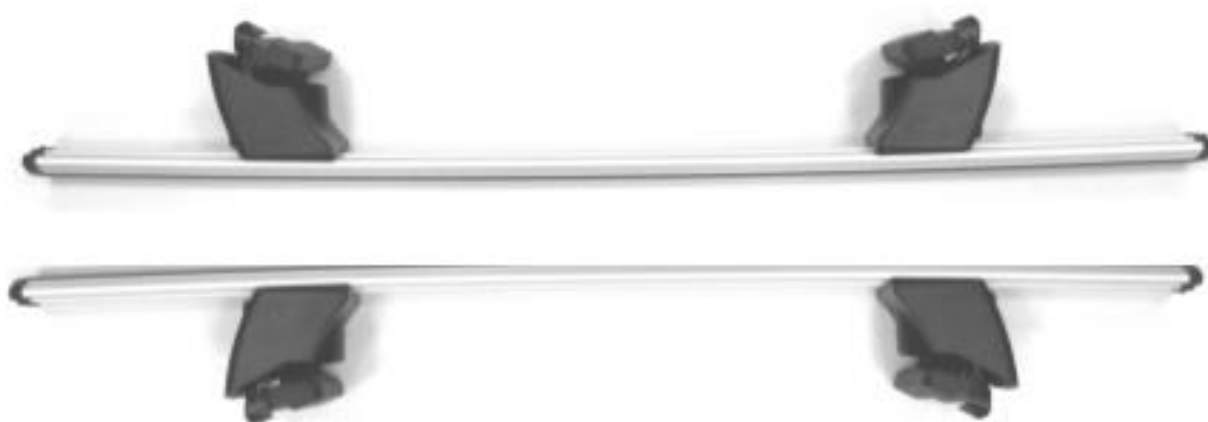


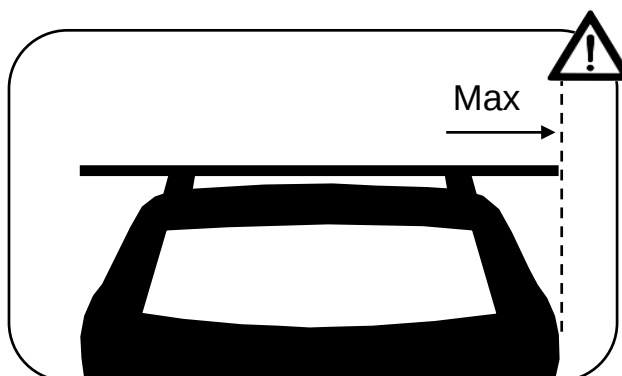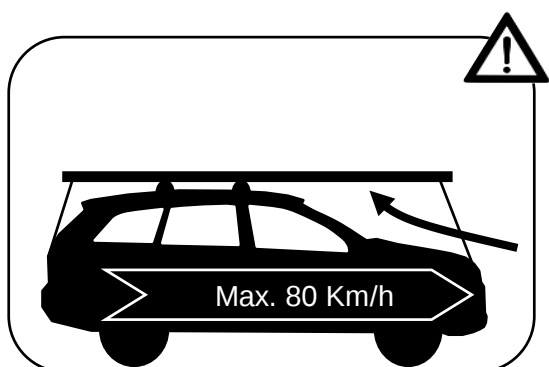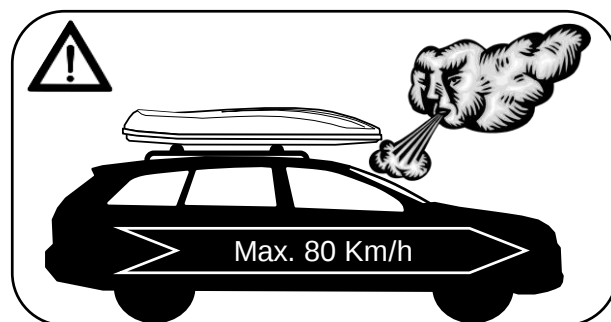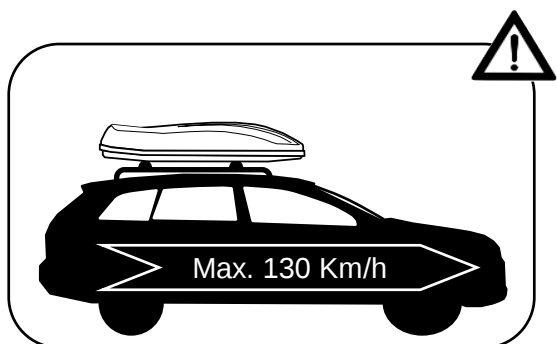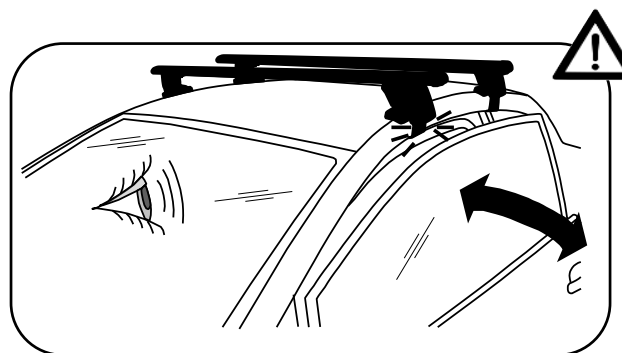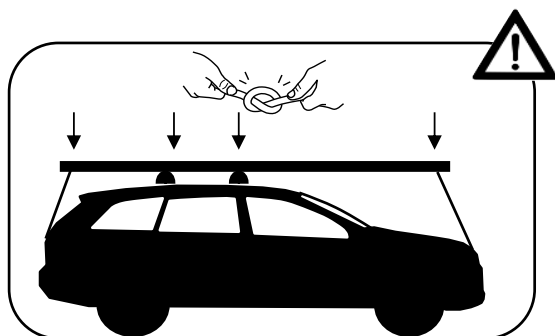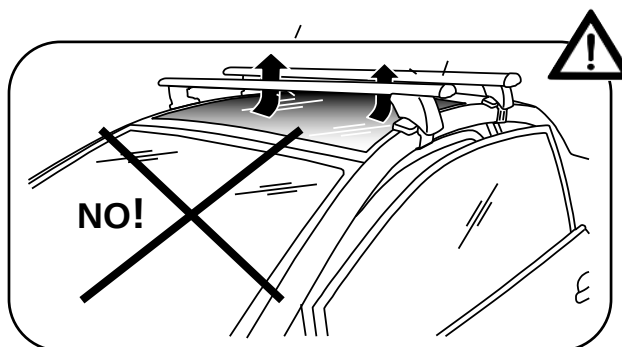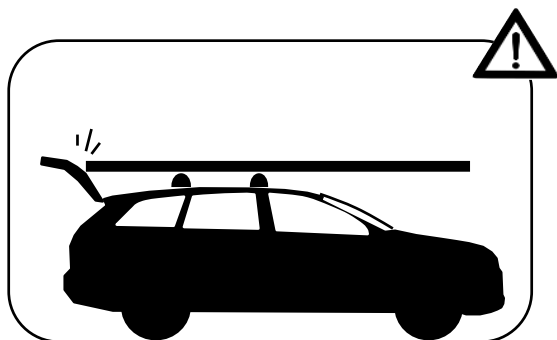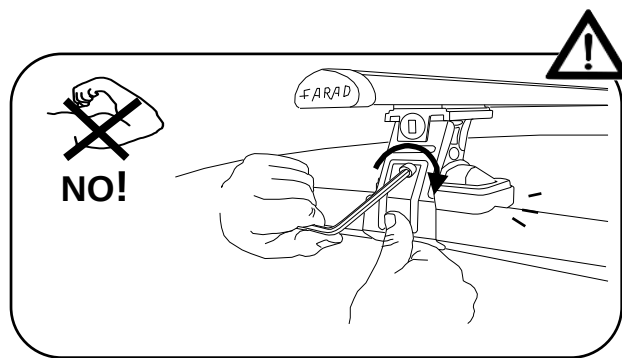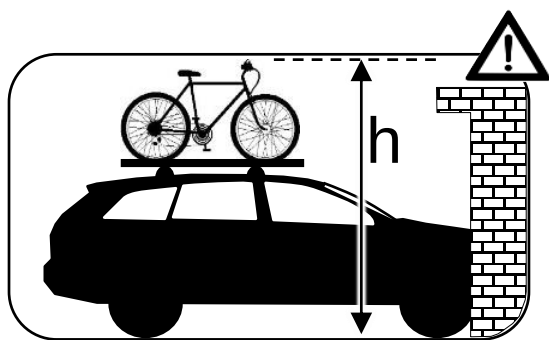

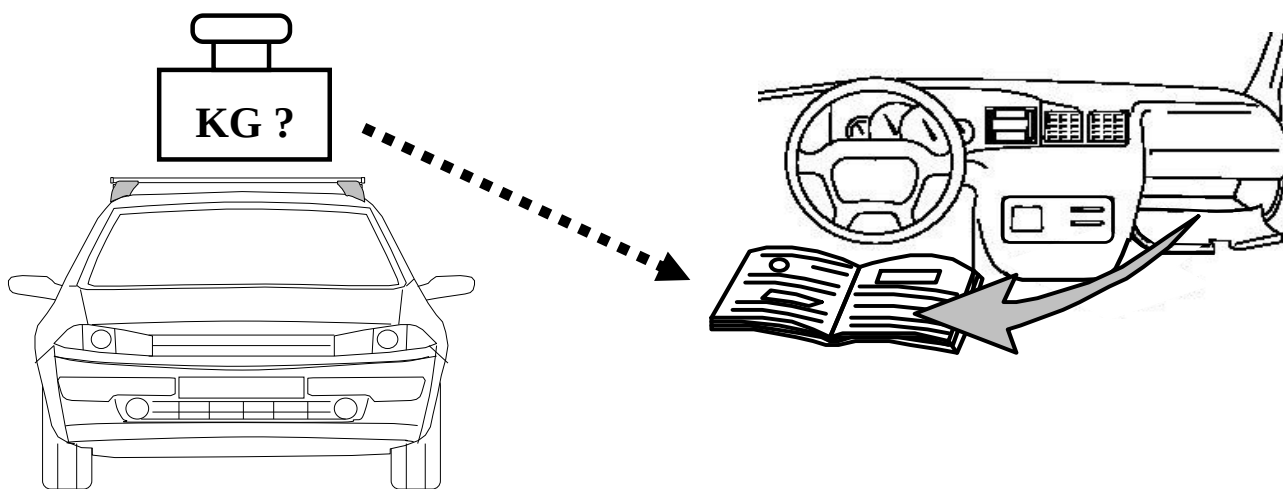

- | | | | |
|----|--|-----|---|
| I | Controllare carico del tetto sul manuale dell'auto | F | vérifier le chargement manuel du toit de la voiture |
| PL | Sprawdź ładowność dachu w instrukcji | D | überprüfen Sie die manuelle Beladung der Autodach |
| GB | Check roof load capacity in car instruction | E | comprobar la carga manual del techo del coche |
| NL | check de handleiding belasting van het dak van de auto | SWE | kontrollera manuell inläggning på taket av bilen |

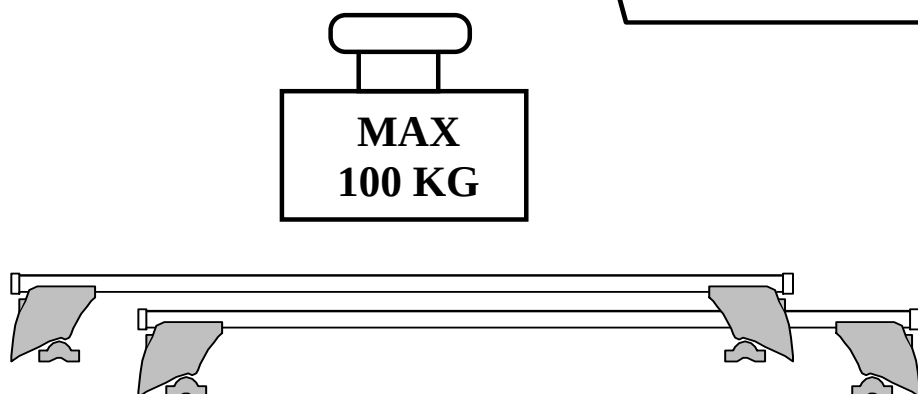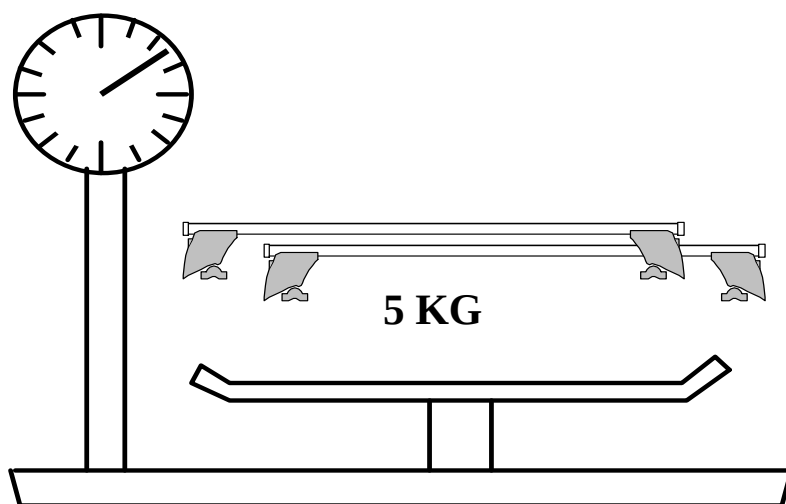

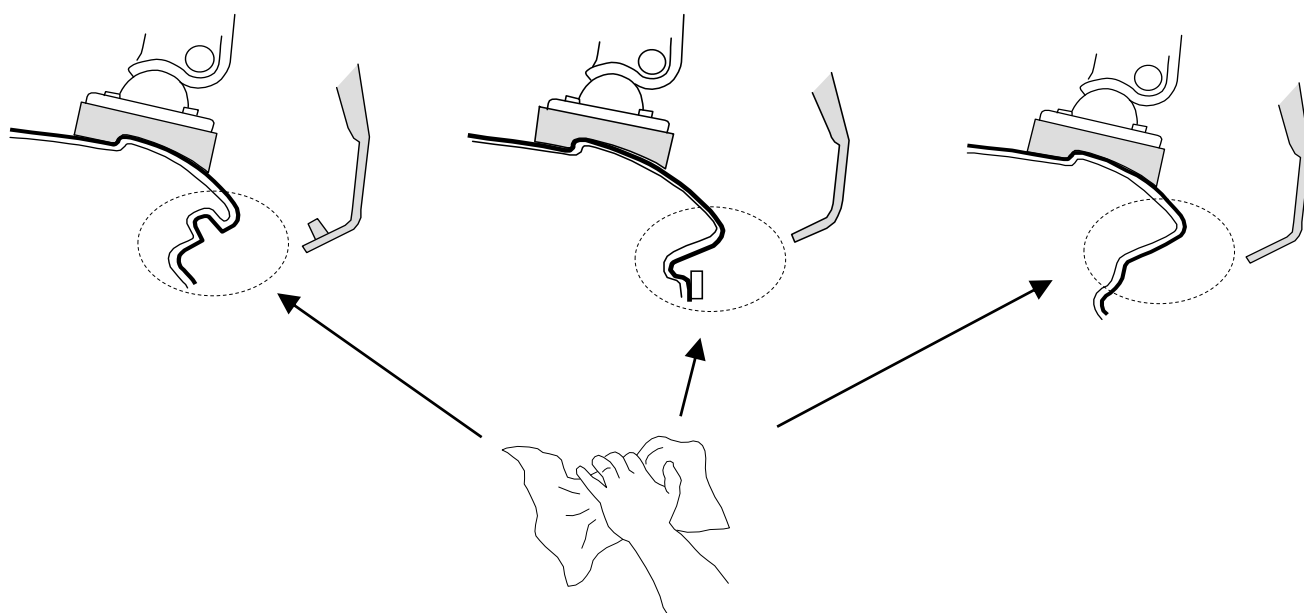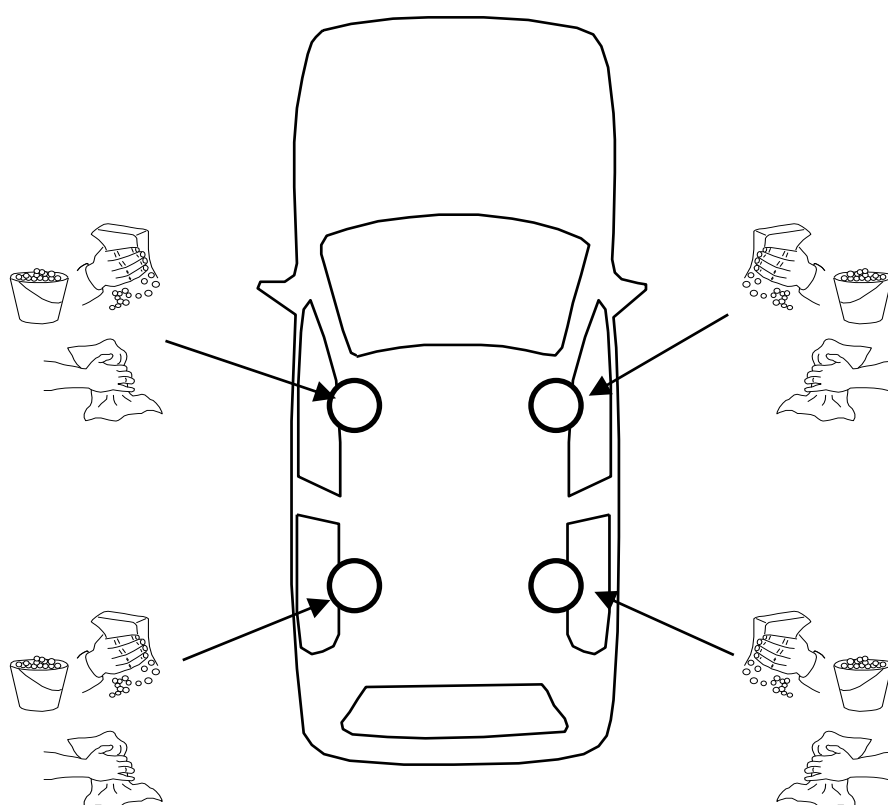

I Montaggio Barra Anteriore

PL Montaż Bagażnika Bazowego Tylnego

D Montage Vorderes Dachträgers


SW Monterings Av Främre Lasthållaren

F Fixation Barre Avant

GB Fitting Front Roof Bar


NL Montage Voorste Dakdrager


E Fijación Barra Frontal


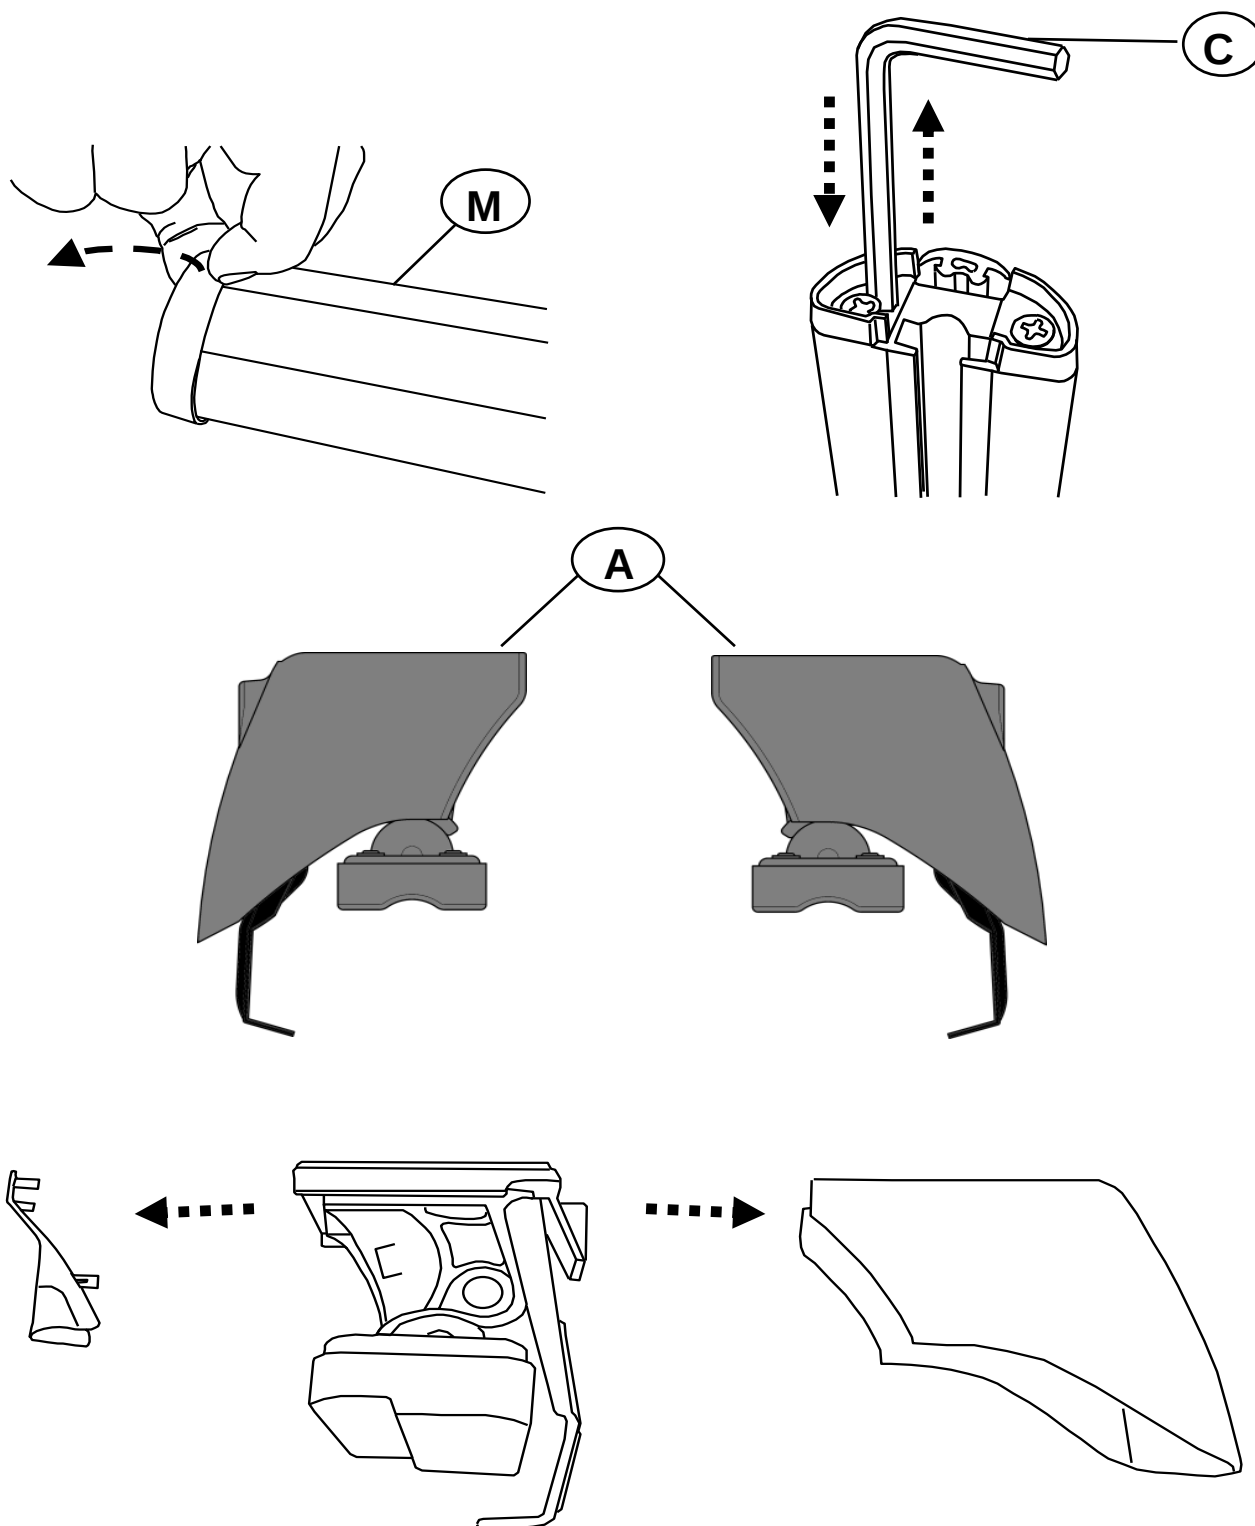





M



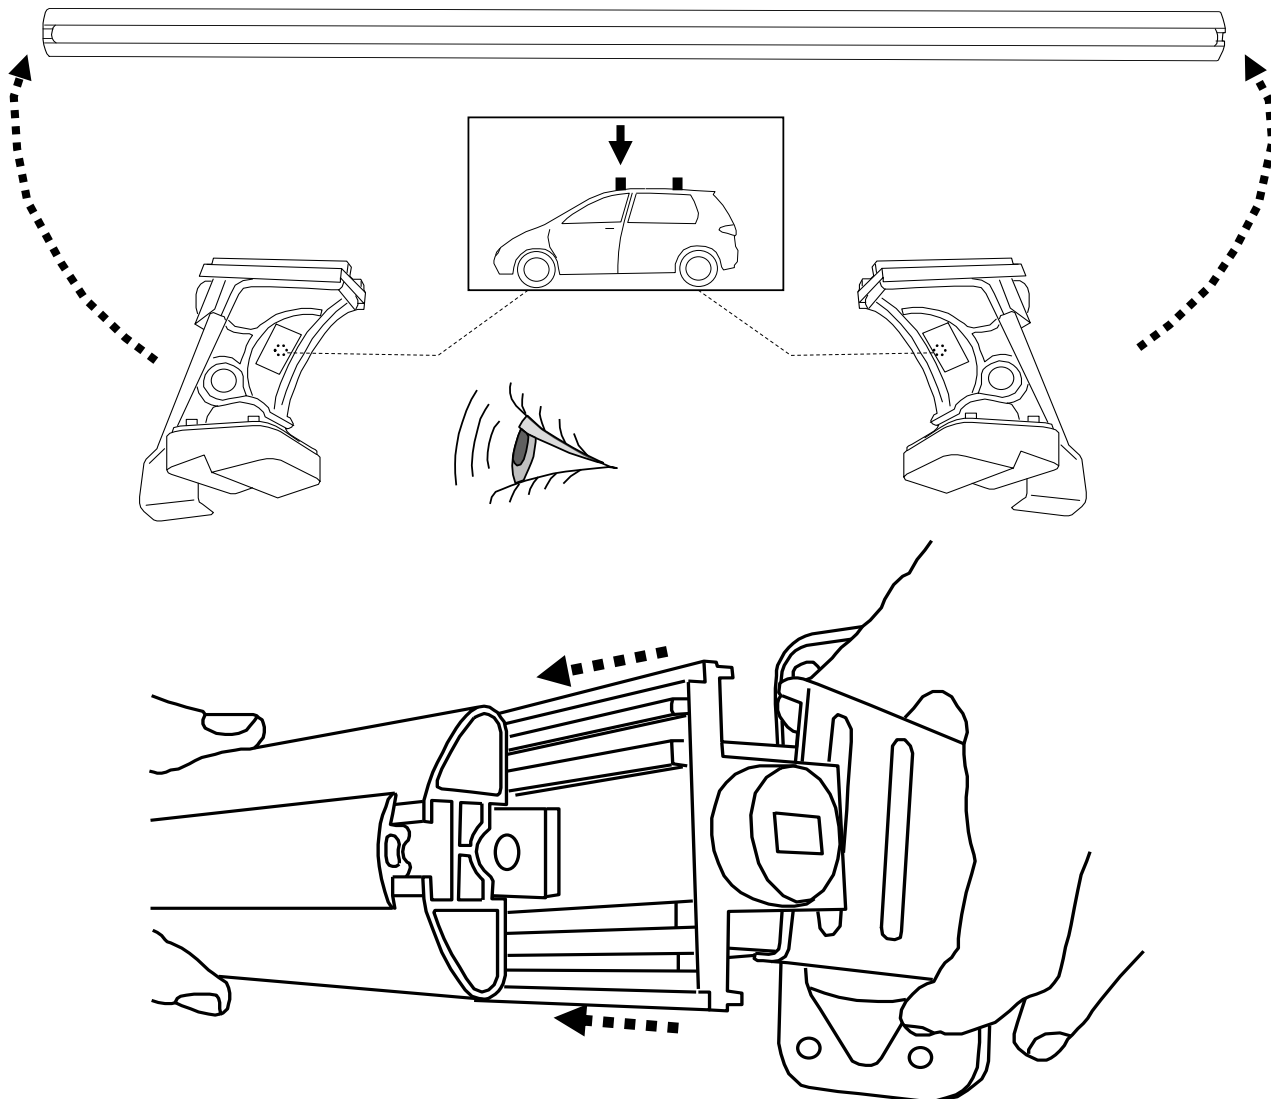


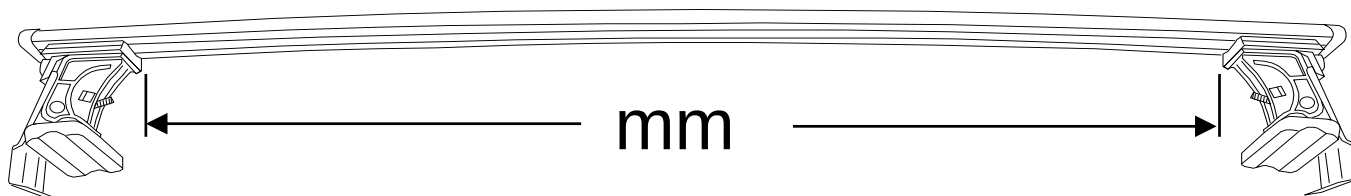





				R	mm
BMW	2 ACTIVE TOURER	5	2014-2022	R= 33	1030
BMW	2 GRAN TOURER	5	2015-2022	R= 33	1030
HYUNDAI	I20	5	2015>	R= 31	1020
TOYOTA	COROLLA SPORT	5	2019>	R= 42	975


(OPERATION 1 TO 6 NOT FOR IRON BAR)

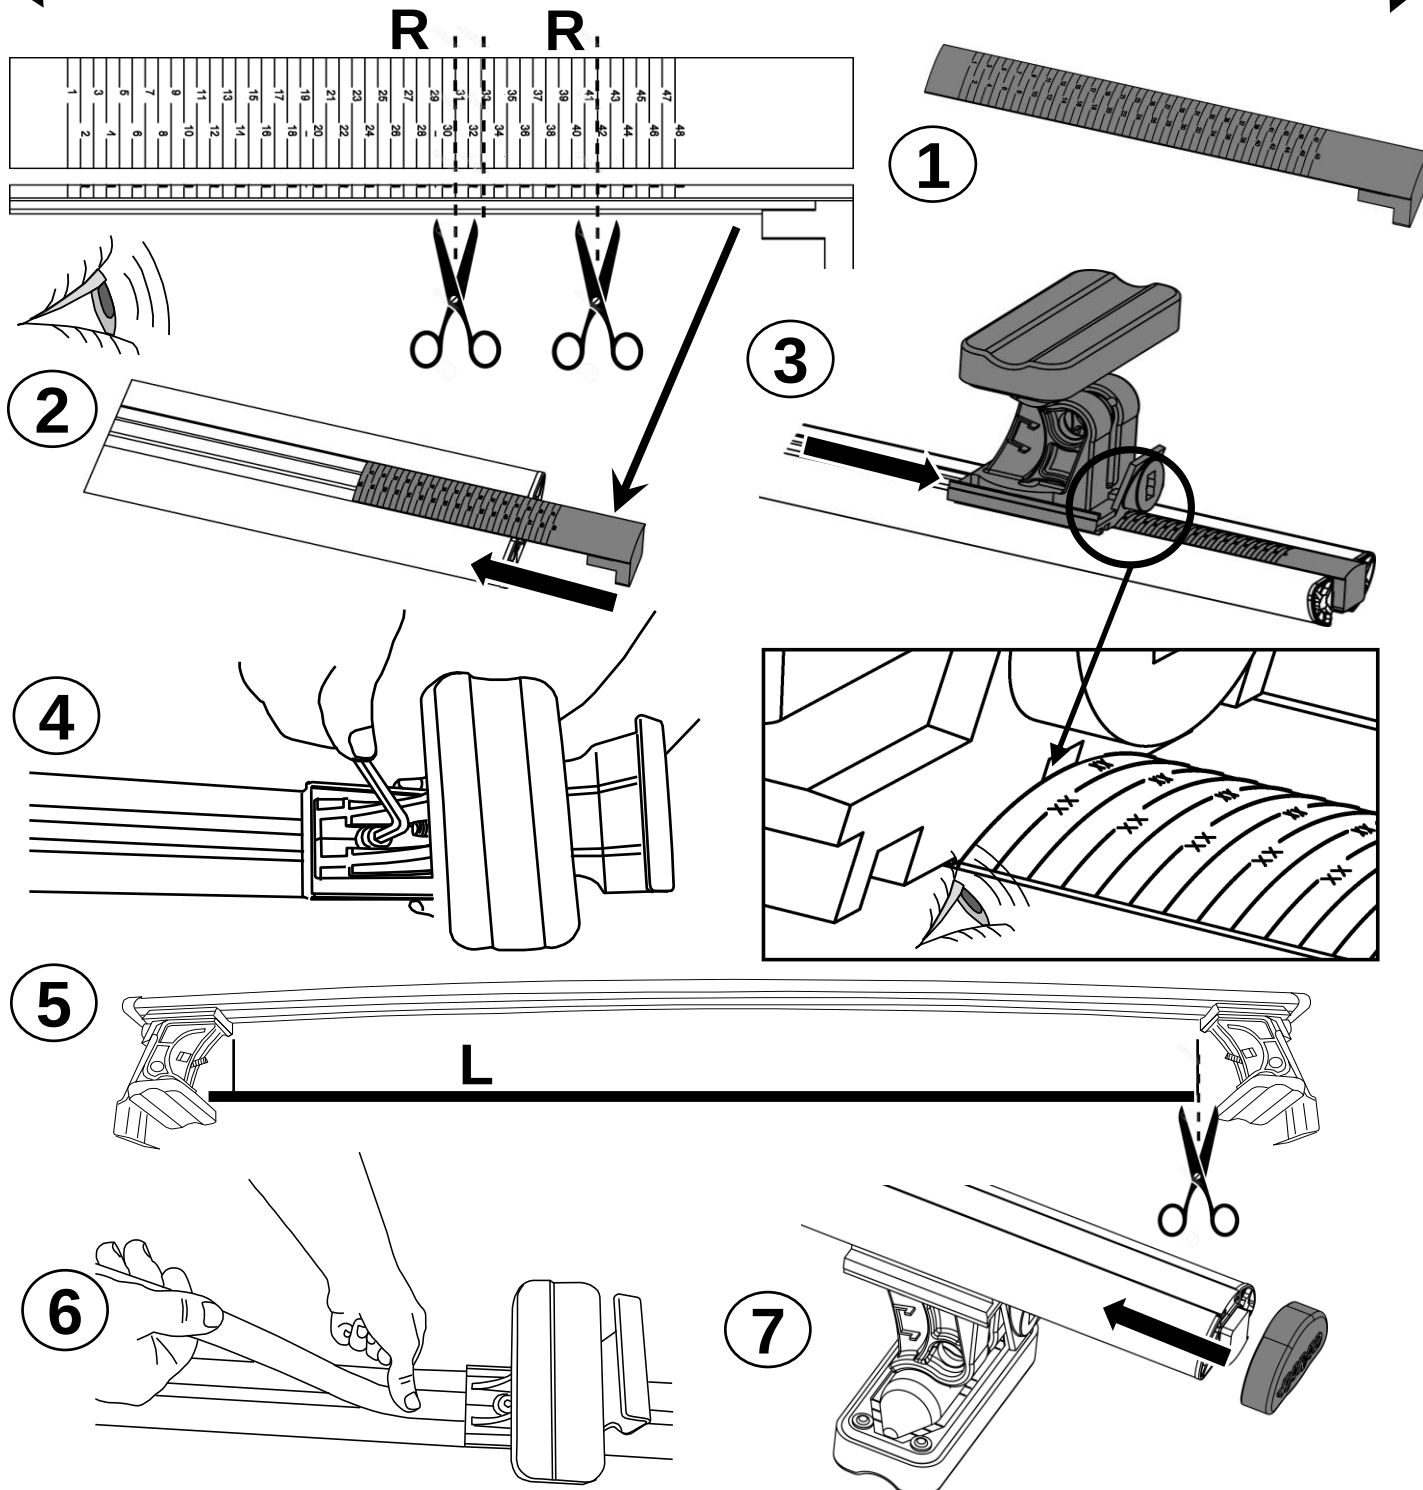

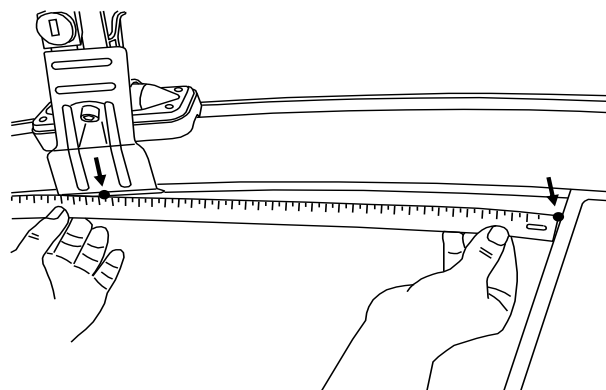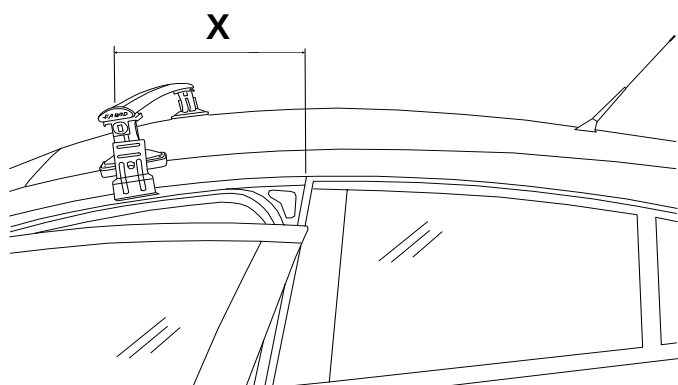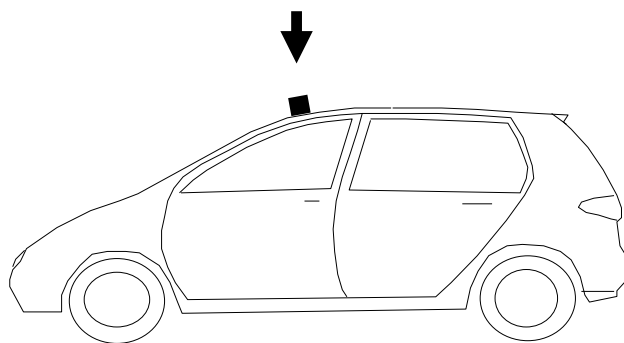



				X
BMW	2 ACTIVE TOURER	5	2014-2022	X = 280
BMW	2 GRAN TOURER	5	2015-2022	X = 280
HYUNDAI	I20	5	2015>	X = 200
TOYOTA	COROLLA SPORT	5	2019>	X = 330

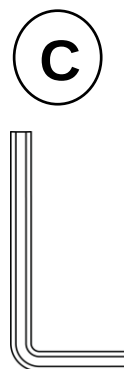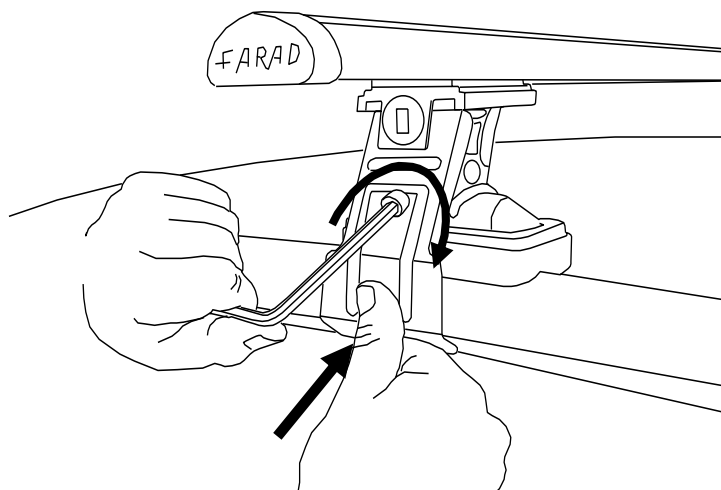



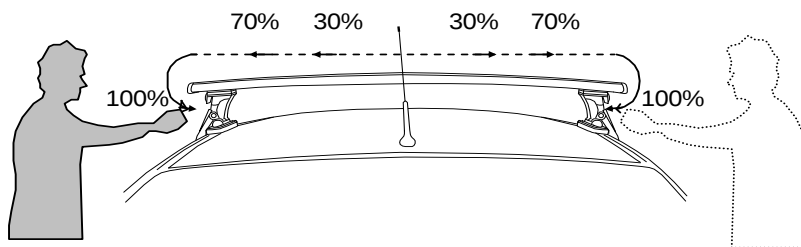





I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de


F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

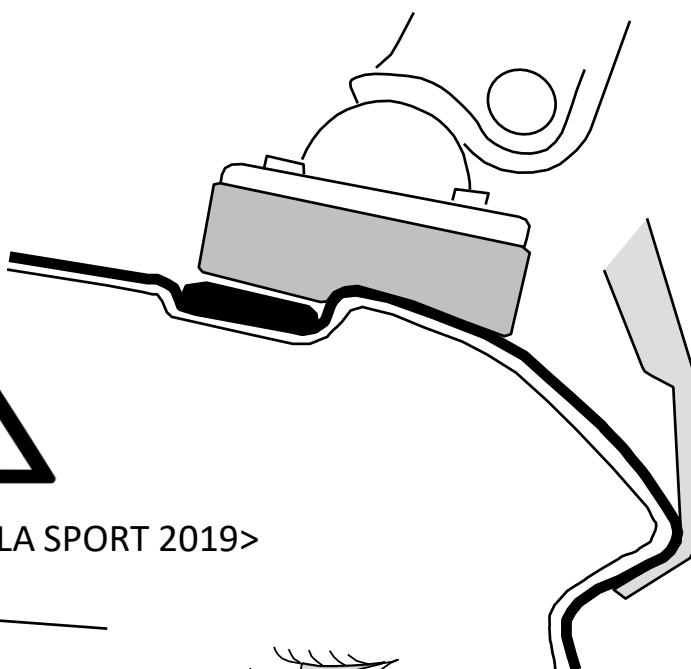

TOYOTA COROLLA SPORT 2019>

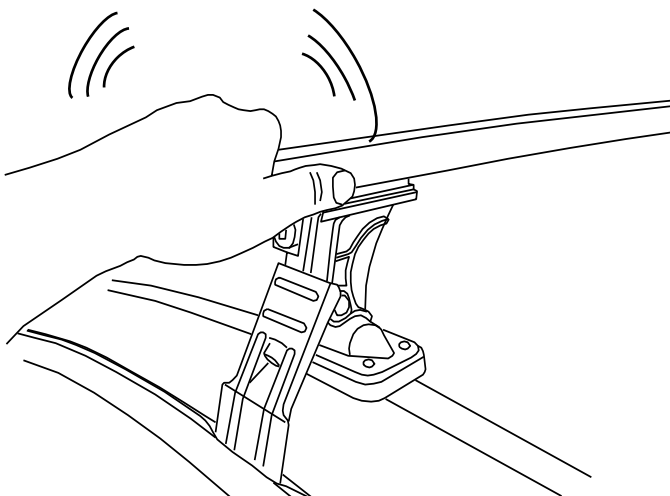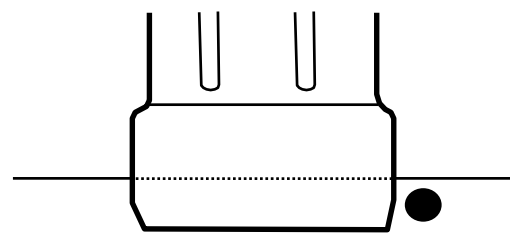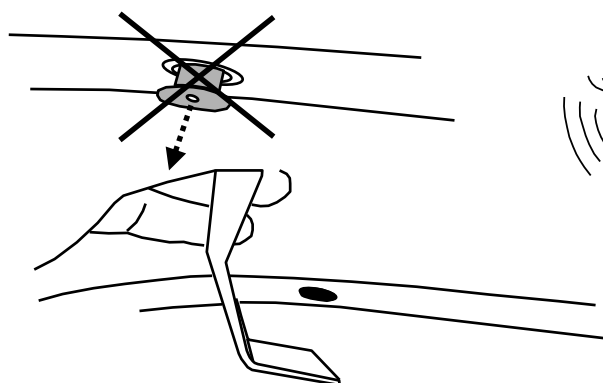

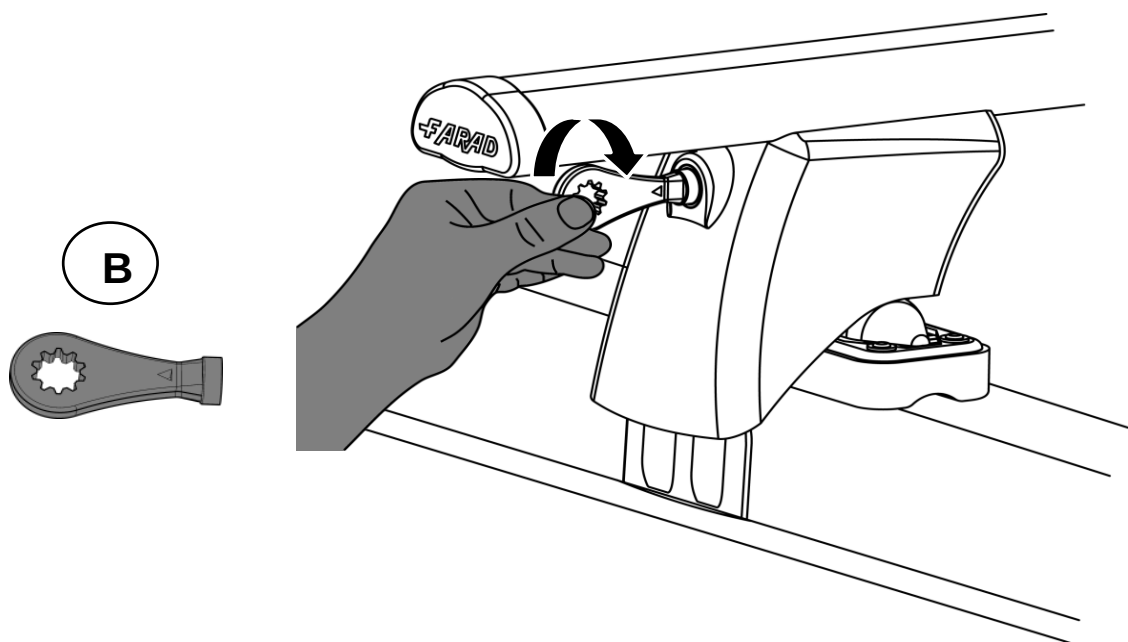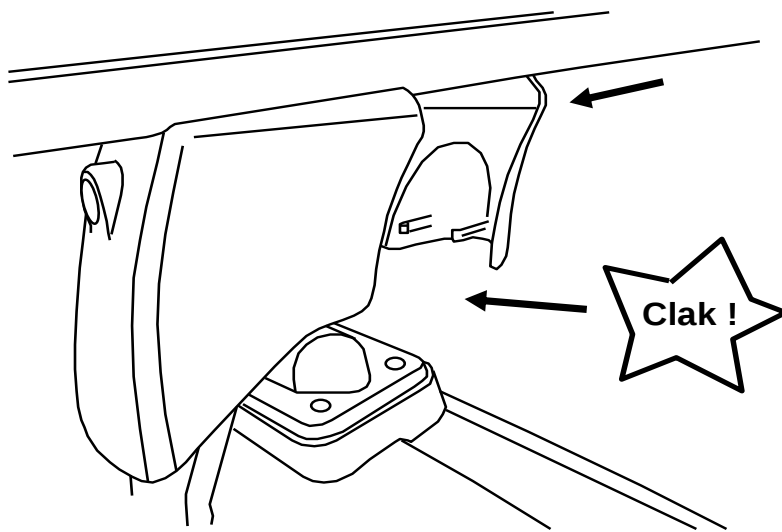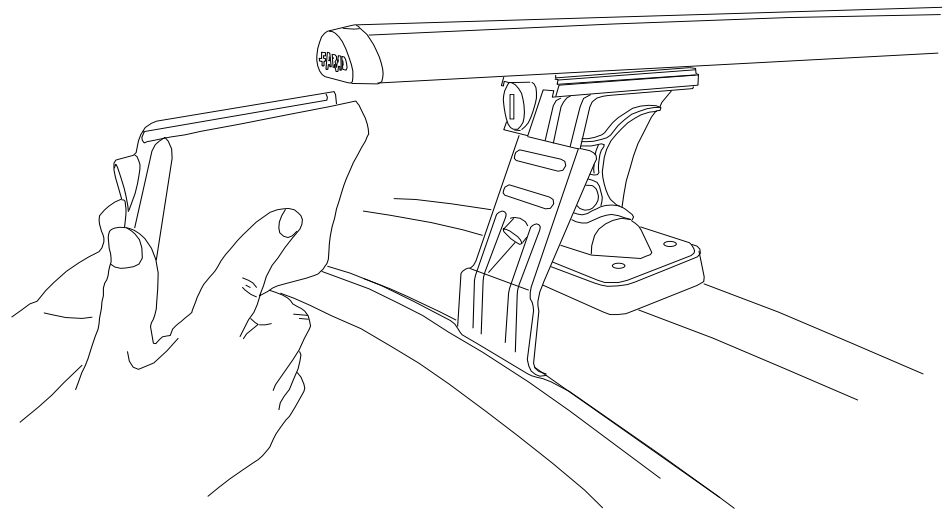

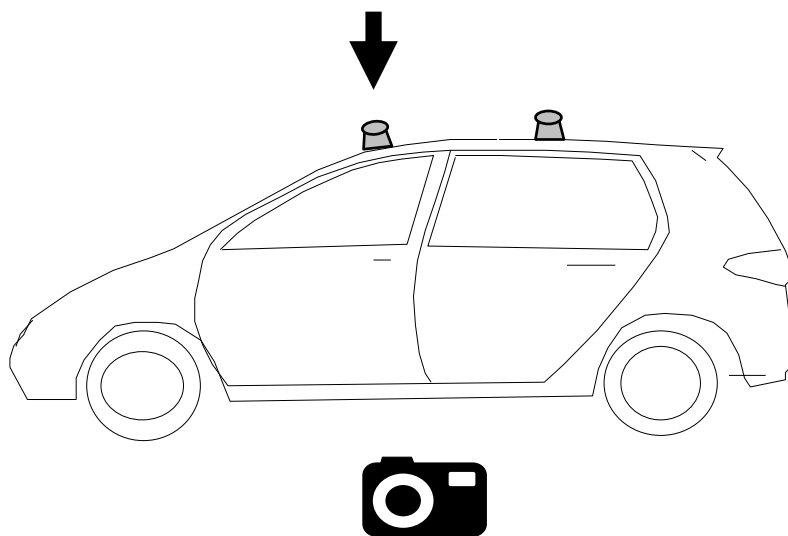

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I **Montaggio barra posteriore**

PL **Montaż Bagażnika Bazowego Przedniego**

SWE **Montering Främre Lasthållaren**


NL **Montage Achterste Dakdrager**


F **Fixation Barre Arriere**


GB **Fitting Rear Roof Bar**


E **Fijación Barra Trasera**

D **Montage Heckdachträgers**

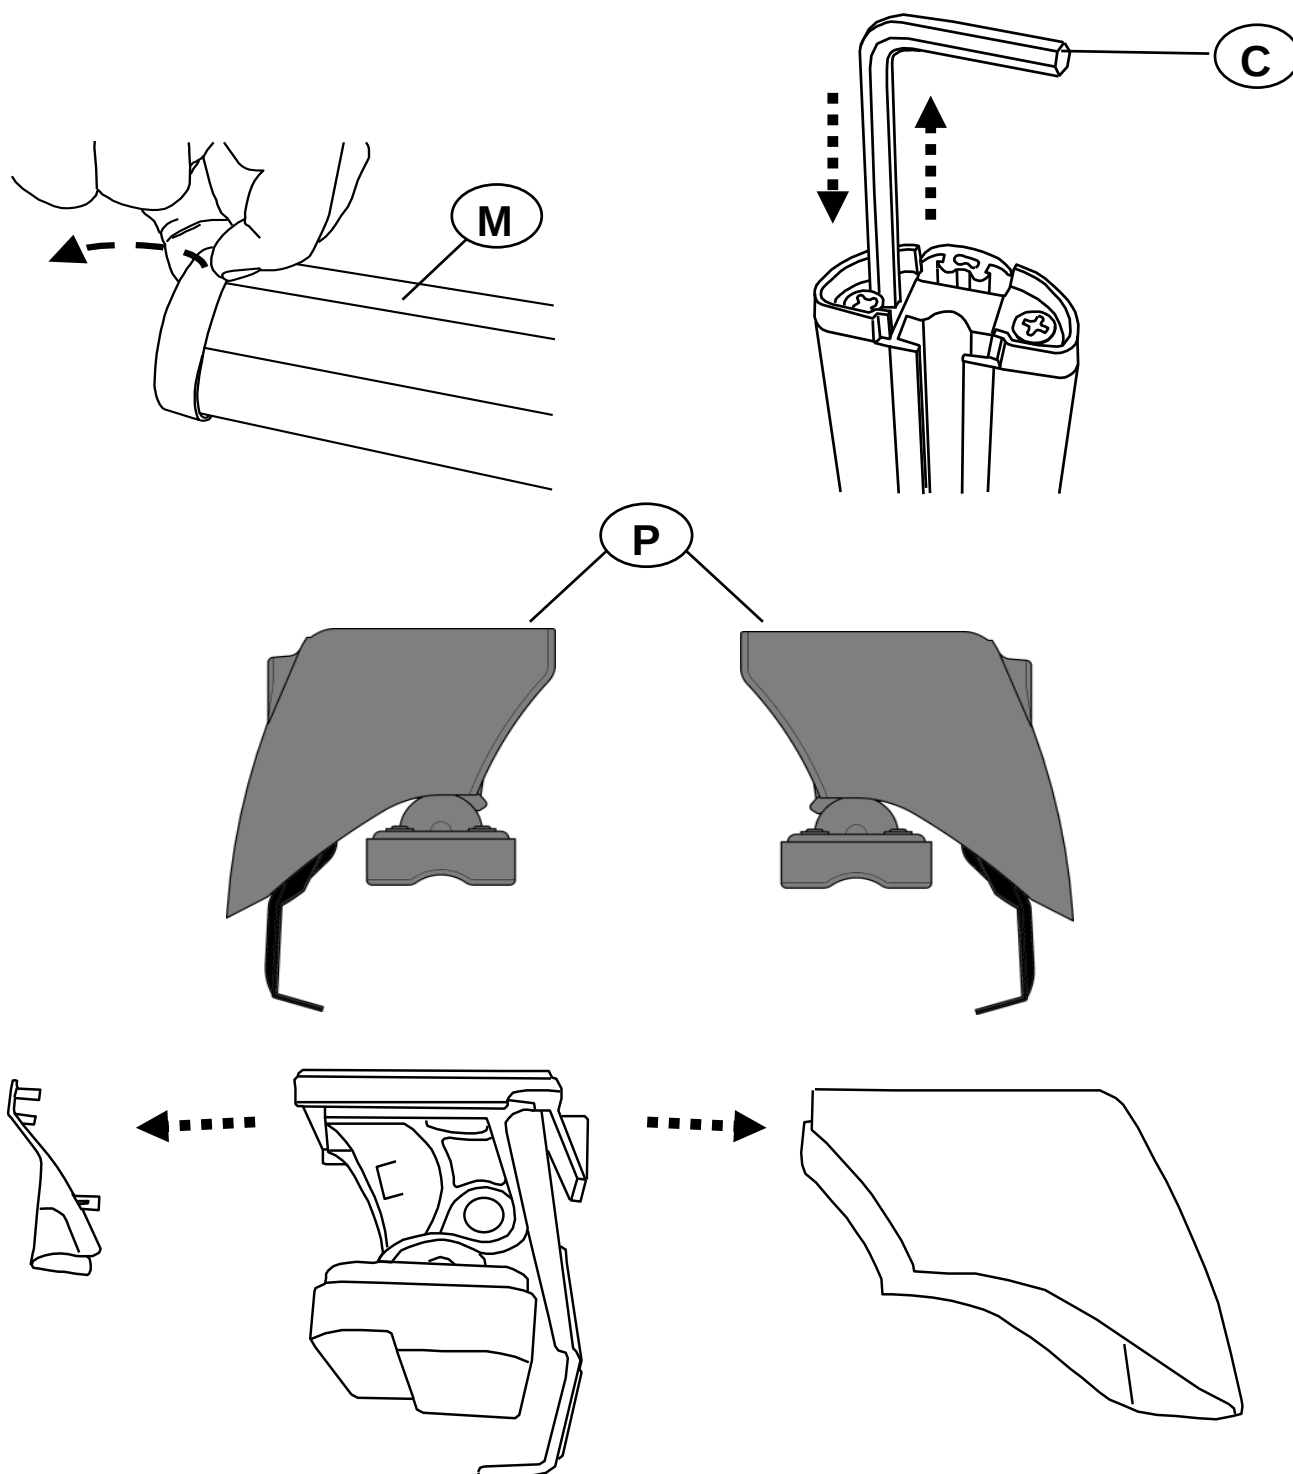




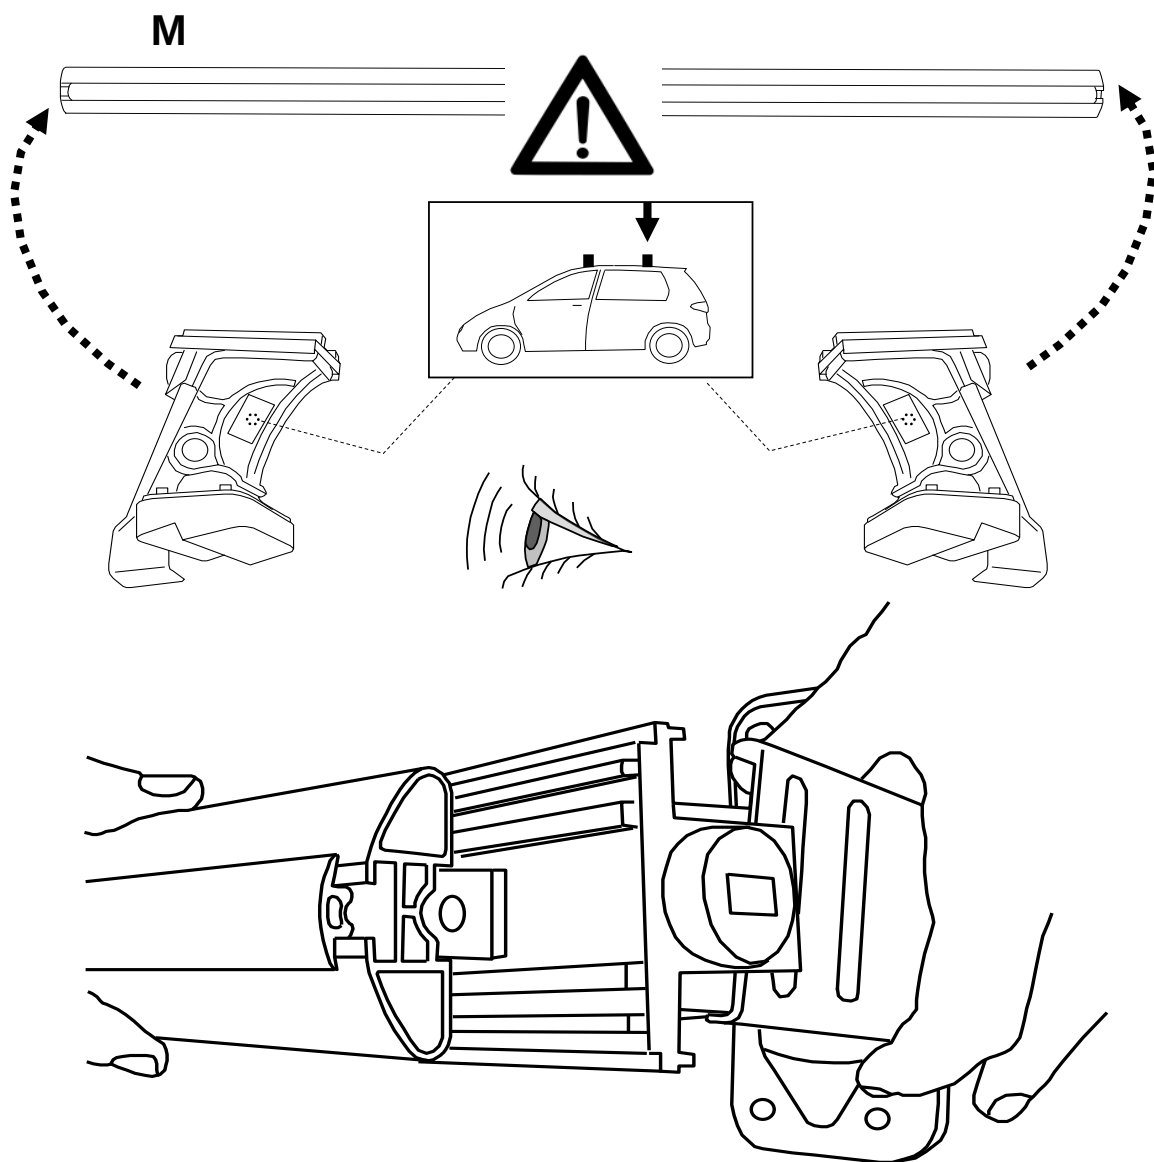



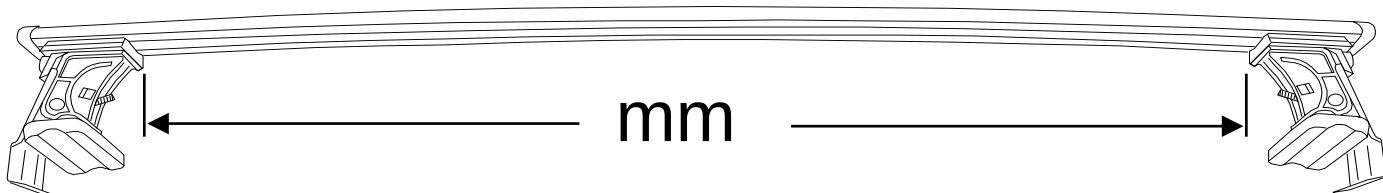





				R	mm
BMW	2 ACTIVE TOURER	5	2014-2022	R= 29	1010
BMW	2 GRAN TOURER	5	2015-2022	R= 29	1010
HYUNDAI	I20	5	2015>	R= 26	995
TOYOTA	COROLLA SPORT	5	2019>	R= 39	960


(OPERATION 1 TO 6 NOT FOR IRON BAR)

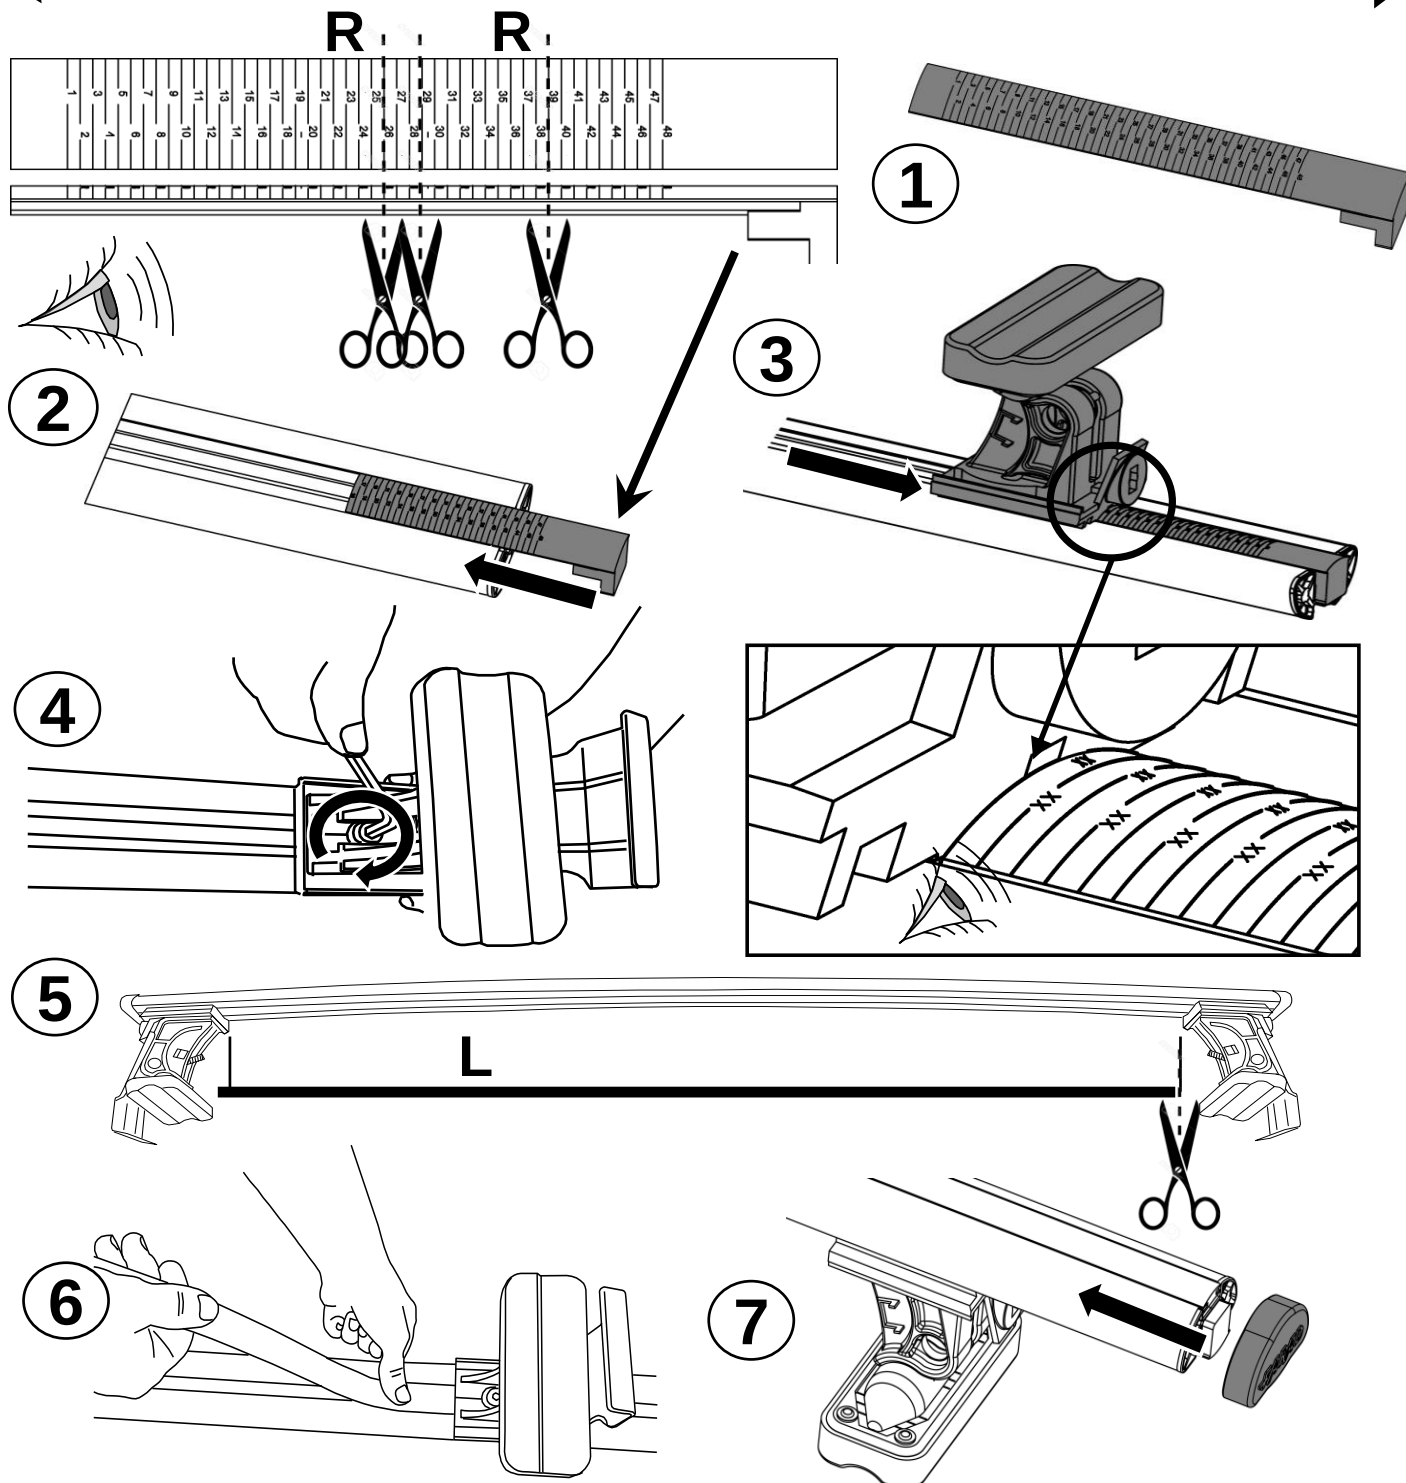

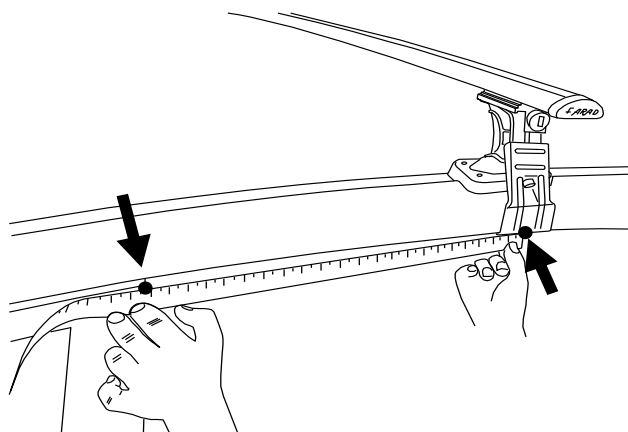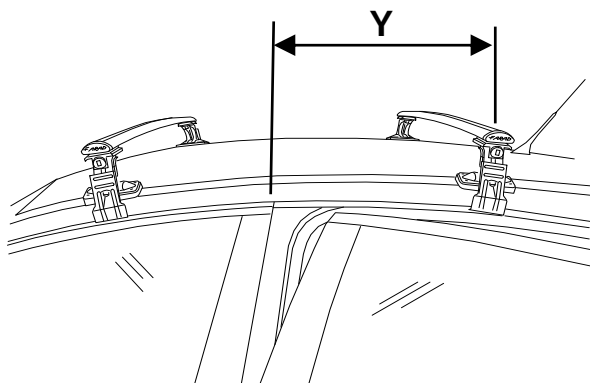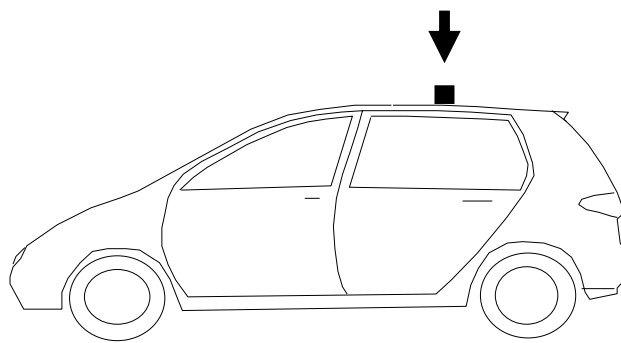

				Y
BMW	2 ACTIVE TOURER	5	2014-2022	Y= 350
BMW	2 GRAN TOURER	5	2015-2022	Y= 350
HYUNDAI	I20	5	2015>	Y= 380
TOYOTA	COROLLA SPORT	5	2019>	Y= 365

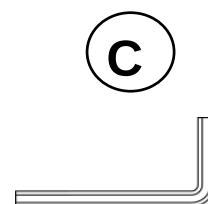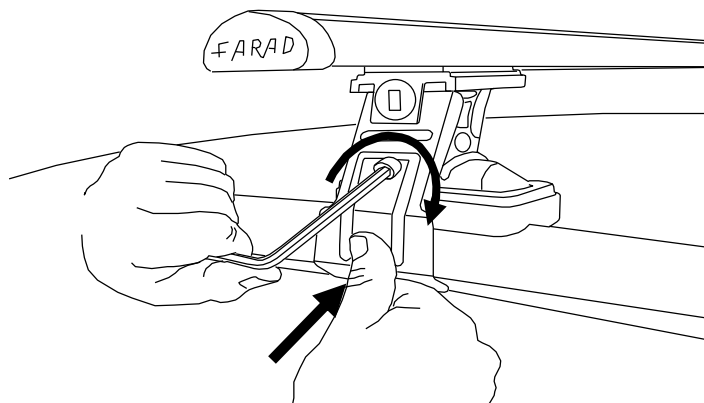


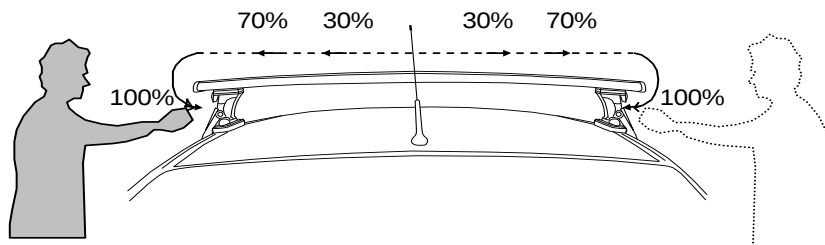


I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien




F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis


TOYOTA COROLLA SPORT 2019>

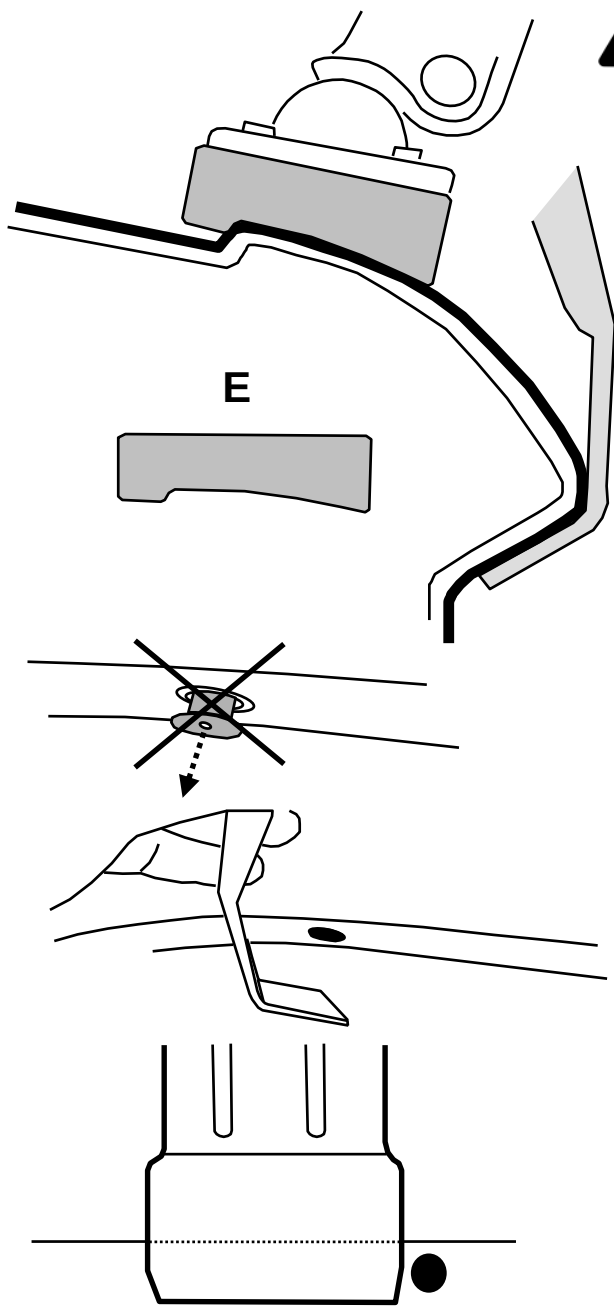

BMW 2 ACTIVE TOURER 2014>
 BMW 2 GRAN TOURER 2015>
 HYUNDAI I20 2015>

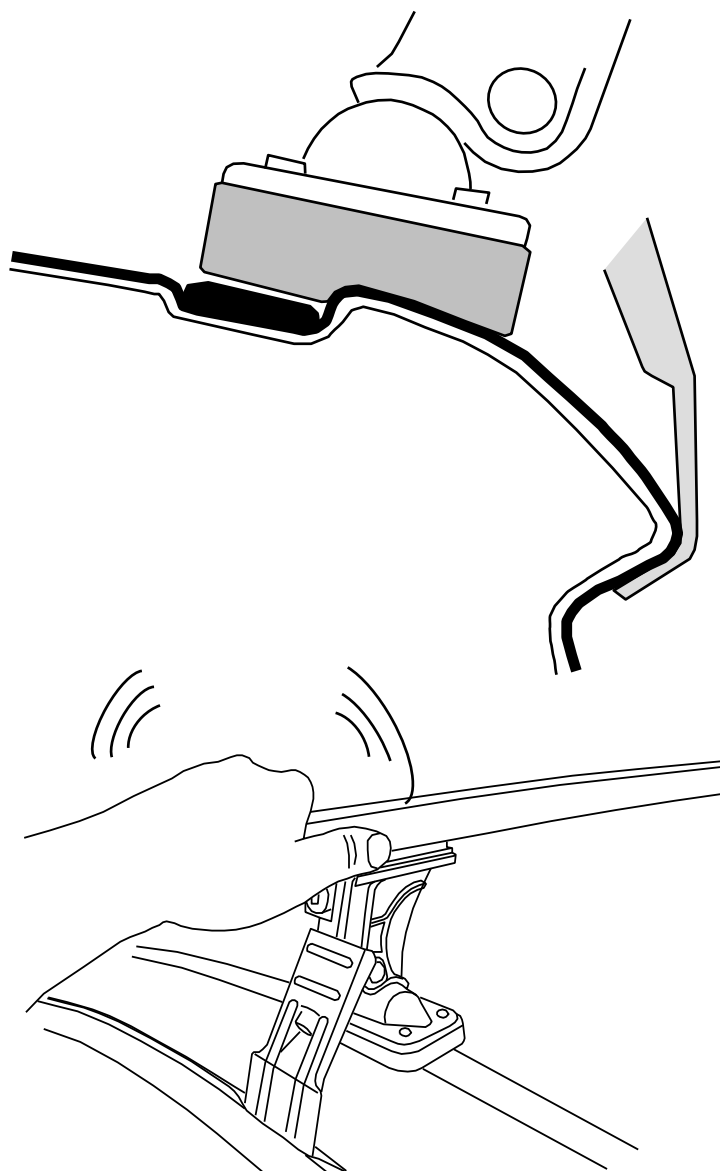

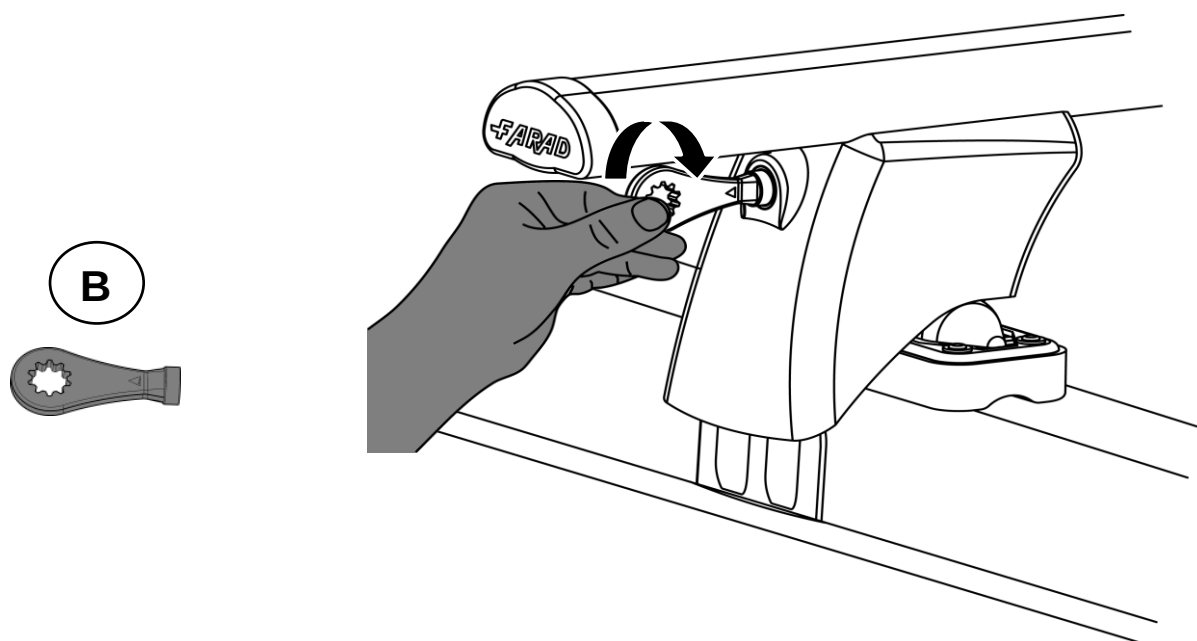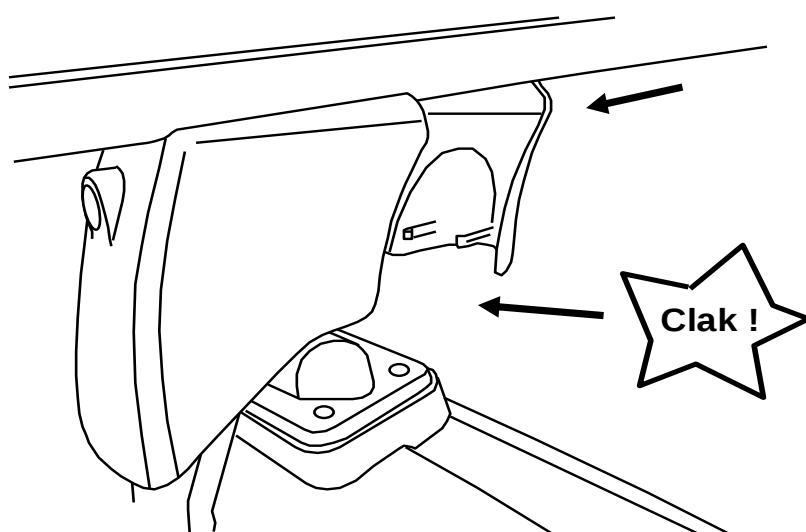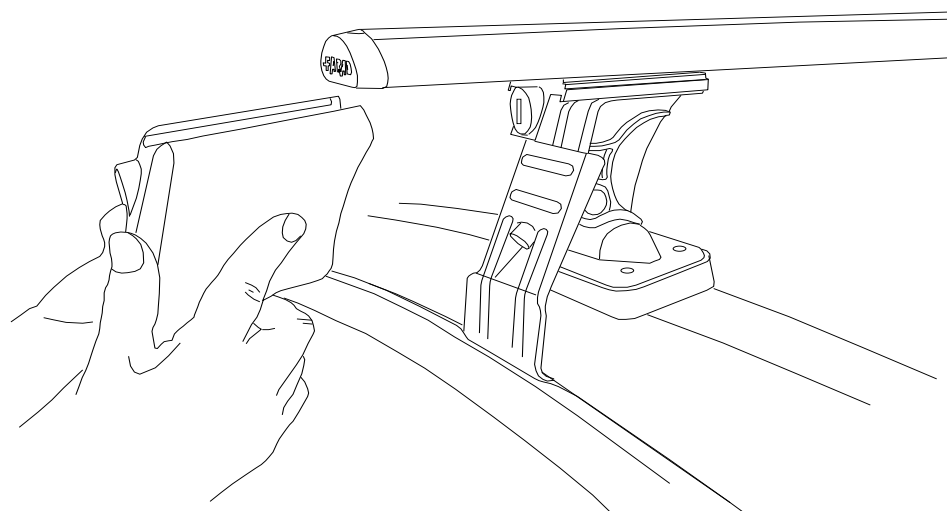

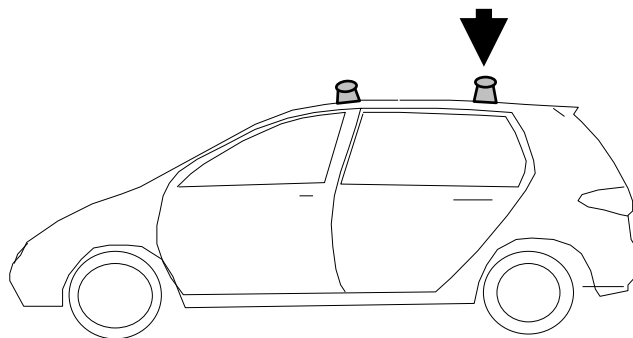

*BMW 2 ACTIVE TOURER 2014> BMW 2 GRAN TOURER 2015>
HYUNDAI I20 2015>*



TOYOTA COROLLA SPORT 5P 2019>



I CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI

PL OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB

GB CHECK THE SCREW FASTENING PERIODICALLY

D REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN

SWE REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA


F VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT




RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

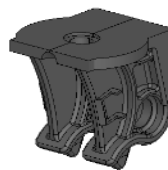

SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

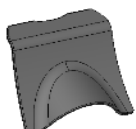


INVOLUCRO POST.
90341 / 9

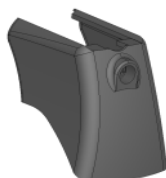

INVOLUCRO ANTERIORE
90341 / 8




CHIAVE + N° COMB
90341 / 7

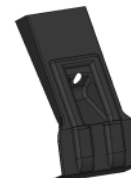

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7

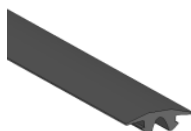


GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD[®]
made in italy

www.faradworld.com

