

FARAD[®]BS

made in italy

Evolution Srl unipersonale, Via A. De Gasperi 26, 12040 Sanfrè (CN) Italy


www.faradworld.com

+39 0172 58575

BS 073

WV POLO 2010-2017

3



I Istruzioni di montaggio

F Instructions de montage

PL Instrukcja montażu

D Einbauanleitung

GB Fitting instructions

E Instrucciones de montaje


NL Inbouwhandleiding

SWE Montageanvisnin

KIT BS


Nr 2

A

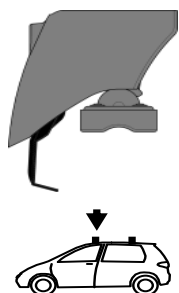

Nr 2

P

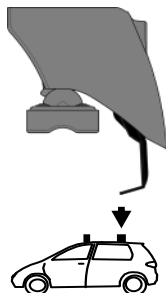

Nr 2

B



Nr 1

C



Nr 1

D



KIT ALU

+

Nr 2

L














Nr 2



M



=

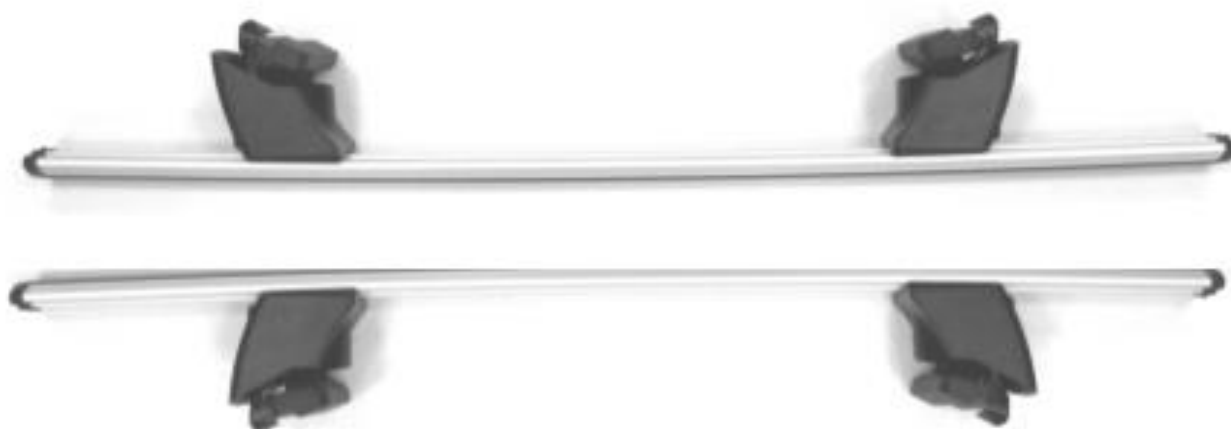

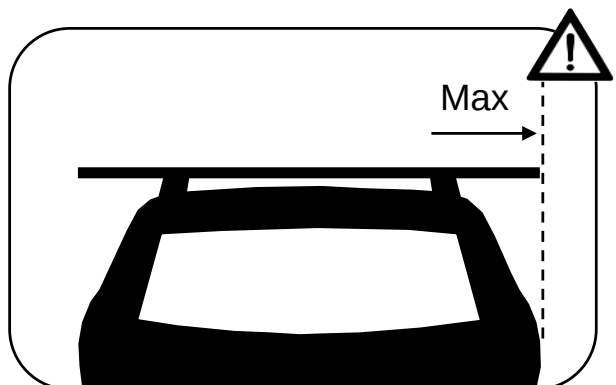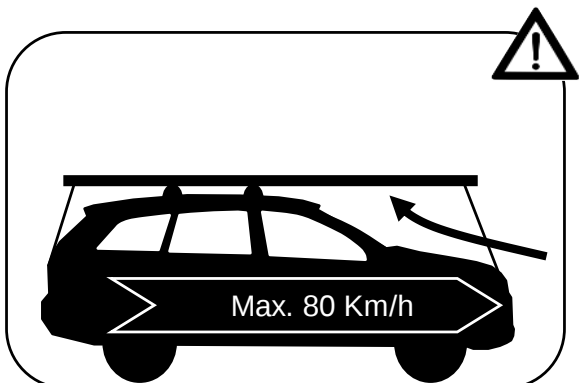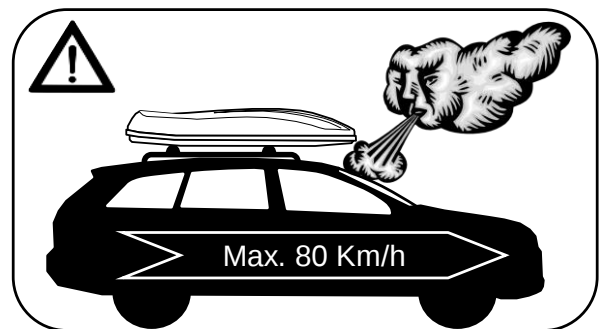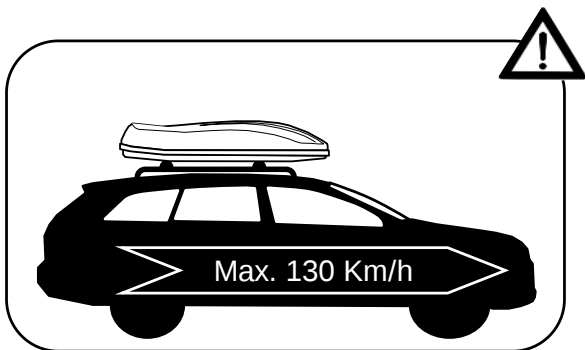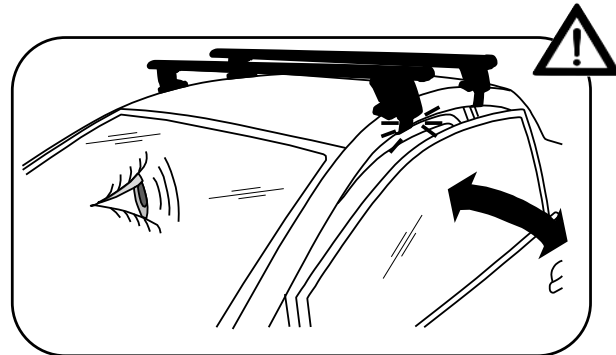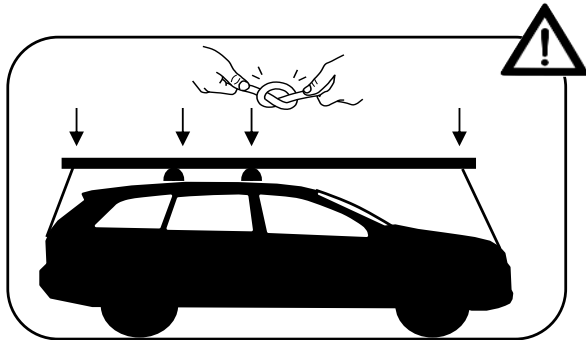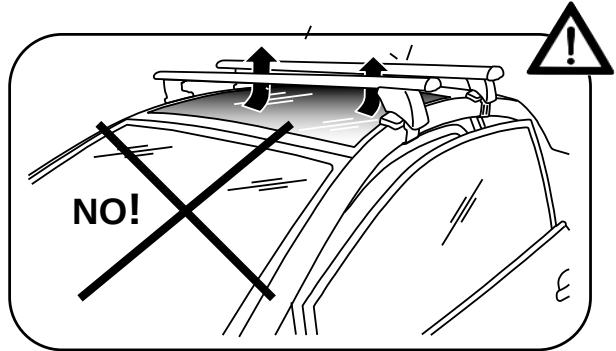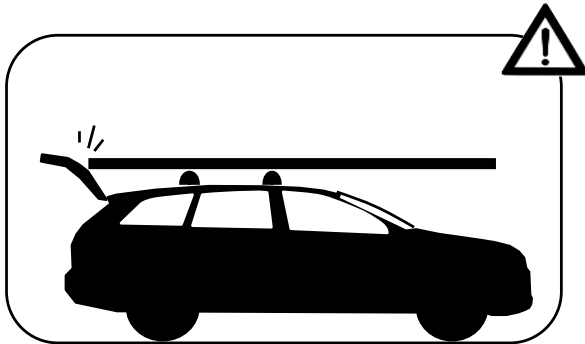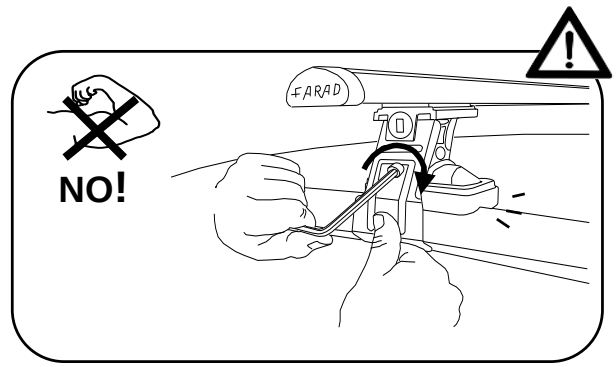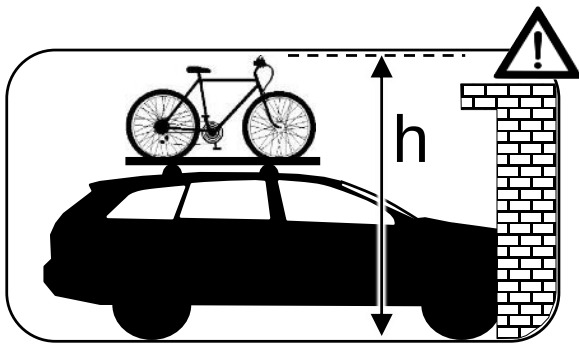

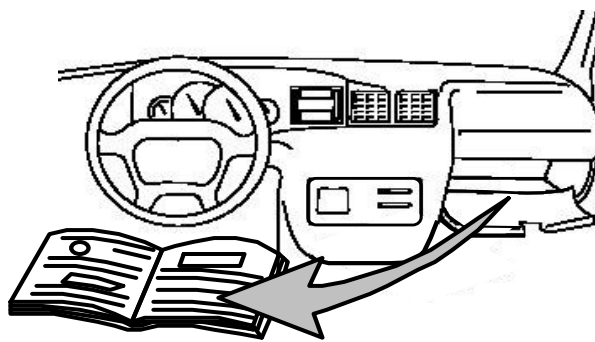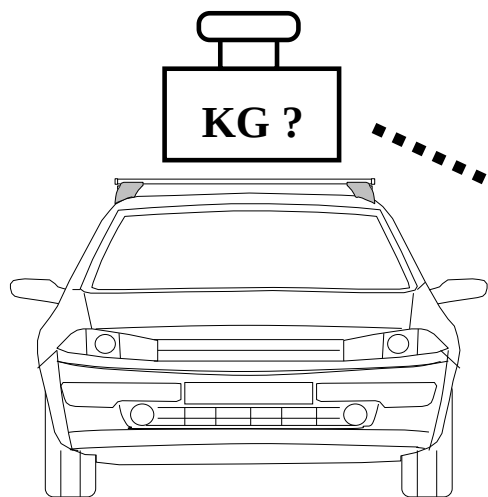

I Controllare carico del tetto sul manuale dell'auto

PL Sprawdz ładownoř dachu w instrukcji

GB Check roof load capacity in car instruction




NL check de handleiding belasting van het dak van de auto



F vérifier le chargement manuel du toit de la voiture

D überprüfen Sie die manuelle Beladung der Autodach

E comprobar la carga manual del techo del coche

SWE kontrollera manuell inläggning på taket av bilen

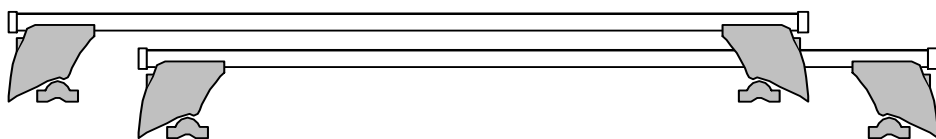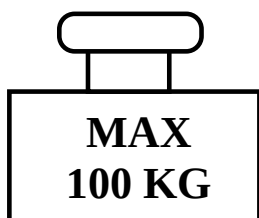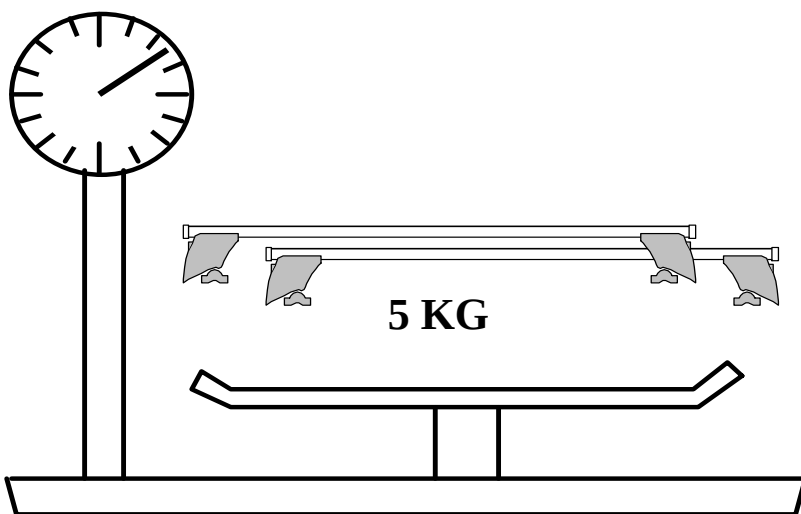

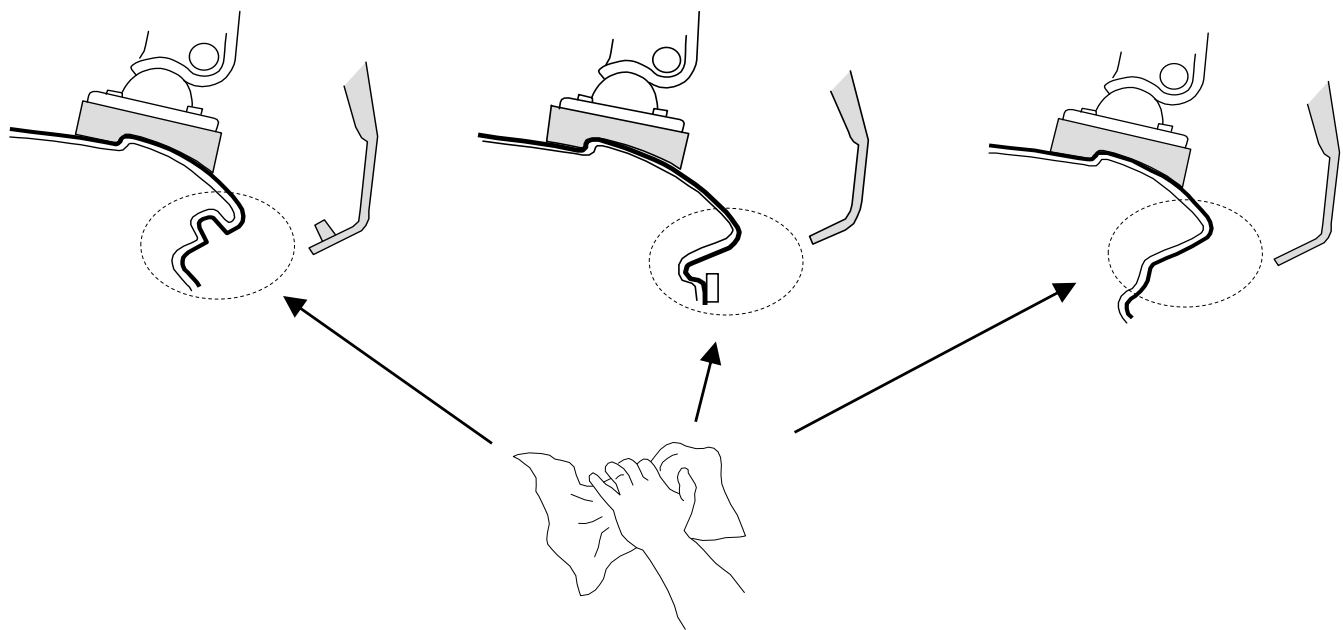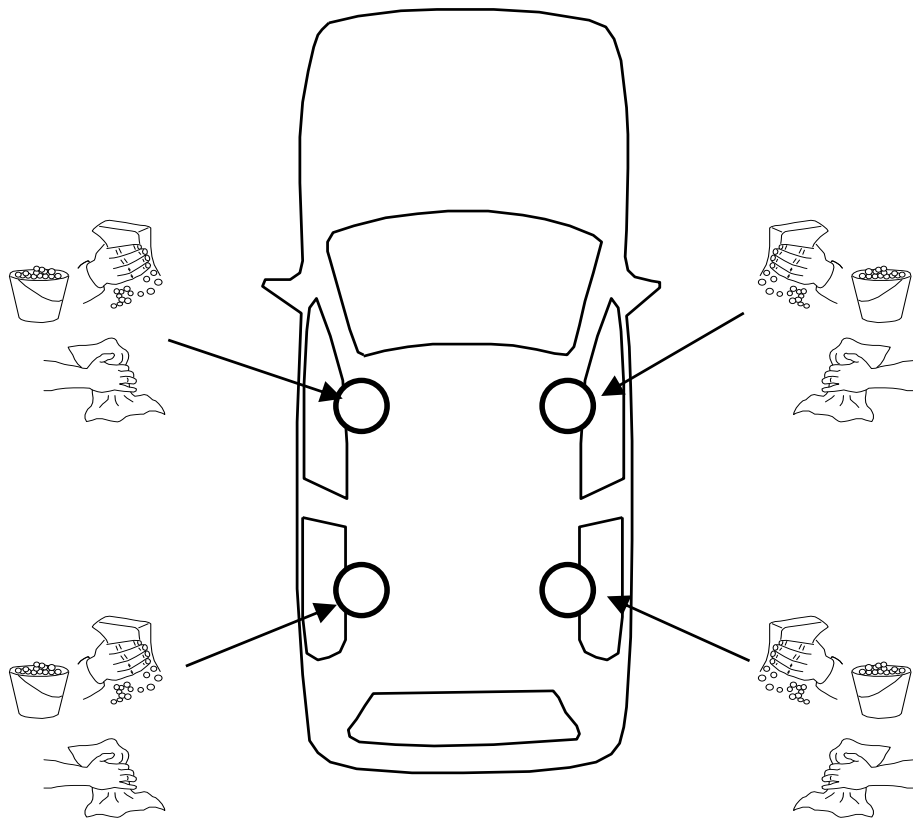

I **Montaggio Barra Anteriore**

PL **Montaż Bagażnika Bazowego Tylnego**

D **Montage Vorderes Dachträgers**


SWE **Montering Av Främre Lasthållaren**



F **Fixation Barre Avant**


GB **Fitting Front Roof Bar**

NL **Montage Voorste Dakdrager**


E **Fijación Barra Frontal**

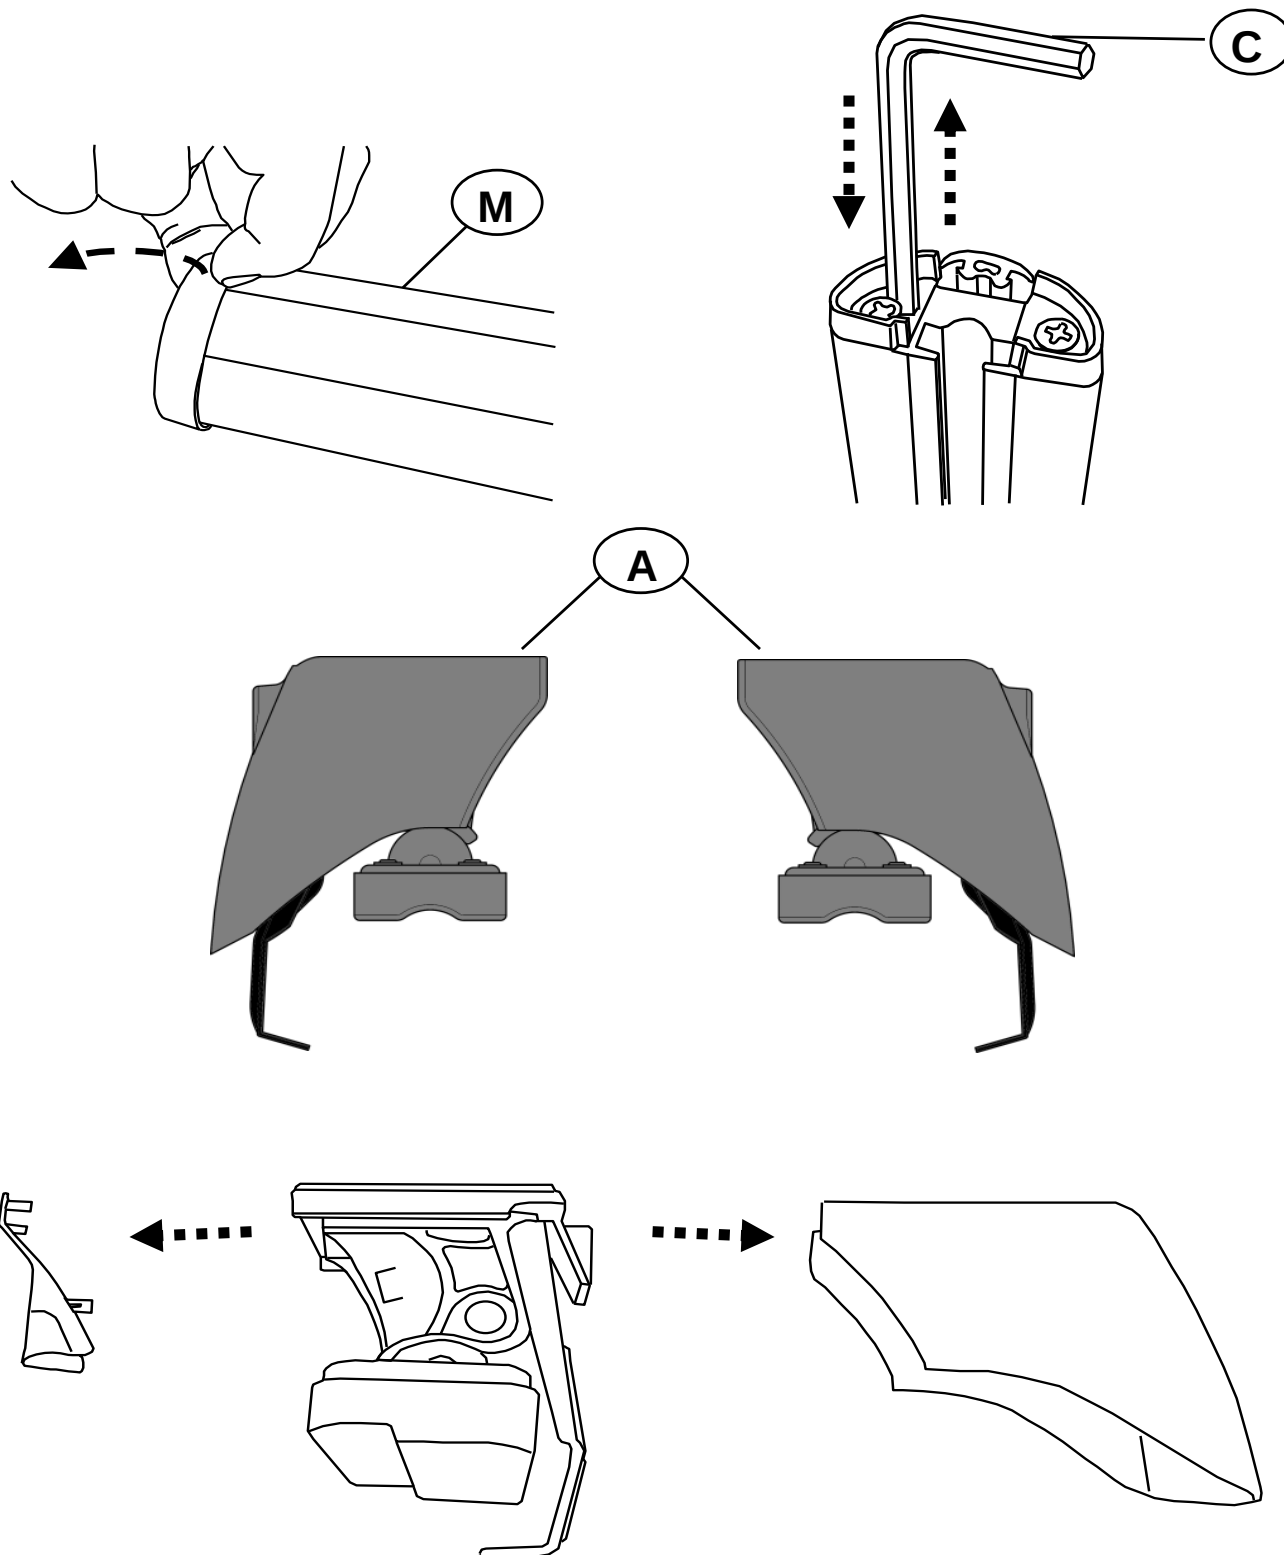


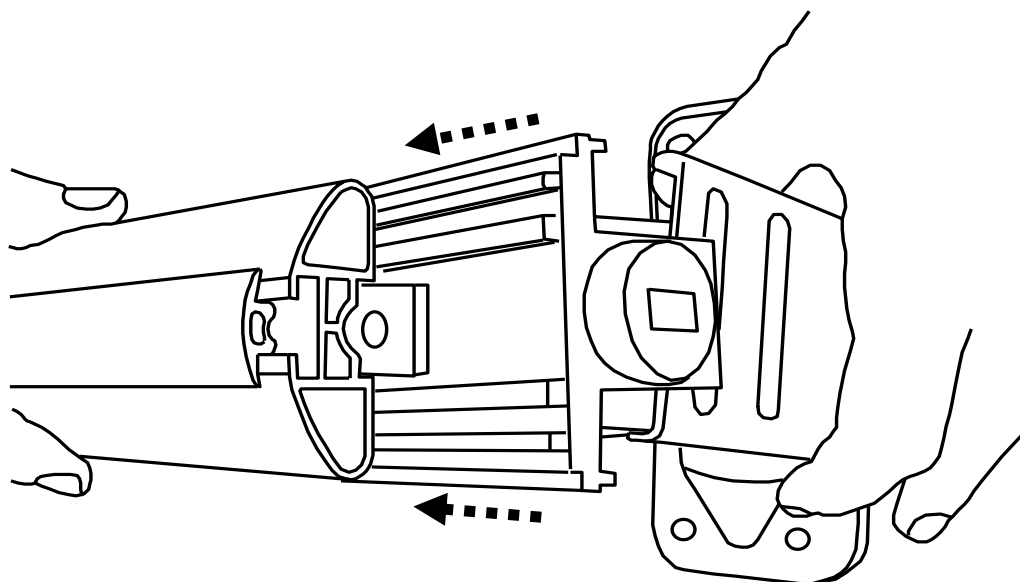
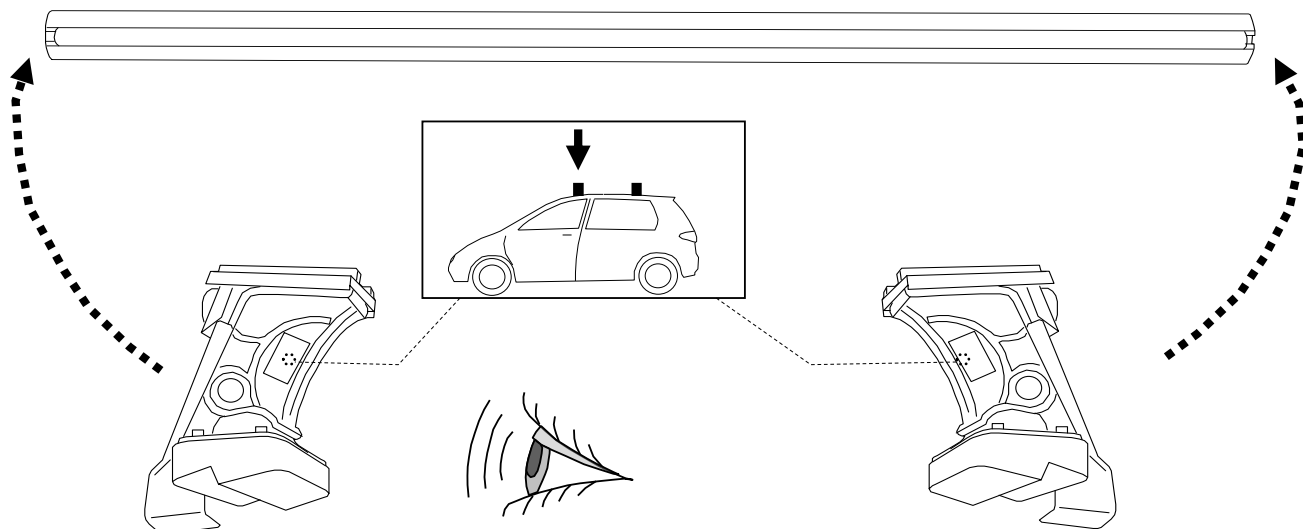


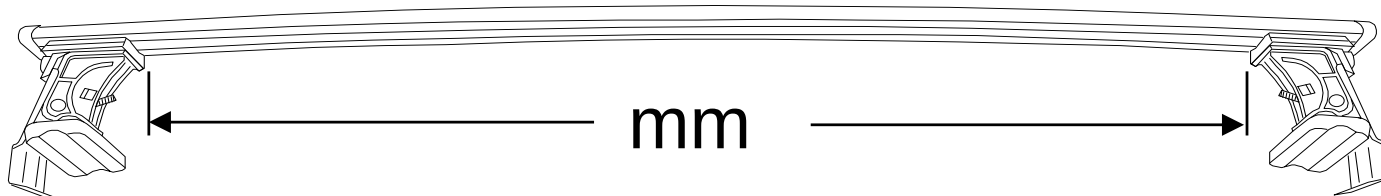





				R	mm
VW	POLO	3	2010-2017	R= 39	1055

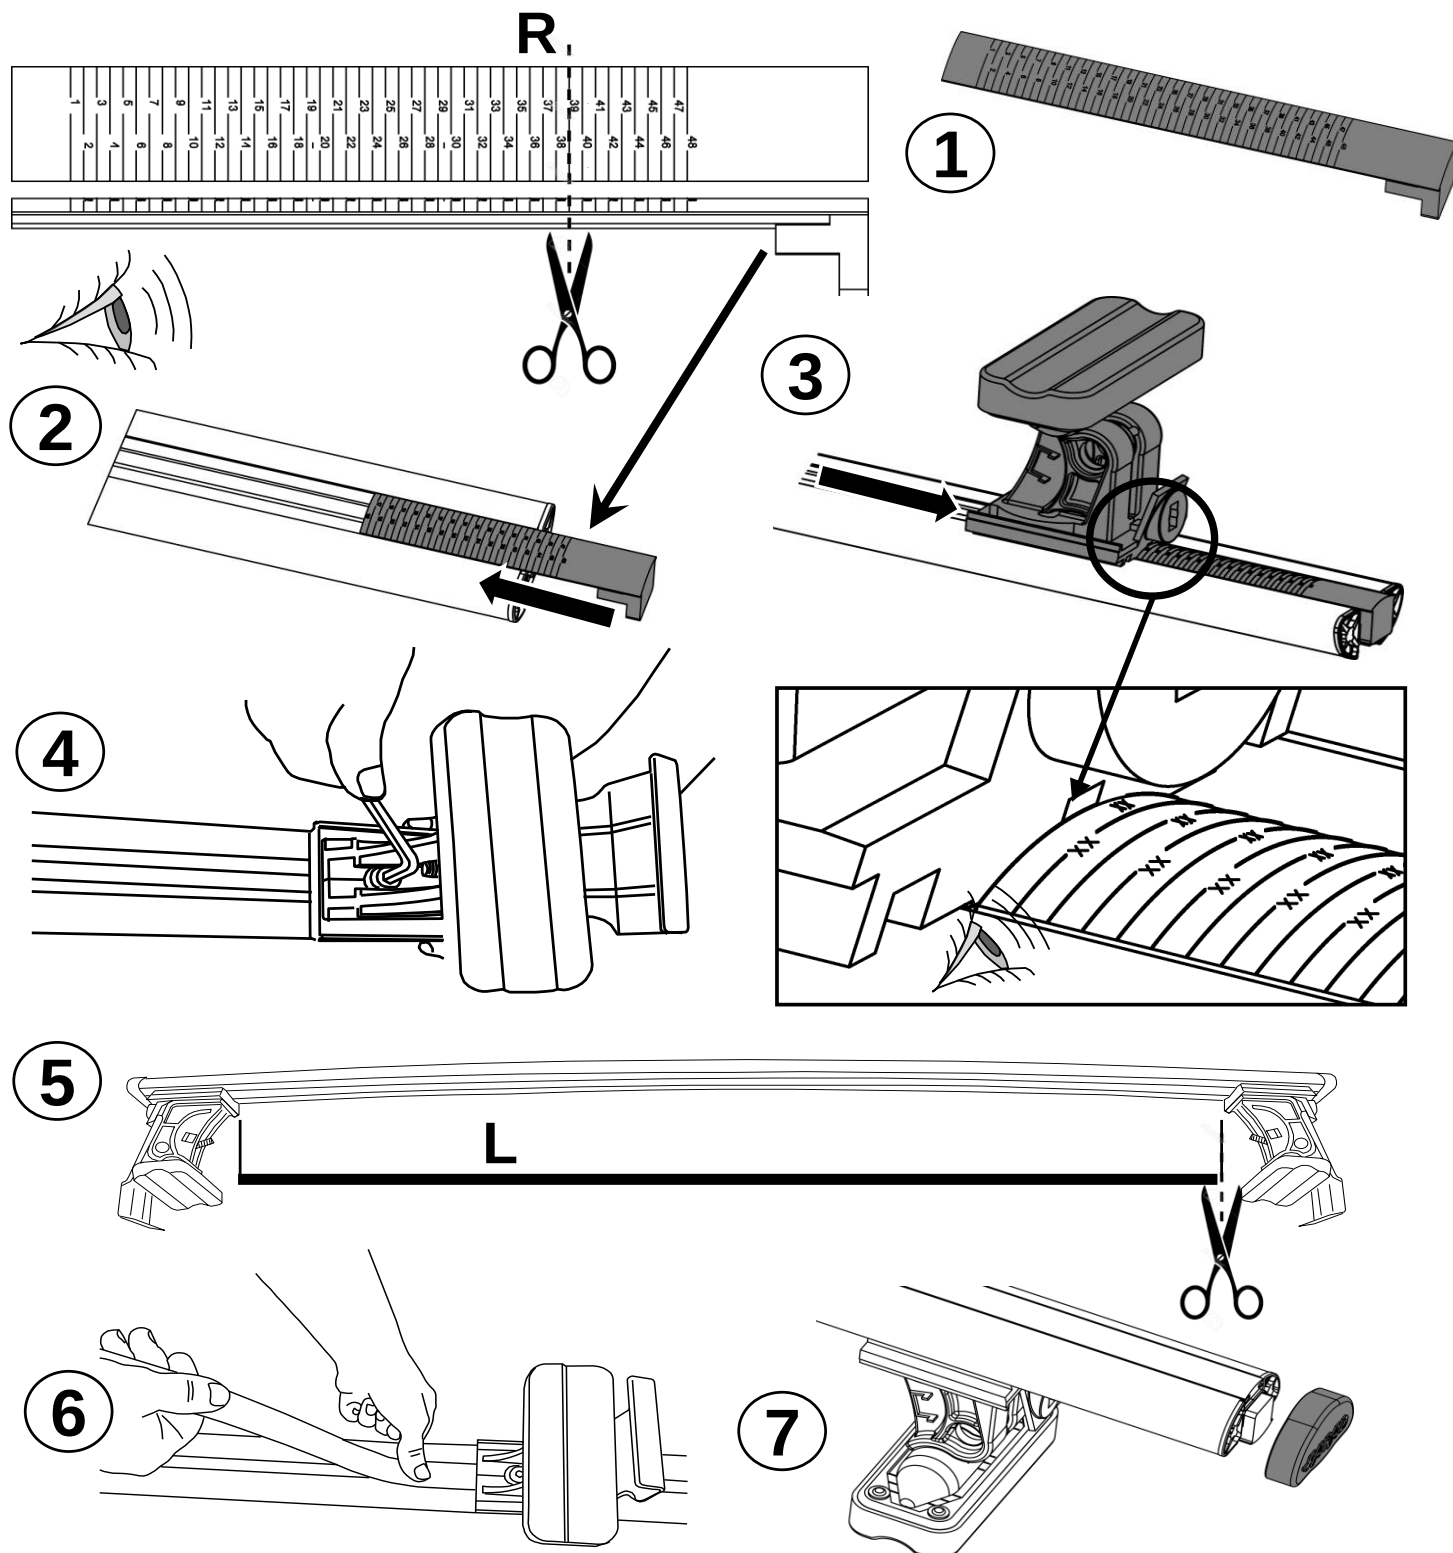




REV 000	10/05/2011	8 / 20
----------------	-------------------	---------------

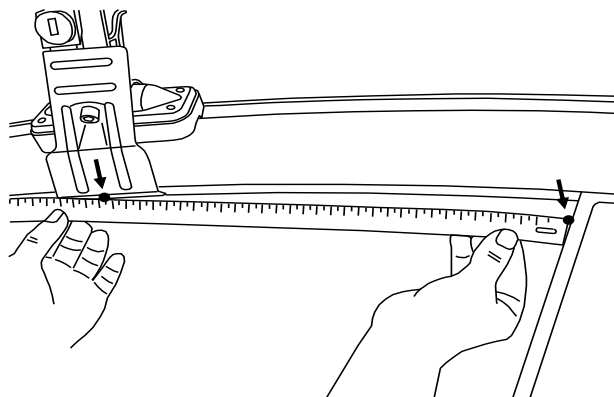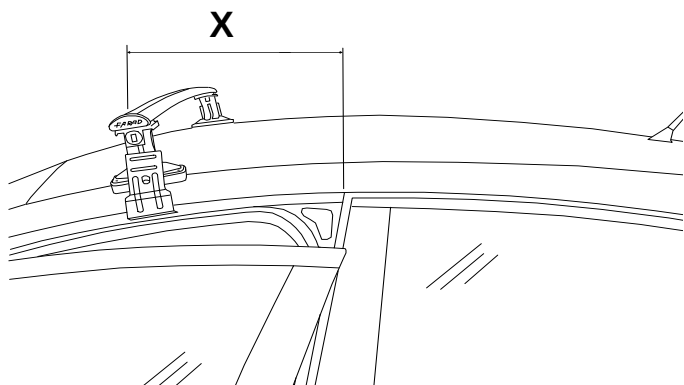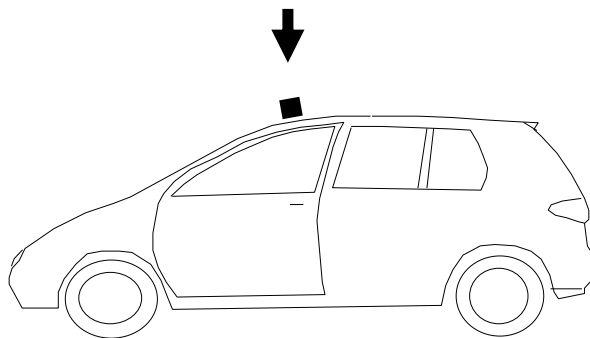

				X
WV	POLO	3	2010-2017	X= 480

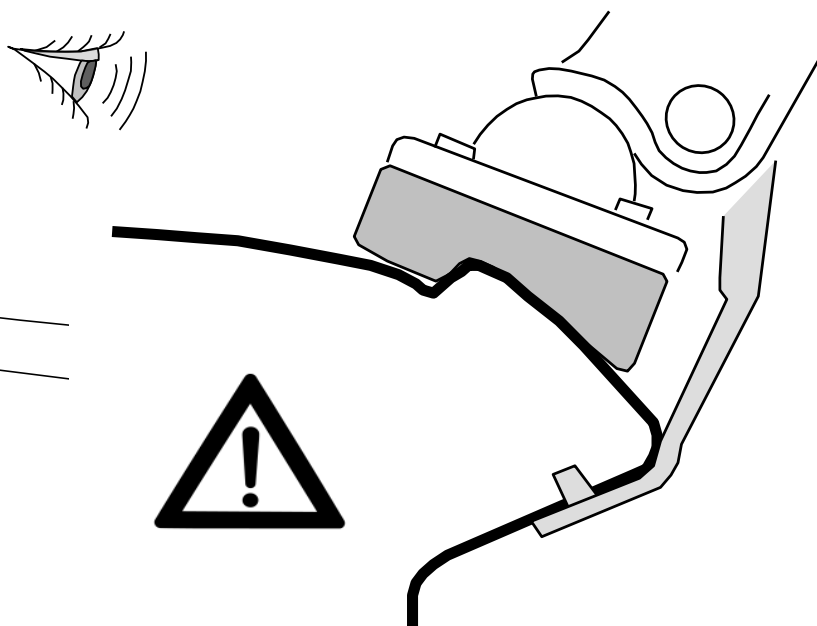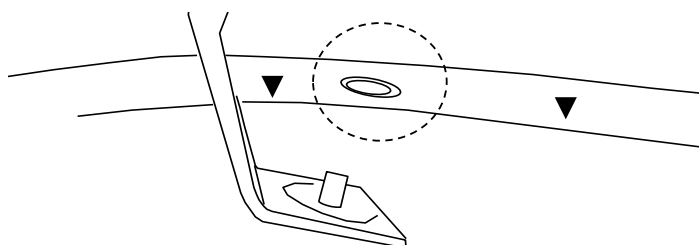





REV 000	10/05/2011	9 / 20
----------------	-------------------	---------------

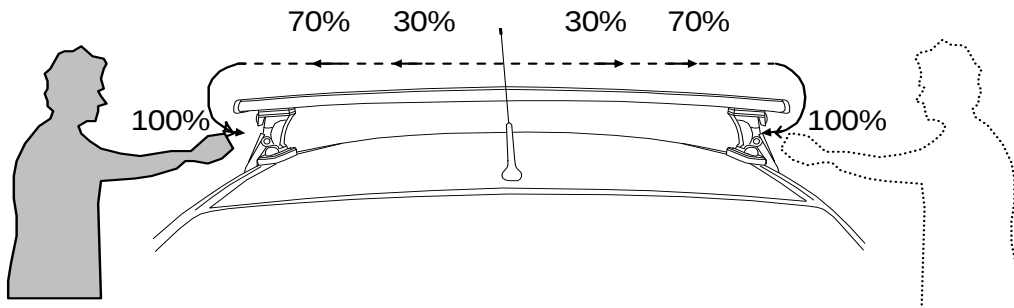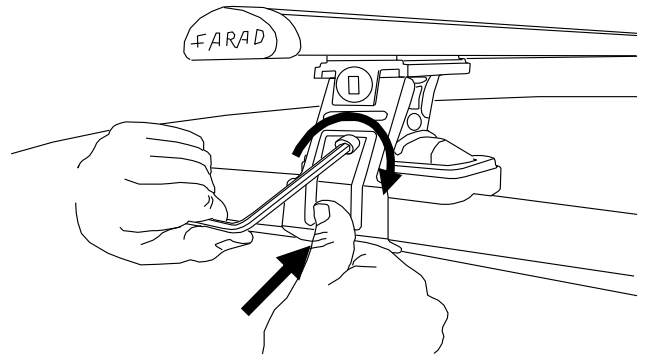


I Alternare il fissaggio delle viti
 PL Śruby dokręcaj naprzemiennie
 GB Tighten alternately
 NL Afwisselend aan de linker- en de rechterkant aandraaien

F Serrer alternativement chaque côté
 D Die Schrauben abwechselnd anziehen
 E Apretar alternativamente
 SWE Dra åt växelvis

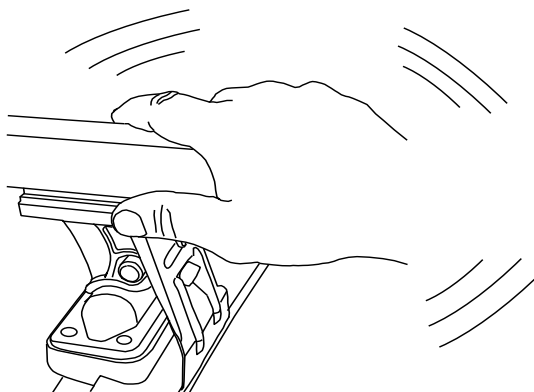

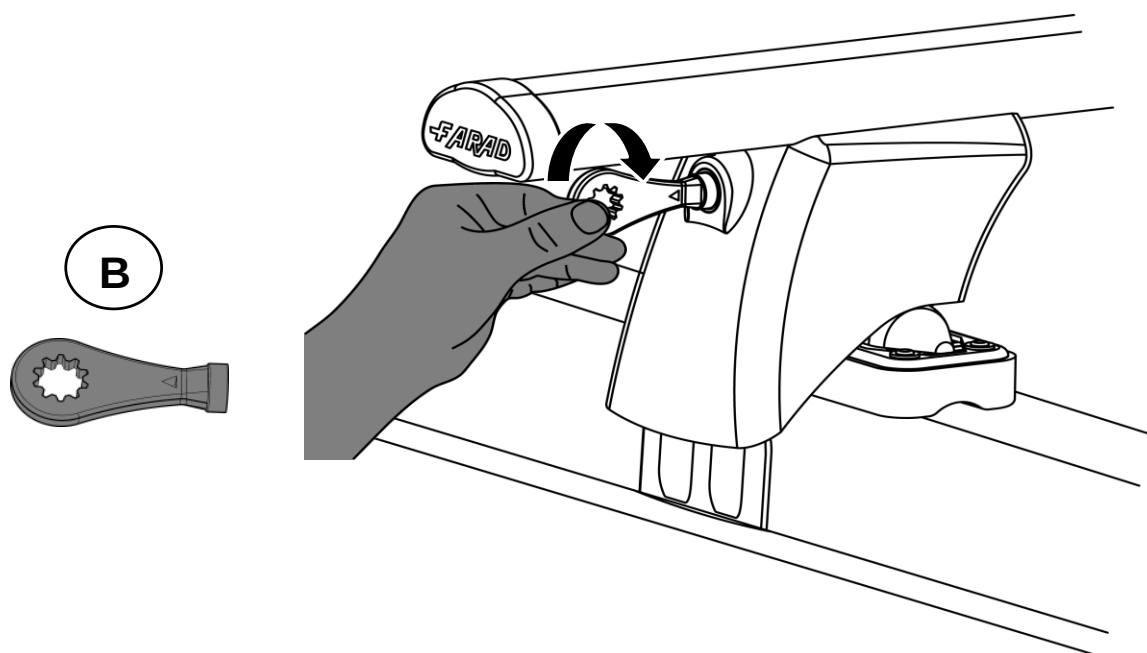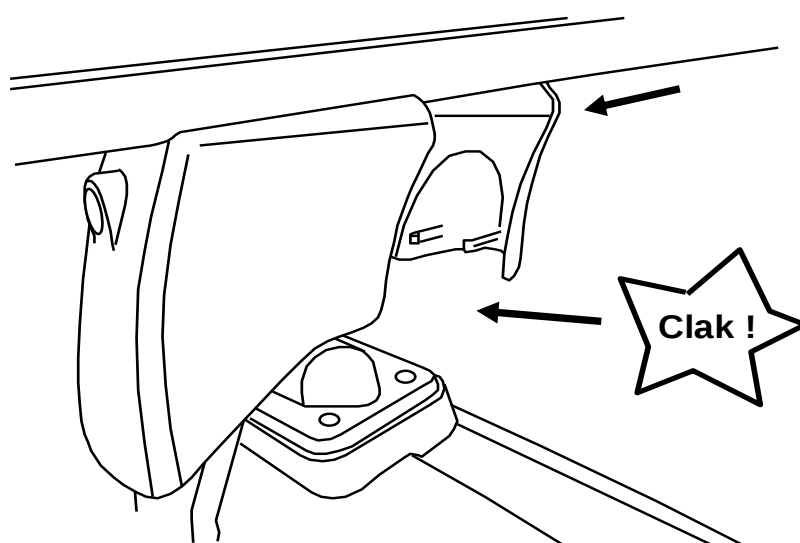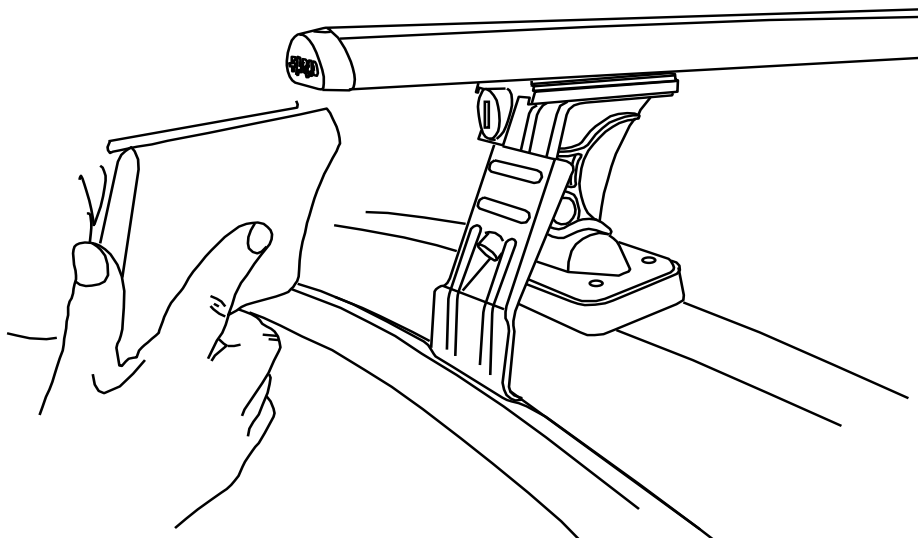

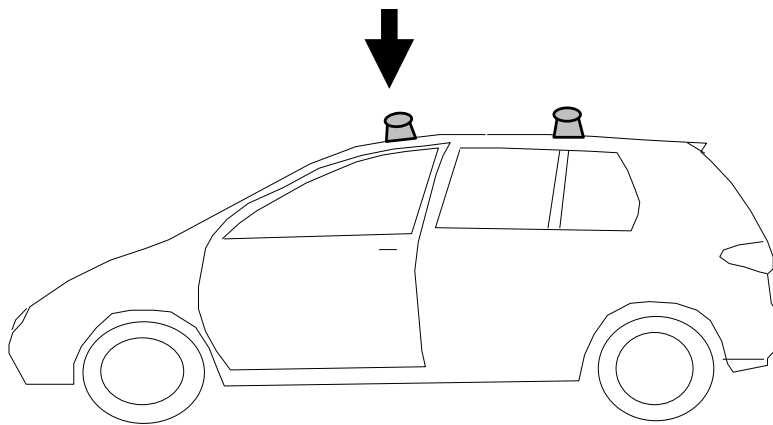

- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT

I **Montaggio barra posteriore**

PL **Montaż Bagażnika Bazowego Przedniego**

SWE **Montering Främre Lasthållaren**


NL **Montage Achterste Dakdrager**



F **Fixation Barre Arriere**


GB **Fitting Rear Roof Bar**

E **Fijación Barra Trasera**

D **Montage Heckdachträgers**


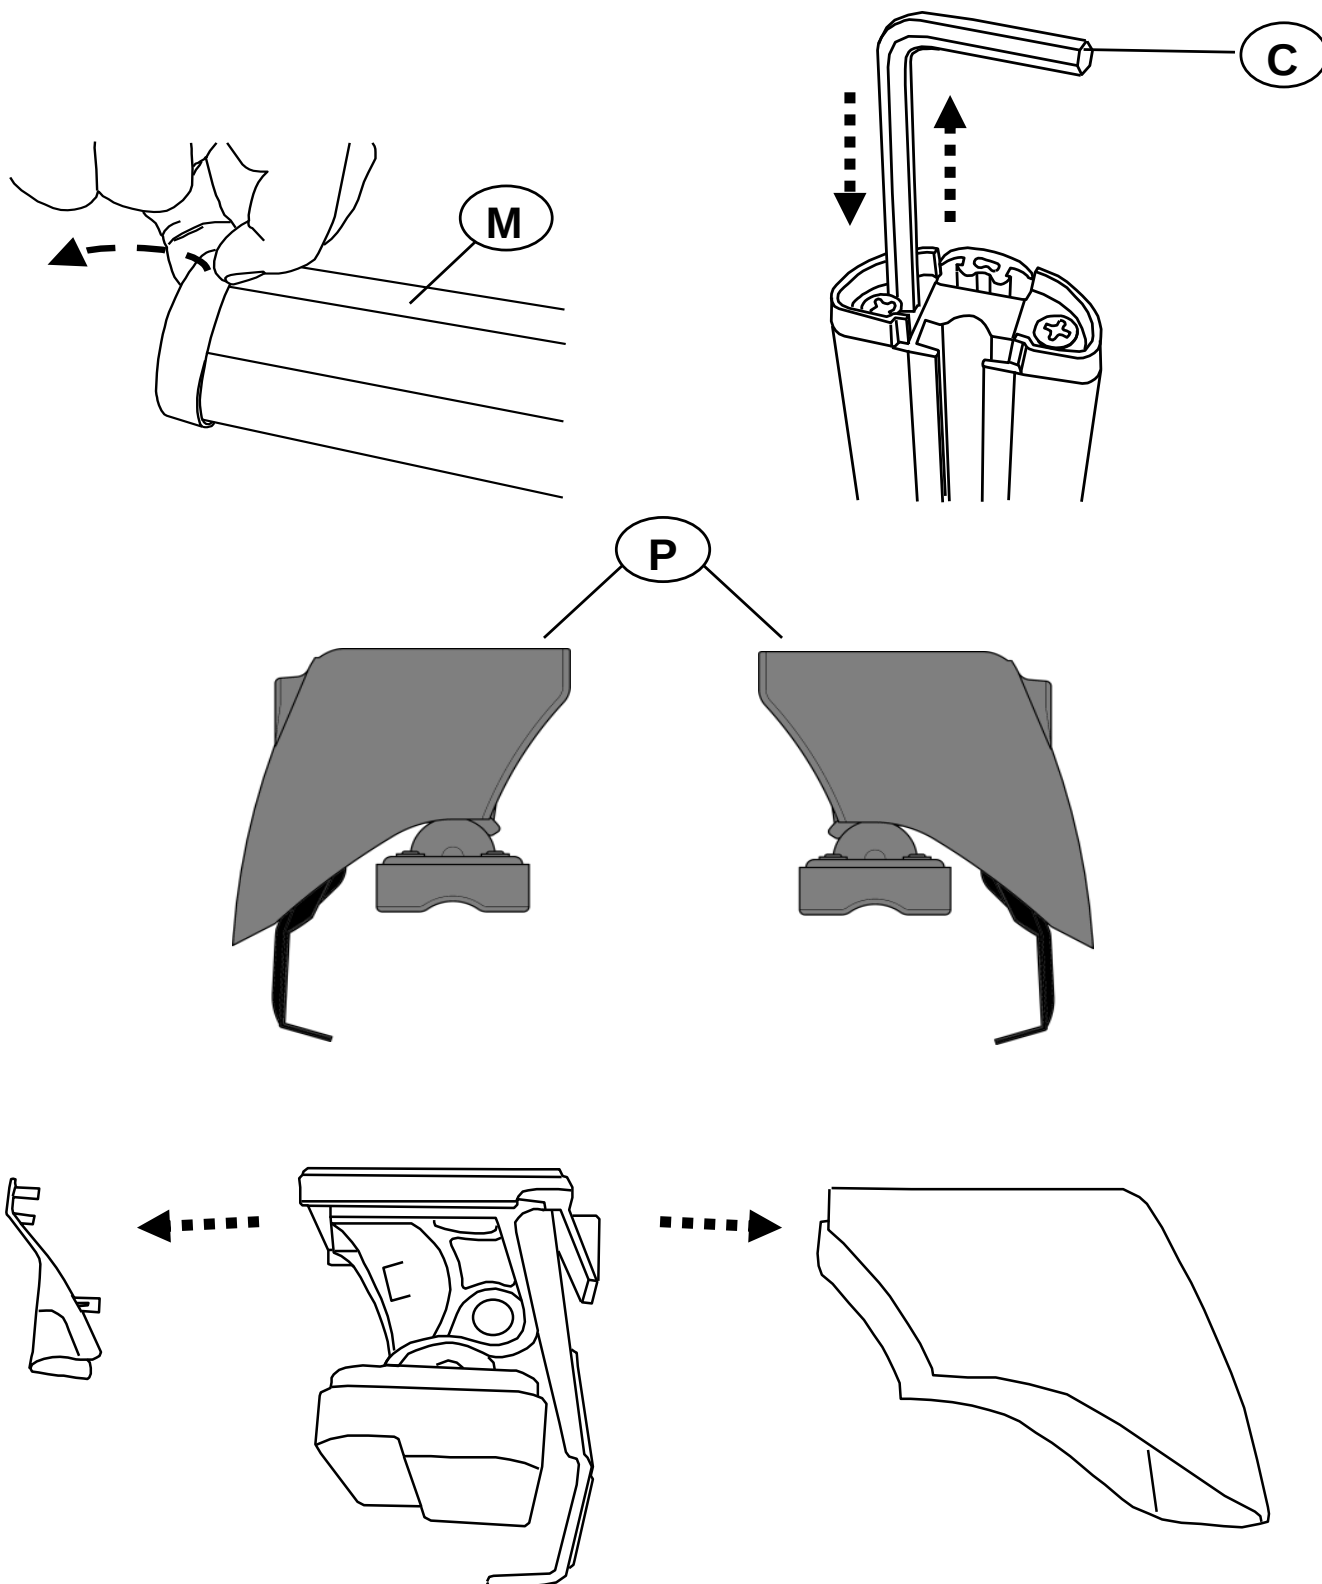


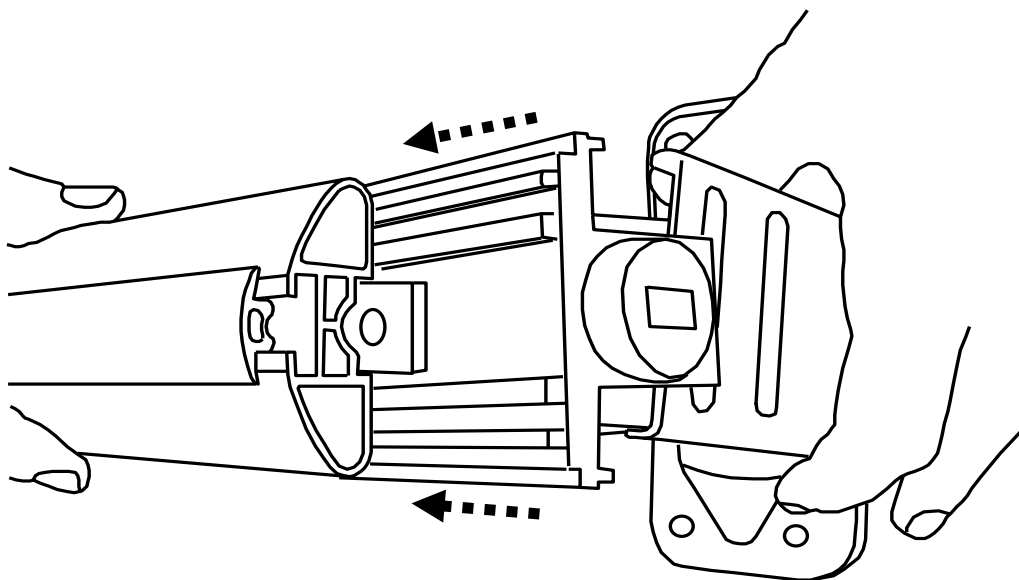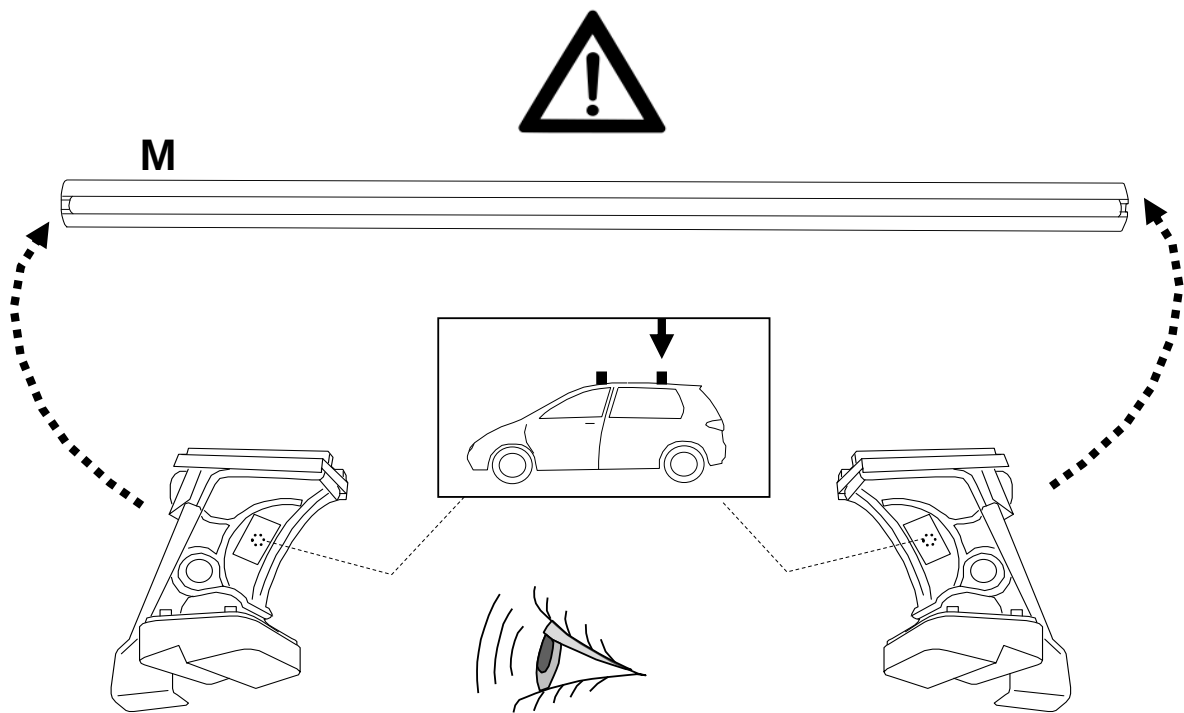

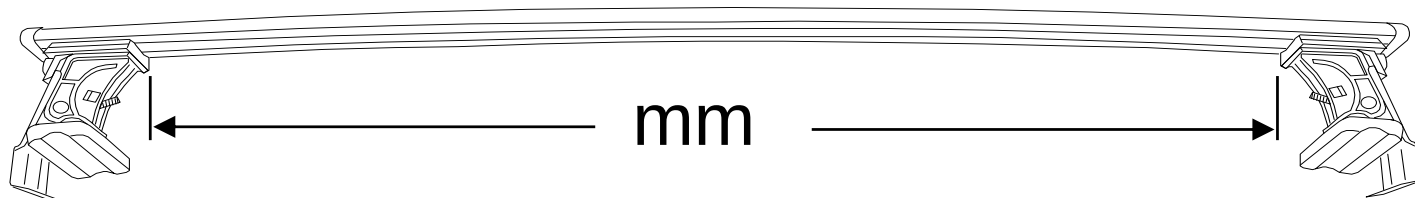


			R	mm
VW	POLO	3	R= 29	1010



R_i

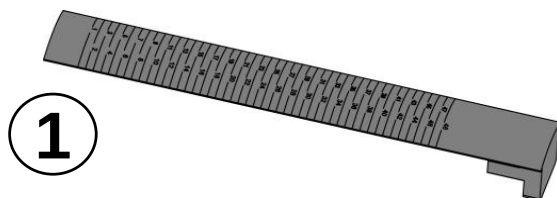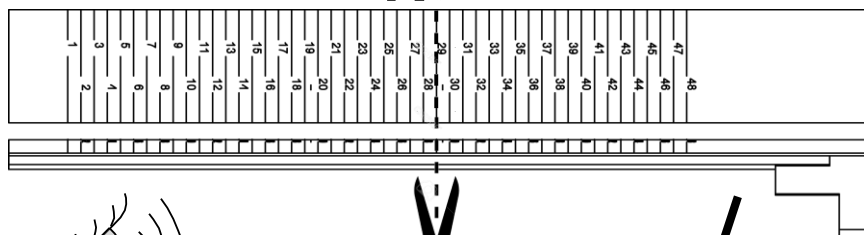



1

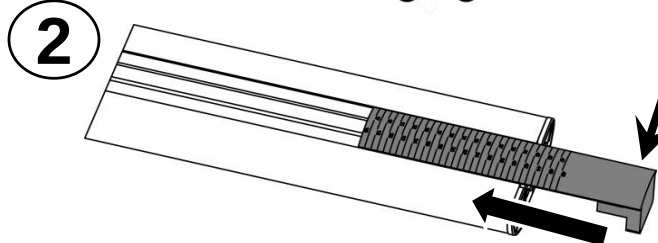


3

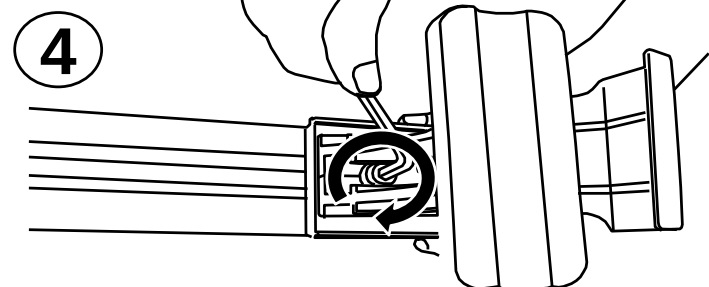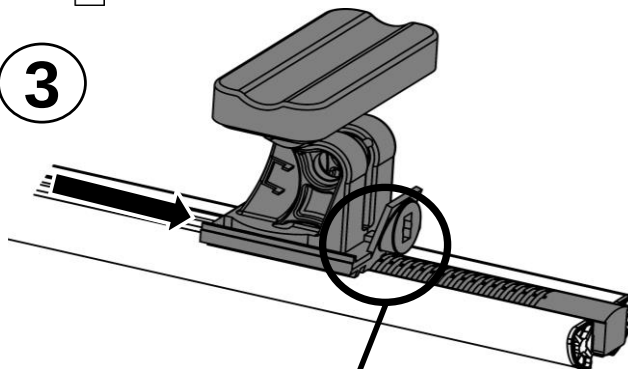


4

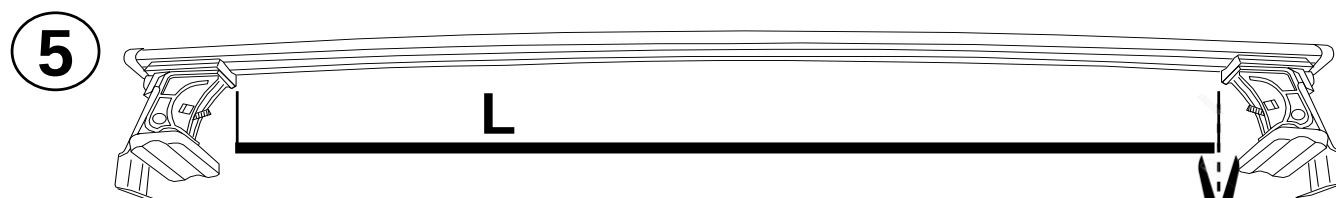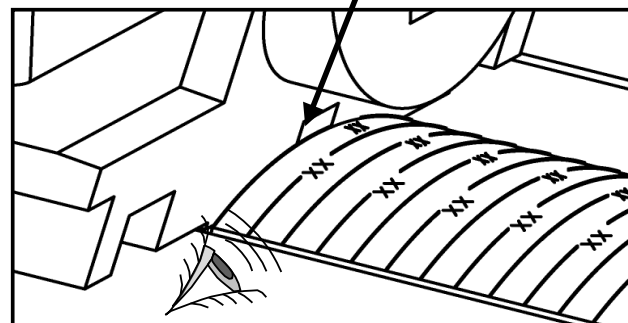





5


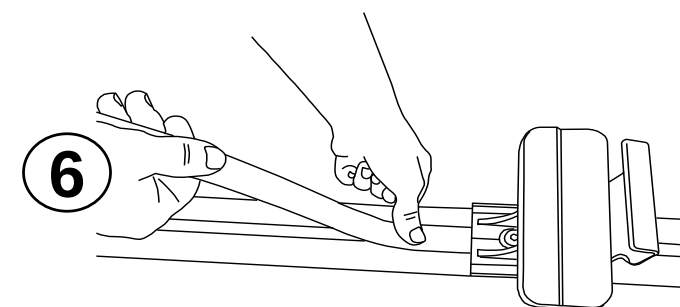






6

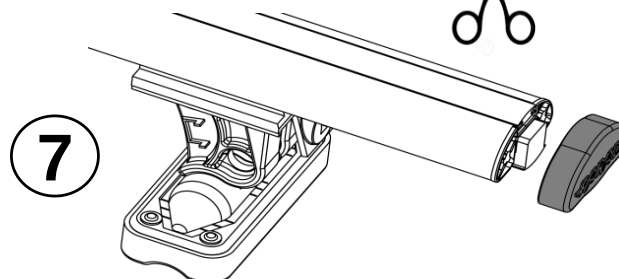


7

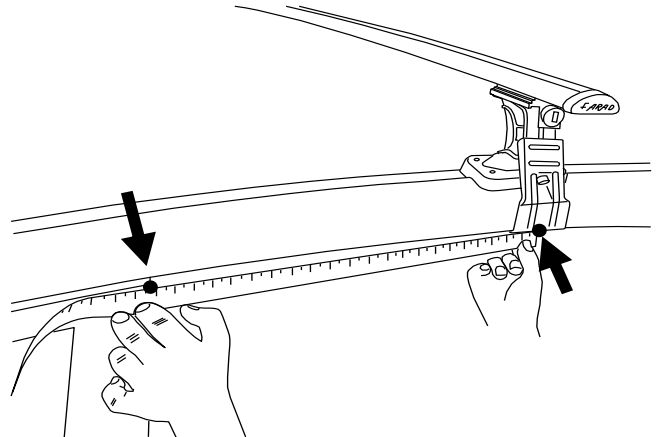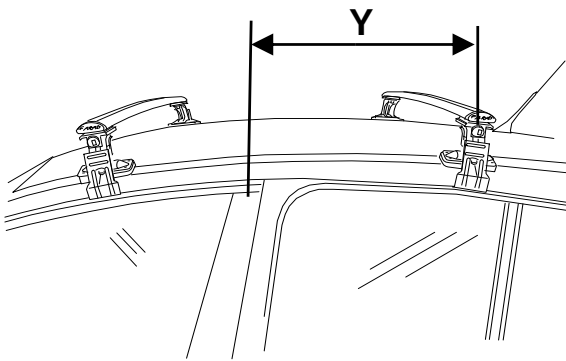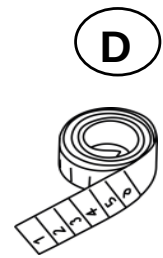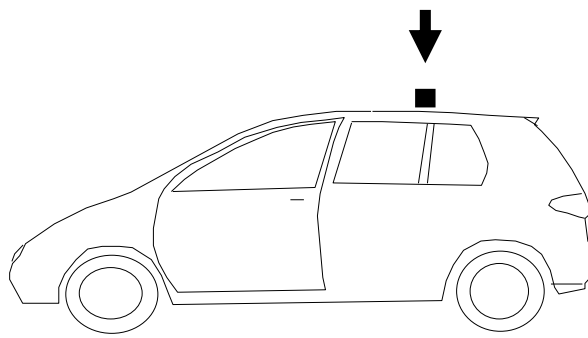



				Y
VW	POLO	3	2010 >	Y= 240

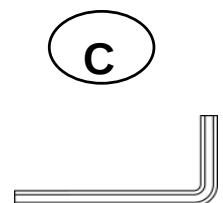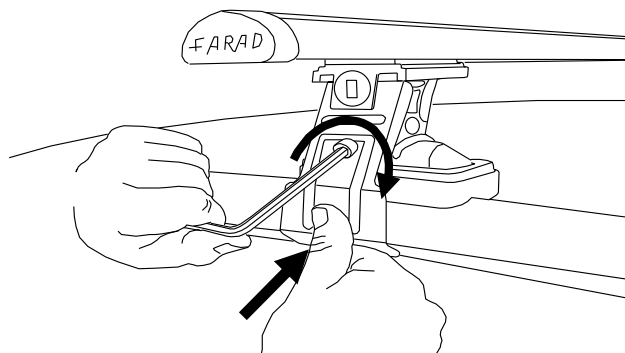
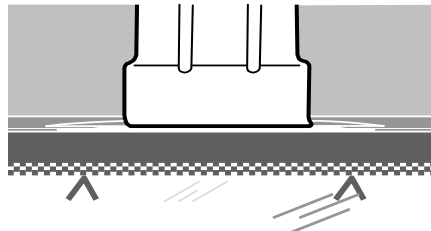




REV 000	10/05/2011	16 / 20
----------------	-------------------	----------------

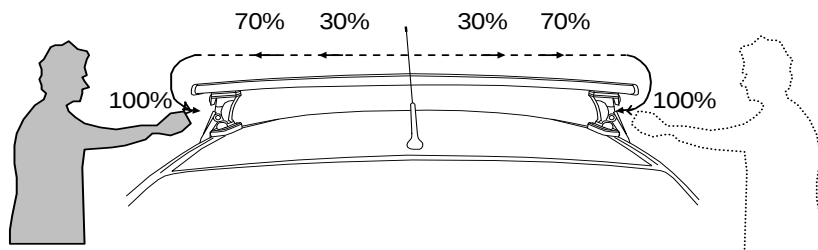

- | | | | |
|----|---|-----|------------------------------------|
| I | Alternare il fissaggio delle viti | F | Serrer alternativement chaque côté |
| PL | Śruby dokręcaj naprzemiennie | D | Die Schrauben abwechselnd anziehen |
| GB | Tighten alternately | E | Apretar alternativamente |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | SWE | Dra åt växelvis |

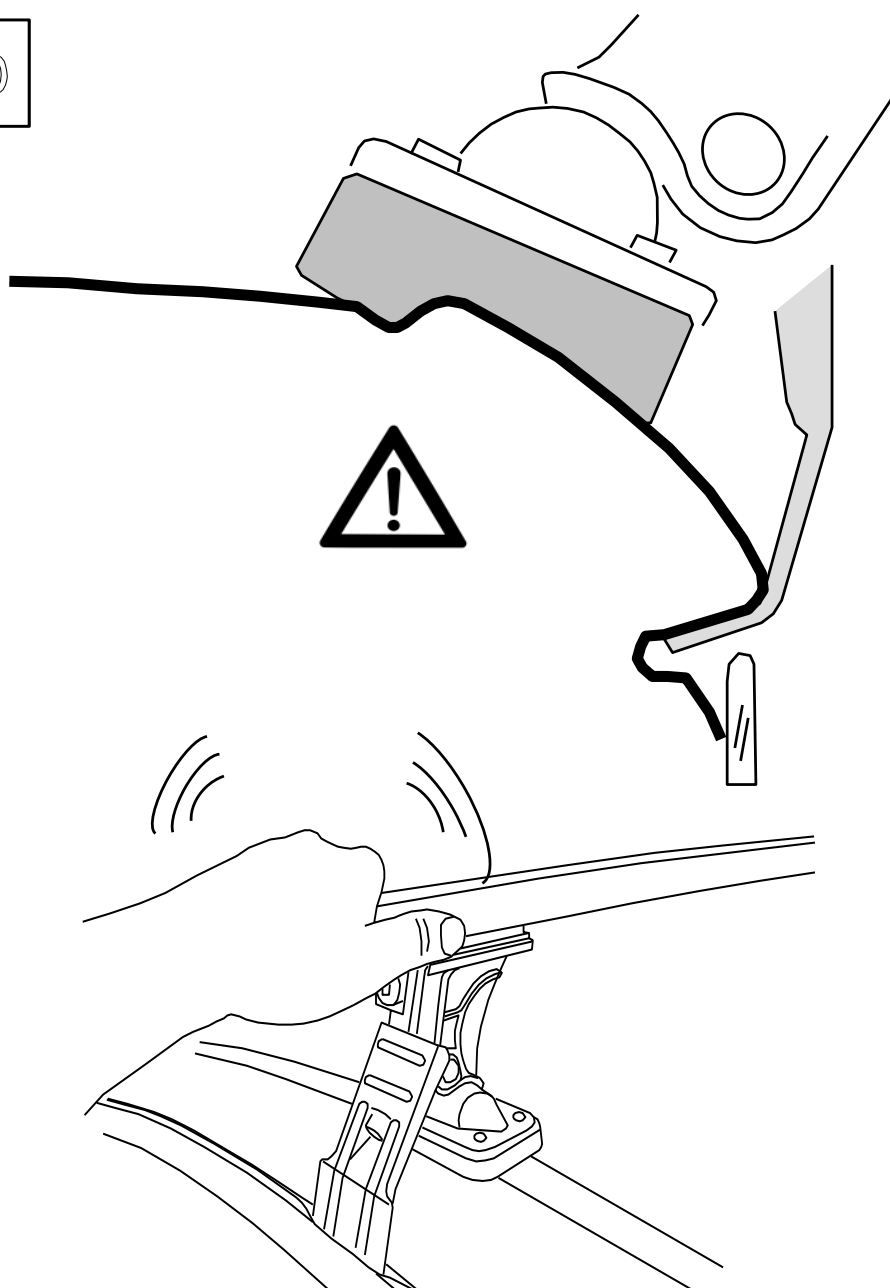

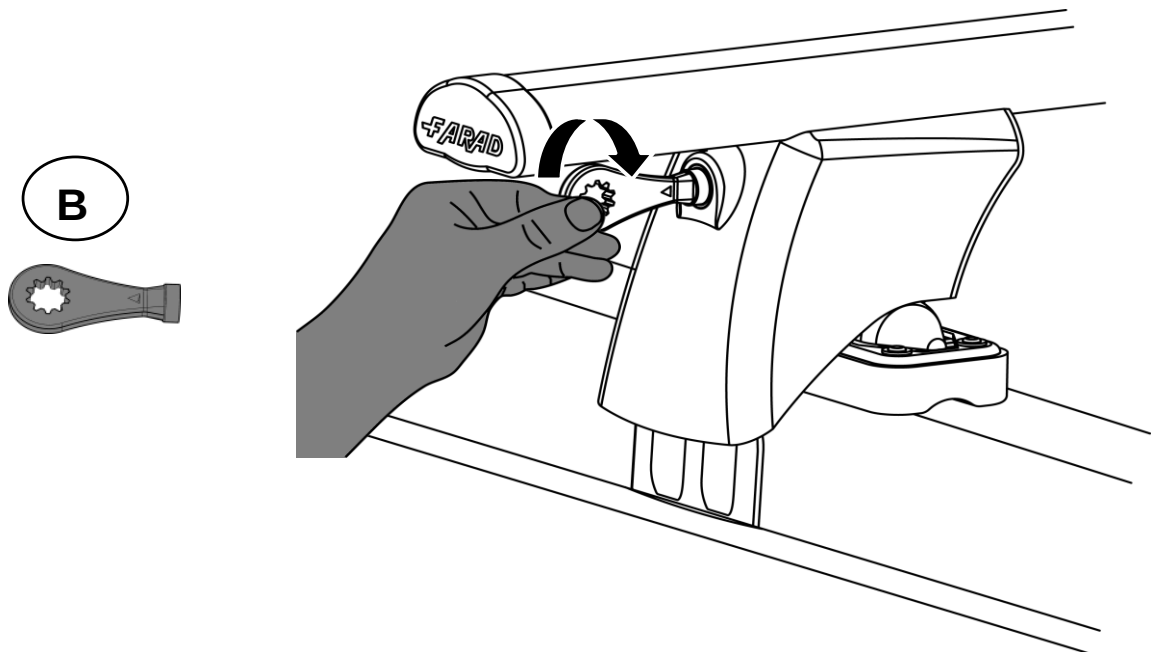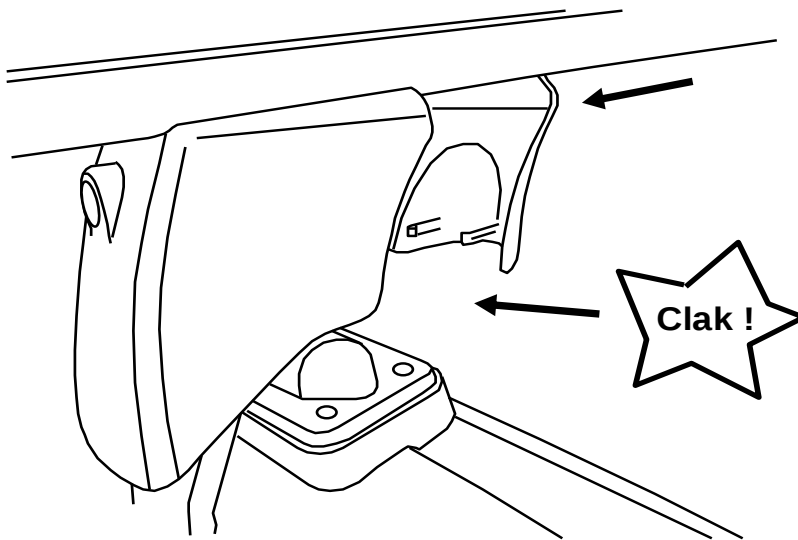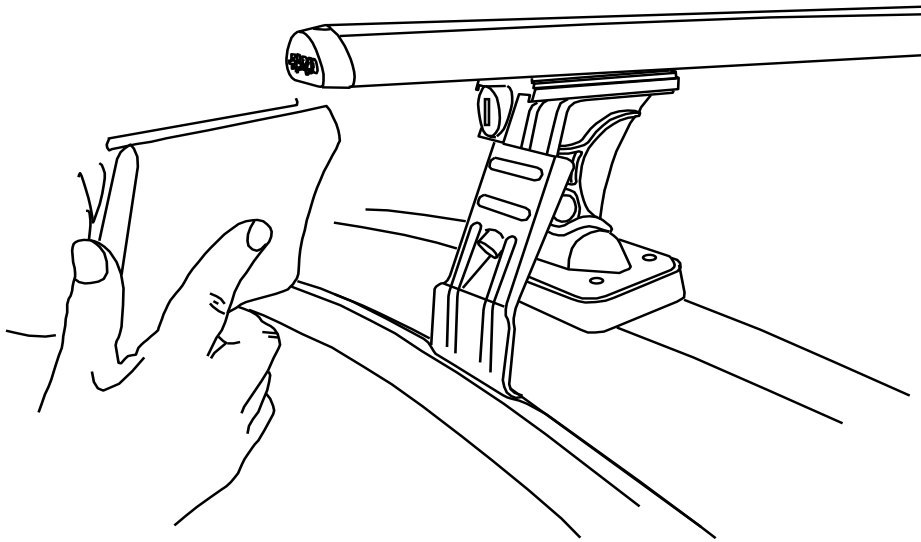

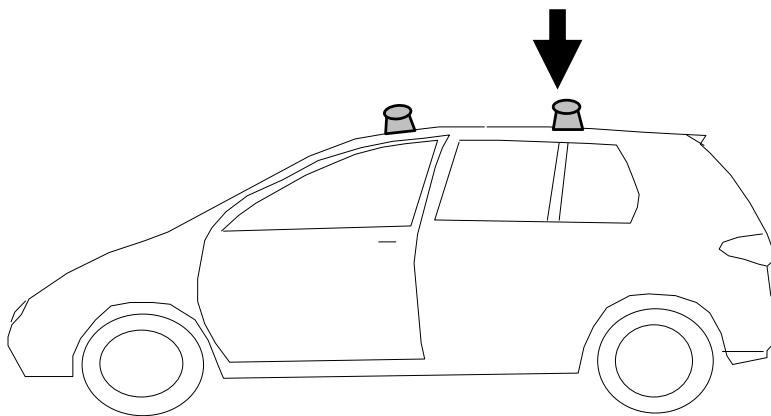


- I** CONTROLLARE PERIODICAMENTE IL FISSAGGIO DELLE VITI
- PL** OKRESOWO SPRAWDZAJ MOCOWANIE ŚRUB
- GB** CHECK THE SCREW FASTENING PERIODICALLY
- D** REGELMÄSSIG ÜBERPRÜFEN DIE BEFESTIGUNG DER SCHRAUBEN
- SWE** REGELBUNDET KONTROLLERA OM FASTSTÄLLANDE AV SKRUVARNA
- F** VERIFIEZ LA FIXATION DES VIS PERIODIQUEMENT


RICAMBI - SPARE PARTS




PIEDE GIREVOLE
90341 / 2



PIEDE FISSO
90341 / 15

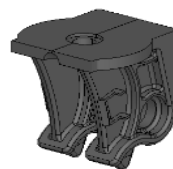


SUPPORTO CENTRALE
90341 / 1



SUPPORTO BARRA
90341 / 5




SOTTO PIEDE SP01
90341 / 3




SOTTO PIEDE SP03
90341 / 16



SOTTO PIEDE SP04
90341 / 13



SOTTO PIEDE SP07
90341 / 11



SOTTO PIEDE SP08
90341/14




SOTTO PIEDE SP10
90341 / 12



SOTTO PIEDE SP12
90341 / 1



CHIAVE ESAGONALE 6
9331 / 148



PIASTRINA
90341 / 21



DISTANZIALE
90341 / 20




NOTTOLINO + N° COMB.
90341 / 6




SOTTOTAPPO
90241 / 9



TAPPO BARRA
90241 / 6

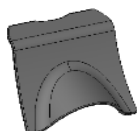


INVOLUCRO POST.
90341 / 9

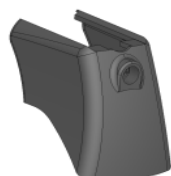

INVOLUCRO ANTERIORE
90341 / 8




CHIAVE + N° COMB
90341 / 7

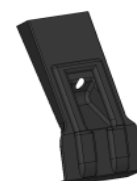

PALETTA
90341 / 4




BARRA ALLUMINIO
90241 / 7

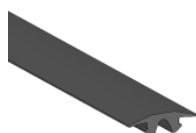


GUARNIZIONE BARRA
90241 / 8



RIGA CARTA
90341 / 19



PERNO
90241 / 15



GUARNIZIONE
NUMERICA
91141 / 14

FARAD®
made in Italy

www.faradworld.com

